

# Manual of TCF200-6XT

**Model No.:** TCF200-6XT

FCC ID:YMU-6XT

**Brand:**  RFRemotech

**Modulation Mode:** FSK

**Frequency:** 433.92MHz

**Operating Voltage:** 12V Alkaline Battery

**Range:** 200m

TCF200-6XT is a special transmitter with 6 buttons-Start, Stepper, Pause, continue, Stop & Lock/Unlock for working with RFRemotech receivers. Turn on the switch, Indicating LED is on in Red brightly and transmitter enters into Standby & Unlock Status. Transmitter will enter Lock Status automatically after 30 seconds.

Under Unlock Status, press Start button to send Start Command, Indicating LED is on in Green; press Stepper button to send Stepper Command, Indicating LED is blinking in Green; press Pause button to send Pause Command, Indicating LED is on in Yellow; press Stop button to send Stop Command to the receiver, Indicating LED is on in Red brightly; press Lock/Unlock Button to Lock the transmitter and Indicating LED is on in dim Red.

Under Lock Status, Stepper, Pause, continue, Stop buttons are not available until Lock/Unlock Button is pressed for unlock the transmitter.

## IMPORTANT REGULATORY INFORMATION□□

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:□□

1. This device may not cause harmful interference and□□
2. This device must accept any interference that is received, including any interference that may cause undesired operation.□□□□

## WARNING:□□

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.□□□□