



User Manual SNS-25

1-877-522-7778

1-321-445-8383

www.pedicurechairsns.com

TABLE OF CONTENTS

Safety Precautions	02-06
FCC Warning	06
Chair Components	07
Assembly Instructions	08-11
Grounding Instructions	12
Chair Specification	13
Touch-screen Interface	14-24
Chair Care and Storage	25-26

1 SAFETY PRECAUTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using the massage chair, basic precautions should always be followed, including the following: Read all instructions before using this massage chair.

DANGER—To reduce the risk of electric shock:

- Always unplug this massage chair from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Call for service if the covering shows any sign of deterioration, such as blistering, peeling or cracking.
- Keep dry— Do not operate in a wet or moist condition.

WARNING—To reduce the risk of burns, fire, electric shock or injury to persons:

- Read all instructions before using.
- A massage chair should never be left unattended when plugged in. Unplug from the outlet when it is not in use and before putting on or taking off parts.
- Close supervision is necessary when this massage chair is used by or near children or disabled persons. Keep children away from reclining backrest and extended leg rest.
- Use this massager chair only for its intent use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never operate this massage if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact Customer Department.
- Keep the cord away from heated surfaces.
- Never operate the massage chair with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Do not stand on or in the massage chair. Use only while seated.
- The product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Do not carry this appliance by supply cord or use cord as a handle.
- Children should be supervised to ensure that they do not play with the product.
- Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- Burns may result from improper use
- Do not crush—avoid sharp folds.
- Keep children away from extended foot support (or other similar parts).
- DO NOT WET—DO NOT USE PINS.
- NEVER REMOVE COVER.
- Connect this appliance to a properly grounded outlet only. See Grounding instructions.

WARNING:

When using the massage chair, the arm should not be placed on the wireless charger. The minimum distance between the arm and the wireless charger is 95mm(3.74").

SAVE THESE INSTRUCTIONS

1. Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104° F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for commercial purposes.



Caution

- This massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

2.Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage in combination with other therapeutic equipment or electric blanket, etc, as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g. behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
- It is not recommended to use the massage for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
Please do not use the product if you are not feeling well.

3.People with Medical Conditions

Consult your doctor before use if you:

- are under medical rest as ordered by a doctor.
- have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- have back problems.
- have diabetes, osteoporosis or sensory impairment.
- have joint dysfunction such as rheumatism, hammertoe or gout.
- have a pacemaker or other electronic medical devices.
- may be pregnant.
- have phlebitis or thrombosis.
- have an increased risk for blood clots.
- had recent surgery.
- have surgical pins, screws, or anything mechanical in the legs, ankles or feet.



Caution

- This massage chair is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction or instruction concerning use of the massage chair by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the massage chair.
- Avoid using the massage chair under the influence of alcohol.
- Do not apply massage rollers directly on the head, elbow or knee joints, torso or abdomen.
- If your legs or feet slip off the leg rest during massage, do not force them back in as this may result in injury.
- Remove the power plug from the electrical outlet immediately should liquid be accidentally spilled onto the massage chair. Do not use wet hands to connect or disconnect the power plug from the electrical outlet.
- Do not tamper with the power cord or use the massage with a damaged cord as this may result in malfunction and electric shock.

4. Instances When the Massage Chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

5. Assembly and Repair of the Massage Chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electrical shock.
- This massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

6. Things to Note About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock..
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wrap the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage with a damaged cord or extension cord.
- Do not use the massage if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:



- (1)This device may not cause harmful interference
- (2)This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2 CHAIR COMPONENTS

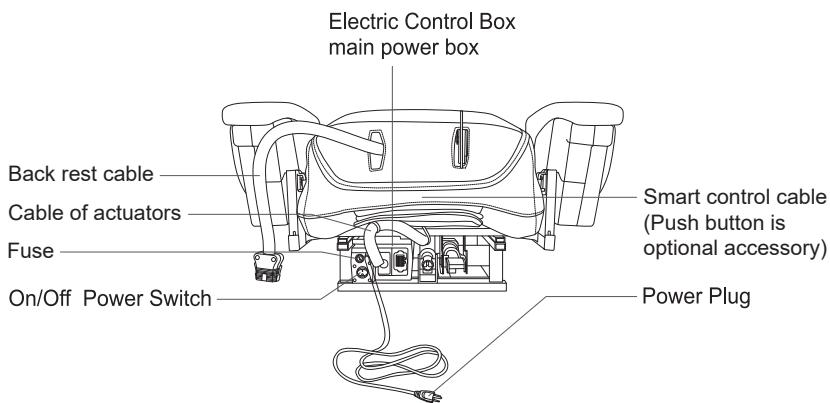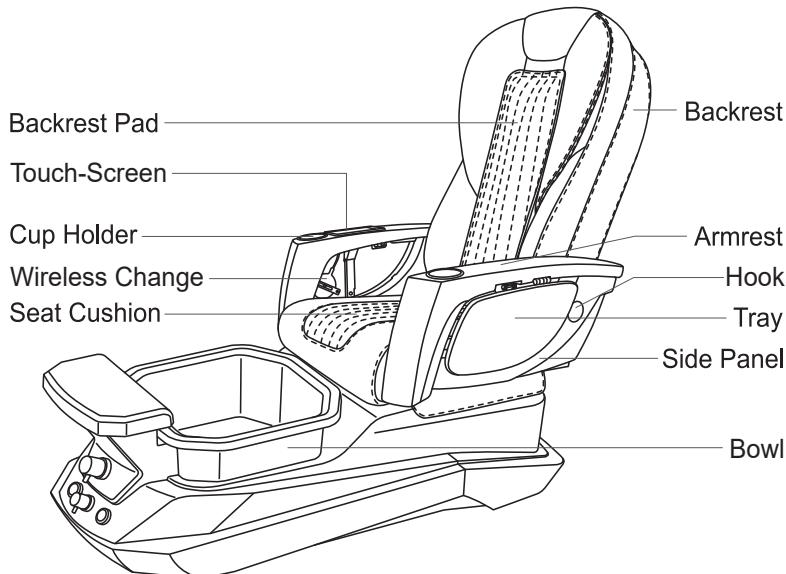


3 ASSEMBLY INSTRUCTIONS


1 This chair arrives in two boxes.




2 Open box1 and remove all contents. Remove the packing materials. Take the base & seat pad out of the box. Collect all the accessories and put them aside.

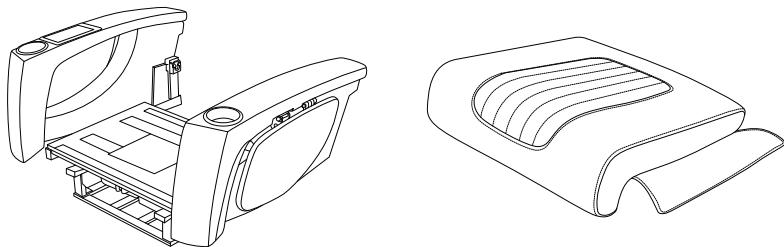





3 Fix the base onto the frame. Put the base onto the frame. Then fix the base to the frame with bolts and screw nuts.

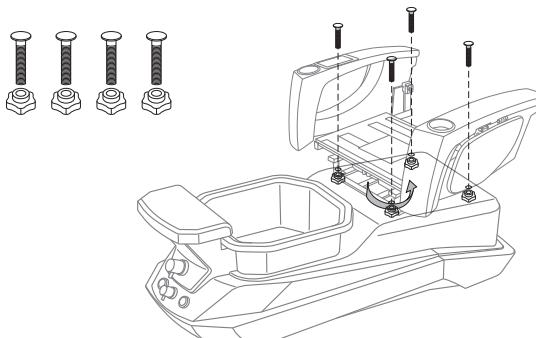



4 Open box 2 with backrest. Take the backrest out of the box and remove the plastic bag that covers it.

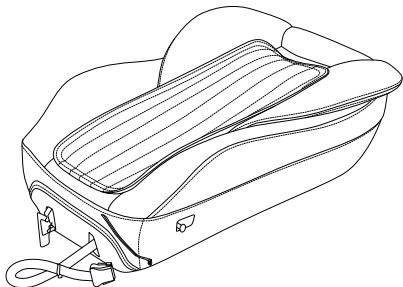


5 Attach the backrest on to the base. Carefully set the backrest on the cradle points on the base. Tilt the backrest forward 60 degrees, ensure it properly engages to the base. Then tilt the backrest backwards and make sure it has been locked by the latch.

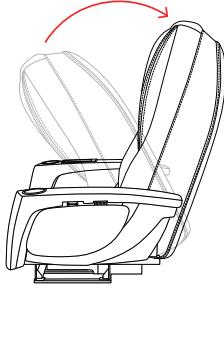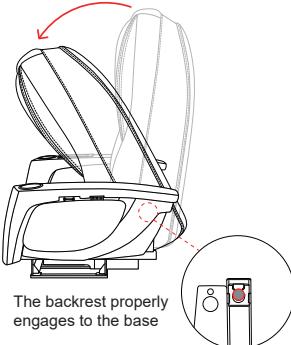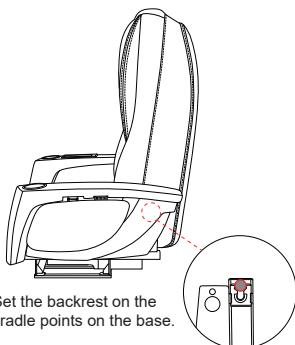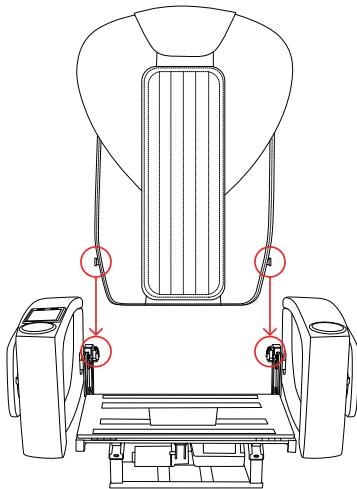

6 Connect the backrest wire harness.

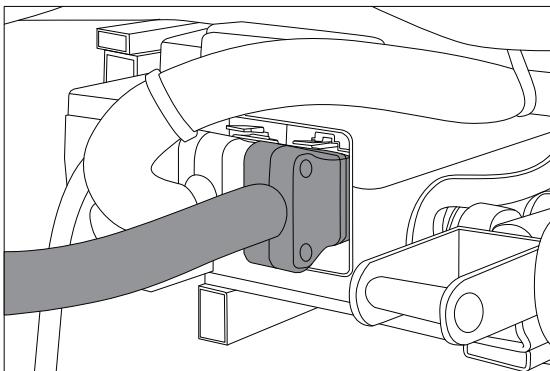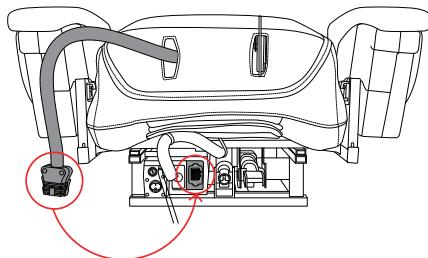


7 Fix the seat board with the screw bolt and washer.

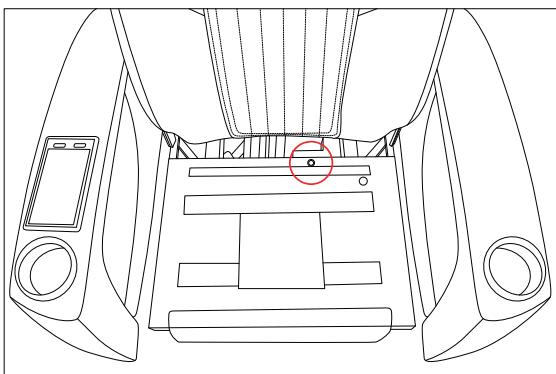


8

Attach the seat pad onto seat board. Then connect the two heater wire connectors. Attach Velcros on the wing of seat pad to the chair base frame.

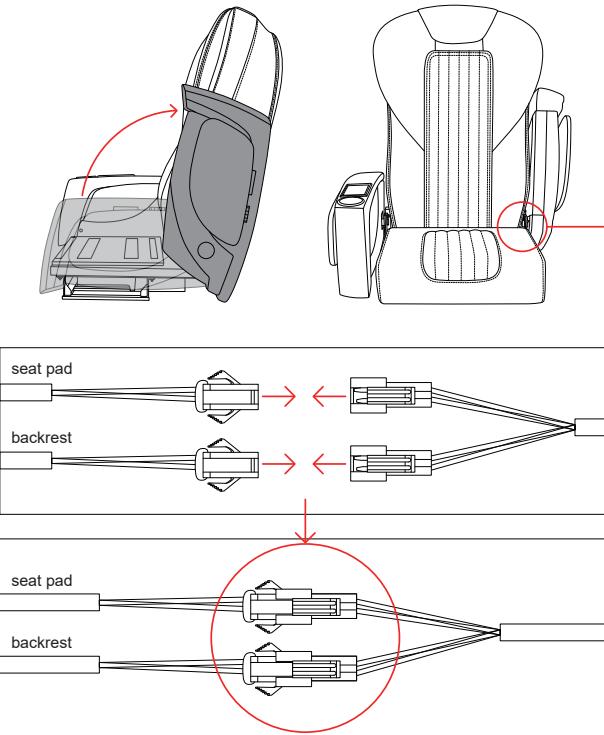

9


Turn on the chair. Connect the chair to power supply and turn on the power switch. The chair will now be ready to start.

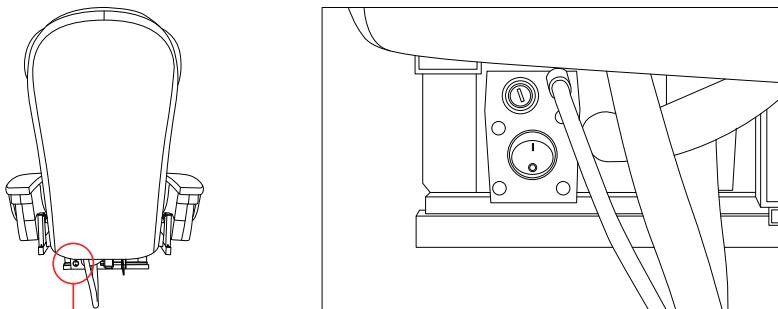

4 GROUNDING INSTRUCTIONS

This product must be grounded. Because when it have some malfunction, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. **DANGER** – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-V circuit and has a grounding plug that looks like the plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

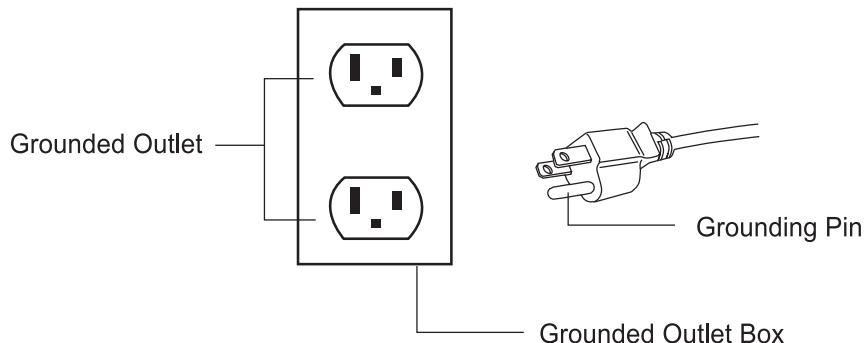

5 CHAIR SPECIFICATIONS

Description	Specifications
Product Name	Massage Chair
Model Number of The Product	SNS-25
Rated Voltage	AC 110-120V
Rated Frequency	60 Hz
Electric Current	1.2 A
Rated Time	30 mins
Shipping Dimensions (L/W/H)	Base: 35.0"x29.3"x18.5" Rest: 40.6"x26.0"x13.6"
Weight	Gross weight:147.7 lbs Net weight:117.9 lbs
Length of Wire	77"
Storage Condition	Storage temperature: -5°C~35°C Storage humidity level: 20~80RH
Usage Condition	Environment temperature: 0°C~35°C Contrasting humidity: 20-80RH

6 TOUCH-SCREEN INTERFACE



We have designed a user-friendly interface for your SPA chair touch screen controller, making it easier for you to use your chair.

Conrtol Panel



There are two button on the bottom of the control panel"Power"and "Pause"
Press the "Power"button,the screen will light up and inter the home page


Home Screen

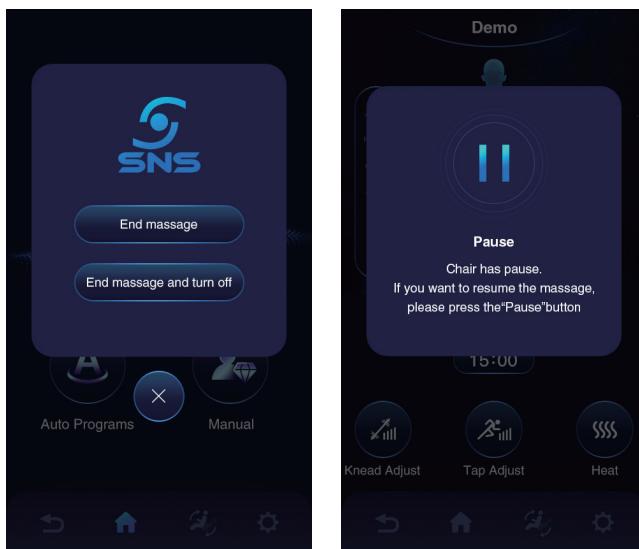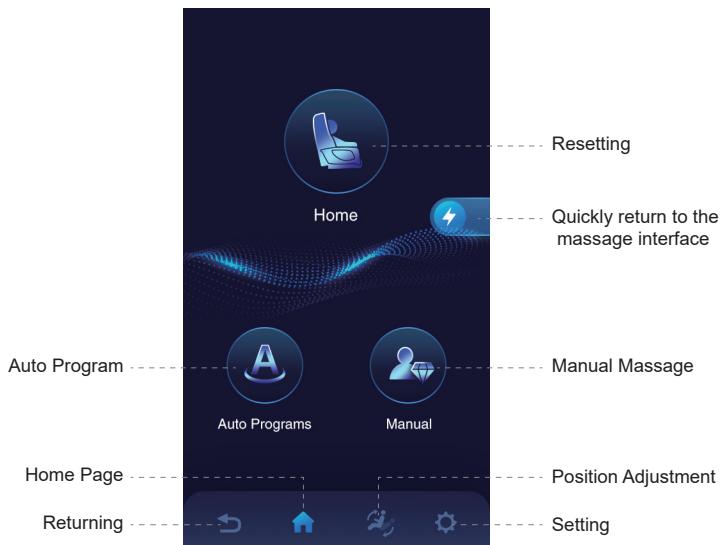

Long press the "Power" button , there are end the massage or end the massage and turn off the option. Select the corresponding options according to the your need


Press the "Pause"button to pause the massage, press the button again to resume the massage

Auto program selection interface

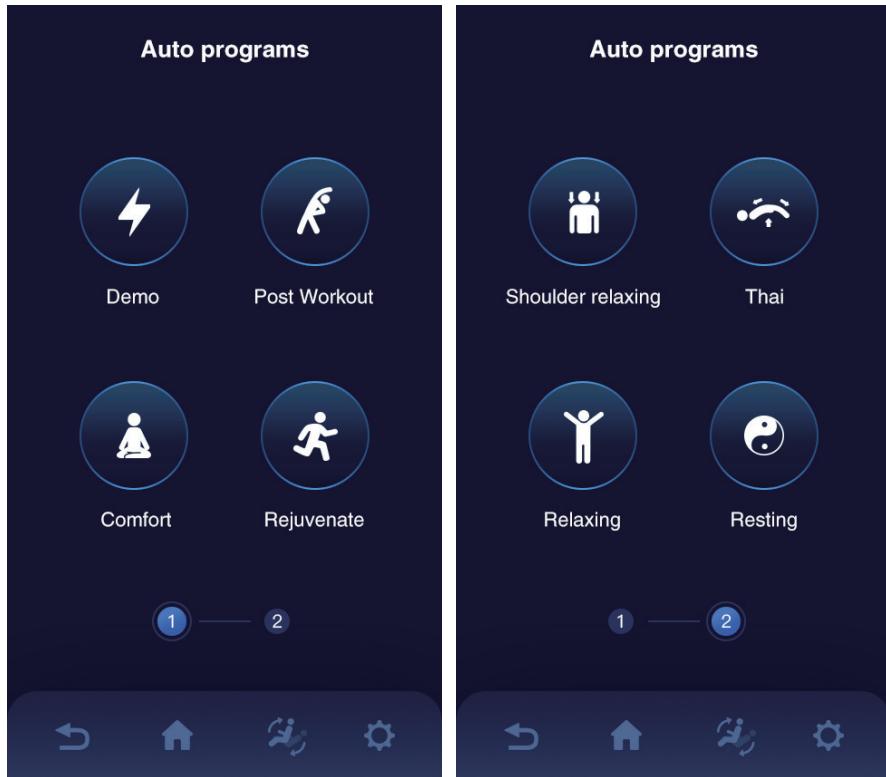

there are eight automatic massage programs can be selected.
According to your needs, select the auto program for massage


Body Scan Interface

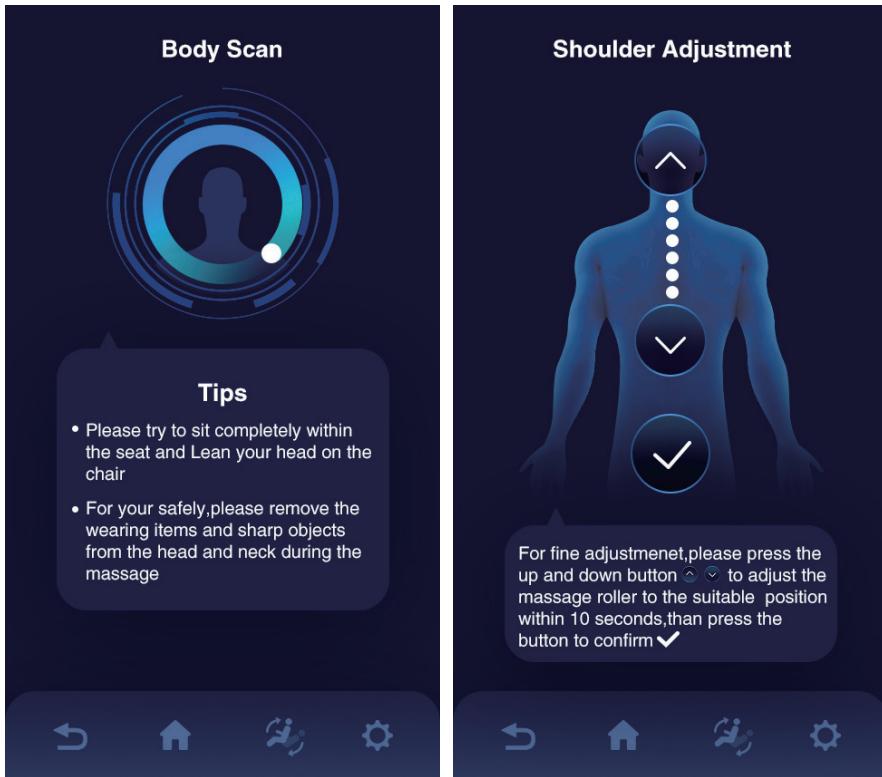

After clicking on any automatic program, the chair will start human shoulder detection. Please make adjustments according to the suggestions

Using the arrows, you can adjust the standard shoulder position

Reminder interface for non-standard sitting posture

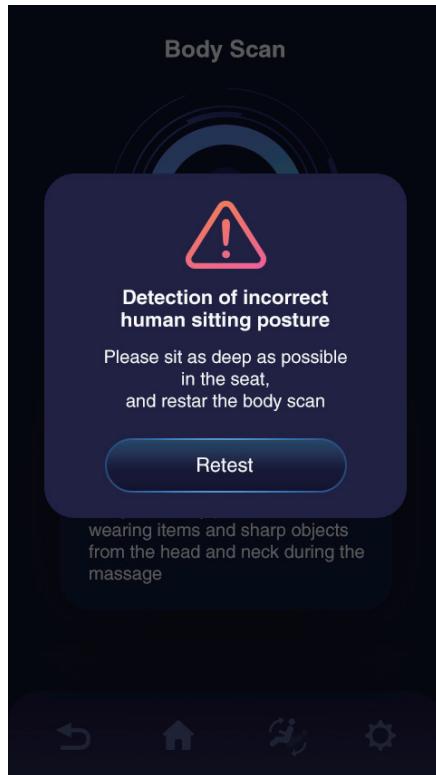


If the human shoulder detection fails, a warning will appear on the screen.
Please follow the prompts to readjust and then click "Retest"

Auto Program Interface




Click on the "massage time display", and the massage time can be selected as 10min, 20min, 30min, 40min
Click on the "knead adjust", there are five gear can be selected
Click on the "Tap adjust", there are five gear can be selected

Manual Massage selection Interface

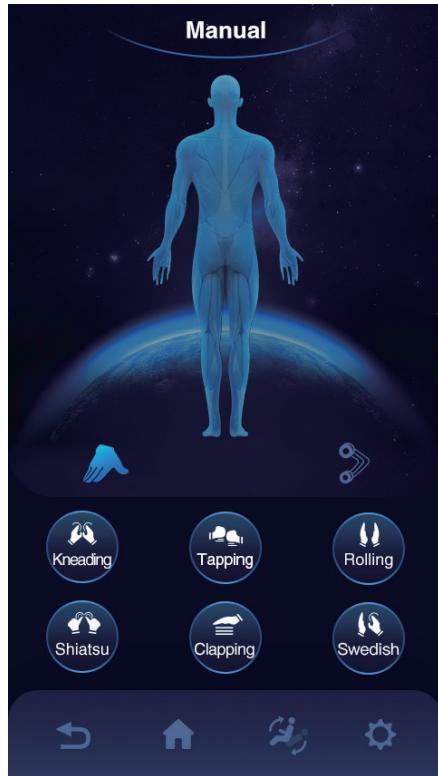


There are six massage techniques can be selected according to your needs to select.
Some massage techniques can be performed simultaneously.

Manual Massage Interface

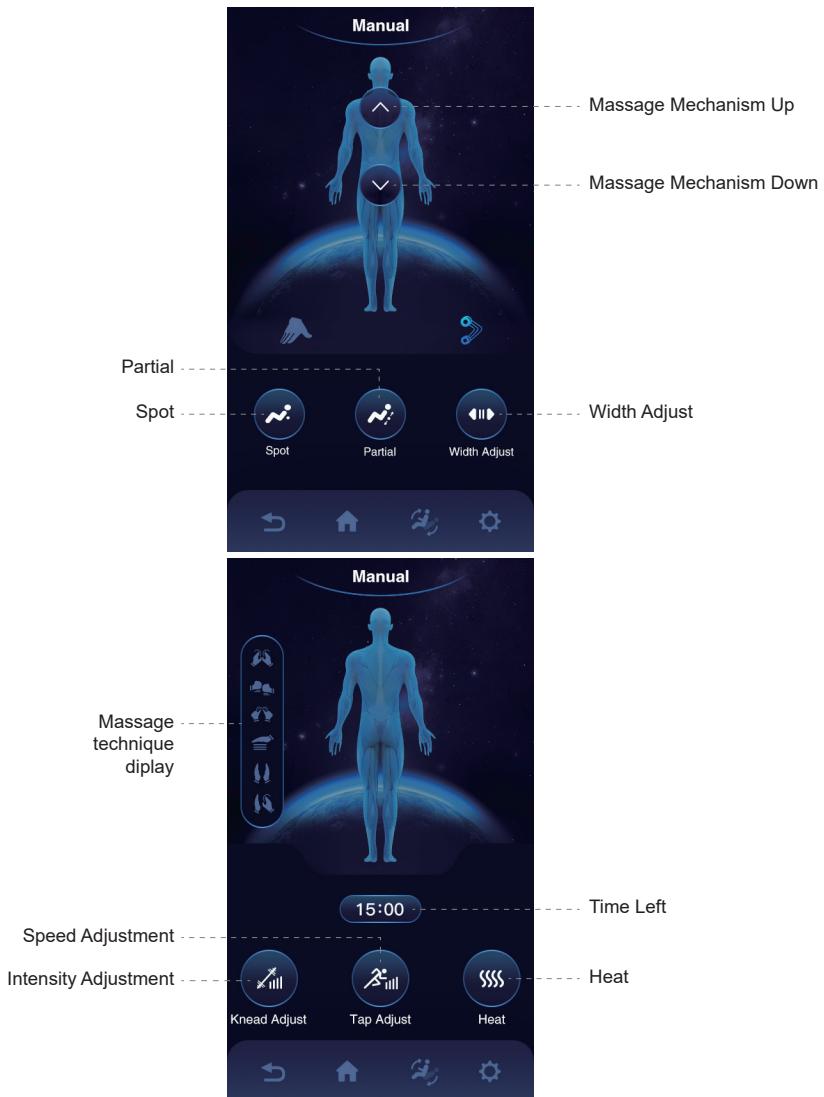

Click on the "Massage time display", and the massage time can be selected as 10min, 20min, 30min, 40min
Click on the "Knead adjust", there are five gear can be selected
Click on the "Tap adjust", there are five gear can be selected

Position Adjustment

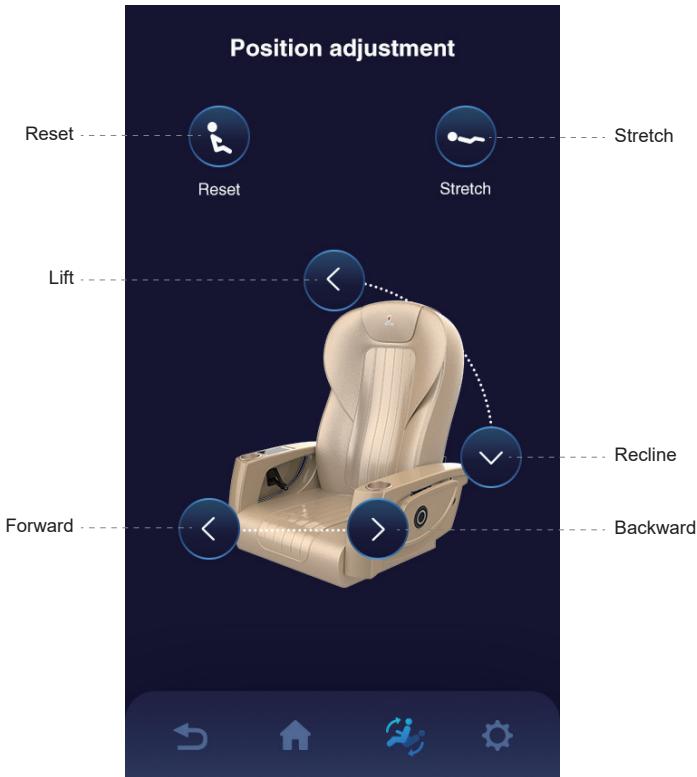


Click the "Stretch" button, the backrest will automatically reverse to the lowest point, and the seat will automatically move forward

Click the "Reset" button, the backrest and seat will return to the original positions

Long press the "Lift" or "Recline" button, the back will move up or down; release the button, the back stop move
Long press the "Forward" or "Backward" button, the seat will move forward or backward; release the button, the seat stop move


Setting Interface

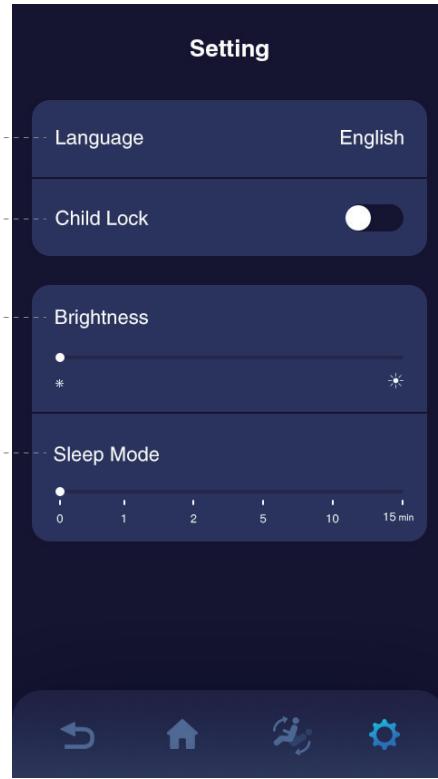

You can adjust the screen brightness by sliding the scroll bar according to your needs
(factory default medium brightness)

You can adjust the sleep mode by sliding the scroll bar according to your needs
(factory default medium mode)

Child Lock Interface

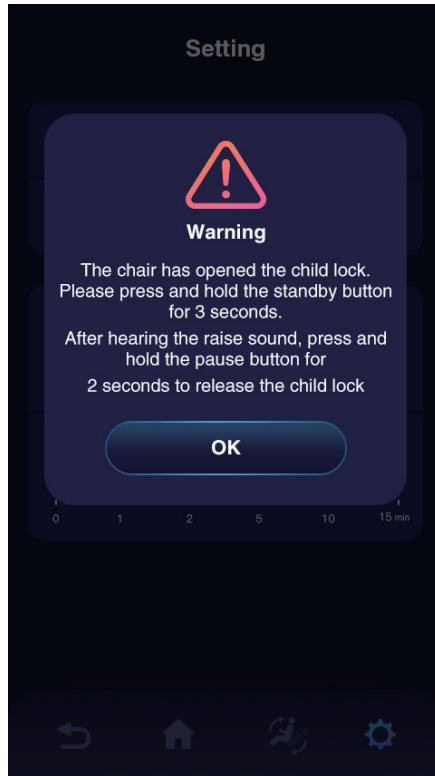

Child lock is a safety measure. If you open the child lock, a warning will appear on the screen and tell you how to turn on the device and enter the home screen next time

7 CHAIR CARE AND STORAGE

1. Cleaning the Massage Chair

- Before cleaning, ensure that the main power switch is off and the power plug is disconnected from the electrical outlet.
- Wipe off dust and dirt from the massage with a dry, soft, clean cloth after each use.
- This product can be cleaned thoroughly with a slightly damp cloth.
- Do not iron the upholstery.
- Do not wash the upholstery using a home washing machine as this may result in deterioration of the upholstery's quality.

Caution

- Do not use abrasive cleaning agents like benzene or thinner to clean the massage chair. This may cause the upholstery to fade.

2. Cleaning the Controller

- Use only a clean, dry cloth to clean the controller

Caution

- Do not use a wet cloth to clean the controller. This may result in malfunction.

3. Storing the Massage Chair

- Wipe off dust and dirty from the massage chair with a dry, soft, clean cloth after use.
- Keep the massage chair clean and away from places of high humidity.
- If the massage chair is not to be used for a long period of time, cover the massage chair with a dust cover and unplug its power plug from the electrical outlet.

Caution

- Do not store the massage chair in direct sunlight or in places of high temperature. This may cause the color of the upholstery to fade.
- Do not allow the massage chair to remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

To REGISTER for YOUR WARRANTY

(Warranty will not be honored without prior registration)

Please copy this page, fill out section below and attach a copy of your sales receipt and mail to us.
(Some states do not allow registration to be a requisite of warranty, so the above may not apply to you.)

Company: _____ Contact: _____

Address: _____

City/State/Zip: _____

Telephone: _____ Email: _____

Yes, Please send me updates and news on the latest Spa Nail Supply, INC. products and promotions

PediSpa Model: _____ Tub Color: _____

Sink Color: _____

Spa Serial #: _____


Chair Model: _____ Chair Serial #: _____

Place of Purchase: _____ Purchase Date: _____

Purchase Price: _____

Address: _____

City/State/Zip: _____ Telephone: _____

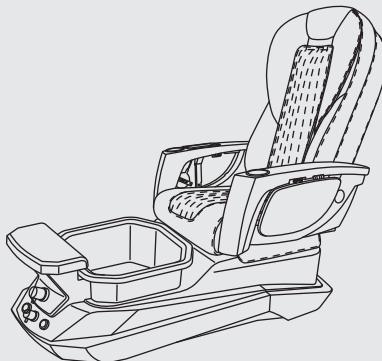

SPA NAIL SUPPLY, INC

Website: www.pedicurechairsns.com

Address: 2000 E Colonial Dr, Orlando FL 32803

Business & Showroom:

Mon - Fri: 10AM - 5PM

Sun: 10AM - 5PM

 TOLL FREE NUMBER
1-877-522-7778
1-321-445-8383



spanailsupply@gmail.com