

How to use

Settings

Choose the functions with direction buttons and press “OK” to confirm.

- Language: Select the language.
- Screen Sleep: Adjust the Screen Sleep time.
- LED: Choose different LED color and mode.
- Time adjustment: 5/10/15/20/30 minutes.
- Screen brightness: Adjust screen brightness.




How to use

Foot massage

- Choose foot massage with direction buttons and press “OK” to start.
- Choose different foot air massage intensity with direction buttons.



- When you choose the auto programs, the chair will detect your shoulder position automatically. You could adjust the massage roller higher or lower with direction buttons after you hear the “BIBI” voice.

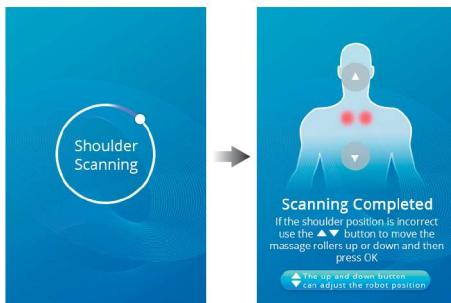

Zero gravity

- Reset: Massage roller, backrest and footrest will return to original position.
- Zero gravity: Chair will recline to Zero gravity position. 2 levels option.



How to use

Heating

- Choose heating function with direction buttons and press “OK” to confirm.
- Waist/Foot heating: ON/OFF the heating function.



Manual programs

Choose manual programs by direction buttons and press “OK” to confirm.

- Manual: Choose different massage style. The speed and strength could be adjusted.
- Region: Choose different body part for massage.




How to use

Swing

Choose Swing mode with direction buttons and press “OK” to confirm.

- Cradle mode: It is suggested using at afternoon or night.

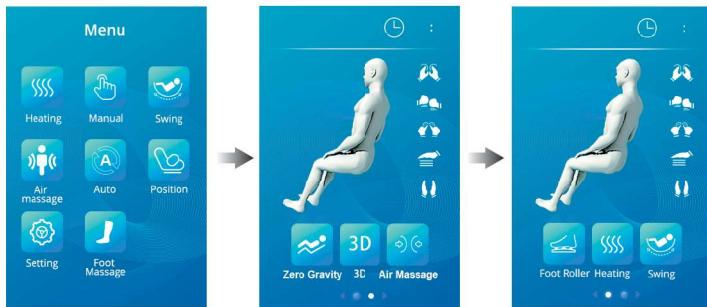

Air massage

Choose Air massage with direction buttons and press “OK” to confirm.


- Air massage position: Choose different air massage position.
- Air intensity: 1-5 levels adjustment.



How to use

Auto programs

- Choose auto programs with direction buttons and press “OK” to confirm.
- 9 auto programs.

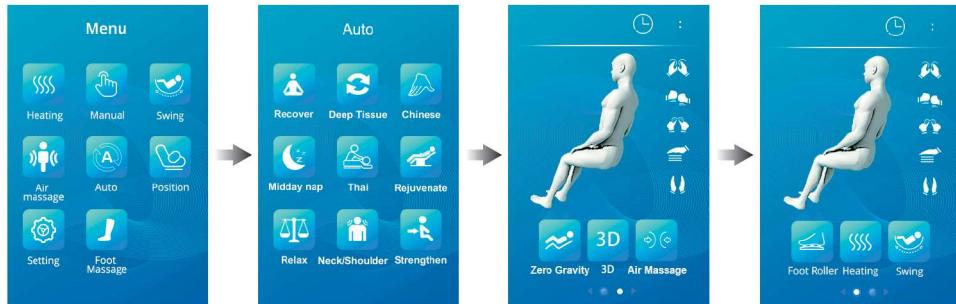

Position adjustment

Choose position adjustment with direction buttons and press “OK” to confirm.

- Position adjustment: Adjust the backrest and footrest angle for better massage.



Bluetooth music speaker

Bluetooth music speaker: Firstly open the mobile device Bluetooth function and then match the chair Bluetooth name “OMCXXXX”. After connection, you could display music with chair speaker.

Cleaning and maintenance

1. Cleaning of the synthetic leather

- Wipe the synthetic leather with a soft dry cloth.
- Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.
- If the synthetic leather is very dirty, wipe it with the method below.

- ① Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
- ② Wipe surface of the synthetic leather with the soft cloth.
- ③ Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
- ④ Wipe with a piece of wrung soft cloth.
- ⑤ Have the synthetic leather take natural air drying.

- If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.
- Do not dry the surface by a hair drier.
- Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.
- Synthetic leather may disolor, so the position in contact with the hair dye used should be covered by a towel.

2. Cleaning of the plastic parts



- 1) Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.

- Do not clean the product with chemicals such as thinners, gasoline and alcohol.

- 2) Wipe with a piece of cloth once soaked in clean water and wring out.

- Wring the cloth out before using it to wipe the remote controller.

- 3) Have the plastic parts air dried

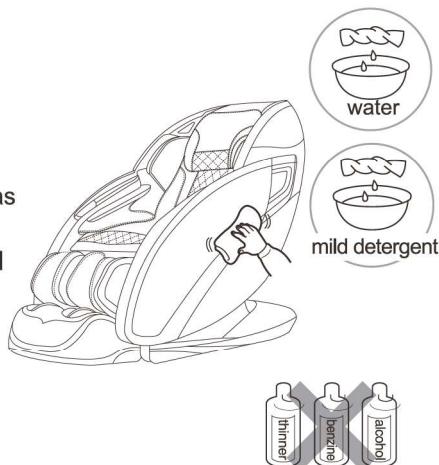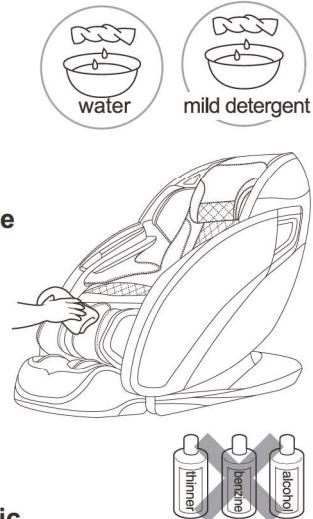

Troubleshooting

This page summarizes the most common problems you could encounter with the product. If you are unable to solve the problem with the information below, contact service center immediately.

If the problem encountered is not listed, please try the following suggestions:

1. Turn off the product and unplug it.
2. Wait for 60 minutes.
3. Plug the product back to the recommended outlet and restart.
4. If the problem persists, contact the authorized service center.


| Problem | Possible Cause | Suggestion |
|-------------------------------------|--|--|
| The product does not work | The product is not plugged in properly. | Ensure the voltage on the product corresponds to the local mains voltage and then plug in again. Make sure the outlet is properly working. |
| The product stopped working | The product has just finished its auto timer session and has automatically switched to standby mode. | If you want another session, press the Power button again. |
| The product stopped working | You may have used the product continuously for 45 minutes where the over heat protection has been activated. | Unplug the product and let it cool down for 60 minutes before you use it again. |
| The product does not work | An excessive load has been applied on the product. | Reduce the excessive load and start again. |
| The product is abnormally warm | The product is likely to be overused. | Unplug the product and let it cool down before using it again. |
| Noise can be heard from the product | Noise is made by the mechanical parts of the product. | This is normal and does not mean that the product is faulty. |

Grounding Instructions

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger-Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if the product will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120V circuit and has grounding plug that looks like that plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

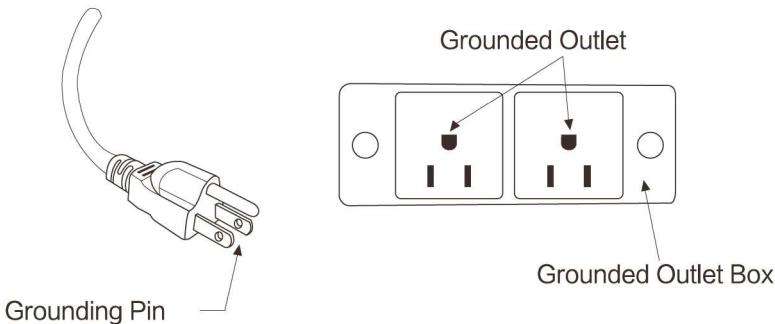

Chair Specifications

| Description | Specifications |
|-----------------------------|------------------------------------|
| Model No. | OS-3D Otamic LE |
| Rated Voltage | 110-120V~ |
| Rated Frequency | 60Hz |
| Rated Power Consumption | 150W |
| Timer | 5/10/15/20/30 minutes |
| Rated Time | 15 minutes |
| Dimensions(L x W x H) | Upright: 62" x 29.5" x 46.5" |
| | Reclined: 67.7" x 29.5" x 34" |
| Weight | Gross Weight: Approx. 250.8 lbs |
| | Net Weight: Approx. 220 lbs |
| Length of Wire | Controller wire: 32" |
| | Power supply wire: 70.9" |
| Usage Condition | Environment temperature: 32°F~95°F |
| | Contrasting humidity: 20-80RH |
| Storage Condition | Storage temperature: 32°F~95°F |
| | Storage humidity: 20-80RH |
| Safety Feature | Equipped with overheated and power |
| Maximum body weight of user | 264 lbs |

Issued.2020.01
V1.0