



EXHIBIT 2 - EUT EXTERNAL PHOTOGRAPHS



TRA045K2M

EUT View 1

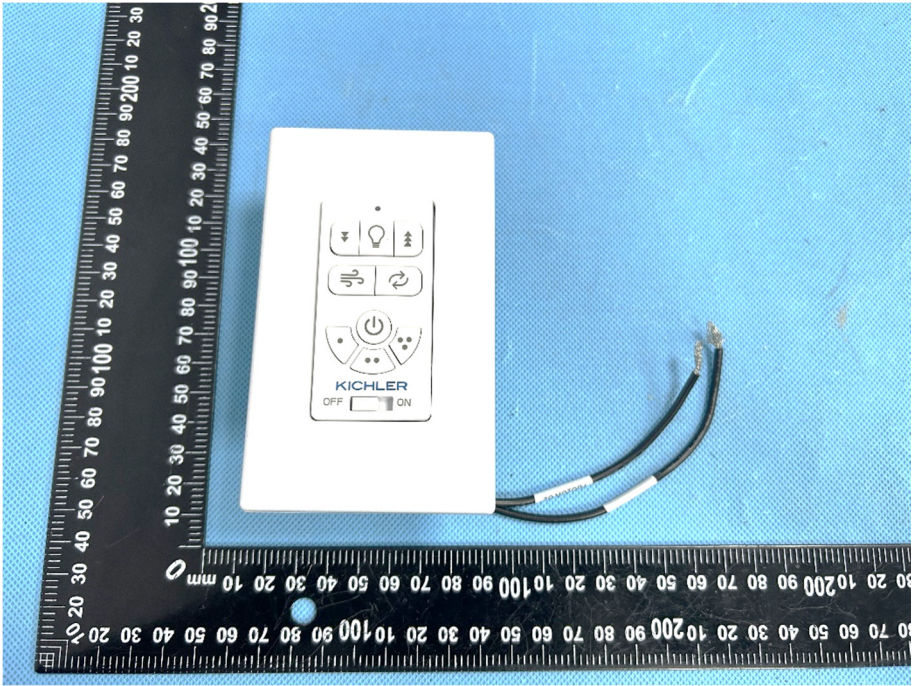


EUT View 2

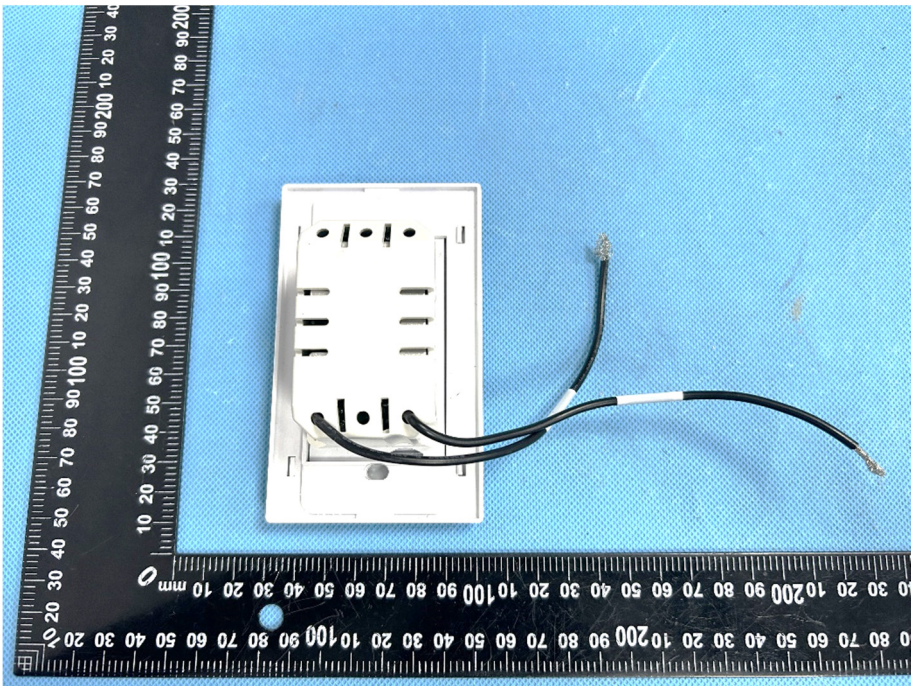


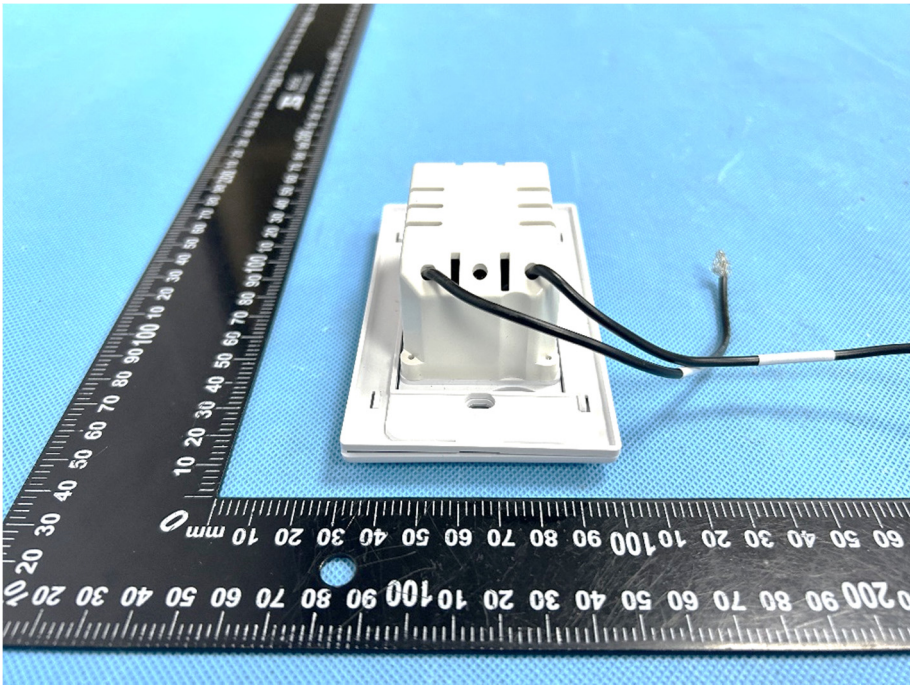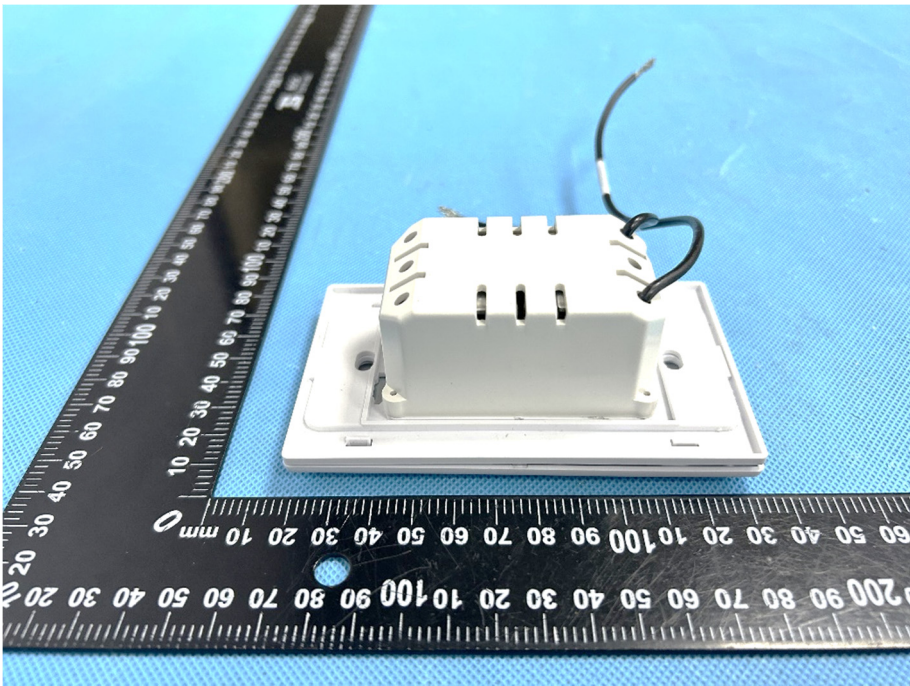EUT View 3	
EUT View 4	



EUT View 5

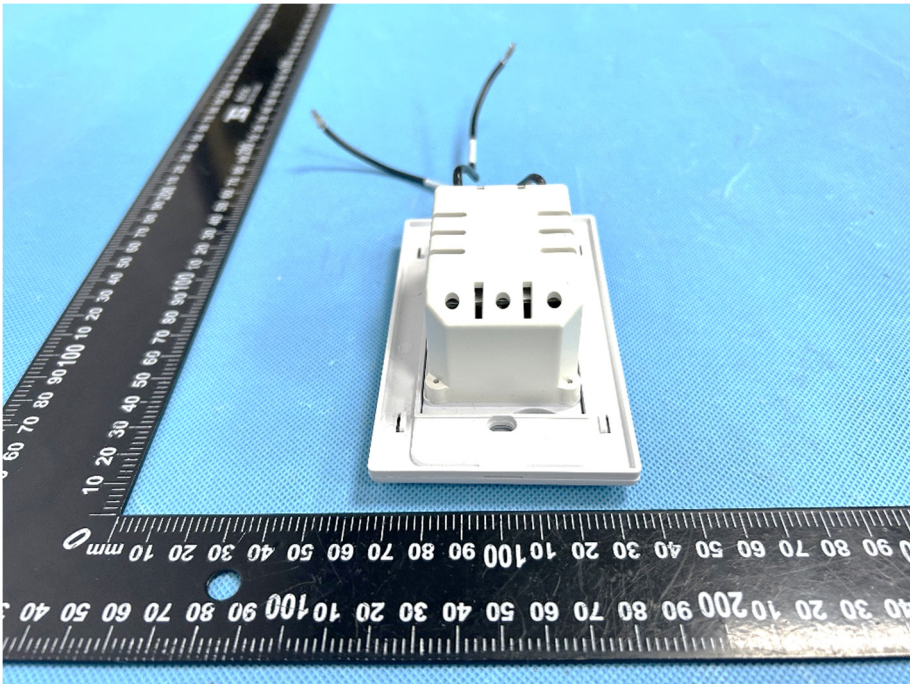


EUT View 6

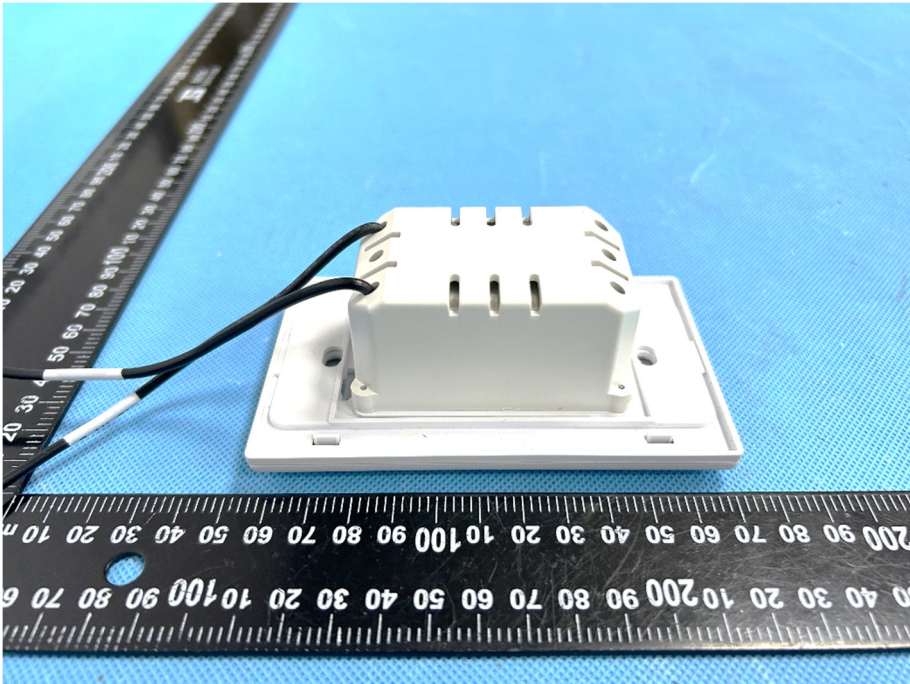

TRA045K1M

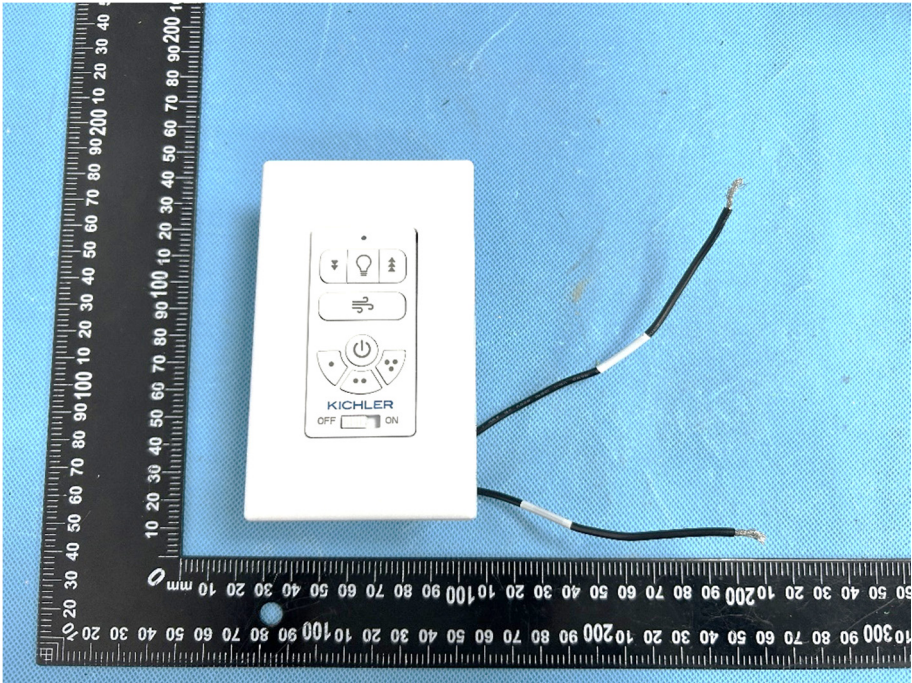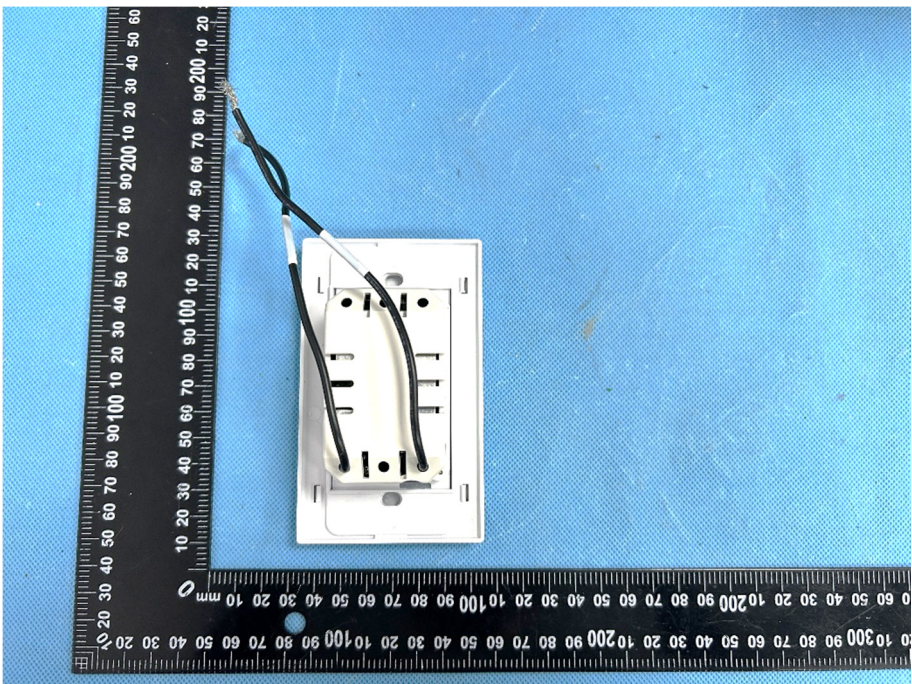EUT View 1	 A photograph showing the front view of a white rectangular Kichler TRA045K1M switch. The switch features a power button at the top, a light bulb icon, a fan icon, and a power button with 'OFF' and 'ON' labels. Two black wires are connected to the bottom of the switch. A black ruler with white markings is placed vertically to the left of the switch for scale.
EUT View 2	 A photograph showing the back view of the same white rectangular Kichler TRA045K1M switch. The back of the switch is open, revealing the internal wiring terminals. Two black wires are connected to the terminals. A black ruler with white markings is placed vertically to the left of the switch for scale.

EUT View 3

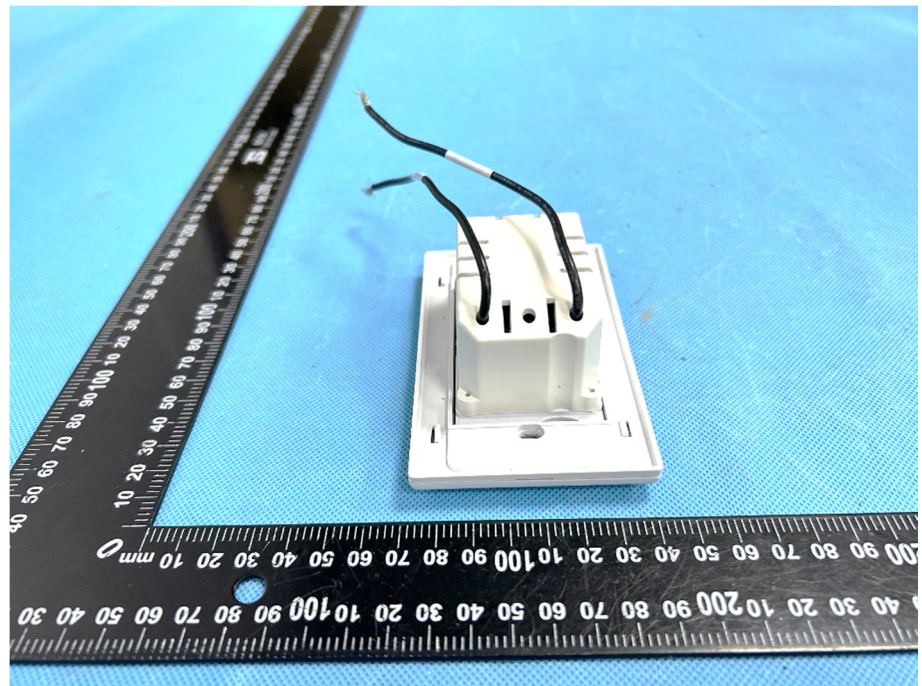

EUT View 4

