


## Label Location

Apply the labels to the board as shown.

For Bed



Bed End Board

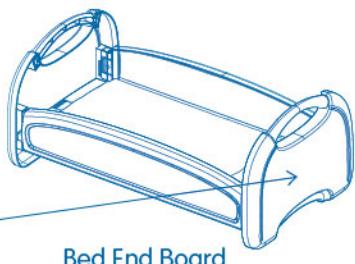

Bed End Board

## Trouble Shooting

If the doll does not respond to the accessories, please try her with any other play pieces or change the battery

## Care

### Fabric parts

- Surface washable.

### Plastic components

- Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse this toy.

## Consumer Information

For Customer Service in  
the USA and Canada please  
call 1-888-438-8808

Outside the USA and Canada  
call +800-4388-8088, or  
dial direct at +1-909-594-7771 Ext. 560

Information at [www.tollytots.com](http://www.tollytots.com)  
or e-mail at [info@tollytots.com](mailto:info@tollytots.com)

FISHER-PRICE and associated trademarks are owned by and used under license from Mattel, Inc.  
©2010 Mattel, Inc. All Rights Reserved.

Fisher-Price licensed products are made to company's traditionally high standards of quality, comply with all applicable government safety regulations and conform to the Safety Requirements of ASTM F963.

Fisher-Price®

# talk 'n play toddler™ set

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tool required for assembly :  
Phillips screwdriver (not included).  
Requires 3 x "AAA" batteries (not included).





## WARNING :

For the safety of your child:

- This product is not suitable for children under 2 years of age.
- Do not use this product unless the assembly instructions can be strictly adhered to.
- Do not leave unassembled parts/sections unattended. Contains small parts with sharp points or edges that can become a potential choking hazard.
- Do not leave child unattended when playing with this product.
- This product is a toy. Do not allow child to sit in this product.

Congratulations on your purchase of a Fisher-Price Little Mommy talk 'n play toddler™ set. Before using your Little Mommy talk 'n play toddler™ set, please take a few minutes to read this instruction sheet carefully. Reading these instructions will help you to assemble and use this Little Mommy talk 'n play toddler™ set.

For any questions concerning assembly or to obtain missing or replacement parts, the best way to reach us is send an e-mail to [info@tollytots.com](mailto:info@tollytots.com), or visit our web site [www.tollytots.com](http://www.tollytots.com) (click the customer service link), or contact the customer service department at 1-888-438-8808 (USA and Canada) or +800-4388-8088 (other countries) or +1-909-594-7771 Ext. 560 (dial direct).



## CAUTION :

This product requires adult assembly and care should be taken when unpacking, assembling and setting up this product.


Contains small assembly components with functional sharp points or edges.

The interactive function works only between the doll and accessories included in this set only.


The doll reacts to her accessories: the tricycle, bed, chair, apple, sippy cup, cheese and cracker and spoon only.

## PARTS


### Bed

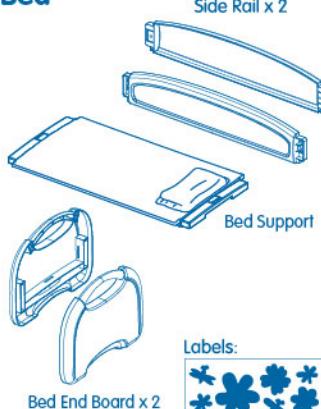

### Table

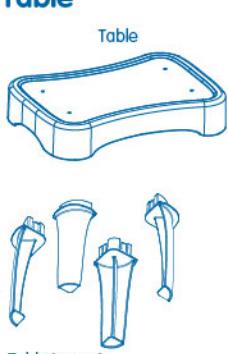

### Chair

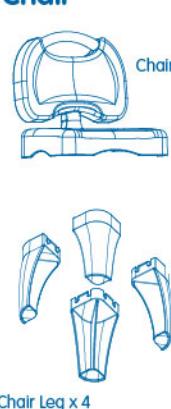


## Battery Replacement

For best results, use only alkaline batteries, for longer battery life

- 1.5V AAA +

Requires 1.5 V x 3 AAA (not included)

- Locate the battery compartment on back of body. Move power switch to the OFF position.
- Loosen the screw in battery door with Phillips screwdriver. Remove the battery door.
- Insert three new AAA batteries, as indicated inside the battery compartment.
- Close the battery door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Move power switch to the ON position. You are ready to play again.
- When sound become not clear or stop, it's time for an adult to change the batteries!

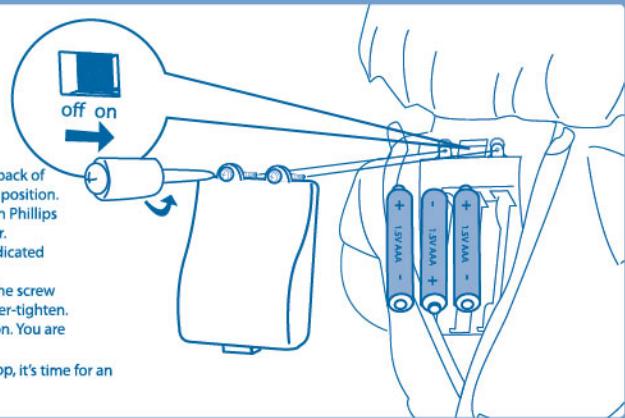

### Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment with correct polarity.
- Remove batteries during long period of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Play with Doll in Bed

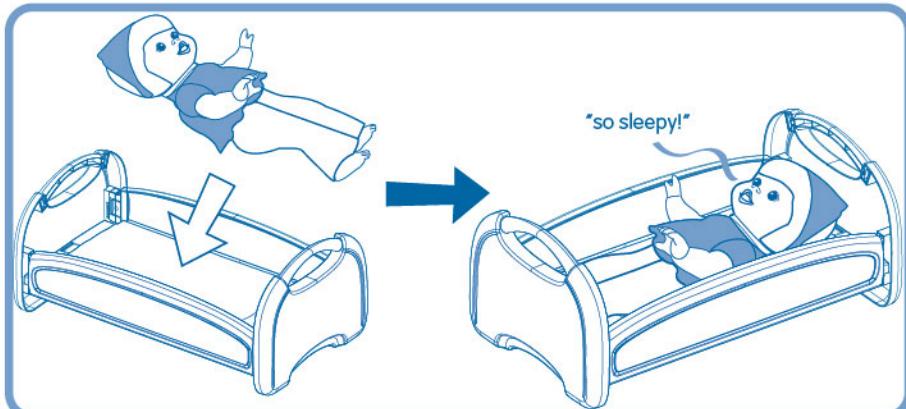

## Play with Doll and Accessories




Interactive Doll responds to her food accessories!

## Tricycle




## Table Assembly

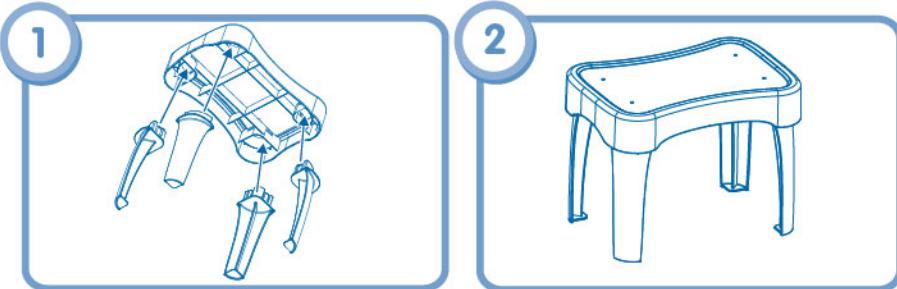

You will hear a 'click' sound once all connections are locked in place.

## Chair Assembly





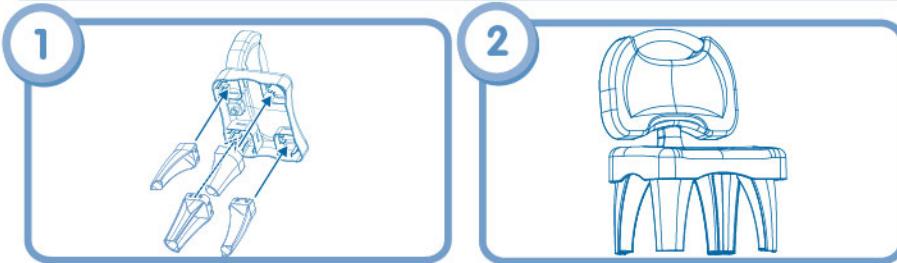


You will hear a 'click' sound once all connections are locked in place.

## Play with Doll in Chair



## Tricycle Assembly

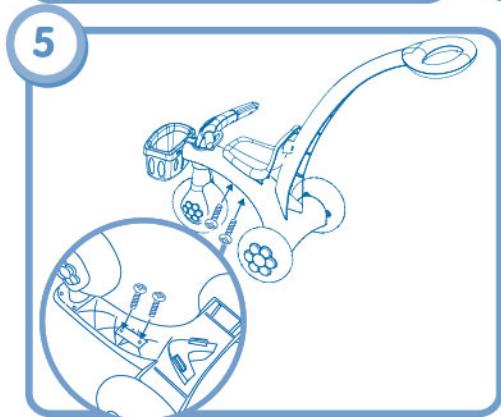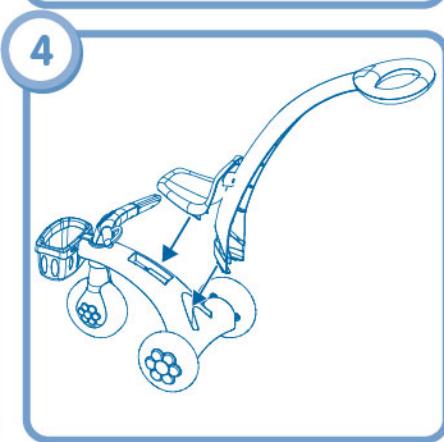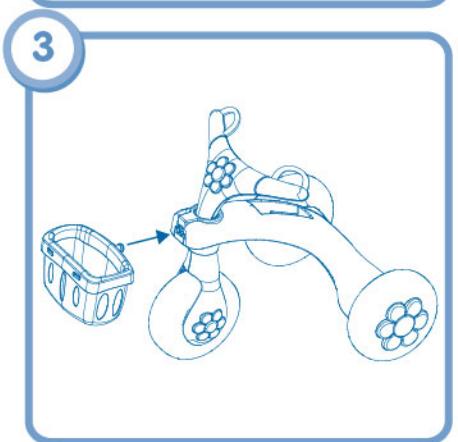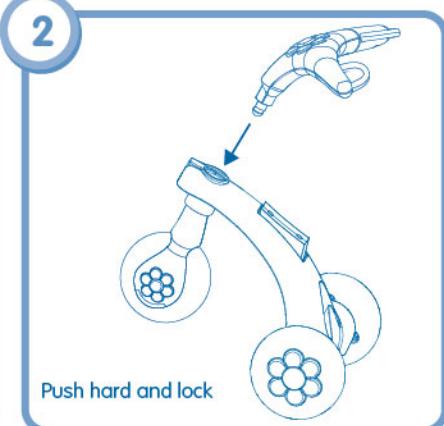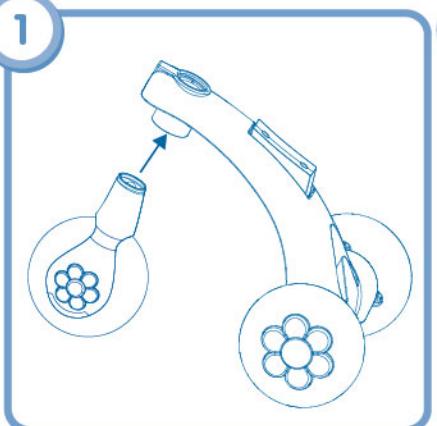



You will hear a 'click' sound once all connections are locked in place.

4

## Play with Doll on Tricycle



## Bed Assembly

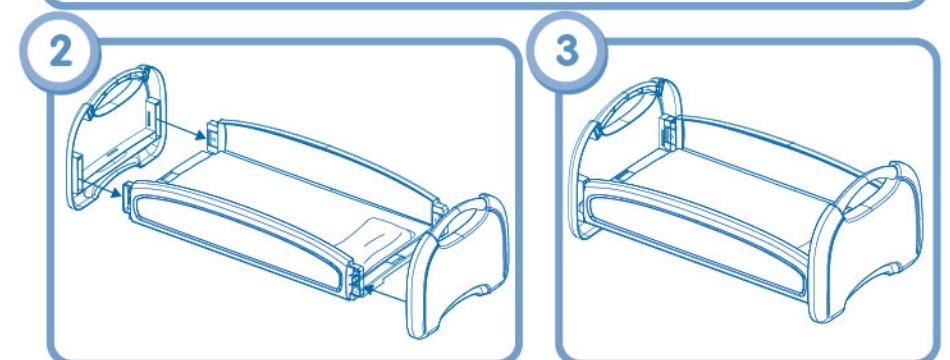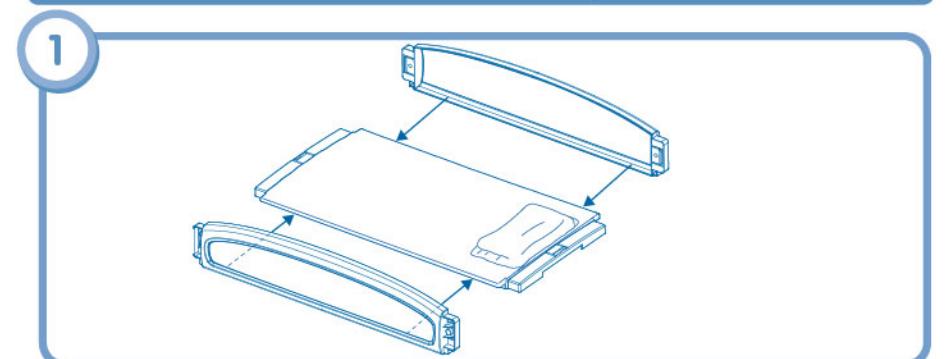

You will hear a 'click' sound once all connections are locked in place.

5