

# **USER'S GUIDE**

## **LCD MONITOR**

**MODEL: OR2407WBP**


**LCD MONITOR**  
**User's Guide Book**

## TABLE OF CONTENTS

1. INSTALLATION .....	3-4
1-1 Parts .....	3
1-2 Port Specification .....	4
2. FEATURES .....	5
2-1 Display Mode(24wide) .....	5
2-2 Specifications .....	5
3. OSD(On Screen Display) Setting .....	6-13
3-1 Display (Function) .....	6-12
3-2 Control Button .....	13
4. SAFETY INSTRUCTION .....	14-17
5. TROUBLE SHOOTING .....	18
6. SERVICE INFORMATION .....	19


## 1. INSTALLATION

### 1-1 Parts

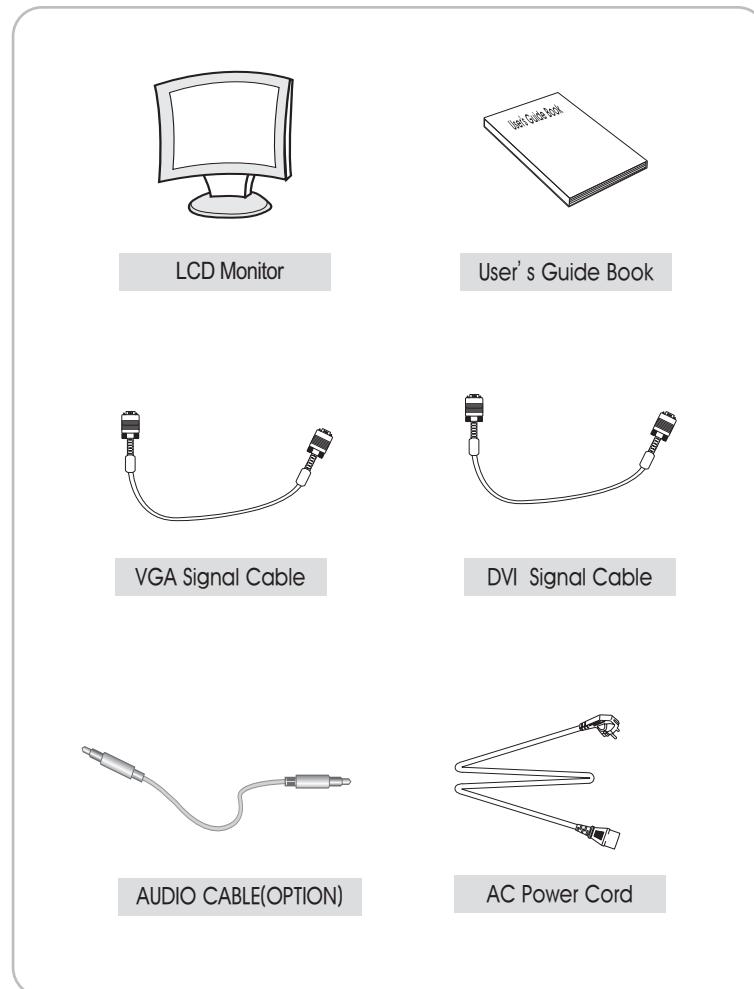

## 2. FEATURES

### 1-2 How to install

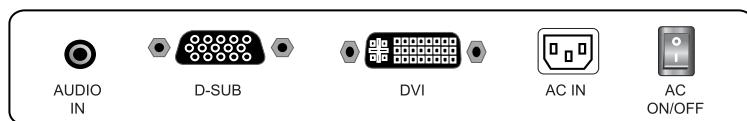

1. AUDIO IN: Connect audio cable both your computer and monitor.
2. D-SUB: Connect VGA signal cable both your computer and monitor.  
Fasten bolts after connection.
3. DVI: Connect DVI cable both your computer and monitor.  
Fasten bolts after connection.
4. AC IN: Connect power cord into the AC IN connector.
5. AC ON/OFF : Turn on/off by ac switch.

- \* Display ratio control
  - Press up( $\blacktriangle$ ) button for 2~3 seconds and select screen ratio 16:10, 4:3.
  - \* The consuming watt is "0" when unplugged.
  - \* Ports specification can be different from each model.

\* **WARNING** : Use only supplied cable and adaptor. Uncertified cable and adaptor may cause unexpected damage on the product.

### 2-1 Display Mode


RESOLUTION	H-Frequency(kHz)	V-Frequency(Hz)
720 × 400	31.47	70.0
	31.47	60.0
	35.00	66.7
	37.86	72.8
	37.50	75.0
800 × 600	35.16	56.3
	37.88	60.3
	48.08	72.2
	46.87	75.0
	48.36	60.0
1024 × 768	56.48	70.1
	60.02	75.0
	64.00	60.0
1280 × 1024	80.00	75.0
	64.8	60.0
1920 × 1200		

### 2. Specifications

Frequency (MAX)	1,920X1,200 @ 60Hz
Pixel pitch	0.270(H) X 0.270(V)mm
Screen Size	518.4(H) X 324.0(V)mm
H-Frequency	30~95KHz
V-Frequency	55~75Hz
Plug & Play	VESA, DDC1, 2B
Input Signal	DVI-D/D-SUB/AUDIO IN
Power	110-240V ~ 50/60Hz
Power Consumption	90W
Safety Approval	FCC

### 3. OSD(On Screen Display) Setting

#### 3-1 Display (Function)

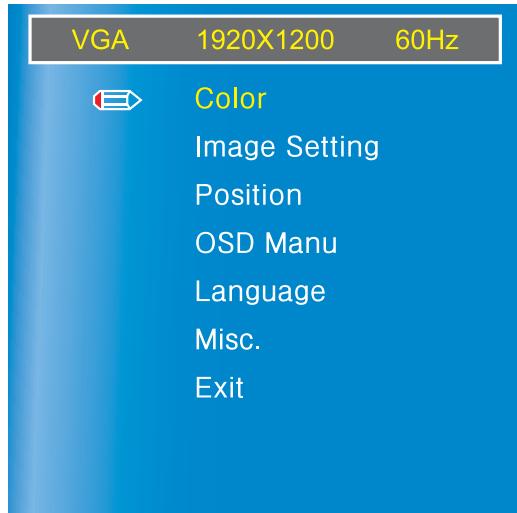

Color - Contrast, Brightness, Color Adjust, Color Temp, Auto Color, Back

Image Setting - Clock, Phase, Gamma, Sharpness, Auto Adjust, Back

Position- H.Position ,V.Position, Back


OSD Menu - OSD H.Pos, OSD V.Pos, OSD Timer, Back

Language - 한국어, English

Misc - Signal Source, Fit to screen, Volume, Mute, Reset, Back

Exit - Turn Off OSD Menu

#### Color

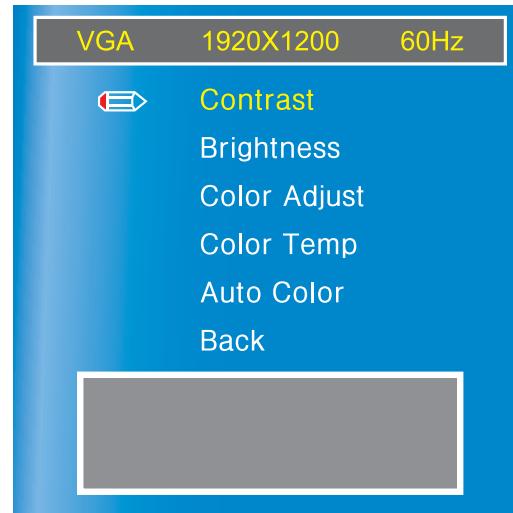

Contrast : Adjust the lightness and dimness from 0 to 100.

Brightness : Adjust the brightness and darkness from 0 to 100.


Color Adjust : Adjust the density of the color.(Red, Blue, Green)

Color Temp : Adjust color temperature 9300, 6500, 5800 or User's setting.

Auto Color : Automatically adjust the color.

Back : Turn off the color control menu.

### Image Setting

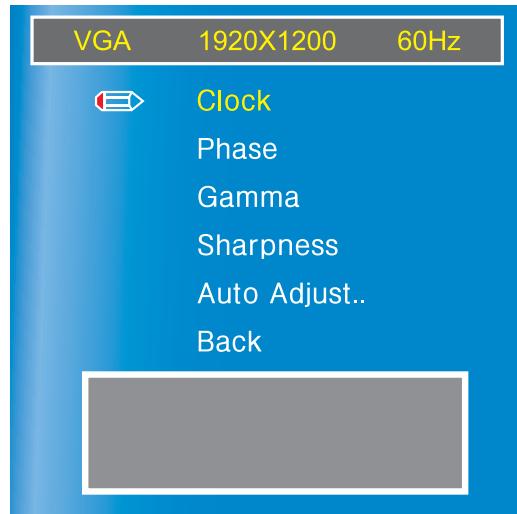

Clock : Adjust frequency from 0 to 100.

Phase : Adjust phase from 0 to 50.


Gamma : Adjust gamma from 0 to 3.

Sharpness : Adjust sharpness from 0 to 4.

Auto Adjust : Automatical adjustment.

Back : Turn off the menu.

### Position

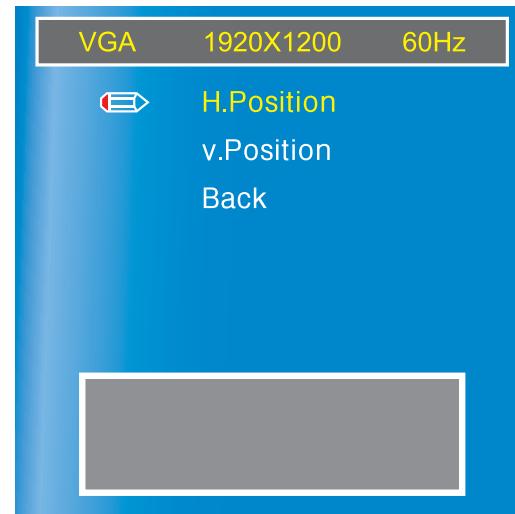


H.Position : Move the screen horizontally from 0 to 100.

V.Position : Move the screen vertically from 0 to 100.

Back : Turn off the Screen Position Menu.

### OSD Manu

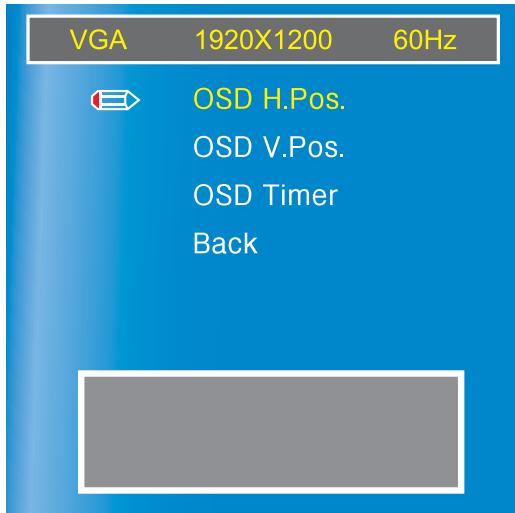

OSD H.Pos : Move OSD menu window horizontally on screen right and left (Range from 0 to 100).

OSD V.Pos : Move OSD menu window vertically on screen up and down (Range from 0 to 100).

OSD Time : Adjust OSD disappearing time from 1 to 20 seconds.


Back : Turn off OSD Menu.

### Language



한국어 : Select Korean

English : Select English

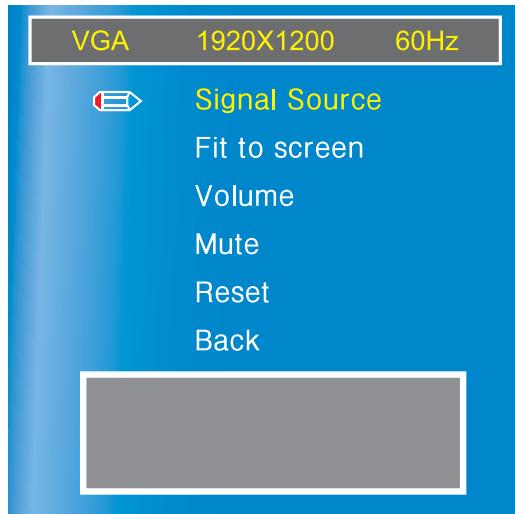**Misc.**

Signal Source : Select the signal RGB or DVI.


Fit to screen : Control the screen ratio 16:10 or 4:3.

Volume : Control the sound volume of the monitor from 0 to 100.

Mute : Turn off the sound of the monitor.

Reset : Initialize all setting to the factory default values.

Back : Turn off OSD menu.

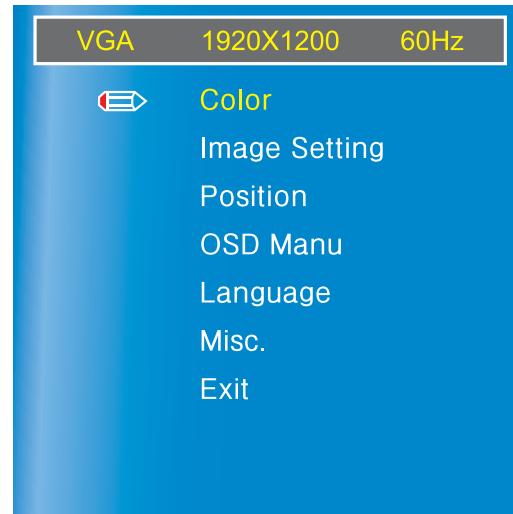**3-2 Control Button**

1. Press menu button to operate OSD window.

2. Place the cursor where you want using up/down button.

3. Press select and place the cursor where you want using up/down button.

4. Press select and control using >/< button.

5. Press menu and exit from OSD Menu when finished.

## 4. SAFETY INSTRUCTION

※ Follow this safety instruction to use the monitor properly and prevent the damages.

※ This safety instruction has "Warning" and "Caution" as below.

 **Warning** - If the user does not follow this instruction, it may cause the serious damage to the user or the monitor.

 **Caution** - If the user does not follow this instruction, it may cause the slight damage to the user or cause some damages to the monitor.

※ Save this user's guide book for later use

### Warning

Never remove the back cover and touch the inside of the monitor. If you need a service, please contact the service center or sales rep.



Keep away the monitor from the direct sunlight and a heating appliance



Never push objects of any kind into this product as they may result in a risk of fire or electric shock




Connect the power code to the wall outlet tightly. If the power code or plug are defective and the wall outlet is not tight, please do not use them



### Warning

Do not install this monitor on the outside and near water. If may cause damage to the product, electric shock and fire.

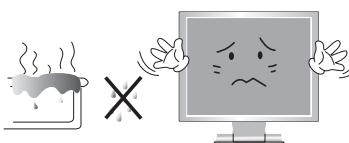


For cleaning, do not use liquid cleaners. Never touch the power plug with wet-hands




When lightening and thundering, unplug the monitor from the wall outlet and never touch it.



Unplug this product from the wall outlet, when it does not operate for a long time.

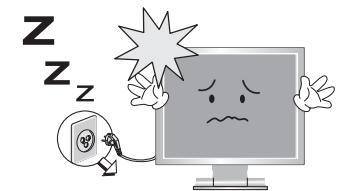

When smoking and noising from the monitor, unplug the product from the wall outlet and contact a service center or the sales rep.

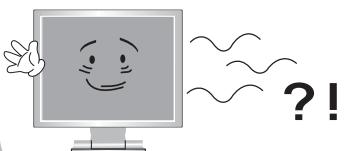

### WARNING : How to fix

Do not open this product as it contains high voltage inside. It may create an electric shock.

If the user disassembles and Removes the back cover, it does not make sure to make up for the damages and do a service and exchange the monitor.

## ! Cautions

Install this monitor some distance from the wall and do not install unless Proper ventilation is provided.



Place this product on a stable place. If not, it may fall, causing serious damages to the monitor and people.



The openings must not be blocked by curtain, rug or other similar surface.




When carrying this monitor, be careful not to damage the panel and drop it. It may cause some trouble.



Before carrying the monitor, turn it off and unplug the signal cables and the power code From the wall outlet.




Take the power plug out from the wall outlet.  
Do not pull the cable. It may snap the inner-wires and cause overheating and fire.

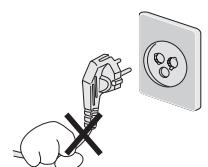

## ! Cautions


Install this monitor about 50cm far from the eyes and an angle of 0~15 degrees below eyes. Too close installation may cause having weak sight

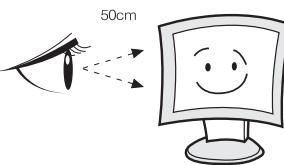

Do not press the LCD panel with hands or the sharpened material hardy.



For cleaning, unplug the monitor from the wall outlet. Do not use the liquid cloth. Use the soft cloth.

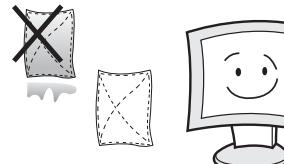

Do not use the chemical liquid for cleaning. It may cause fading and breakage.



## 5. INFORMATION TO THE USER

### INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

### WARNING

The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment."

## 6. TROUBLE SHOOTING

※ When the following troubles are occurred, follow the trouble shooting before contacting a service center or sales rep.

Trouble	Check point	How to fix
Power indicator is off and no picture	- The power cord is properly connected? - Check the power button of monitor	- Connect the power cord properly. - Turn on the monitor
No picture even though the power LED is on.	- Check the signal cable is connected properly.	- Connect the signal cable properly
Screen position is not collect.	- Check the screen size and position	- Press "AUTO" button on OSD menu
Screen is too bright or dark	- Check the brightness of the monitor	- Adjust the brightness by PC system
Screen is not clear. Focus is bad and noise occur.	- The frequency sets up properly?	- Adjust the frequency by PC.

**Memo**

**Memo**