

TM-315 Handset Function and Setting description

1. Three Key mode

a. Place the Jumpers in the position of 


b. KEY1 is corresponding for  (STOP).

c. KEY2 is corresponding for  (UP).

d. KEY3 is corresponding for  (DOWN).



PCB

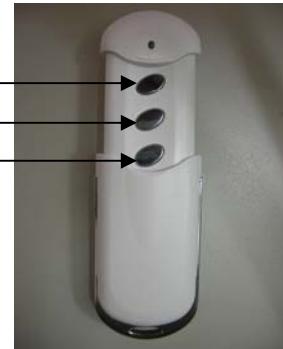

2. Single Key mode

a. In single key mode, one handset can control for three doors.

b. Place the Jumper in selected position.

c. KEY 1 for Door 1, KEY 2 for Door 2 and KEY 3 for Door 3.

d. The sequence for Handset is DOWN, UP and STOP.

* When the door is fully closed, first press for UP and second press for STOP.

* When the door is fully open, first press for DOWN and second press for UP and third press for STOP.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:-

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received : including interference that may cause undesired operation.

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.



Door 1



Door 2



Door 3

