



User Manual



Preface

This manual main introduce products function, application, operation and others of entertainment system .

The manual only as guidance of owner operation, not a maintenance evidence. If product function or related parameter change along with products upgrade and update, extra specification will be list and forgive not inform. Details can find in distributors.

The copyright of manual belong to manufactory any organization and person can't use part or whole of it in commerce without permission.

Note:

- The image case in manual may different from the practical.
- The content display in screen may different from the practical.
- Additionally, product name and other inherent name are company brand or registered brand.

Contents

Before Using This System

Important safe information	1
Specification before installation	2
■ Warning	2
■ Precaution	2
Prevent electromagnetic interference	3
Before installation	3
System installation	4
■ Installation points	4
■ Main unit installation	4
■ GPS antenna installation	4
■ Standard accessory	6
Prepare Before Using	7
■ Usage of power on and off	7
■ Automatic antenna	7
■ Relate driving operation	7

Function specification and AV operation

Parts names of front panel	8
Front board function specification	19
■ LCD	19
■ Dimmer button	19
■ AV switch button	19
■ Volume control	19
■ Menu shortcut button	19
■ System reset button	19
■ AV and mute button	19
■ Navigation button	19
■ Set destination button	19
Display angle adjustment	21
Insert and remove disc	22
■ Slip and remove disc	22
■ Fixation model	22
Touch panel specification	23
■ Main menu	23
■ Media player usage	23
■ Voice setting	24
■ USB mode setting	25
■ Tone and balance	26
■ Multidisc play	26
■ Exit playing screen	27
■ Play CD/MP3	28
■ Method of listening radio	28
■ Rear-viewed display operation	29

■ Bluetooth operation (optional)	30
■ IPod operation	30
■ Auxiliary input operation	31
■ Information (optional feature)	31
■ Setting	32
■ Touch panel calibration	33

Navigation system

Navigation attention	34
■ Mapping	34
■ Satellite signal reception	34
Enter navigation system	
■ Touch pen operation	35
■ Hot button operation	35

Use display correctly	36
■ recaution for usage	36
■ About LCD display	36
■ About small fluorescent pipe	36
■ About the maintenance	36

Appendix

Playable discs	37
Use of CD-ROM	38

■ Attention for CD-ROM operation	38
■ Maintenance	38
■ Attention for storage	38
■ Environment CD play	38

Standard

Display parts	39
GPS	39
General parameters	39
Amplifier, audio part	39
DVD player parts	39
FM/tune parts	40
AM/tune parts	40
GPS antenna	40
Products size	40
Total weight	40

Installation guide

Installation guide	41
------------------------------	----

Important Safe Information

This product is intended to safely provide turn by turn instruction to get you to a desired destination. Please read the following precautions to ensure that you use this navigation system correctly.


- Please read owner's manual carefully before operate this navigation.
- This product is not a substitute for your personal judgment. Any route suggestions made by this navigation system should never supersede any local traffic regulations or your personal judgment and/or knowledge of safe driving practices. Do not follow route suggestions if the navigation system instructs you to perform an unsafe or illegal maneuver, places you in an unsafe situation, or routes you into an area which you consider unsafe.
- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, stop in a safe and legal manner and location.
- Do not input destinations, change settings, or access any functions requiring a prolonged view of the monitor and/or remote control while you are driving. Stop in a safe and legal manner and location before attempting to access the system.
- When using the navigation system to find/route to an emergency service, please contact the facility to validate and verify availability, prior to driving to it not all locations of emergency service providers such as police and fire stations, hospitals, and clinics are contained in the database. Please use your own judgment and your ability to ask for directions in these situations.
- The map database contained within the media (DVD ROM) in which it is stored is the most recent map data available at the time of production. Because of changes in streets and Neighborhoods, there may be situations where the navigation system may not be able to route you to your desired destination. In these cases, use your own personal judgment.
- The map database is designed to provide you with route suggestions, it does not take account of the relative safety of a suggested route, or of factors which may affect the time required to reach your destination. The system does not reflect road closures or construction, road characteristics (i.e. type of road surface, slope or grade, weight or height restrictions, etc.), traffic congestion, weather conditions, or any other factors which may affect the safety or timing of your driving experience. Use your personal judgment if the navigation system is unable to provide you with an alternate route.
- There may be situations where the navigation system may display the vehicle's location erroneously. Use your own driving judgment in this situation, taking into account current driving conditions. Please be aware that in this situation, the navigation system should correct the vehicle's position automatically; however, there may be times where you may have to correct the position yourself. If this is the case, stop in a safe and legal manner and location before attempting operation.
- Make certain that the volume level of the monitor is set to a level which still allows you to hear outside traffic and emergency vehicles. Driving while unable to hear outside sounds could cause an accident.
- Position the monitor so that glancing at the screen can be performed quickly and easily by the driver. If any adjustments are necessary, stop in a safe and legal manner and location.
- The monitor used with this system should not be placed in a location which hinders the driver's view of any critical elements necessary to operate the vehicle properly (i.e. the road, mirrors, instruments, vehicle's surroundings). In addition, the monitor should not be placed in a location which may obstruct the air bags should they deploy.

- Remember to wear your seat belt at all times when the car is in motion. This will help you avoid impact with anything in the car's interior, including the system itself.
- Be sure to reset the system before starting operation whenever the system is reinstalled on another vehicle. The navigation system measures the distance with the speedometer pulse. Since the speedometer pulses depend on the vehicle manufacturer and the tire size, when you buy a new vehicle or replace your tires, the speedometer pulses are compared with the distance measured with GPS waves and the distance coefficient is automatically recalibrated.
- Do not use a portable telephone or transceiver near the system. Using them may cause noise or operating error to the system, or prevent for the portable telephone or transceiver from proper communications. Use them away from the system.
- Please make certain that any other person who intends on using this navigation system reads these precautions and the following instructions carefully.
- If there is anything in the manual which you do not understand, or are uncertain about the operation of the navigation system, please contact an authorized representative before using the navigation system.
- Should the system become necessary for service or repair, make sure the DVDROM is removed from the main unit. Place the DVD-ROM in its case and ship it along with the main unit.

Specification Before Installation



- **This product manufacturer suggests you not install or maintain navigation system by yourself. Install and maintain product may result you in electric injury or other dangerous. Please give all the projects to the agents authorized by manufacturer.**

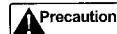

- **Forbid use the following install position or way:**
 - * **May cause injury to driver and passenger when stop suddenly**
 - * **May affect driver driving, such as front floor or near steering wheel, gearlever.**
- **Please confirm back space before drill in panel or monitor board.**
Precaution not damage oil wire, stop wire, electricity device, telecom wire or power wire.
- **When using screw, please make sure it not touch any wire with power.** Shaking may destroy electricity wire or insulating surface, and appear short circuit and damage vehicle.
- **So that install right, please use standard part as regulation.** If use unstandard parts may damage inside part or loose, and make it fall.
- **It's dangerous that GPS antenna round steering column or gearlever .** Make sure this product not affect drive.
- **Make sure all the wires not hang by door or seat movement to avoid short circuit.**
- **Confirm other equipment whether good after finish install navigation.**

- **Some government may forbid or confine install this navigation. Please obey the law and regulation relate to usage, installation, operation of navigation.**
- **Avoid driver or passenger hit the product at an urgent stop, install product between driver and passenger.**
- **Forbid install product on monitor board, door, column and near position that gas pocket will open.** Please read owner's manual to see area of gas pocket will open.
- **Forbid install product on monitor board, door, column and near position that gas pocket will open.** Please read owner's manual to see area of gas pocket will open.
- **Please not install product where will affect operation include pillow and gas pocket.**

Prevent electromagnetic Interference

- To avoid electromagnetic interference, please make the following parts from the product and other wire.
 - FM, AM antenna and wire
 - GPS antenna and wire
 You also should arrange wires from each other. Not confuse or crossing, electromagnetic interference may result in display error.

Before Installation


- Please inquiry local distributor if you need drill a hole or change.
- Before try to install product, please try connect first, make sure connection and system whether right.

- Not install product where affect LCD panel open. Such as gear lever. Before install product, please leave enough space, so that affect gearlever when LCD panel open complete. Otherwise may interfere gearlever, or this product problem.

System Installation

1、Installation Points

- ★ This product apply in auto with 12V and negative terminal connect to ground, Before installation please check battery voltage.
- ★ Avoid system short circuit, suggest take out negative terminal before installation.
- ★ Not connect the product to battery without safe wire.
- ★ Not connect the power wire with other electricity wire directly.

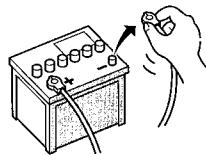

2、Main Unit Installation


- ★ First take out original main unit.
- ★ Take out supporter, screw, and save it
- ★ Use the crew to fix supporter on navigation unit.
- ★ Connect all the main unit wire by installation chart.
- ★ Install main unit well, and use 4 screws fix main unit.

Precaution: Not damage and dirty monitor panel

3、GPS Antenna Installation

Equip antenna inside auto (on back board)

Paste metal panel on a smooth place so that GPS antenna towards window. Put GPS antenna on metal panel.(GPS antenna fixed by it magnetic.)


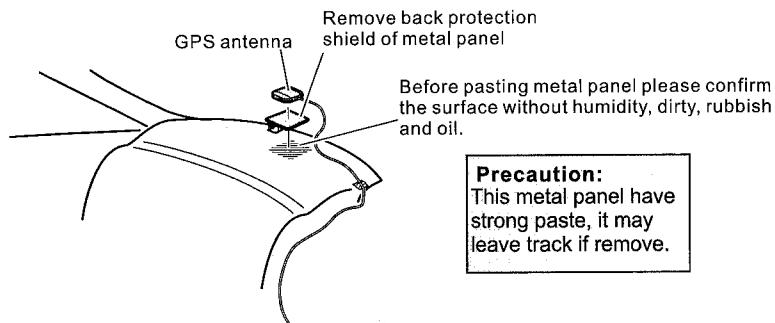


Precaution:

At pasting metal panel, not cut into pieces. Some auto windows prevent GPS signal, then equip GPS antenna on the outside.

Install antenna outside (With Auto)

Put GPS antenna on a smooth level, such as roof or luggage box cover.(fix by a magnetic)

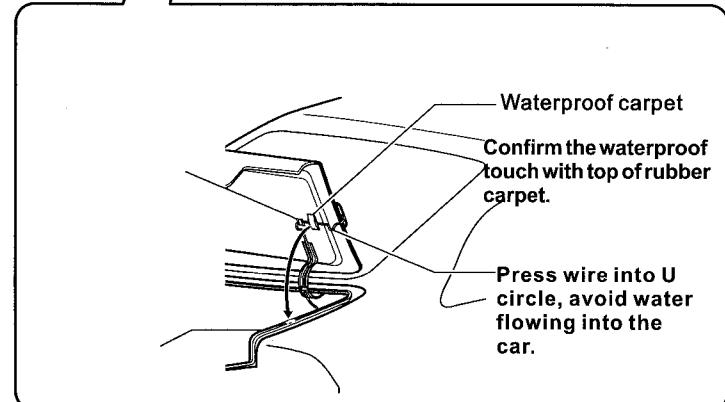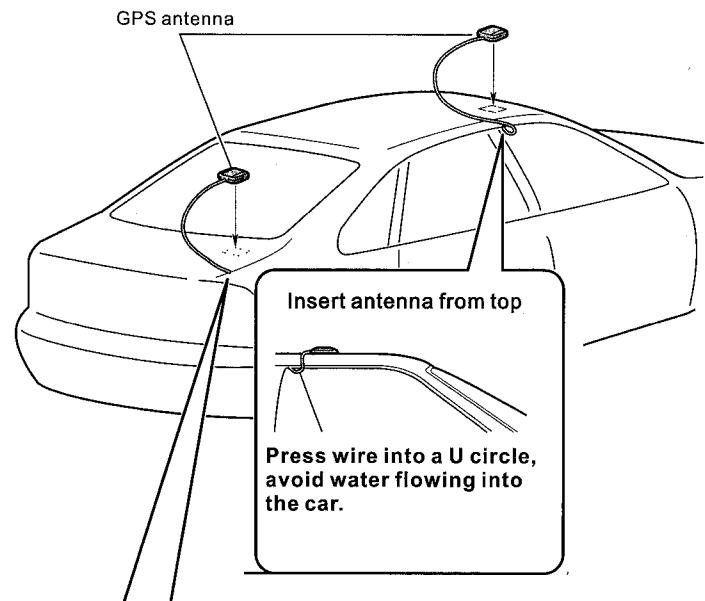


4. Standard Accessory



GPS antenna 1 pc



Waterproof carpet 1pc

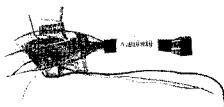

16 Pin Special Cable 1 pc



Ipod Cable 1 pc




AUX Cable 1 pc



GPS-USB Connection Cable 1 pc



Mini-USB Cable 1pc


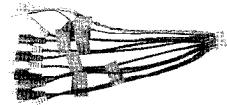


20Pin General Cable 1 pc

Prepare Before Using

1、Usage of Power on and off

Turn ACC to on (start engine), the power connected and start automatically, screen appear auto icon and note after few seconds:

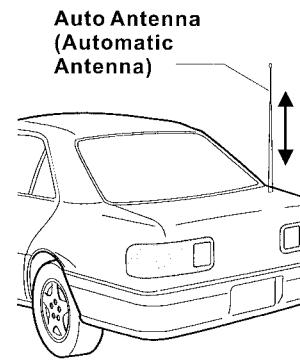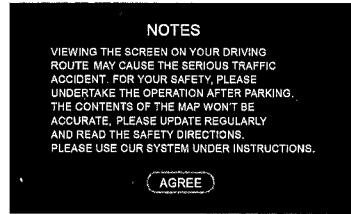

Press 【agree】button, enter last screen, Turn ACC to OFF(Turn off engine), and power off, it will save present page and enter this page next time.



- Use the product, make sure start engine first, it will use power without start.
- Continue press control button 2 seconds, display be off.(Press mute button 2 seconds of general machine, display be off)

3、Relate driving operation

Ensure driving safely, can't set destination or other complex operations in driving.

Please stop vehicle on safe place, stop engine and operate, Driver can't operate without stop.


2、Automatic antenna

Install product on automatic antenna of auto, open radio and automatic antenna become long. Please observe automatic antenna changes with radio's on or off


Part names of front panel

there're some difference among all models' front panels, but rear operation function is the same. Coming up is the front panel introduction of all models.


Model No.: D7000NAVI (GENERAL MODEL)

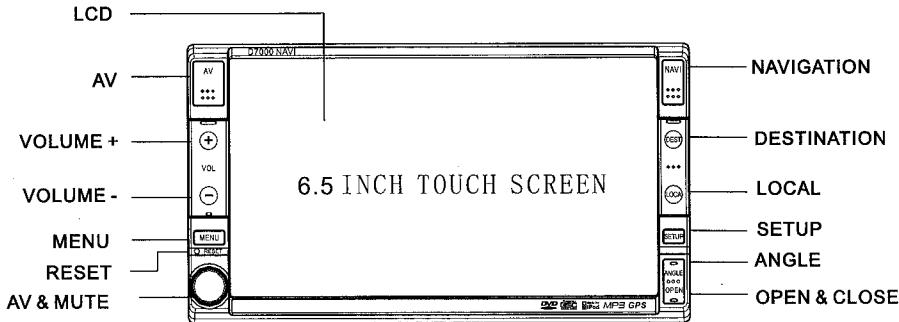


Model No.: E7001NAVI (TOYOTA PRADO)

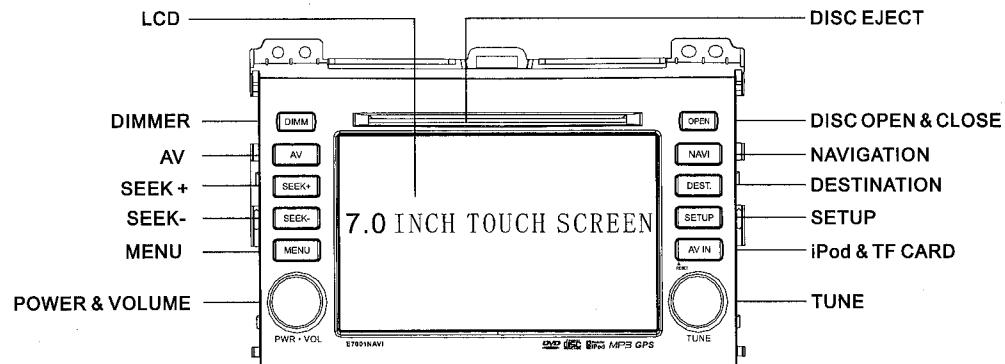


Model No.: D7002NAVI (TOYOTA CAMRY)

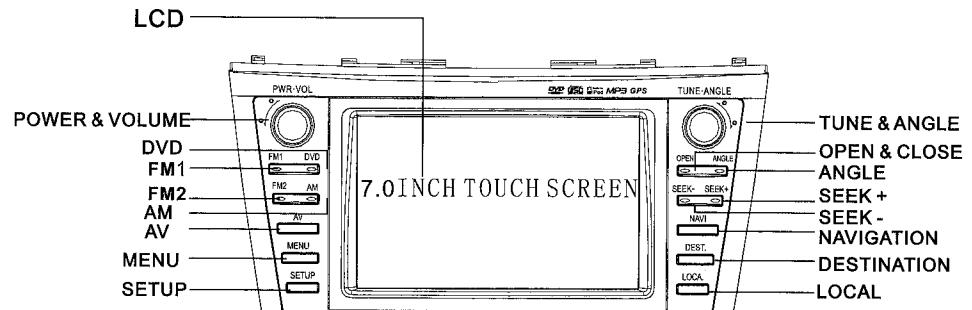


MODEL NO.: D7003NAVI (TOYOTA REIZ)

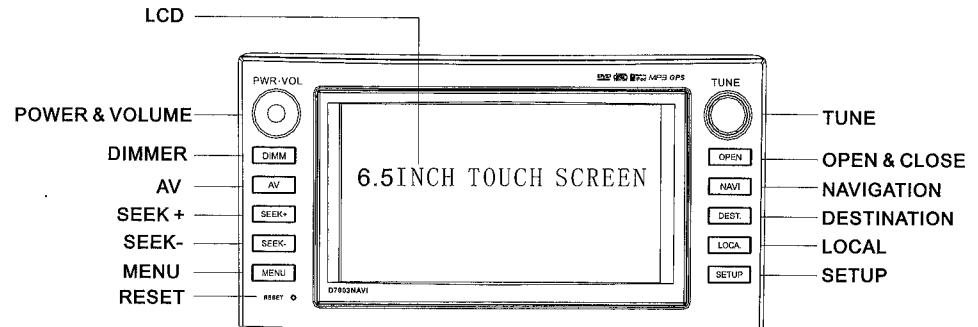


MODEL NO.: E7004NAVI (BUICK REGAL)

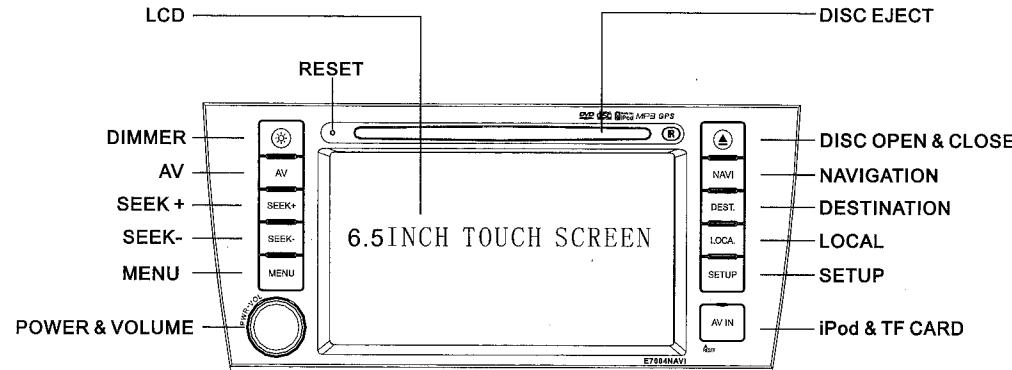


MODEL NO.: E7005NAVI (VOLKSWAGEN PASSAT)

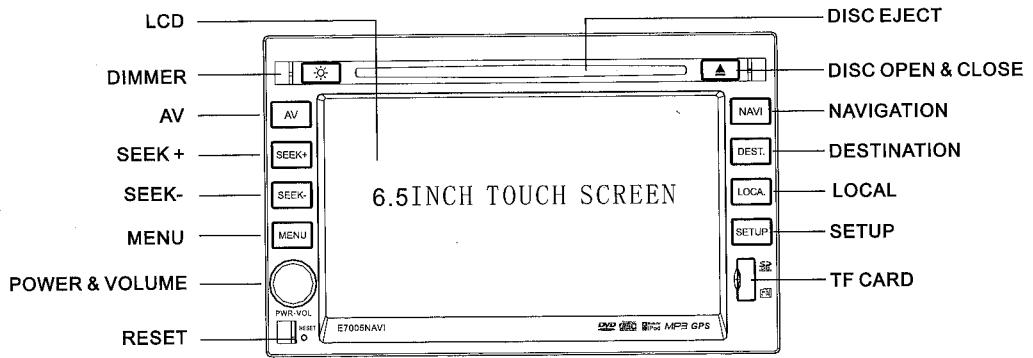


MODEL NO.: E7006NAVI (NISSAN TIIDA)

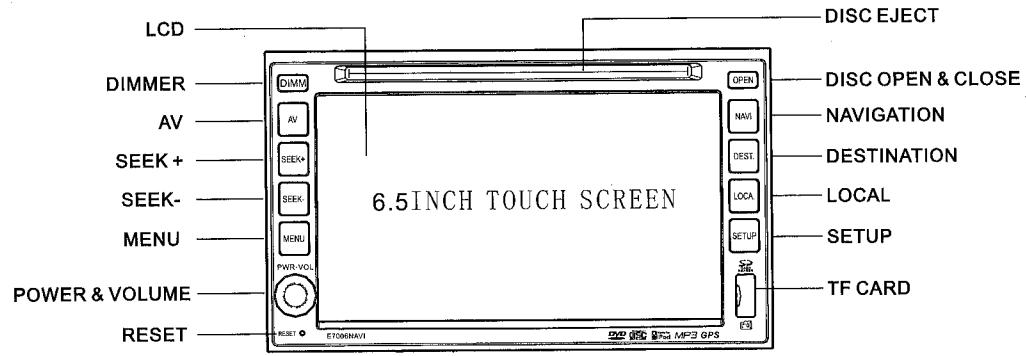


MODEL NO.: E7007NAVI (VOLKSWAGEN SAGITAR/MAGOTAN)

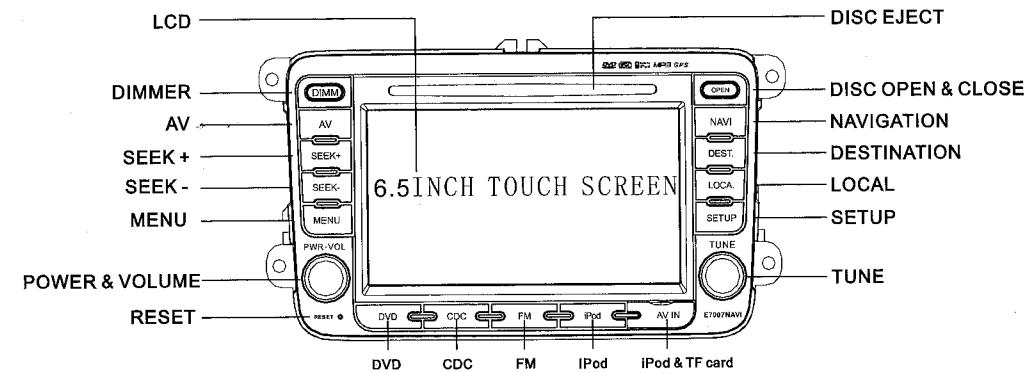


MODEL NO.: E7008NAVI (BUICK LACROSSE)

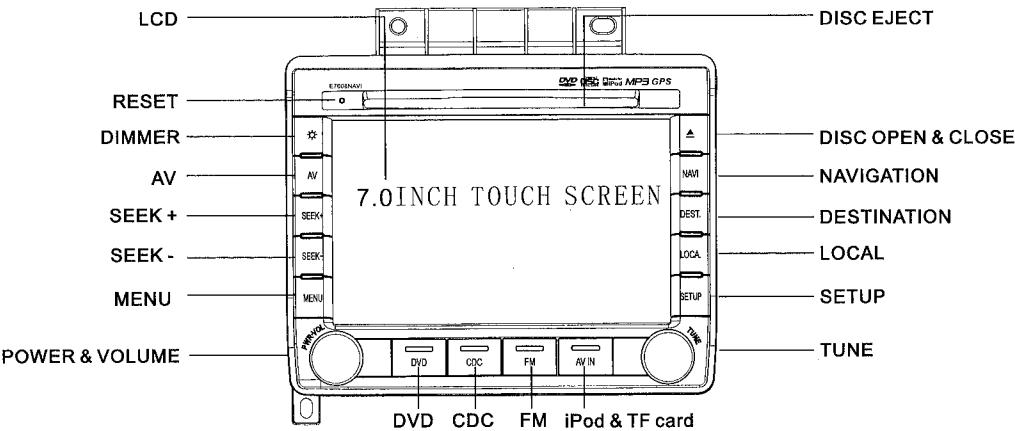

MODEL NO.: E7009NAVI (BUICK EXCELLE)

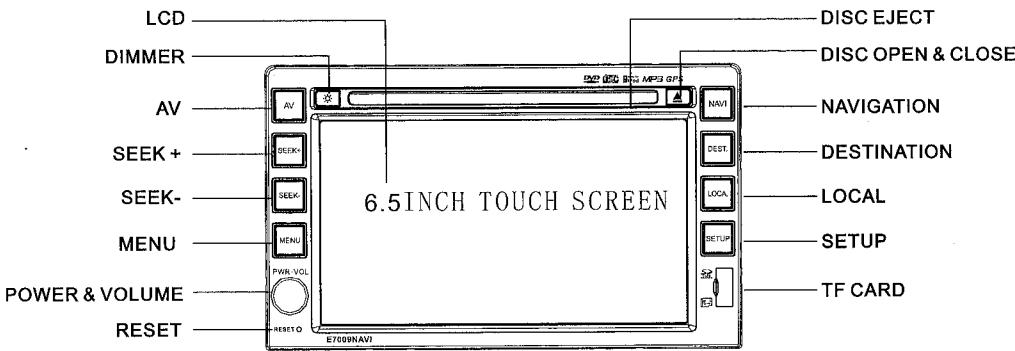

MODEL NO.: E7012NAVI (FORD FOCUS)

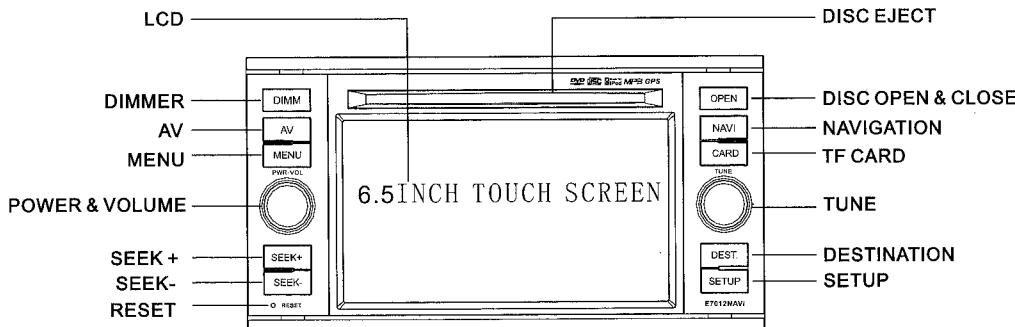

This diagram illustrates the layout of a 6.5 inch touch screen unit, likely a car stereo, with various controls and labels. The screen itself is labeled '6.5 INCH TOUCH SCREEN'. To the left of the screen are several buttons: 'DISC OPEN', 'DIMMER', 'DISC EJECT', 'MENU', 'SETUP', 'NAVIGATION', 'TUNE', 'RESET', 'LOCAL', and 'SEEK -'. To the right of the screen are more buttons: 'SEEK +', 'POWER & VOLUME', 'AV', 'MENU', 'DIMMER', 'LCD', and 'SEEK -'. Below the screen, there are several indicator lights and labels: 'DISC MP3 MP4 GPS', 'DISC WMA', 'DISC AAC', 'DISC M4A', and 'DISC M3U'. The top edge of the unit features a 'TF CARD' slot.

MODEL NO.: E7021NAVI (PEUGEOT 307)

MODEL NO.: E7020NAVI (ZHONGHUA JUNJIE)

The diagram illustrates a 6.5 inch touch screen car stereo unit. The central feature is a large touch screen display labeled "6.5 INCH TOUCH SCREEN". Surrounding the screen are various control buttons and indicators. On the left side, there are buttons for "DISC EJECT", "TF CARD", "NAVIGATION", "DESTINATION", "DIMMER", "SETUP", "TUNE", and "RESET". On the right side, there are buttons for "OPEN", "DISC OPEN & CLOSE", "AV", "SEEK +", "SEEK -", "SEEK +", "SEEK -", "AV", "MENU", "POWER & VOLUME", and "LCD". The top of the unit features a "PARKING GPS" indicator and a "PARKING" button. The bottom of the unit has a "PARKING" button and a "DISC EJECT" button.

MODEL NO.: E7019NAVI (HYUNDAI SANTA FE)

Specification and AV Operation


MODEL NO.: E7018NAVI (CHEVROLET EPICA)

MODEL NO.: E7017NAVI (HONDA CIVIC)


MODEL NO.: E7016NAVI (HONDA CRV)

Function Specification and AV Operation


MODEL NO.: E7022NAVI (FORD MONDEO)

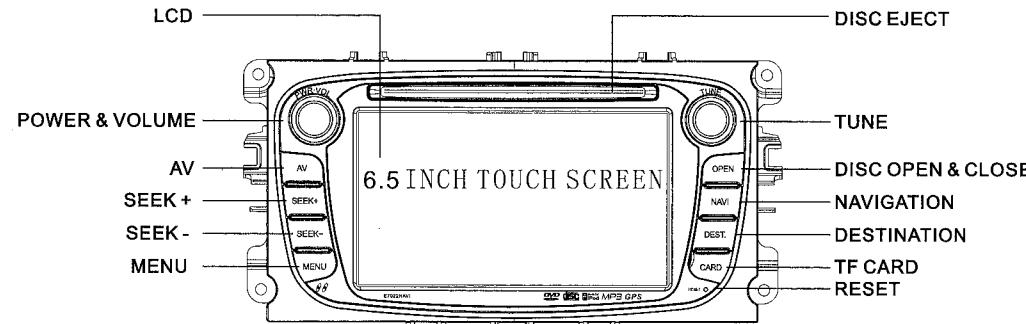


MODEL NO.: D7023NAVI (FOR TOYOTA CAR)

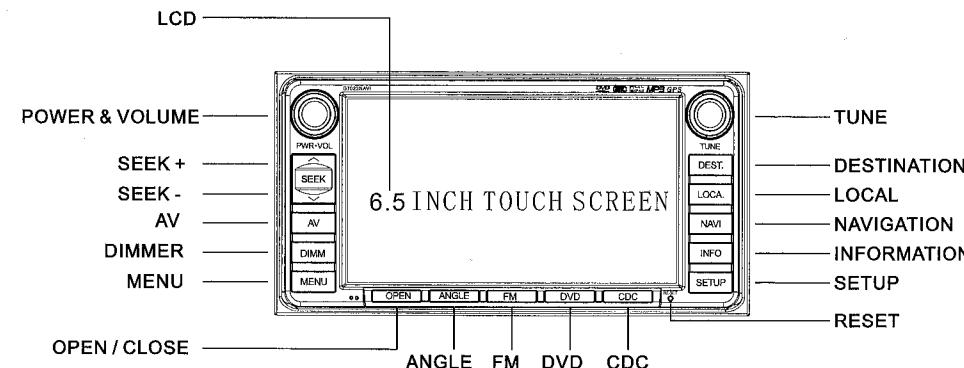


MODEL NO.: E7024NAVI (HONDA FIT)

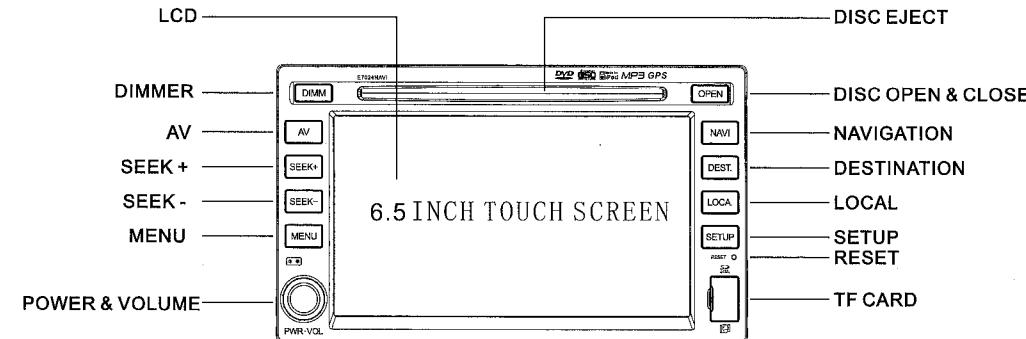


MODEL NO.: E7025NAVI (TOYOTA COROLLA)

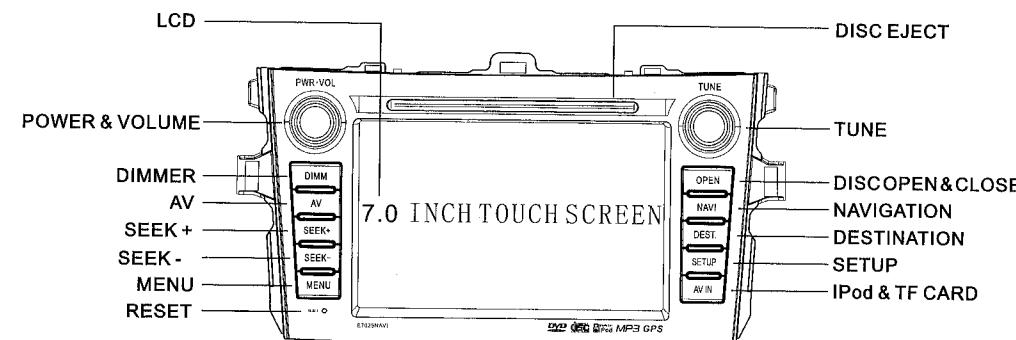


MODEL NO.: E7026NAVI (MAZADA 3.0)

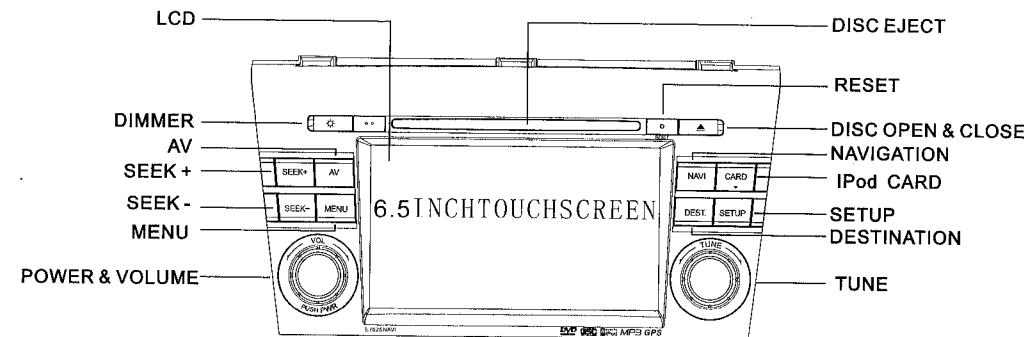


MODEL NO.: E7027NAVI (KIA SPORTAGE)

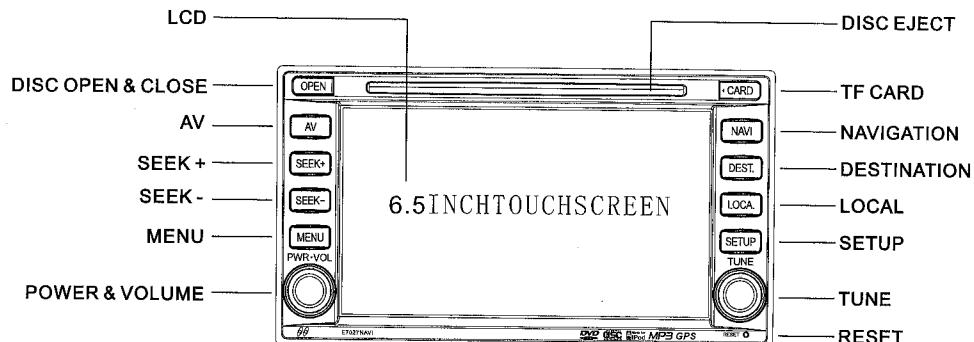


MODEL NO.: E7028NAVI (TOYOTA YARIS)

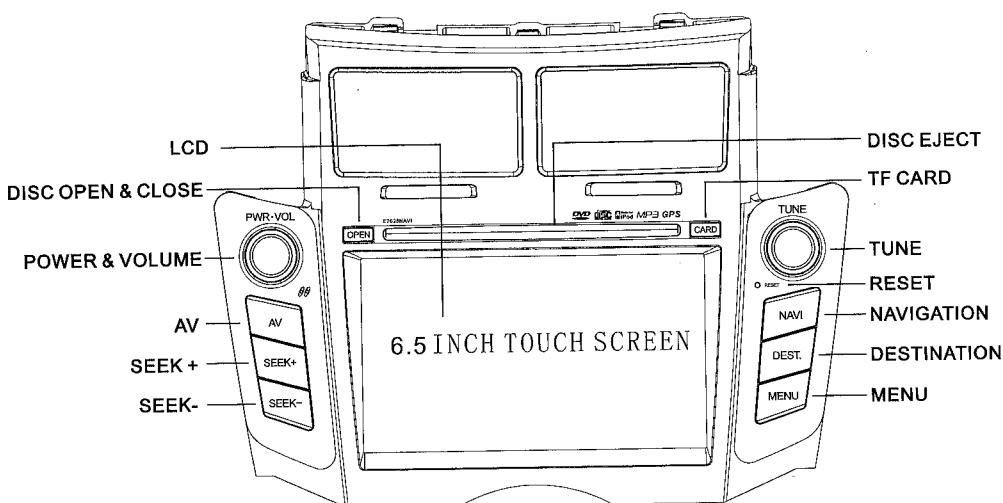


MODEL NO.: E7029NAVI (KIA CERATO)

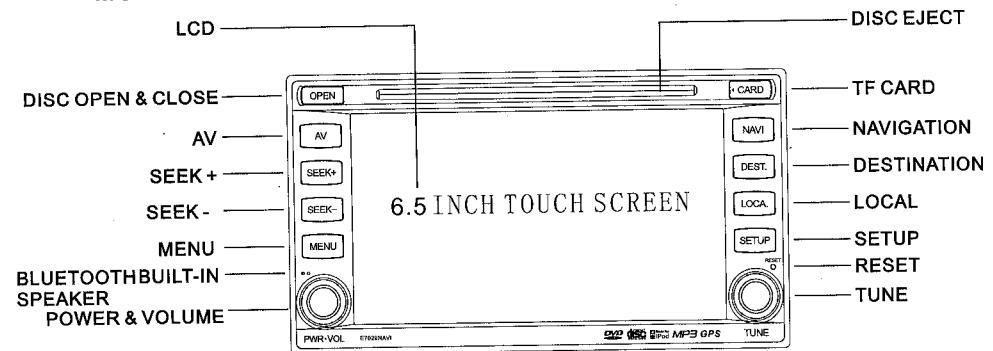


MODEL NO.: E7030NAVI (HONDA 08 ACCORD)

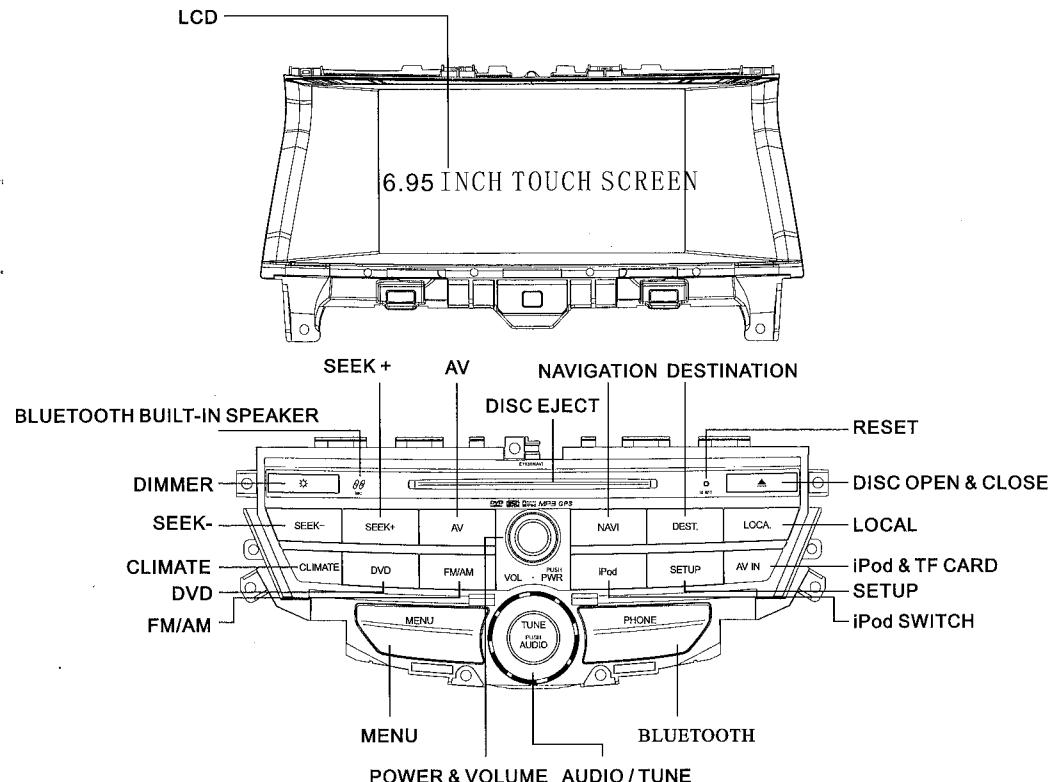


MODEL NO.: E7031NAVI (AUDIA4)

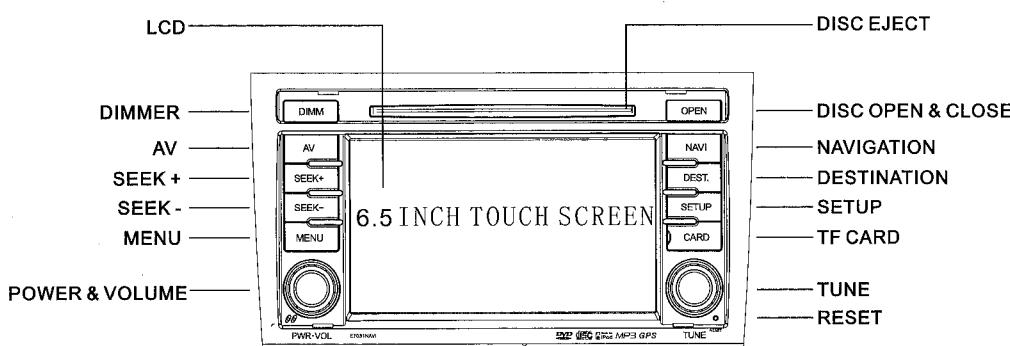


MODEL NO.: E7032NAVI (FORESTER)

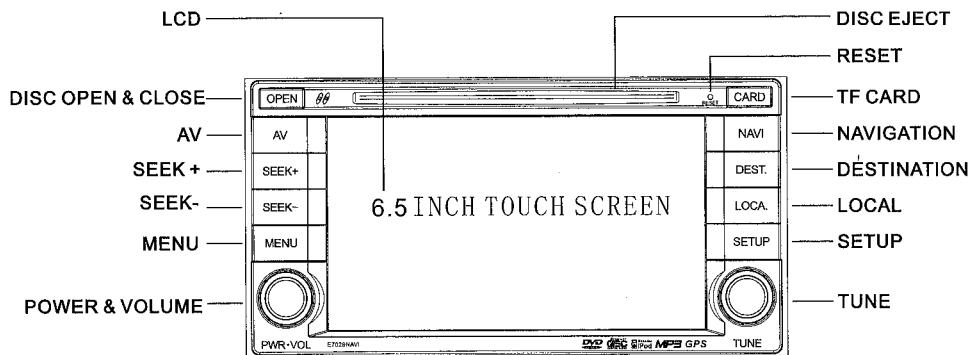

MODEL NO.: E7034NAVI (VOLKSWAGEN TOUAREG)

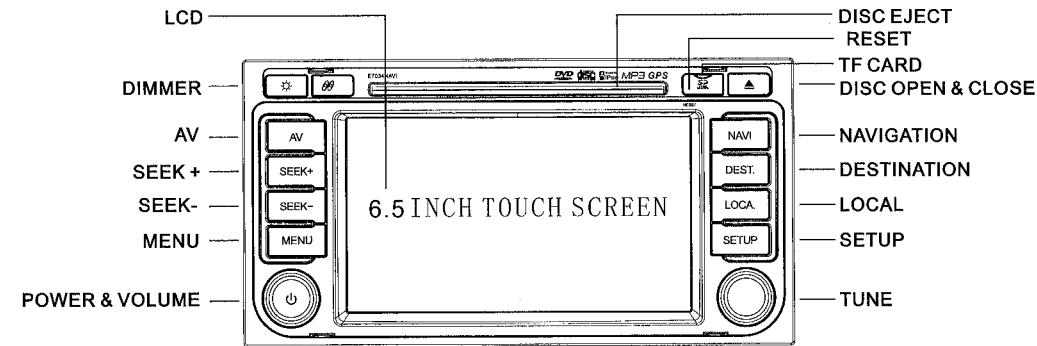

MODEL NO.: E7036NAVI (TOYOTA CROWN)

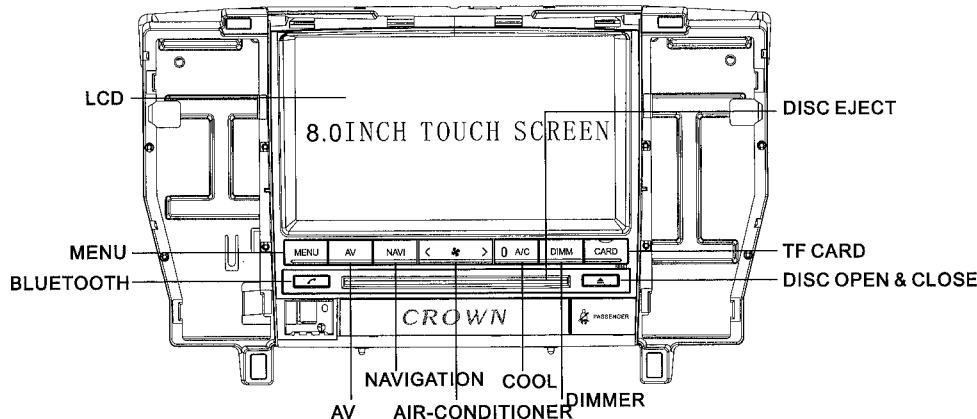

Front Board Function Specification

LCD

Display various visual page, click control menu, choose control item.

Dimmer button

Click button can exchange in dark, middle, brightness to control display.

AV switch button

Click button can exchange in DVD, CDC, FM1, FM2, AM, change with press it.

Volume control

Adjust output volume. To control volume, press [+] volume increase, press [-] volume reduce.

Menu shortcut button

Press button any case can enter main menu.

System reset button

Press button to reset.

AV and Mute Button

1. use at AV and play radio:
 - A: Press left and right, choose last song, next song, or last channel, next channel.
 - B: Press up and down, exchange in DVD, CDC, FM1, FM2, AM, iPod.
2. Press button, turn on / off mute.
3. Press button 2 seconds, display power off, it will into waiting. Press button or touch panel, display open and continue last operation.

Navigation Button

Hot button to enter GPS navigation page, press button change to GPS navigation map.

Set Destination Button

Hot button to set destination.

Search location

Press button can view present position in GPS map.

System Setup Button

Shortcut Button to enter system setting.

Disc Open and Close Button

Press button can remove disc, without disc can see insert iron.

Seek- button

With play AV press button can choose last song. Listen to radio, pressing button can choose last channel.

Seek+ button

With play AV, press button can choose next song. When listen to radio, press button can choose next channel.

Display angle adjust

Press button, press "AV control" up and down button, can adjust display angle.

Volume adjust button

Adjust output volume:

1. Volume increase or reduce with turning clockwise or anticlockwise.
2. Press button and turn on/off mute.
3. Press button 2 seconds, display enter waiting. Press button 2 seconds, display open, continue last operation.

Radio tuning button

1. Listening to radio, rotate button can choose channel.
2. Press button can enter "Tone and Balance" (P-20)screen.

Disc Eject

Insert and remove disc window.

iPod interface and TF slot

Connect iPod with GPS navigation software.

DVD button

Enter DVD main screen shortcut button.

CDC button

Enter CDC main screen shortcut button.

FM1-2 button

Enter FM1-2 main screen shortcut button.

AM button

Enter AM main screen shortcut button.

INFO button

Enter information screen, such voltage, temperature.

FM1 button

Enter FM1 main screen shortcut button.

FM-2 button

Enter FM2 main screen shortcut button.

Display Angle Adjustment

D7000NAVI have 6 title angles. But D7002NAVI and D7003NAVI turn to maximum by move up and down.

1 D7000NAVI

Owner can adjust angle free, keep display at proper angle with clear screen.


Adjust **6** angles, minimum angle is **1** grade. Press **【ANGLE】**, press **【AV Control】**, adjust down, display angle move down one by one, until to demand angle. Press **【AV Control】**, adjust up, display move to **6** grade.



- At adjusting display angle, please take care of your hand, especially look after your children.



- Turn engine switcher to off (turn off power), display turn off after few seconds. Turn on switcher (turn on power), it will return.

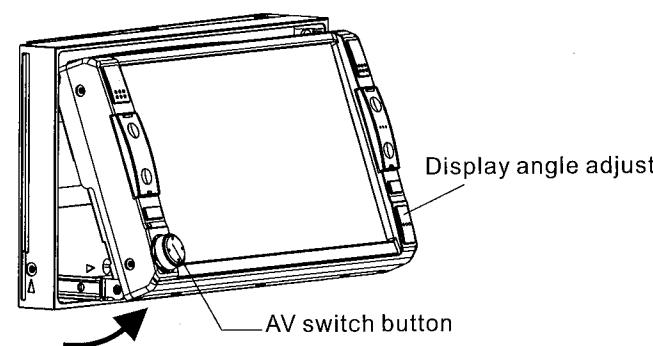**2 D7002NAVI and D7003NAVI**


D7002NAVI and D7003NAVI is glide type, press **【Open】**, the front-board move to maximum, press back **【▲】**, control disc insert and remove: Disc insert slot or not, press **【Open】**, front-board move to maximum, stop disc slot, recover to original condition.

Insert and Remove Disc

Slip-down model:

1、Insert Usage


Press [Open].

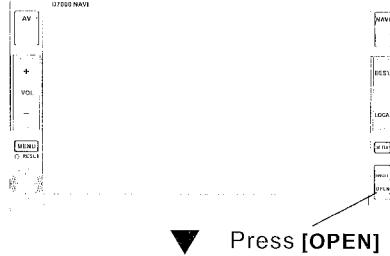

Display move down, appear disc slot.

Insert disc into slot and keep label up.

Screen move up, hide disc slot.

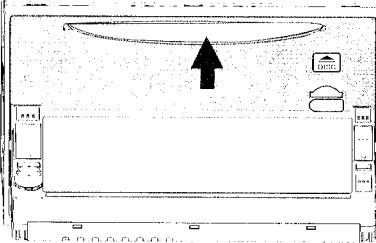


2、Disc Eject Usage

Press [Open].

Display move down to maximum.

Press [Disc]

Press [Disc]

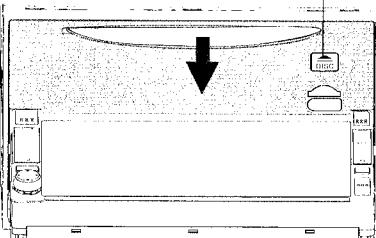

Eject disc and take it out, press [Open], display move up to hide slot.

Fixation model:

1、Insert Usage

Put part of disc into slot (keep word up), equipment will bring it inside automatically.

2、Remove Usage

Press [Open] or [▲], disc remove automatic.

Note:

- Can't remove disc, please press [▲] 2 seconds, disc driver will restart after power off, disc can remove.

Note:

- Remove disc and make sure turn off display. (Slip-down).
- Please put disc in box and save it.
- Not driving with display open, urgent stop may lead you to hit display and occur accident.
- Before turn on or off display complete, not operate. If operate it (insert disc, press button), to ensure it safe, display not move sometimes.
- Not turn on /off display with your hand. This may damage display.
- After open display, please not put cup, cap on it.
- Avoid display heating and paste dirty, please turn off display except insert or remove disc.


⚠

- Remove disc and make sure turn off display. (Slip-down).
- Please put disc in box and save it.
- Not driving with display open, urgent stop may lead you to hit display and occur accident.

Touch Panel Specification

Main menu

At using product, press [MENU], LCD will display main menu, such as following:

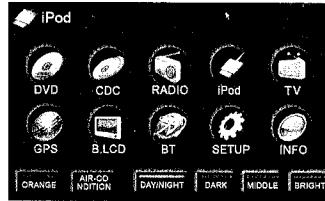

In main menu, have 10 functional menu button, below is the function of button:

[DVD]: Play DVD or connect USB device. (DVD, VCD, CD, MP3)

(Remark: USB compatible with MP3, WMA, MPEG, JPEG and so on)

[Multidisc]: Connected DVD multidisc, can play DVD, VCD, CD, Mp3.

[Radio]: Receivable FM1, FM2, AM broadcast.

[Auxiliary input] or [iPod]: Setting iPod as "ON", display [iPod] icon. With iPod is "OFF", display [Auxiliary Input] icon.

[TV]: Receive TV broadcast.

[Navigation System]:

Enter GPS navigation system.

[Back-seat Entertainment]:

Control back-display output.

[Bluetooth]: Dial and answer phone by Bluetooth.

[Setting]: Set relate system information.

[Information]: Display auto information, such as voltage, tyre pressure, tyre temperature. Press each menu button, it will display functional screen.

Various function usage will be introduce in bellow passage.

[Daytime Mode]: Set [Light detecting] as [OFF], appear this button. This button adjust screen lightness. Default

daytime Mode as start, then button top appear yellow bar with bright screen. Press [Daytime Mode], will change to undaytime mode, then yellow bar turn to grey with dark screen. Press [Daytime Mode] back to daytime mode.

[Dark]、[Middle]、[Bright]

Between daytime and night mode, user can choose one mode.

[Blue]: Press [Blue], please restart engine turn to blue.


[Orange]: Press [Orange], please restart engine turn to orange.

Media Player Usage

⚠ • Ensure the safety, please view the screen at stop or prevent. Detailed set method find "Braking Detecting" raking Detecting in "Setting" interface.

Play DVD

1. Screen appear the following picture, insert disc usage find in "Insert and Remove Disc Usage" specification.

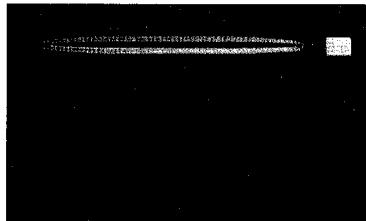

2. After insert disc, enter play screen automatically. Insert DVD or VCD disc, it will enter below screen.



[TITLE01]: Title number of present broadcast.

[TRACK03]: Passage number of playing present.

[1h2'30] : Played time.

[◀◀] : Review.

[▶▶]: With insert disc, press button start play, press button with playing can pause. With pause or stop, press button can replay.

[▶▶]: Forward

[◀◀]: Press one time or press two time with stop can replay present song or passage, continue press two times can play last one or passage.

[■]: Press button can stop play.

[▶▶]: Press button play next one or passage.

[4:3]: Display visual is 4:3

[16:9]: Display visual is 16:9 wide screen.

[Full Screen]: Press button, above Appear Yellow bar, display full visual screen. Press **[Full Screen]**, yellow bar will change grey, screen display normal visual.

[Picture]: Press button, enter visual and operate menu screen. As below:



[Title 001]、[Track 03]: Display broadcast title and passage number at playing.

[0h 2'20"]: Display played time.

[Voice]: Using disc with multivoice track, press button as play, can exchange various voice-tracking. (Multivoice tracking).

[Caption]: Using disc with multiword,

press button can exchange word.

[Setting]: Adjust visual color, comparison, color, luminance.(As below).



[−] or [+]: Increase or reduce, adjust to proper visual.

[Menu]: This menu is upgrade, press button will pause and enter main menu of the disc.

[Main Menu]: This menu is secondgrade, press button will pause and enter choose picture, it list all songs and passages, you can choose favorite broadcast.


[◀◀]、**[▶▶]**、**[■]**、**[▶▶]**、**[▶▶]**、**[◀◀]** Button function and operation is same

[◀◀]、**[▶▶]**、**[■]**、**[▶▶]**、**[▶▶]**、**[◀◀]** as last screen.

Choosing passage, press button can move up, down, left, right, choose song and passage ,press button start play selected passage and song.

Voice Setting

Press **[SURROUND]**, enter voice setting screen. As below:

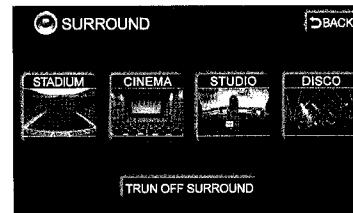

[Stadium]: Click stadium, present effect turn to stadium.

[Recording studio]: Click recording studio, present effect turn to recording studio.

[Theatre]: Click theatre, present effect turn to theatre.


[Disco]: Click disco, present effect turn to disco.

[Off voice]: Click here to cancel voice change.

Back to last screen, please click **[Back]**.

USB Mode Setting

USB interface connected device, press **[USB Mode]**, click **[USB Screen]**, screen will enter operation menu as below:

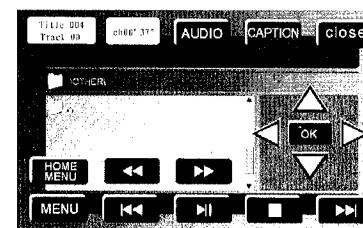

The button function and operation is same with **[Picture]** in **[DVD]**.


(Without USB device,**[USB Mode]** Can not use)

Exit Play

1. Press **[AV]**, back to last screen. Press **[AV]**, will change between **[Media Player]**, **[Multidisc Box]** and **[Radio]**.

2. Press **[Menu]**, exit to main menu. Above two methods just to exit but not stop.

Insert CD or MP3

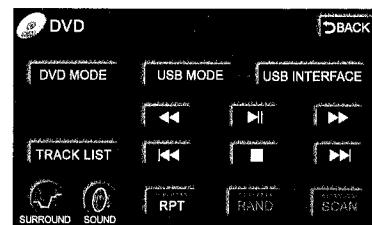


Some buttons is same with **DVD** or **VCD**, it's function, operation and means are also same.

Different buttons is bellow:

[RPT]: Replay present passage, broadcast and disc.

[TRACKLIST]: Enter other screen, display all songs and passage. As below:

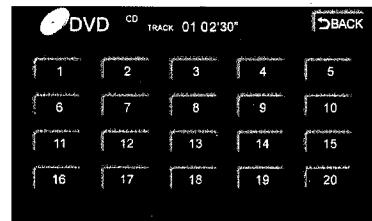


Touch button to choose passage and songs. Selected button appear bright, number and time display on the top.

Back to last screen, press **[AV]**.

Tone and Balance

Audio effect most determined by high and low voice. In fact various music and voice play together seem more enjoyable.

It's also important to keep left, right sound and front, back voice in perfect balance. Consider this point, no[SOUND] in Media Player, Multidisc box and Radio, press this button, enter SOUND setting page, can adjust high and low tone, left and right voice balance. As below:

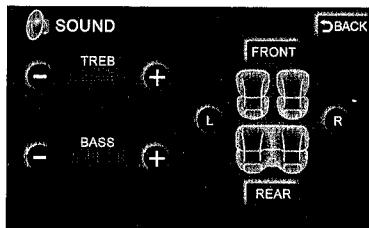

“TREB” [+]or[-]: Adjust high frequency tone.

“BASS” [+]or[-]: Adjust low frequency tone.

[FRONT]or[REAR]: Adjust balance between front and backloudspeaker.

[L]or[R]: Adjust balance between left and right loudspeaker. Press[+]or[-],[R]or[L]. [FRONT]or[REAR], yellow bar will move one unit.

[Back]: Press button back to last screen.

Note

- Listening to CD or broadcast, change left and right balance, will increase one group volume and reduce another.

Multidisc Play

Set **CDC** as “ON” in **[SETUP]**, press [multidisc] button, can enter **CDC** screen. Connected **DVD** or **CD** player can operate.



[TITLE01]: Present play title number.

[TRACK01]: Present play passage number.

[02'30"]: Played time.

1-6 list: display disc type in **DVD**. Insert 6 discs at one time. Press relate button can play selected disc. Disc type is **DVD**, **VCD**, **CD**, **Mp3**.

[◀◀]: Press button to play last one.

[▶▶]: Inserted disc, press button begin to play, Press button at playing will pause. Press button with pause and stop can replay.

[■]: Press button stop play.

[▶▶]: Press button can play next song or passage.

[NORMAL]: Display 4:3screen, other is black.

[WIDE]: 16:9, display wide screen.

[Image]: Press button, will enter visual and control menu .As below:




[Title 01]、[Track 002]: Display present broadcast and passage number.

[0h 2' 20"]: Played time.

[Voice]: Using multitrack disc and press button will change to word screen.

[Caption]: Using multiword disc, press button with playing can exchange.

[Setting]: Adjust visual color, contrast, chroma, luminance.

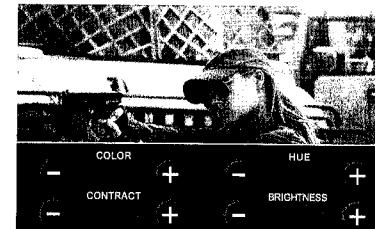

[-]or[+]: Increase or reduce, adjust to proper visual.

[Menu]: This is first grade menu, press button will pause at playing and enter main menu.

[Main menu]: his is second grade menu, press button will pause at playing and enter choosing screen, you can play favorite passage.

[◀◀]: Press button play last one.

[▶▶]: Inserted disc, press button start to play, with playing press button will pause. Press button will replay at stop and pause.

[■]: Press button will stop play.

[▶▶]: Press button play next one.

△ **OK** ▶: With choosing passage, move button to up, down, left and right to select. Press **[OK]**, start play selected one.

Exit Playing Screen

1. Press **[AV]**, back to last screen. Press **[AV]**, exchange signal between DVD player, multidisc box and radio.

2. Press **[MENU]**, back to main menu screen.

Above two methods just exit play screen but not stop playing.

Note

- CDC device has some video and audio setting, which may interfere the playing effect of the unit. Please set CDC not setting output, and set video output standard as NEST.

Play CD/MP3

The screen shown below when playing CD or MP3:



[TITLE01]: Current Title number.

[TRACK01]: Current Track number.

[02'30"]: The Time current CD player has taken.

1-6 list: Show disc type inserted in DVD. DVD Changers can also insert six disc, press the corresponding button to select. It can be DVD, VCD, CD, MP3.

[◀◀]: Play previous track.

[▶▶]: Inserted disc, press button begin to play, Press button at playing will pause. Press button with pause and stop can replay.

[■]: Press button stop play.

[▶▶]: Press button can play next song or passage.

[NORMAL]: Display 4:3screen, other is black.

[WIDE]: 16:9, display wide screen.

[Image]: Press button, will enter visual and control menu .As below:

Method of listening Radio:

Receiving radio signal

AV switch radio.

【AV】 Switch to Radio, or select **【radio】** from main menu to RADIO page, receive last signal.

NOTE

- automatically stored The default channel automatically stored in the list shows that the use of radio.
- In tunnels, mountain, building between the cracks, and other wave easily be blocked places, the weakness of regional airwaves, will be weak signal receive.
- Sometimes even the list works, but no signal received under the current location, wave situation.

Choosing Frequency

Currently Broadcasting Channel



[FM1]and**[FM2]**: FM radio.


[AM]: AM radio.

Choose corresponding button to switch one model to another.

Each model has 1-6 storage cells, commonly used for the storage of radio channels. Choose cell storage radio frequency, If you need to modify or set cell, radio frequency, operation as follows:

Rear-viewed Display Operation


【SETUP】: When set **【B. LCD】** "ON" in the Setup Interface, Click **【B. LCD】** in the main menu to enter control screen, as follows:

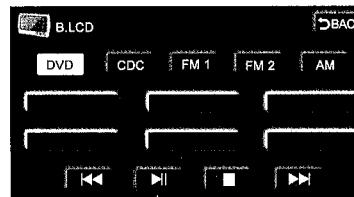

Now user can control the B. LCD through the head unit. B. LCD can connect CDC or DVD and control them. In addition, B. LCD and head unit can display different pictures.

Click **【DVD】** icon in the above interface, B. LCD will display what DVD plays. In this **【◀◀】**, **【▶▶】**, **【■】**, **【▶▶】** interface have the same function and operation with those which in the **DVD** main interface.

Click **【CDC】** into the following interface:

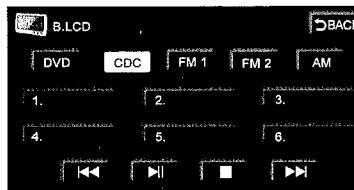

B. LCD will play **DVD** Disc or **CD** Disc in the CDC. Select the NO. 1 from 6 and will play corresponding Disc. in this

【■】, **【▶▶】**, **【◀◀】**, **【▶▶】** Interface have the same function and operation with those which in the **CDC** main interface.

NOTE

- When the host playing a same CD with Rear-view display, B.LCD will be beyond the control operation, turns to a gray button. Only host interface for operational control.

Bluetooth Operation (optional feature)

[Bluetooth]: the interface as below.

(Note: Matching with one of the following modules: 801,802,803,804,805,831,832,834,835)



[BT]: Bluetooth pairing with the phone.

[Phone matching]: Match Bluetooth mobile phones with Bluetooth phones.

[Bluetooth Active]: Telephone matching effective only when Bluetooth is activated with blue icon, Bluetooth closed by repressing with yellow instructions turns gray.


[Call]: Ending the call with icon turns gray.

[Call]: It turns green for Calls or dial-up.

[Backspace]: removing wrong number or figures.

Adjust microphone volume.

[Record]: Screen shown below:

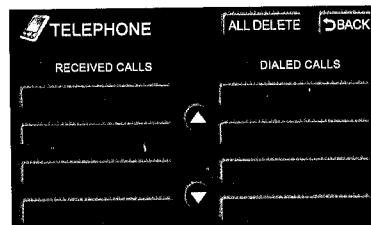

[Delete]: Delete all phone records.

[Backspace]: Back to the Top Menu.

[Record-keeping]: Recording last 16 telephone numbers.

[▲] and **[▼]**: Checking phone records.

iPod Operation

iPod "ON", the interface is as below:



[1/183]: 183 pieces in total, the first track is playing.

[0h01'33"]: The time current CD player has taken.

Singer: **[▲]** **[▼]** choice of singer.

Album: **[▲]** **[▼]** choice of album.

[◀]: Previous repertoire or pieces.

[▶]: Player Pause, repress to return play.


[▶]: Next repertoire or pieces.

Three long cells used to display song, artist and album name.

[◀ Back]: Return to previous interface.

Auxiliary Input Operation

[iPod] "OFF", click **auxiliary input**, to enter External video screen when connected with external audio and video signal.

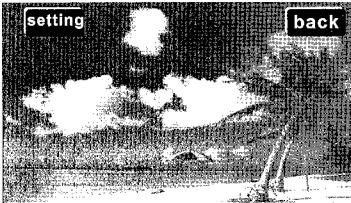

[Match Start]: Tire pressure sensor matching.

[Copyright] press this button into following interface to show the copyright of system.




[Auxiliary input]: Display and monitor external audio and video signals, but not for control.


"Auxiliary input" shows tip box of signal connecting if no video signal input.

Information (Optional Feature)

Press **[information]** to enter main screen, as follows: (display tire pressure and tire temperature, as optional feature, matching in one of the following modules: 803,804,805,833,835)

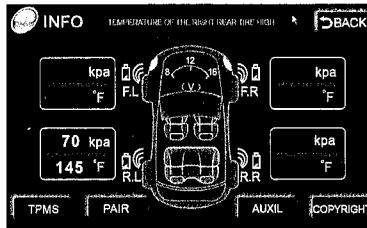


[TPMS]: Screen shown below:

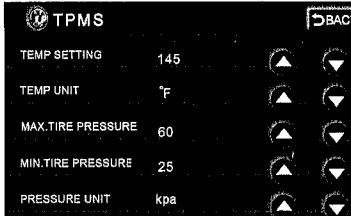

[▲] and **[▼]** Setting relevant parameters.

Setting

Press [setting] in the main interface into Setting interface.

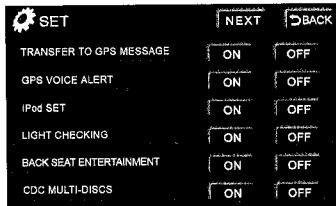

Automatically converted to navigation information [ON] [OFF]:

[ON]: It will automatically switch to screen navigation from current operation when other screen ends 10 seconds after operation.

[OFF], system close

GPS Voice Prompts[ON][OFF]

[ON]: GPS voice prompts open.

[OFF]:GPS voice prompts closure.

iPod [ON] [OFF]

[ON]: iPod open, with iPod icon in main menu.

[OFF]:iPod closure, automatically resume to Auxiliary input.

Lighting Detection [ON]

[Day mode]: Car lights to control the pattern of day and night mode .It is night mode when car lights turn on, day mode when car lights turn off.

Lighting Detection [OFF]

[Day mode]: choose [Day mode] / [NON-Day mode].

B. LCD [ON] [OFF]

[ON]: B. LCD display in high-brightness.

[OFF]: B. LCD operation prohibit with gray icon.

CDC Changer[ON] [OFF]

[ON]: CDC open, highlighted icon.

[OFF]:CDC closure, CDC Changer operation prohibit with grey icon.

[Next Page]

[NEXT]:To enter setting interface as follow:



Brake Cable Detection [ON] [OFF]

[ON]: Only enter DVD, CDC, auxiliary input of audio player interface after parking brake. However, voices from the impact of settings.

[OFF]: May not enter the DVD, CDC, auxiliary input, maintain in previous Image.

Reversing Camera Video [ON] [OFF]:

[ON]: Reversing camera will be taken to display on the screen.

Touch panel calibration

If there is no response with the touch panel under operation, it needs calibration because the sensitive scope of the touch panel is out of normal position.

Operation method: keep pressing the panel and then power on the unit, after 8 seconds, loose pressing when "appear system initialization" and then enter into the calibration interface, as follow:



This operation is used for setting the touching scope of the panel (also called coordinate calibration). Set the top-left coordinate first, and then set the low-right coordinate. The more touching scope, the less touching error. Hopefully user to calibrate the panel as the method above.

Navigation Attention

Mapping

- Global positioning system for its construction and operation by U.S. Department of Defense, accuracy and maintenance work of full responsibility. Any changes made by the unit could affect the accuracy and performance of GPS.
- Please use GPS navigation system with care. It just to provide navigation information, should not be used for position, distance, location, topography, such as the accurate measurement.
- GPS positioning schedule be the same place for the first time, open areas suitable, may not be at the top of a cover-impaired.
- The first positioning required more than three minutes, depending on the prevailing environment and the satellite signal strength.
- Do not operate navigation system while driving. In order to prevent accidents, do stopping for a safe operation.
Wireless communications products (such as mobile phones, gun alarm, etc.) are likely to interfere with satellite reception, leading to unstable signal reception.
- If your car fitted with explosion-proof car insulation film or membrane, it may interfere with satellite signal reception.
- Transport units adjust local traffic conditions in the road attributes (one-way street, turn left prohibited,), you are required to comply with the road the status quo, such as traffic regulations .If travelling on the map is different from the screen, judge whether to go or not.

Satellite Signal Reception

Under normal circumstances, only receive more than three satellite signals, navigation system can accurately calculate your exact location. Weather or high-rise buildings in the city will affect the signal reception.


Enter Navigation System

Touch Pen Operation:

[GPS]: Enter console screen.




Click "Run navigation" to enter "Tips" screen.

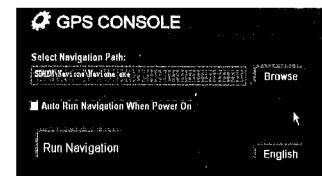

Hot button Operation:

[NAVI]: Enter 'tips' as shown below.

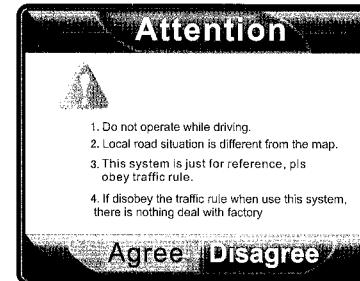

[Accept]: Three seconds later, the default [accepted] system, GPS will enter a navigation map interface, can now officially use it.

[Not Accept]: System close directly.

Use Display correctly

Precaution for usage

- ⚠** • Do not lay the display in the place where is in the reach of sunlight or with high temperature. Or it will make the display with something wrong.
- avoid the unit in the reach of sunlight when do not use it .please operate the unit at this range below:
Operation temperature: $-10^{\circ}\text{C} \text{--} +50^{\circ}\text{C}$.
Save temperature: $-20^{\circ}\text{C} \text{--} +80^{\circ}\text{C}$
- In order to improve the in-car appreciation, the LCD panel will lay outside, do not press the panel in force, or will damage the panel.
- Do not click the panel besides your calibration of the panel, or will make the panel with some spot or damage.
- Pay attention to your installation when your car has air bag, in case of blocking the security device working smoothly.

About LCD display

- If the LCD panel with some small black spot or light spot, it is normal, not problem.
- In the cold place, when turn on the power, the panel appears a little dark, it will become normal some seconds later.
- If the sunlight can reach the panel and make reflection to disturb viewing, please prevent the panel from the sunlight.

About small Fluorescent Pipe

- In order to make the LCD illuminate, we adopt Fluorescent Pipe inside.
- The life of the Fluorescent Pipe is around 10000 hours, (in the cold place , its lifetime will be shortened), if Fluorescent Pipe is running out of time, the panel will become dark, even no display, in this case, please consult the manufacturer service department.

About the maintenance

- When clean the spots in the panel, please turn off the power of the unit, and then clean it smoothly.
- During the cleaning, take care not to damage the panel to ensure the panel with high definition.
- Do not use the wet towel , naphtha or thinner to clean the head unit.

Playable discs

Disc's label, packaging or packing bags has tags as below:

playable discs' species and tags	size\ play side	Longest play time
DVD	DVD	(MPEG2)
	12cm/single 1-side	133 M
	2-side	240 M
	12cm/double 1-side	266 M
	2-side	484 M
CD	CD	
	12cm/single	74 M



DVDFormat/Logo Licensing Corporation trademark



- Some DVD discs can not use some features. And regardless of DVD discs can not play.
- DVD-R/RW disc only player to Video format (Video mode) recording the CD-ROM. Video recording to format (VR format) burn the DVD-RW discs can not play.
- DVD Audio can not play. The machine is for tag marked CD only.
- To Video format (Video mode) recording the DVD-R/RW disc CD may have the characteristics of scratches, dirt or the local internal lens dirt, condensation , and can not play .
- The draft of the CD-R/RW, DVD-R/RW discs can not play. CD, CD-R discs need a longer time than CD-RW discs on usual. .
- Carefully read the brochures and CD-ROM note for CD / R / RW use. recorded MP3 files on CD-ROM support "model", "mode 2 ". CD-Extra can play as CD.
- CD player in PC can play the correct format of CD burners, according to settings of software or the environment, and other players sometimes can not be normal. (Please provide details of the application software vendor advisory.)
- With music CD recorder or computer CD-ROM recorders in CD-R/CD-RW discs may also be due to the characteristics of Sassafras tsumu marks, dirt or the local internal lens dirt, dew, and so can not play on the machine.
- Sometimes because of direct sunlight or high temperatures, and other compartments, can not play DVD-R/RW disc. In CD-R/CD-RW disc recorders, such as the title of message may not be displayed on it.
- Can not play CD-ROM CD-R/RW inform of DDCD (Double Density CD).
- The machine is based on metaphors designed on the CD format. We do not control CD repeatedly outside the specifications, such as CD disc operation and performance guarantee.


Use of CD-ROM

Attention for CD-ROM Operation

- Do not use with the cracks, and bending stained with stains of the CD-ROM.



- Do not use profiled (Non-round) CD-ROM to avoid failure.

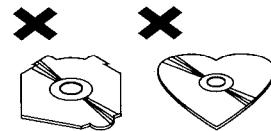


- Do not touch operation CD-burning .
- No damaged discs.
- Do not paste paper or on the disc label.




NOTE Consider product design, according to agencies or environment, CD-ROM operation, etc, CD-ROM surface will be without prejudice to the actual usage of the scratches. This is not a product failure, as a general consumption.

Maintenance

- If there are dust adhesion on the disc, use a clean, soft cloth to clean it gently.

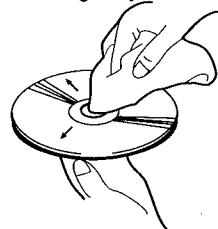


- Do not let the surface of clay discs volatile oil or thinner, and other volatile Pharmacy. Also, do not use simulation on CD-ROM recorders cleaner or anti-static agent.

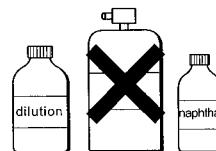

Attention for Storage

- CD-ROM will not be placed in direct sun or high temperature.
- Be sure to load CD-ROM disc box to prevent bending.

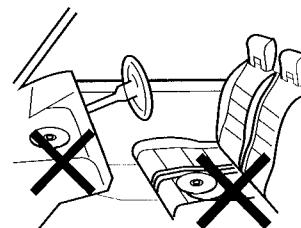

Environment CD Play

- may not be able to read CD-ROM data because of shock in traffic In low-temperature environment of open-Heating immediately after the CD player, navigation system due to host the condensing lens or.
- CD-ROM (condensation effect), may not play. please wait about one hour for this.
- When the product temperature increases, the protection will be active ,while some functions stop.

Display Parts

Screen Dimension: 6.5 inch, 7inch

Display Area: 144×78.4, 152.4×1.44

Solution: 800×480

Pixels: 2.65million

Type: TFT(Thin Film Transistor) Active Matrix, Light Penetration

Edge Illume: Cold Cathode Light

Colors System: NTSC/PAL Compatible

Temperature Range: -10°C ~+50°C Centigrade

Save Temperature Range: -20°C ~+80°C Centigrade

Touch Screen: Resistance& Press Simulate(Film+ Glass)

Image Output Level: 1V p-p /75 Ohm

(White 100% Output /When Displaying DVD)

Amplifier, Audio Part

The Max Output Of Power : 45 W X 4

Load Impedance: 4 Ohm

The Max Output Level /Resistance

Prefix: 2.0 V/100 Ohm

Equal Loudness Curve: 6dB, (10KHz)

Equalizer: 100hz -14~+6dB , 10kHz ±10dB

GPS

Manner: L1、C/A Code GPS SPS Standard Localizer Service

Receive Manner: 12 Channel

Receive Frequency: 1575.42MHz

Sensitive: -130dBm

Test Renovate Time: 1/s

DVD Player Parts

Disk Format Supported: DVD-Rom、DVD-Video、DVD-R(Video Mode)/RW (Video Mode)、CD-Rom、CD-DA、CD-R/RW

Zone Number: 6

Signal Format (Sampling Frequency) :

(DVD) : 48/96 KHz
(CD) : 44.1 KHz

Signal Format (Quantum Bit) :

(DVD) : 16/20/24Bit Beeline
(CD) : 16Bit Beeline

Frequency Feature:

(DVD) : 8Hz~44KHz (±1dB)
(CD) : 20Hz~20KHz (±0.1/-0.3dB)
S/N(DVD) : 97dB(1KHz)
(IHF-A Network)
(CD) : 96dB(1KHz)
(IHF-A Network)

General Parameters

Max Consume Current: 10.0A

Pressure: DC 12V (11V~16V)

Grounding Manner: Cathode
Grounding Manner

External Image Input Level:

1V p-p /75 Ohm

The Max Input Level Of External

Sound: 1.5V/22 K-Ohm

Gps Antenna

Dynamic Bound:

(DVD) : 95dB(1kHz)
(IEC-A Curve/20kHz LPF)
(CD) : 94dB(1kHz)
(IEC-A Curve/20kHz LPF)

Antenna: Microwave Transmission
And Plane Antenna/ Right-
Hand Circularly Polarized
Wave

Antenna Length: 5.0m

Harmonic Distortion Rate:

0.008% (1kHz)

Channel : 2 (Dimensional Sound)

Product Size

Size: 178(W) X 100(H) X165 (D)Mm

GPS Antenna Magnetic Base:

39(W) X 15.5(H) X48.5 (D)Mm

FM/ Tune Parts

Receive Frequency Wave Band:

(87.5MHz~108MHz)

Total Weight

Weight: 2.5kg

50dB Sensitivity: 14dBf

S/N: 50db Upward (IHF -A Web)

Harmonic Distortion Rate:

0.3% (At 65dBf, 1kHz, Ster-Eo)
0.1% (At 65dBf, 1kHz, Mono)

Frequency Feature:

30Hz~15000Hz (±3dB)

Dimensional Sound Distinguish:

45dB Upward (65dBf Input,
1kHz)

AM/Tune Parts

Receive Frequency Wave Band:


531kHz ~1602kHz (9kHz)
530kHz ~1604kHz (10kHz)

Sensitivity: 18μV (S/N 20dB)

Perform Selection:

65 dB (IHF -A Network)

INSTALLATION GUIDE

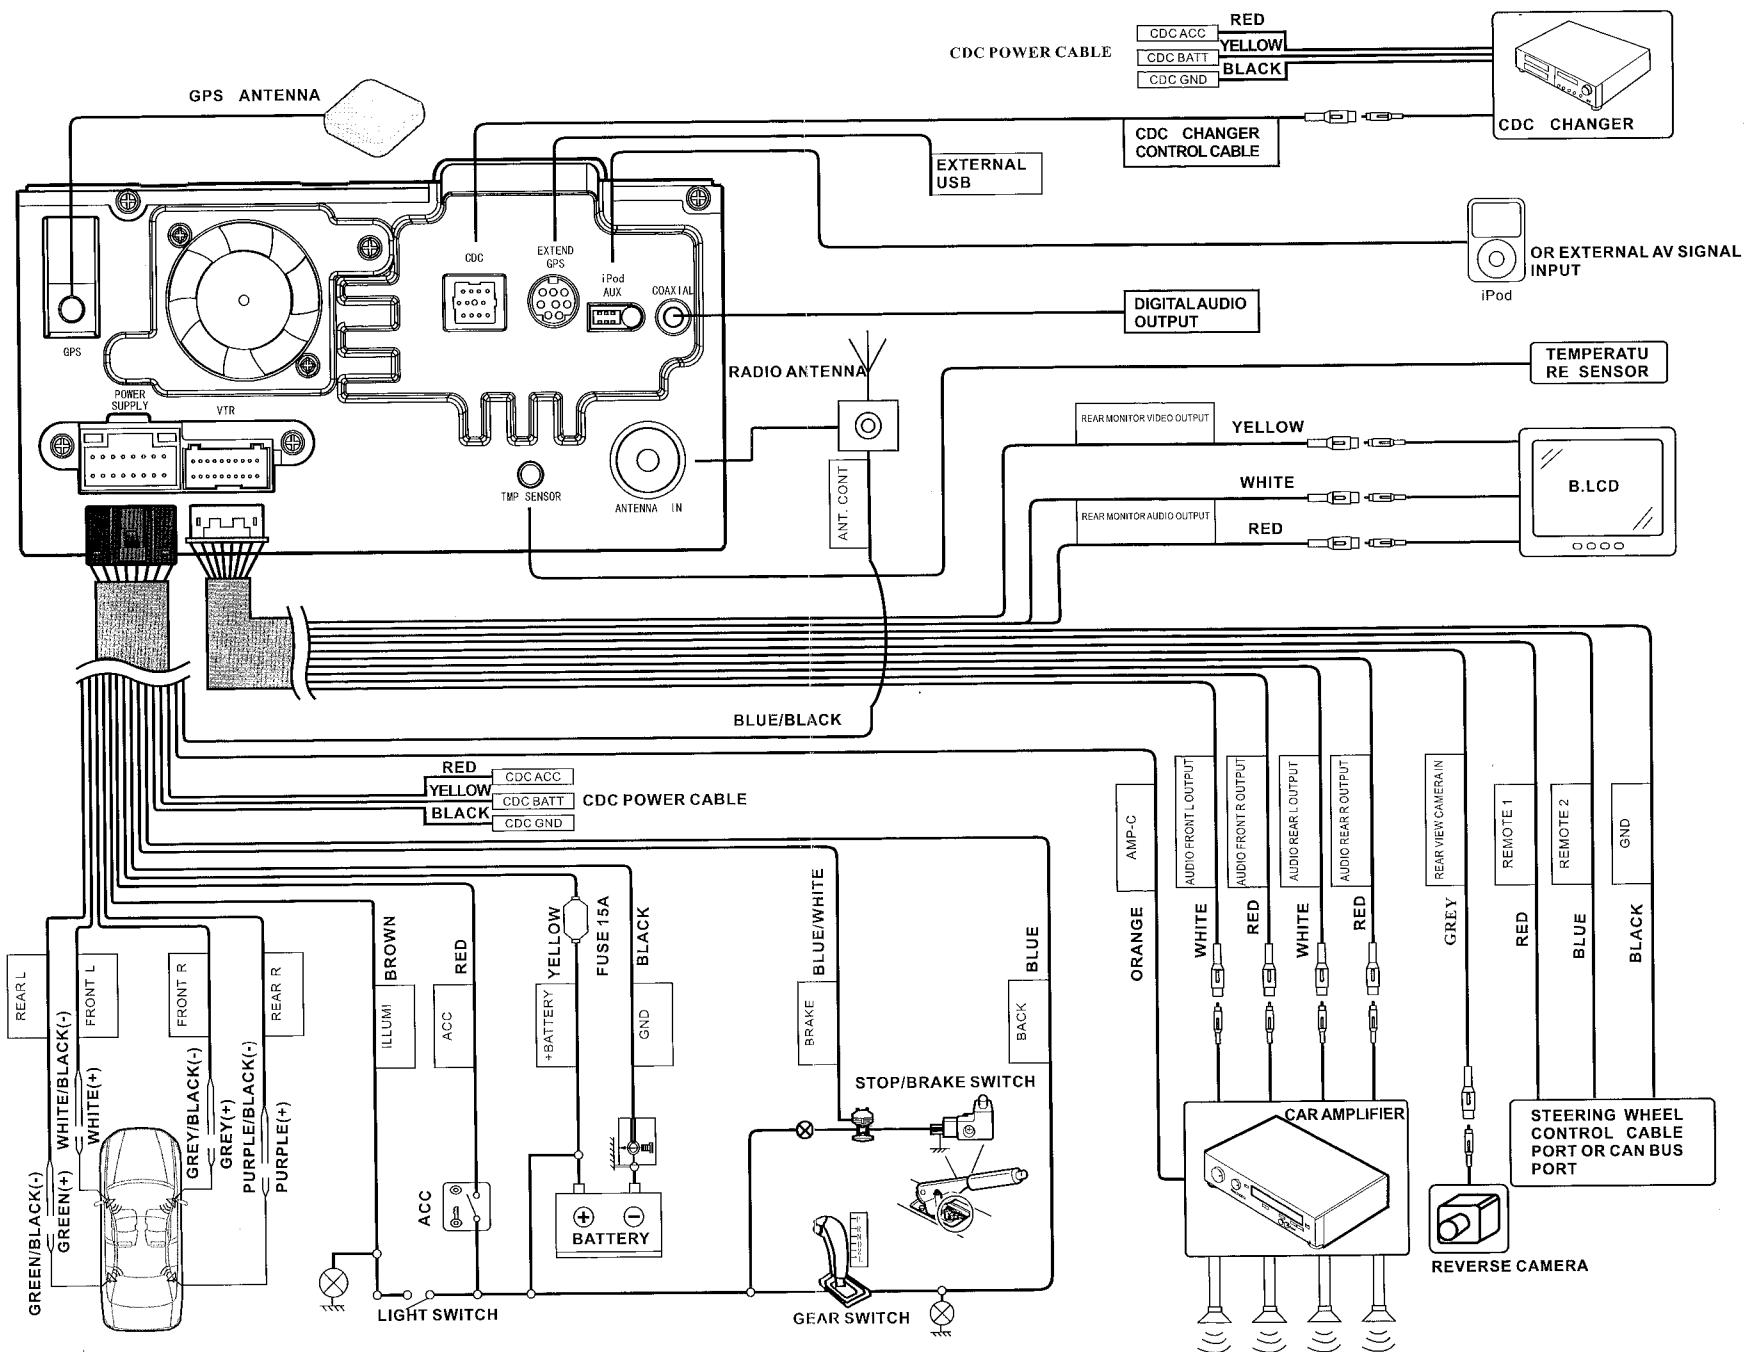

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.