

Instruction Manual

Thank you for buying Enesco Product. Please read through this instruction so that you will know how to keep and maintain your product. After you have finished reading the instructions, put it in a safe place for future reference.

You have bought the following item.



4020794

Princess Sonata Musical Base

(Require AA size battery x 3. Battery not included.)

This Musical Base is designed to be used with one of the following figurines at one time. (Figurines are sold separately)



4020788

Ariel Sonata
(Sold Separately)



4020789

Aurora Sonata
(Sold Separately)



4020790

Belle Sonata
(Sold Separately)



4020791

Cinderella Sonata
(Sold Separately)



4020792

Jasmine Sonata
(Sold Separately)



4020793

Tiana Sonata
(Sold Separately)

CAUTION

- This item contains delicate parts. Please follow the unpack and repack instructions to unpack and repack the item. Recommend to repack the item with the original packing materials.
- If you need to move the item, hold the item base to move. Do not hold the item small details such as the legs of the Musical Base.
- Only place the item on a stable, solid, flat, level surface, such as a table or shelf.
- This item is designed for INDOOR USE only.
- This item contains electronic part inside the body. Do not submerge the whole product into water.
- Caution-Not a toy. Decorative Item Only. Do not pass it to children to play with it. Children may break the item parts and pose choking hazards.


UNPACK THE ITEM

1. Unpacking the item shall be done on a stable, solid, flat, level surface.
2. Place the Packaged item on the surface.
3. Open the top flip of the gift box.
4. Pull the styrofoam out of the box and place it horizontally on flat surface.
5. Slowly and carefully lift the top piece styrofoam straight up to remove. (During the opening of the styrofoam, if you found that the product is being lifted up by the top piece of styrofoam, carefully close the styrofoam, turn the styrofoam upside down so that the top piece now become the bottom piece. Repeat step 5 to open the upper piece styrofoam.)
6. Slowly and carefully pull the item straight out of the styrofoam by grasping body of the item. (Please make sure the delicate parts will not be broken during the pulling action.)
7. Retain the styrofoam and package box for repack purpose in future.

REPACK THE ITEM

1. Before repacking the item, make sure the On/Off switch is being switched to "Off", and the batteries are removed from the item. (Refer point 1, 2, and 4 of Battery Replacement section for the direction to remove the batteries)
2. Repack shall be done on a stable, solid, flat, level surface. Recommend to repack the item with the original packing materials.
3. When the bottom piece of the styrofoam is sit flat on the surface (with the cavity facing upward), slowly and carefully put the item onto the styrofoam according to the cavity shape.
4. Slowly and carefully put the top piece of the styrofoam on top of the bottom piece of the styrofoam. (Make sure the delicate parts will not be pressed or broken during the repacking process. Check if the two halves of the styrofoam are properly closed)
5. Slowly and carefully put the styrofoam into the gift box.
6. Close the top flip of the gift box.

MUSICAL BASE STRUCTURE

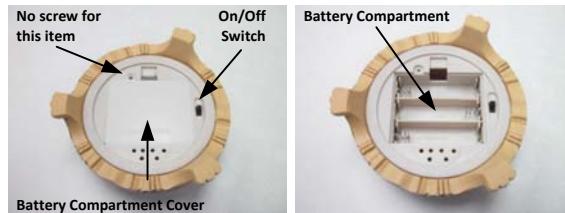

BATTERY INFORMATION

Battery Installation

1. Open the Battery Compartment Cover.
2. Insert 3 pcs AA size batteries into the battery compartment following the battery marking direction with correct polarity. (Suggest using Alkaline Batteries.)
3. Close the Battery Compartment Cover.

Battery Replacement

When item did not function as intended, it may due to low battery voltage. Please follow the below steps to make battery replacement.

1. Open the Battery Compartment Cover.
2. Remove the old batteries from the battery compartment.
3. Insert 3 pcs AA size batteries into the battery compartment following the battery marking direction with correct polarity. (Suggest using Alkaline Batteries.)
4. Close the Battery Compartment Cover.

Caution (Battery usage, handling, disposal)

Incorrect use of batteries can result in hazards such as leakage and bursting.

Please observe the following:

- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or mix batteries with different brands, although they may look similar, different batteries may have different voltages.
- Make sure that the plus and minus ends of each battery match the indications in the battery compartment.
- Remove batteries from item that isn't going to be used for a month or more.
- Do not attempt to destroy or disassemble battery or remove any of its components.
- Batteries must be recycled or disposed of properly. Please consult your local waste authority for information regarding available recycling and/or disposal options/instructions.

- Keep batteries away from children and pets. Do not incinerate - fire and/or serious injury could result from a failure to comply with these warnings.
- Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

OPERATE THE MUSICAL BASE

Turn on the Musical Base (Standby Mode)

1. Lift up the Musical Base and turn the Music Base upside down so that the Base can be seen.
2. Install batteries into the item according to Battery Installation section of this instruction manual.
3. Switch the On/Off switch to "On" (A start-up melody will be heard.)
4. Place the Musical Base on a stable, solid, flat, level surface.
- The Musical Base is now being set to "Standby Mode" and ready to be triggered to play Melody of particular Princess Figurines.

Playing Melody with different Princess Figurines

1. Make sure the Musical Base is in "Standby Mode" (Refer "Turn on the Musical Base (Standby Mode) or "Wake up from Sleep Mode" of this section.)
2. Place one of the Princess Figurines (Sold Separately) on the top of the Musical Base, the Musical Base will play a 8 – 15 second Melody for that particular Princess for one time. (Refer below table for the Princess Figurine and Melody information.)

Princess Figurine	Melody
Ariel Sonata	Part of Your World
Aurora Sonata	Once Upon A Dream
Belle Sonata	Beauty and The Beast
Cinderella Sonata	A Dream Is A Wish Your Heart Makes
Jasmine Sonata	A Whole New World
Tiana Sonata	Almost There

3. To repeat the same / different Melody, lift up the Princess Figurine and place the same / different Princess Figurine onto the Musical Base again. The same / different Melody will be played again.
- Only the 6 Princess Figurines of this series can triggered the Musical Base to play Melody.

Enter "Sleep Mode"

- When the Musical Base is turned "On" and has not been triggered to play Melody for about 6 minutes, Musical Base will enter "Sleep Mode".
- During "Sleep Mode", the Musical Base cannot be triggered by any of the Princess figurines.

Wake up from "Sleep Mode"

1. Remove any Princess Figurines from the Musical Base.
2. Lift up the Musical Base and turn the Music Base upside down so that the Base can be seen.
3. Switch the On/Off switch to "Off"
4. Switch the On/Off switch to "On" again. (A start-up melody will be heard.)
5. Place the Musical Base back on a stable, solid, flat, level surface.
- The Musical Base is now resume to "Standby Mode" and can ready to be triggered to play Melody of particular Princess Figurines.

Turn Off the Musical Base

1. Remove any Princess Figurines from the Musical Base.
2. Lift up the Musical Base and turn the Music Base upside down so that the Base can be seen.

3. Switch the On/Off switch to "Off"

Reset the Musical Base

- In most of the time, the Musical Base will work normally as intended. However, in a very rare case, the Musical Base may play an incorrect Melody, or not reacting to the Princess Figurines, even it is with normal battery level and in "Standby Mode".
- If the problem persists, try to reset the Musical Base following the steps in "Wake up from Sleep Mode" section. The item shall be able to resume to normal.

MAINTENANCE

- Item contains delicate parts. Please handle with care.
- Do not place the item in a place exposed to high temperatures or humidity, including near radiators and other heat-generating appliances.
- Do not place the item on a window sill or other place where the item will be exposed to direct sunlight.
- Use a soft damp cloth to surface clean the item. Do not use window cleaners, household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives to clean the item.
- This item contains electronic part inside the body. Do not submerge the whole item into water.

FCC INFORMATION

FCC ID: YRG4020794RFID

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 INFORMATION

IC: 9316A-4020794RFID

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Enesco, LLC
225 Windsor Drive, Itasca, Illinois 60143

Enesco Canada Corporation
7550 Tranmere Drive, Mississauga, ON L5S 1S6

Enesco Limited
UK Customer & Distribution Centre, Brunthill Road, Kingstown, Carlisle, Cumbria, CA3 0EN.

Enesco Asia Limited
Room 2001, 20/F, Austin Plaza, 83 Austin Road, Kowloon, HKSAR, China

Hereby, Enesco, LLC, declares that this Princess Musical Base is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at Enesco Limited, UK Customer & Distribution Centre, Brunthill Road, Kingstown, Carlisle, CA3 0EN.

Item Made in China



Copyright © 2010 Enesco, LLC
All rights reserved.
Printed in China
B_111110_EN