

**WARNING:**

Changes or modifications to this unit not expressly approved  
by the party responsible for compliance could void the user's  
authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference and

- 2) this device must accept any interference received,  
including interference that may cause undesired  
operation of the device.

The following are the suggested text on SAR information

Specific Absorption Rate (SAR) information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This model (FCC ID: YROG150I) has also been tested against this SAR limited. The highest SAR value reported under this standard during product certification for use at the ear is 1.122 W/kg. There are no body

worn configurations (e.g. belt-clips, holsters or similar accessories), then body SAR is not required.

**G150I Dual SIM Cards on line  
GSM Digital Mobile Phone  
User Guide**

1.	REMOVAL OF SIM CARD.....	11
2.	REMOVE OF THE MEMORY CARD .....	11
3.	REMOVAL OF THE BATTERY .....	11
4.	BATTERY CHARGING.....	11
5.	DIALING .....	11
6.	INPUT METHODS.....	12
7.	GUIDE TO MENU OPERATIONS.....	13
8.	TECHNICAL INFORMATION.....	23

1. **Removal of SIM card**
  - Turn off the phone; remove the battery and unplug other external power sources.
  - When you need to remove the SIM card, please first turn off the phone, remove the battery, then remove the SIM card
2. **Remove of the Memory Card**
  - Turn off the phone; remove the battery and unplug other external power sources.
  - When you need to remove the Memory card, please first turn off the phone, remove the battery, then remove the Memory card.
3. **Removal of the Battery**
  - When removing the battery follow the following steps:
    - ①Push the battery cover towards bottom and remove;
    - ②Break out the battery from the mobile phone;
4. **Warning: You must turn off your mobile phone before removing the battery.**  
**Battery Charging**
  - Plug the charger into the electrical outlet.
  - Plug the charger connector into the charge interface of the phone.
  - The mobile phone and charger will become warm during charging and this is normal.
  - When charging is complete, unplug the charge connector from the electrical outlet and the mobile phone.
5. **Dialing**
  - **Making Domestic Calls**

Use the number keys to input number, then press the dial key to dial the call via SIM card 1/2  
You can input domestic calls in this order:  
Area code    phone number    dial key
  - **Making International calls**

For making international calls you should press the \* key to switch, until the international phone prefix "+" appears on the screen. This will allow you to make an international call in any

- ❖ country regardless of what the international call prefix is.  
You can input international calls in this order:  
+ **Country code area code telephone number dial key**  
After entering the prefix, enter the country code and full number you wish to call.
- **Emergency Calls**  
If you are located within a network area (you can find this out by referring to the network strength indicator located on the upper left-hand corner of your mobile phone screen), even if you do not have a SIM card, you will be able to transmit emergency calls.
- **Receiving Calls**  
You can select the different mode to receive calls. If the earphones are already plugged in, you can use the button located on the earphones to pick up the phone. If it is inconvenient to press the button, then you can set the "Auto" as "On", with the earphones plugged in, and the phone will automatically pick up. If you have set the "Any Key", you can pick up the call by pressing any key other than the hang-up key, right soft key.
- **Ending a Call**  
You can press the hang-up key or right soft key to refuse an incoming call. During a call you can press the hang-up key to end a call. You can also cancel a call you have just dialed by pressing the hang-up key or right soft key.
- 6. **Input Methods**
- **General outline**  
This mobile phone provides various input methods for multinational language. Input method types are consistent with languages including your mobile phone.
- **Key board values**  
Generally the Left soft Key or OK key indicates confirmation; the right soft key is to return or eliminate.  
Navigation keys (up/down and left/right keys): Generally used to move the cursor or candidate characters for inputting.

# key: to switch between different input methods.  
Number keys from 2 to 9: in the Intelligent English input modes, indicate the letters on the corresponding key.  
\* key: to show the sign interface.  
7. **Guide to Menu Operations**  
All function options about the mobile phone are listed as below with brief descriptions

#### 7.1 Phonebook

##### Quick search

Quick reference number

##### Search contact

Quickly to search phonbook entry by name.

##### Add new contact

To add a new phonebook entry.

##### Copy all

To copy the selected contacts between your SIM card and your mobile phone.

##### Delete

To delete the selected phonebook entry.

##### Caller Groups

To set the caller groups.

#### Extra numbers

You can separately set SIM1 and SIM2 owner number, service dialing number and SOS number (service dialing number require support from the SIM card, consult the network operator for details)

#### Settings

- ❖ **Memory status:** To view the total memory capacity and occupied memory space of the phonebooks for both the mobile phone and the SIM cards.
- ❖ **Preferred Storage:** You can choose the storage path for the current number.
- ❖ **Fields:** To set the associate picture, associate sound and caller group.
- ❖ **My vCard:** to edit or send my vCard.
- ❖ **vCard version:** to check the vCard version.

#### Phone Book backup

To import and export the phonebook entry

#### 7.2 Multimedia

##### Audio player

Select the "Audio player" submenu. Press **Up key** to pause or resume playing the audio. Press **OK** key to set player; Press **Down Key** to stop; Press **left/right keys** to play the Pre/Next song in the play list; Press the **Number key** "# to adjust the volume.

In the **Audio Player** menu interface, press the **left soft key "List"** to display the play list of music, press the **left soft key "Option"**, can **Play** the current music, look over **Details** of music, **Add To Ringtones**, **Refresh List** and **settings** the attribute about the Audio Player.

##### Sound recorder

In this submenu, mobile-phone will record voice memos, suffixal name is **amr** or **wav**, and

display size and date above the interface.

#### FM Radio

Select "FM Radio" submenu, then press the **left soft key "OK"** to enter FM interface. Press the **Number key \*#** to adjust volume; press the **left/right key** to decrease or increase 0.1; press the **down key** to turn on or off the FM program; press the **up key** to switch the **Manual Search** and the **Auto Search**.

#### 7.3 Call History

##### SIM1/2 Call history

- **SIM1 missed calls**

To view the missed call log list for SIM card 1/2 and perform the corresponding operation on the selected call log.

- **SIM1 dialed calls**

To view the dialed call log list for SIM card 1/2 and perform the corresponding operation on the selected call log.

- **SIM1 received calls**

To view the received call log list for SIM card 1/2 and perform the corresponding operation on the selected call log.

- **Delete SIM1 call logs**

To delete the call logs: Missed calls, Dialed calls, Received calls or delete all logs.

- **SIM1 call time**

To check SIM1 call time.

- **SIM1 call cost**

To check SIM1 call cost and set the price per unit.

- **SIM1 SMS counter**

To check the sent or received SMS.

#### 7.4 Settings

##### Dual SIM settings

In the submenu, you can select **Dual SIM open**, **Only SIM1 open**, **Only SIM2 open** or **Flight mode**.

##### Phone setup

###### Time and date

Use this menu to change the time and date displayed on your phone. Enter the "Time and date" submenu.

###### Schedule power on/off

You can edit four times to turn on/off the mobile-phone. Each time includes to set as follows: **Status** (Disable or Enable), **Power on** or **off** and time. Finish setting, when the time arrive, mobile-phone will turn on/off according as the status.

**Note:**time can not repeat, because same time can not be actived at one time.

###### Language

To set the current language type, menu interface changes according to setting.

###### Pref. Input methods

There are 7 kinds of Preferred input methods in the mobile-phone, choose one kind as acquiescence characters editor.

You can add/ delete other input method.

###### Display characteristics

■ **Wallpaper**

The first is browse and select the wallpaper from **System** or **User defined**.

■ **Screen saver**

To select "**Settings**" to set the status and waiting time of screen saver. Select "**Select**" submenu and enter, can choose from "**System**" or "**User defined**".

■ **LCD backlight**

To set **Brightness** and **Time** of **LCD backlight**. **Brightness** has 5 classes, **Time** can select from 5-60 sec.

■ **Show date and time**

To turn **On** or **Off**, set whether display the date and time on standby.

**Shortcuts**

You can edit the shortcut menu, it will display in the [**shortcuts**] menu.

**Dedicated key**

In this menu, you can **Edit** the shortcut function of **navigation keys** on standby: **Up key**, **Down key**, **Left key** and **Right key**.

**General Call settings**

**SIM1/2 Call settings**

■ **Call waiting**

**Activate**

If activated, an incoming call is signaled by a call waiting tone when you are on another call. The number/name of the incoming call is displayed.

**Deactivate** Cancel the call waiting function.

**Query status** Inquire the current status from the network.

**Call divert**  
You can specify the conditions under which calls should be diverted to your voice mail box or another number.

**Call barring**  
Restrict the dialing or receiving of certain calls. To activate or cancel call barring, you have to enter the network password provided by your network operator.

**Auto redial**

Once activated, the phone will automatically redial, if there is no answer for a number you have dialed

**Speed dial**

To turn on/off this function, or set the speed dial number.

**IP dial**

When IP dial is set and activated, if IP Dial is chosen to directly dial the phone number of this record via GSM, the number will automatically be added with IP prefix. This function needs network support.

**Call time display**

Choose whether to display the current call duration during a call.

**Call time reminder**

If activated, the phone beeps at the interval time you set during a call.

## Network setup

### **SIM1/2 network settings**

- **Network selection**

New search  
Search network over again.  
Select network  
Search network, can select the network you need from the network list.  
Selection mode

Press the left soft key "Change" to select Automatic or Manual. Automatic: to automatic search and connect to the first available network. Manual: to search an available network list for user manually select and select the network you want.

- **Preferences**

Preferences shows a list of networks already configured and set by the user. The preferred networks will be stored in SIM card.

## Security setup

### **SIM1/2 security settings**

- **SIM1 lock**

The PIN number can prevent the illegal use of your SIM card. Enter the "SIM1 lock" submenu. Floating bar register the current state.

- **Fixed dial**

If your SIM card supports it, outgoing calls can be restricted to certain numbers. When this function is activated, you may only dial the numbers that are in the fixed dialing list, or numbers that have the same initial numbers as those on the fixed dialing list.

- **Change password**

User is allowed to change SIM1 PIN and SIM1 PIN2.

If user want to change SIM1 PIN, but SIM lock is not enabled, then user can not change SIM1 PIN, a popup window shows "SIM1 lock must be enabled!" along with an error tone.  
Note: Password number must more than 4 digits (include 4 digits) and maximum 8 digits.

**Phone lock**

The Phone Lock can prevent the unauthorized use of your mobile phone.  
Attention: The default phone lock code is 0000. You should change it to your own code as soon as possible.

**Auto keypad lock**

A time select from **5sec, 15 sec, 30sec, 1min** and **5min**, on standby, if you do nothing in the time of setting, Keypad will automatically lock. If you select "**None**", cancel this function.

**Change password**

User is allowed to change Phone password and IP (Intimity Protection) password.  
Note: Password number must more than 4 digits (include 4 digits) and maximum 8 digits.

**Restore factory settings**

Enter the "Restore factory settings" submenu. Here you can restore the relevant settings to the manufacturer's settings.

Note: Restoring the manufacturer's settings requires the correct handset lock code to be entered. Some settings cannot be restored to the manufacturer's settings until the phone is restarted.

**7.5 Messages**

**Write message**

- Enter text.

- Press the **left soft key (Options)** and select the required items, including SIM1 done, Use templates, Insert number, Insert name and Input method.
- Enter SIM1 done
- Press the left soft key (Options) and select "Send only", or press middle key directly; to add the number and send this message.

#### **Inbox**

To view the received SMS.

#### **Outbox**

Short messages successfully not sent are saved here.

#### **Templates**

Press the left soft key to enter information template list, can use, Edit or Remove the template message.

#### **SMS settings**

##### **SIM1/2 settings**

Set the following settings of short messages.

<b>Profile settings</b>	Set profile name, SC address, validity period and message type.
<b>Common settings</b>	Enable or disable the delivery report, reply path or save sent message.

<b>Memory status</b>	View the memory usage ratio of the SIM card and phone for short messages.
<b>Preferred storage</b>	Set to save short messages to the SIM card or to the phone.

#### Voicemail server

Dial the voice mail number to access your voice mail. The number is provided by your network operator.

Note: The voice mail function requires network support.

#### Broadcast message

Broadcast messages are messages that your network operator broadcasts to all users within a particular area.

For more information about available channels and the information they provide, contact your network operator.

#### 7.6 Fun&Games

##### Games

- By selecting the Games option, you can play one game: F1 Race.
- Games settings

Turn On or Off toAudio and Volume.

#### 7.7 File manager

To enter "File Manager" submenu, menu display "Memory Card\" (if the Memory card have been inserted into the mobile-phone).

#### 7.8 Organizer

In the main menu interface, press the navigation key to select "Organizer" and press the left soft key to enter the "Organizer" main menu.

- **Calendar**

Enter "Calendar" submenu, screen will display the current month, press the navigation key to change date.

- **Alarm**

The mobile-phone can set five alarms at most, and hold out the alarm when the phone is power off. Select one alarm, can set to turn on/off, time, Repeat, Snooze(mins) Alert type.

- **Calculator**

Your mobile phone provides a calculator with 4 basic functions to facilitate simple calculations.

- **Torch**

To use electric torch function, turn on/off by pressing "ok" key.

You can turn on/off torch on IDLE screen by long press the "OK" key as well.

#### 7.9 User Profiles

To activate and customize the desired profile as General, Meeting, Outdoor, Indoor, Silent, Headset, Power save according to case and environments.

#### 8. Technical Information

##### Phone

Model

G150I

Weight

80.0g

**Lithium Battery**

Model	GT-4C
Nominal voltage	3.7v
Nominal	4.2v
Capacity rating	800mAh
Continuous standby time	* 150-400hrs
Continuous calling time	3-5hrs
	* Depending on the network

**Operation Temperature** -10~+55 °C