

# **USER MANUAL**

**GO MOBILE**

GO180

**FCC ID: YSEGO180**

## **Important Notice**

### **COPYRIGHT NOTICE**

Copyright © 2013, **GO MOBILE**. All rights reserved.

### **TRADEMARKS**

**GO MOBILE** and **FCC ID** logos are trademarks or registered trademarks of **the phone**. Other companies and product names mentioned herein may be trademarks or trade names of their respective owners, and the mention is subject to compulsory citation purpose.

### **WARRANTY DISCLAIMER**

**GO MOBILE** makes no representations or warranties, either expressed or implied, by or with respect to anything in this document, and shall not be liable for any implied warranties of merchantability or fitness for a particular purpose or for any indirect, special or consequential damages.

### **CONFIDENTIALITY STATEMENT**

The contents of this document (including any accessory) are confidential. The receiver should be aware of the confidentiality of the document and will neither use it for any other purpose except for the purposes specified nor disclose the document to any third party.

## CONTENT

1. OVERVIEW .....	1 -
2. WARNINGS .....	2 -
3. APPEARANCE .....	3 -
4. KEYPAD DEFINITIONS .....	4 -
5. GETTING STARTED .....	5 -
5.1 SIM CARD INSTALLATION.....	5 -
5.2 BATTERY INSTALLATION .....	5 -
5.3 CHARGING THE BATTERY.....	5 -
5.4 SECURITY SETTINGS.....	5 -
6. YOUR PHONE.....	6 -
6.1 POWER ON.....	6 -
6.2 MAKING A CALL .....	6 -
6.3 REJECTING A CALL.....	6 -
6.4 ANSWERING A CALL .....	6 -
6.5 VOLUME SETTINGS .....	6 -
6.6 ENDING CALLS.....	6 -
6.7 EMERGENCY SERVICE.....	6 -
6.8 EXTENSION CALL/QUICK DIAL .....	6 -
6.9 MISSED/ DIALLED CALL.....	6 -
6.10 CALL DIVERT.....	7 -
6.11 CALL BARRING.....	7 -
6.12 T-FLASH CARD.....	7 -
6.13 USB CABLE.....	7 -
6.14 POWER OFF.....	7 -
7. STANDBY SCREEN.....	7 -
8. CALL LOGS.....	8 -
9. MOVISTAR.....	8 -

10. CAMERA .....	- 8 -
11. IMAGE BROWSER .....	- 8 -
12. CONTACTS .....	- 9 -
13. MESSAGES .....	- 9 -
13.1 WRITE MESSAGE .....	- 9 -
13.2 INBOX .....	- 10 -
13.3 DRAFTS .....	- 10 -
13.4 OUTBOX .....	- 10 -
13.5 SENT MESSAGES .....	- 10 -
13.6 DELETE MESSAGES .....	- 11 -
13.7 BROADCAST MESSAGES .....	- 11 -
13.8 TEMPLATES .....	- 11 -
13.9 VOICEMAIL SERVER .....	- 11 -
13.10 MESSAGE SETTINGS .....	- 11 -
14. MULTIMEDIA .....	- 11 -
14.1 TV .....	- 11 -
14.2 VIDEO RECORDER .....	- 11 -
14.3 VIDEO PLAYER .....	- 11 -
14.4 AUDIO PLAYER .....	- 12 -
14.5 SOUND RECORDER .....	- 12 -
14.6 FM RADIO .....	- 12 -
15. INTERNET SERVICE .....	- 12 -
16. TOOLS .....	- 13 -
16.1 CALENDAR .....	- 13 -
16.2 TASKS .....	- 13 -
16.3 ALARM .....	- 13 -
16.4 WORLD CLOCK .....	- 13 -
16.5 NOTES .....	- 13 -
16.6 CALCULATOR .....	- 13 -
16.7 UNIT CONVERTER .....	- 13 -
16.8 STOPWATCH .....	- 13 -
17. FILE MANAGER .....	- 13 -

18. SOCIAL NETWORKS .....	- 14 -
19. SETTINGS .....	- 14 -
19.1 PHONE SETTINGS.....	- 14 -
19.2 NETWORK SETTINGS.....	- 14 -
19.3 SECURITY SETTINGS.....	- 14 -
19.4 CONNECTIVITY.....	- 15 -
19.5 CALL SETTINGS.....	- 15 -
19.6 RESTORE FACTORY SETTINGS .....	- 15 -
19.7 WI-FI .....	- 15 -
19.8 BLUETOOTH.....	- 15 -
19.9 PROFILES.....	- 15 -
20. ACCESSORIES .....	- 16 -
21. CARE AND MAINTENANCE.....	- 16 -
22. TECHNICAL INFORMATION .....	- 17 -

## 1. Overview

---

### **Thank you for purchasing a mobile phone.**

For use of this product effectively and safely, please read this manual carefully before operation.

Due to any product problems caused by improper operation or misunderstanding of this manual, we are not responsible

This manual revision carefully, however, we cannot make sure that there won't be any errors or omissions in any type.

To improve the quality of the products and services is our constant pursuit. Therefore, our company keep the power that all changes to product and content of the software project, of this manual, without prior notice.

## **2. Warnings**

---

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

### **TURN ON SAFELY**

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

### **ROAD SAFETY**

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

### **INTERFERENCE**

All wireless phones may be sensitive to interference, which may affect performance.

### **TURN OFF IN HOSPITALS**

Follow all restrictions. Turn off the phone near medical equipment.

### **TURN OFF ON AIRCRAFTS**

Follow all restrictions. Wireless devices can cause interference on aircrafts.

### **TURN OFF WHEN REFUELING**

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

### **USE SENSIBLY**

Only qualified personnel may install or repair this product.

### **ENHANCEMENTS AND BATTERIES**

Use only appropriate enhancements and batteries. Do not connect incompatible products.

### **WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

### **BACKUP COPIES**

Remember to make back-up copies or keep a written record of all important information stored in your phone.

### **CONNECTING TO OTHER DEVICES**

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

### 3. Appearance

---



## 4. Keypad Definitions

---

Key	Definitions
<b>Left Soft key/Right Soft key</b>	1. Execute functions that the left-down/right-down corner indicator shows. 2. In the standby mode, press Left Soft key to access Menu, Right Soft key to access Call log.
<b>Navigation key</b>	1. In other modes, it is used as the navigation/direction key except for some special functions. 2. In standby mode, press left/right navigation keys to select widgets on screen, press OK key confirm to enter.
<b>OK key</b>	1. In standby mode, press left/right navigation keys to select widgets on screen, press OK key confirm to enter. 2. In dial panel, after input numbers, press this key to call the number. 3. In specific interface, press this key for confirmation.
<b>Dial key</b>	1. Press this key to dial or receive an incoming call. 2. In standby mode, press this key to access All calls.
<b>End key</b>	1. Mainly used as power on/off. 2. Press to return to standby screen in any interface. 3. End calls or reject incoming calls.
<b>Social Networks Shortcut key</b>	1. In standby mode, press the key to access Social Networks menu.
<b>TV Shortcut key</b>	1. In standby mode, press the key to access TV.
<b>Keypad</b>	1. Press the key to enter letters, numbers or symbols.
<b>Input Mode key</b>	1. In edit mode, press the key to change input method.
<b>Capital key</b>	1. In edit mode, press the key to switch letters between capital letter and lowercase.
<b>Messages Shortcut key</b>	1. In standby mode, press the key to enter Messages.
<b>Space key</b>	1. In edit mode, press the key to input a space. 2. In standby mode, long press the key to lock keypad. 3. When keypad is locked, press left soft key and space key to unlock.
<b>Audio Player Shortcut key</b>	1. In standby mode, press the key to enter audio player.
<b>Symbol key</b>	1. In edit mode, press the key to enter symbol list.
<b>FN key</b>	1. In edit mode, press the key once and then other key to input the character on half-top of the key. 2. Press the key twice to lock the status to continually input the character on half-top of the key.
<b>Silent Mode key</b>	1. In standby mode, long press the key to switch profiles between current mode and Silent mode.

<b>Enter key</b>	1. In edit mode, press the key to begin a new line.
<b>Delete key</b>	1. In edit mode, press the key to delete entered character one by one, long press the key to delete all entered characters.

## 5. Getting Started

### 5.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

**Tips:** Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

### 5.2 Battery Installation

**Caution:** Install according to the illustration above to avoid breaking the battery connectors.

### 5.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete.

Press the two sides of the charger plug and disconnect the charger from the phone.

- When the battery is low, a “low battery” message will display across the screen and the battery icon will seem empty. If the battery level is insufficient, the phone will turn off automatically. Do not use your phone under low battery state for an extended period of time or it may cause battery damage.

### 5.4 Security Settings

#### —PIN code

**PIN** code (Personal Identity Number) prevents unauthorized use of your phone. The **PIN** code is provided by your network operator with the **SIM** card.

If you enter the wrong code three times in a row, the **PIN** code will be blocked. To unblock the **PIN** code, you need to enter your PUK. Your PUK is provided by your network operator.

#### —Phone Lock

Turn on/off Startup password (the length of the password is 4-8 digital numbers).

If you activate the “Phone Lock”, you need to enter the password each time you turn the phone on.

If you want to modify the phone lock password or deactivate “Phone Lock”, enter Change password to set.

## 6. Your Phone

---

### 6.1 Power On

- Press end key and hold to turn on your phone, light the backlight, and display power on animation.
- If you do not insert a SIM card, or the SIM card has incomplete connection, your phone will show no signals for SIM card. In this condition, you can only access part of the menu and only permission using some urgent calling.
- If the **PIN** code is blocked, the alert message for inputting **PUK** code will display on the screen before power on.
- The phone will search the network automatically after power on.

If your phone registers to network correctly, the name of the network and signal strength will display; if your phone can't register or can't register correctly, you can only access emergency calls and other functions that do not rely on the network.

### 6.2 Making a Call

In standby mode, press number keys to input numbers. When you finish inputting phone numbers, press dial key or OK key to call the number. If you're making a long distance call, add the area code preceding the telephone number.

### 6.3 Rejecting a Call

Press right soft key or end key to reject an incoming call.

### 6.4 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press dial key or left soft key to answer.

### 6.5 Volume Settings

During a call, press up/down navigation keys to enter volume adjustment interface, and then press navigation keys to adjust volume.

### 6.6 Ending Calls

Press end key to end or cancel a call.

### 6.7 Emergency Service

You can dial an emergency call without the SIM card.

Contact your service provider to get the emergency call number.

### 6.8 Extension Call/Quick Dial

After inputting phone number, press the P key to input “p”, then input the extra number.

### 6.9 Missed/ Dialled Call

Enter main menu-> Call logs-> check Missed/Dialled calls.

You can also press dial key in standby mode to check All calls.

## **6.10 Call Divert**

When the call divert is activated, incoming calls will be diverted to voice mail or other phone numbers according to the call divert settings.

## **6.11 Call Barring**

When the call barring activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring.

## **6.12 T-flash Card**

Insert the T-Flash card into phone from the slot. This will expand the Flash memory of the phone.

## **6.13 USB Cable**

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the mass storage in phone or identified SD card that is inserted.

The operating method is as follows:

—Connect: Plug the IO port of the cable into your phone, and the USB port into the PC.

Read & write mode:

T-Flash card: Install the T-Flash card, and connect the phone set to PC, if the phone set is power off, it can be charged.

—File transfer

•File folder instruction: Find the mobile memory (T-FLASH card) in “my computer”, double click it, and you will find the folders as follows:

“Photos” is used to store the picture.

“My Music” is used to store the MP3 music file.

“Videos” is used to store the MP4 format file.

These folders is preset by the system, don’t change the folders’ name.

•Read & Write: You can copy the files in T-Flash to PC hard disk, or copy the files in PC hard disk to the folder of the T-Flash card.

—Quit: On the PC side, select taskbar->delete hardware safely, exit the T-Flash card identified states, stop the T-Flash card, and pull out the USB cable.

## **6.14 Power Off**

In standby mode, press and hold end key to turn off phone.

# **7. Standby Screen**

---

Press and hold end key to turn on your phone, phone will light the backlight and display power on animation.

On the screen, icons indicate the signal strength, battery levels, time, date, and phone configure information. Refer to icons information in standby screen.

## 8. Call Logs

---

Display the latest all calls list.

- Missed calls: Display the latest missed calls list.
- Dialled calls: Display the latest dialled calls list.
- Received calls: Display the latest received calls list.
- Delete call logs: Select to delete call logs of Dialled calls, Missed calls, Received calls, or All calls.
- Call timers: Check the call time of last call, dialled calls, received calls, or reset all.

## 9. Movistar

---

If your SIM card supports STK (SIM Tool Kit) function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

## 10. Camera

---

Press left soft key or OK key to enter camera. Press OK key to shoot, press left soft key to enter Options:

- Switch to video recorder: Shift camera into video recorder
- Image Browser: Enter image browser to view images
- Camera settings: Set parameters related to camera
- Image settings: Set Image size and Image quality
- White balance: Select Auto, Daylight, Tungsten, Fluorescent, Cloudy, and Incandescent
- Scene mode: Select Auto or Night
- Effect settings: Select Normal, Grayscale, Sepia, Sepia green, Sepia blue, and Color invert
- Storage: Select storage folder
- Restore default: Restore all values to original

## 11. Image Browser

---

Enter image browser, you can choose images to view or return. Select one image and press left soft key to enter Options:

- View
- Image information
- Browse style: View images in List style or Matrix style
- Send: Send the image as multimedia message, or via Bluetooth
- Use as: Use the image as Wallpaper
- Rename
- Delete
- Sort by: Sort the images by Name, Type, Time, or Size
- Delete all files: Delete all images

—Storage: To check storage

## 12. Contacts

---

In the contacts, you can store contacts' personal information and numbers while also search for previously stored contacts.

—Select Add new contact:

You can save new contact To SIM or To Phone. When save the contact to phone, you can edit email address, caller picture and caller ringtone.

—Select one contact and press left soft key to access options:

- View: Check the detailed information of the contact
- Send text message: Edit text message to send message
- Send multimedia message: Edit multimedia message to send message
- Call: Call the number
- Edit: Edit the contact
- Delete: Confirm whether to delete the contact
- Copy: Copy the contact To Phone, To SIM
- Mark several: Mark one or more contacts to move, copy or delete together
- Caller groups: To add new group or add contact to group
- Phonebook settings: Set Preferred storage, Speed dial, My number, etc

## 13. Messages

---

### 13.1 Write Message

#### 13.1.1 Text Message

This function can begin a new text message. After completing the message:

—Press OK key:

- Enter number: Input number
- Add from Phonebook: Select contact from phonebook

—Press left soft key:

- Send to: Enter number or Add from Phonebook to send message
- Insert symbol: Insert symbol to the message
- Input method: Select input method
- Insert template: Insert template to the message
- Advanced: Insert number, name, or bookmark
- Save to Drafts: Save the message to drafts

#### 13.1.2 Multimedia Message

This function can begin a new multimedia message. After completing the message:

—Press OK key:

- Enter number: Input number
- Add from Phonebook: Select contact from phonebook

—Press left soft key:

- Send to: Enter number or Add from Phonebook to send message
- Insert symbol: Insert symbol to the message

- Input method: Select input method
- Add picture: Add picture into the message
- Add sound: Add audio file into the message
- Add video: Add video file into the message
- Add subject: Add multimedia message subject
- Preview MMS: Preview the multimedia message
- Slide options: Select Add slide behind, Add slide before, or set Slide timing
- Advanced: Insert text template, attachment, or bookmark
- Save to Drafts: Save the message to drafts

### 13.2 Inbox

After entering the Inbox, press up/down navigation key to select messages. Press OK key to check the details of message, or press left soft key to access Options:

- View: Check the message
- Reply by SMS: Reply text message to the sender
- Reply by MMS: Reply multimedia message to the sender
- Call sender: Call the sender
- Forward: Send the message to others
- Delete: Confirm whether to delete the message
- Delete all: Confirm whether to delete all messages
- Save to Phonebook: Save the sender's number to phonebook

### 13.3 Drafts

You can save unsent and edit incomplete messages in draft box. Press left soft key to access to Options:

- View: Check the message
- Send: Enter number or Add from Phonebook to send the message
- Edit: Edit the message
- Delete: Confirm whether to delete the message
- Delete all: Confirm whether to delete all messages

### 13.4 Outbox

Checks the information of unsuccessfully sent message in outbox. Press left soft key to access to Options:

- View: Check the message
- Resend: Send the message once more
- Edit: Edit the message
- Delete: Confirm whether to delete the message
- Delete all: Confirm whether to delete all messages

### 13.5 Sent Messages

Check the message in sent box. Select one message to open, or press left soft key to access Options:

- View: Check the message
- Forward: Send the message to others

- Delete: Confirm whether to delete the message
- Delete all: Confirm whether to delete all messages

### **13.6 Delete Messages**

Select to delete messages by Inbox, Drafts, Outbox, Sent messages. You can also select Delete all to delete all messages.

### **13.7 Broadcast Messages**

You can check cell broadcast messages in this function.

### **13.8 Templates**

You can check templates or edit.

### **13.9 Voicemail Server**

This function needs a network supply. Please contact with your service provider for more information.

### **13.10 Message Settings**

- Text message: Set parameters related to text message
- Multimedia message: Set parameters related to multimedia message
- Service message: Set Enable push or Enable service loading

## **14. Multimedia**

---

### **14.1 TV**

You can use your phone as a terminal to watch TV. Press up/down navigations or I key and O key to adjust volume. Press left/right navigation keys to change channels. Press (\*) to search channel automatically, press (#) to shift between full screen and standard screen. Press left soft key to enter options.

### **14.2 Video Recorder**

Press left soft key or OK key to enter video recorder. Press OK key to shoot, press left soft key to enter Options:

- Switch to camera: Shift video recorder to camera
- Camcorder settings: Set parameters related to camcorder
- Video settings: Set Video quality
- White balance: Select Auto, Daylight, Tungsten, Fluorescent, Cloudy, and Incandescent
- Effect settings: Select Normal, Grayscale, Sepia, Sepia green, Sepia blue, and Color invert
- Storage: Select storage folder
- Restore default: Restore all values to original

### **14.3 Video Player**

Preview the videos stored on phone or memory card. Select one video file to open. Press up/down navigation keys, I key and O key to adjust volume. Press (\*) to shift between full screen and standard screen. Press the left/right navigation keys and OK key to operate the video player, press left soft key to access Options.

## 14.4 Audio Player

This function menu is used to store and play the audio file.

In play mode, press left/right navigation keys to operate the audio player, press I key and O key to adjust volume. Press left soft key or OK key to access List, and then press left soft key again to access options:

- Play
- Details
- Refresh list
- Settings

## 14.5 Sound Recorder

You can take a recorder in this function. Press left soft key to enter options:

- New record

To record new audio clip. During recording, press left soft key or OK key to pause, press right soft key to stop. After saved the audio clip, press left soft key to access options:

- New record
- Play
- Rename
- Delete
- List
- Settings
- Use as
- Send
- List

Enter record file list to check recorded files.

- Settings

To set storage or audio quality.

## 14.6 FM Radio

Enter FM radio

Press I key and O key to adjust volume. Press left/right navigation keys to change frequency, press up/down navigation keys to change channels.

Press left soft key to access Options:

- Power off
- Channel list
- Manual input: Input frequency manually
- Auto search
- Settings: To set Background play

## 15. Internet Service

---

Enter the menu and set Homepage, Bookmarks, Search or input URL, Recent pages, and Settings.

## 16. Tools

---

### 16.1 Calendar

You can use this feature to view the year, date and term easily. Press navigation keys to change date. Press left soft key to enter Options:

- View: View the event
- View all: View all events
- Add event: Add new event
- Delete event: Delete saved event
- Jump to date: Enter the date and it can go to the date you want to check
- Go to today: Turn back to today
- Go to weekly/monthly view: View the calendar in weekly or monthly

### 16.2 Tasks

To check all saved tasks or press left soft key to add new ones.

### 16.3 Alarm

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify.

### 16.4 World Clock

Press left/right navigation keys to change time zone on world map, you can view the time of different areas. Press left soft key or OK key to access options and select Daylight saving time for foreign city.

### 16.5 Notes

You can check saved notes or add new ones.

### 16.6 Calculator

This feature can use your phone as a calculator for simple calculations. Press number keys to enter the numbers and calculate.

### 16.7 Unit Converter

This function can let you convert Weight and Length.

### 16.8 Stopwatch

The phone can be used to timing in the way of Typical stopwatch and Nway stopwatch.

## 17. File Manager

---

You can check and manage the files on phone or memory card. Select one file and press left soft key to access Options:

- Open
- New folder
- Rename

—Delete

—Sort by

The operations of certain folder or files may different. Please refer to your phone.

## 18. Social Networks

---

Select FaceBook, Yahoo, Movistar, MSN, Yahoo Weather to use. You can also select Fun & Games to use Java applications.

## 19. Settings

---

### 19.1 Phone Settings

#### —Time and Date

You can select Set home city, Set time/date, Set format, and Update with time zone.

#### —Display

- Wallpaper

You can set wallpaper under this function.

- Show date and time

Select On or Off

- LCD backlight

Set brightness and time duration

#### —Languages

You can choose several languages under this function.

#### —Input Mode

Select Smart abc, abc, etc as preferred input method.

#### —Schedule Power on/off

Set the time to automatically power on/off the phone.

#### —Shortcuts

To set Shortcuts Style or Shortcuts Menu

#### —Flight Mode

Select Normal mode or Flight mode

### 19.2 Network Settings

Set Network selection, Preferences, and GPRS transfer pref.

### 19.3 Security Settings

#### —SIM Security

- PIN Lock

PIN number setting can avoid unauthorized usage of SIM card. If PIN number has been wrongly inputted for 3 times, the SIM card will be locked. PUK number is needed to unlock the SIM card. Please contact the network provider if you don't know the PUK number.

- Change PIN

Input old PIN, and then input new PIN, input the PIN code again to confirm. Before change PIN, you need to turn on PIN lock.

- Change PIN2

Input old PIN2, and then input new PIN2, input the PIN2 code again to confirm.

#### —**Phone Security**

- Phone Lock

Input phone password to turn on/off phone lock. The default password is 1234.

- Change Password

Input old password, and then input new password, input the new password again to confirm.

#### —**Auto Keypad Lock**

You can set the time to lock the keypad automatically.

#### —**Certificate Manager**

Select to check Auth. certificate and User certificate.

### **19.4 Connectivity**

#### 19.4.1 Data Account

Check data account in list or press left soft key to do options.

### **19.5 Call Settings**

#### —**Call Waiting**

Set the mode of call waiting, this function need to be activated.

#### —**Call Divert**

When the call divert is activated, incoming calls will be diverted to voice mail or other phone numbers according to the call divert settings.

#### —**Call Barring**

When the call barring is activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring.

#### —**Advanced Settings**

- Auto Redial

Set: On/ Off.

- Call Time Reminder

Set: Off/ Single/ Periodic.

- Answer Mode

Set: Any key/Auto answer when headset mode

### **19.6 Restore Factory Settings**

Input default password 1234 to restore factory settings.

### **19.7 Wi-Fi**

Enter the menu to turn on Wi-Fi, the phone will search available network automatically.

### **19.8 Bluetooth**

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization. In this menu, you can select Power, Visibility, My device, Search audio device, My name, and Advanced.

### **19.9 Profiles**

The phone supplies several profiles. Enter the menu, you can set and select.

Select one profile (except Silence), press left soft key to access Options:

- Activate: To implement the selected profile
- Customize: To customize Alert type, Ring type, Incoming call, Ringtone volume, Message, Message volume, Keypad, Keystroke volume, Power on, Power off, and System alert.
- Reset: Restore the profile to default set

## 20. Accessories

---

You can use accessories approved by our company, the other accessories can be provided by the seller.

Extra battery

We provide several kind of lithium battery with different capacity.

Traveler charger

Super sleek, useful charger can charge the mobile phone very quickly. Plug the charger into the electrical plugs and connects the other side connects to the bottom of the phone.

You can check the charging progress in the screen of the phone, it will not power on automatically when charging.

## 21. Care and maintenance

---

### Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.

### Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and

allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

## **22. Technical Information**

---

**Weight : 63 gram**

**Size : 100 \* 57 \* 13.7 mm**

**Battery : 700 mAh**

**Networks: 180 hours**

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

**All pictures are for reference only in the instruction book; please refer to the actual phone.**

## FCC RF EXPOSURE INFORMATION:

### **WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### **BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

### **<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)**

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### **TIPS ON EFFICIENT OPERATION:**

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed

**RF Exposure Information:**

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is 1.102W/kg, next to the head is 1.116W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help

Ad Hoc function is supported but not able to operate on non-US frequencies.---WIFI

Do not use the device with the environment which below minimum -10°C or maximum over 50, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.