

## CONTENT

1. WARNINGS.....	- 1 -
2. GETTING STARTED.....	- 3 -
2.1 APPEARANCE.....	- 3 -
2.2 KEYPAD DEFINITION.....	- 4 -
2.3 BATTERY INSTALLATION .....	- 4 -
2.4 SIM CARD/T-FLASH CARD INSTALLATION .....	- 5 -
2.5 CHARGING THE BATTERY .....	- 5 -
2.6 SECURITY SETTINGS .....	- 6 -
2.7 T-FLASH CARD .....	- 6 -
2.8 USB CABLE.....	- 6 -
3. BASIC FUNCTIONS .....	- 6 -
3.1 MAKING A CALL .....	- 6 -
3.2 EMERGENCY SERVICE .....	- 7 -
3.3 ANSWERING A CALL.....	- 7 -
3.4 REJECTING A CALL .....	- 7 -
4. GUIDE TO FUNCTION MENU .....	- 7 -
4.1 ALARM .....	- 7 -
4.2 APPLICATION MANAGER.....	- 8 -
4.3 ATV .....	- 8 -
4.4 BROWSER .....	- 8 -
4.5 CALCULATOR .....	- 8 -
4.6 CALENDAR .....	- 8 -
4.7 CALL LOG .....	- 9 -
4.8 CAMERA .....	- 9 -
4.9 CONTACTS.....	- 9 -
4.10 DIALER .....	- 10 -
4.11 FM RADIO .....	- 10 -
4.12 FILE MANAGER.....	- 10 -
4.13 GALLERY .....	- 10 -

4.14 MESSAGES.....	- 10 -
4.15 MOVIE.....	- 10 -
4.16 MOVISTAR.....	- 10 -
4.17 MUSIC.....	- 11 -
4.18 NOTES.....	- 11 -
4.19 RECORDER.....	- 11 -
4.20 SETTINGS.....	- 11 -
4.21 TASKS.....	- 14 -
4.22 WLAN.....	- 14 -
4.23 WORLD CLOCK.....	- 14 -
4.24 FACEBOOK.....	- 15 -
4.25 OPERA MINI.....	- 15 -
5. CARE AND MAINTENANCE.....	- 15 -
6. TECHNICAL INFORMATION.....	- 17 -
7. FCC STATEMENT.....	- 18 -
8. SAR INFORMATION.....	- 19 -
9. BODY-WORN OPERATION.....	- 21 -

## **1. Warnings**

---

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

### **TURN ON SAFELY**

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

### **ROAD SAFETY**

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

### **INTERFERENCE**

All wireless phones may be sensitive to interference, which may affect performance.

### **TURN OFF IN HOSPITALS**

Follow all restrictions. Turn off the phone near medical equipment.

### **TURN OFF ON AIRCRAFTS**

Follow all restrictions. Wireless devices can cause interference on aircrafts.

### **TURN OFF WHEN REFUELING**

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

**USE SENSIBLY**

Only qualified personnel may install or repair this product.

**ENHANCEMENTS AND BATTERIES**

Use only appropriate enhancements and batteries. Do not connect incompatible products.

**WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

**BACKUP COPIES**

Remember to make back-up copies or keep a written record of all important information stored in your phone.

**CONNECTING TO OTHER DEVICES**

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

## 2. Getting Started

### 2.1 Appearance



#### The Symbols above indicate:

- |                   |                           |
|-------------------|---------------------------|
| 1. Receiver       | 2. Display Screen         |
| 3. Dial Key       | 4. Home Key               |
| 5. Back Key       | 6. Volume Adjustment Keys |
| 7. Antenna        | 8. Headset Jack           |
| 9. USB Interface  | 10. Power On/Off Key      |
| 11. Speaker       | 12. Camera                |
| 13. Battery Cover |                           |

## 2.2 Keypad Definition


Key	Definitions
<b>Power Key (Top)</b>	1. Long press the key to turn on/off the phone. 2. Press the key to lock the screen and keypad and off the screen.
<b>Dial Key</b>	1. In main menu, press this key to enter Call log.
<b>Home Key</b>	1. Press the key to return to standby mode.
<b>Back Key</b>	1. Press the key to go back to upper menu.
<b>Volume Adjustment Keys (Right side)</b>	1. To adjust incoming call ringtone volume. 2. During a call, while playing music, video, or listening to radio, press the keys to adjust volume.

## 2.3 Battery Installation



**Caution:** Install according to the illustration above to avoid breaking the battery connectors.

## 2.4 SIM Card/T-Flash Card Installation

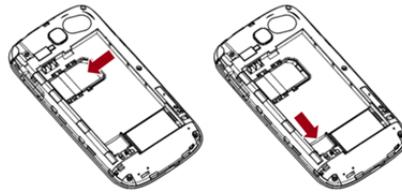

**Caution:** Do not bend or scratch your SIM card and T-Flash card. Avoid exposing your SIM card and T-Flash card to static electricity, water, or dirt.

**Tips:** Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot. With the metal contacts facing down, gently slide the T-Flash card into the slot. Press and pull the cover up to lock it.

## 2.5 Charging the Battery

Insert the charger into USB interface of the phone; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

- When the battery is low, a “low battery” message will display across the screen and the battery icon will seem empty. If the battery level is insufficient, the phone will turn off automatically. Do not use your phone under low battery

state for an extended period of time or it may cause battery damage.

## **2.6 Security Settings**

### **—PIN code**

**PIN** code (Personal Identity Number) prevents unauthorized use of your phone. The **PIN** code is provided by your network operator with the **SIM** card. If you enter the wrong code three times in a row, the **PIN** code will be blocked. To unlock the **PIN** code, you need to enter your **PUK**. Your **PUK** is provided by your network operator.

### **—Power on Password**

Activate/Modify/Deactivate power on password (the length of the password is 4-8 digital numbers). If you activate the “Phone Lock”, you need to enter the password each time you turn on the phone. If you want to modify or deactivate “Phone Lock”, enter this function to set.

## **2.7 T-flash Card**

Insert the T-Flash card into phone. This will expand the Flash memory of the phone.

## **2.8 USB Cable**

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the mass storage in phone or identified SD card that is inserted.

## **3. Basic Functions**

---

### **3.1 Making a Call**

Press Dial Key and select Dialpad or press Dialer in main menu to enter dial panel. If you're making a long distance call, add the area code preceding the telephone number. After inputting phone number, long press 0 until the symbol is highlighted, press 0 again until "p" appears, and then input the extra number. Press the dial icon on screen to make a call. During a call, press Volume Adjustment Keys to adjust volume.

### **3.2 Emergency Service**

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

### **3.3 Answering a Call**

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press Accept on screen or Dial Key to answer. If the screen is locked, slide answer icon upward to answer. During the calling, press the icons on screen to operate.

### **3.4 Rejecting a Call**

You can press the Reject on screen to reject a call. You can also slide reject icon upward to reject when the screen is locked.

## **4. Guide to Function Menu**

---

### **4.1 Alarm**

After setting the alarm clock, ring or vibration to remind you when the phone will arrive the time you set, in order to

achieve the role of the alarm clock.

#### **4.2 Application manager**

In the application manager, you can manage applications and set MRE settings.

#### **4.3 Atv**

In the Atv, you can watch TV with the phone. Press the icons on screen to operate. Press Options on screen to enter and set.

#### **4.4 Browser**

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

Select the website list on screen or input URL in address bar to visit.

#### **4.5 Calculator**

The calculator can execute simple calculations. Press the numbers or icons on screen to input numbers and calculate.

#### **4.6 Calendar**

In the calendar, you can check schedules for current month. There has an alarm for the date with schedule. Select one date to check all schedules for that day, or you can edit or delete the schedules.

#### **4.7 Call Log**

You can check call logs such as all calls or missed calls in Call log. Press one record, you can call the number, send message, etc.

#### **4.8 Camera**

By using the camera application, you can take photos for around people or events anytime. Press the Camera icon in main menu to enter. Press the shoot icon to take photo.

Press the icons on screen to operate the camera.

After taking a photo, the thumbnail of the photo will be displayed at the corner. Click the thumbnail to view the photo. You can select Rotate, Delete, Set as or Share when view the photo.

Slide the icon between camera and video recorder to change shoot mode.

#### **4.9 Contacts**

In the Contacts, press the icons on screen to enter:

— Add contact

Select save the contact on phone or SIM cards, enter detailed information and select Save to save new contact.

— Groups

Select to add contact to group or create new group.

— Share

Select to share one or more contacts via Bluetooth.

— More

You can select to delete the contact, send message, edit my card, and do settings in the Contacts.

**4.10 Dialer**

Press the icon to enter dial panel. Press corresponding icons to input numbers and dial. After inputting numbers, press dial icon to dial.

**4.11 FM Radio**

Select FM Radio in the main to enter. Insert earphone Press the icons on screen to operate the FM radio.

**4.12 File Manager**

In the main menu, select File Manager to enter and manage files and folders.

**4.13 Gallery**

You can use Gallery to view or manage photos and videos.

**4.14 Messages**

1. Select Messages in the main menu to enter. Select New msg. to create new SMS or MMS and send.
2. Enter receiver's number or add number from Contacts.
3. Press "Tap to compose" to input message content.
4. If you want to send picture or video file, press Insert, to add image, video and audio. The message will shift to multimedia message automatically.
5. Press Send to send the message.

**4.15 Movie**

This function can let you see the movies stored.

**4.16 Movistar**

If your SIM card supports STK function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

#### **4.17 Music**

Select Music in main menu. Press Songs, Artists, Albums, and Playlists at the top of screen to change category. Select one audio file to play the music. Press the icons on screen to operate the audio player.

Note: The phone supports background play.

#### **4.18 Notes**

The stick notes function can let you record the information you need anytime, anywhere. Press Notes in the main menu, Press "Add" to add new note content. Press the existing note content for viewing and editing.

#### **4.19 Recorder**

The phone support sound record function, recorded files will be saved in standard or high quality.

#### **4.20 Settings**

##### **4.20.1 Network & Connectivity**

You can select Flight mode, WLAN, WLAN settings Bluetooth, Bluetooth settings, GPRS transfer preference, Mobile network settings, and Data accounts.

- **WLAN**

You can connect to a wireless LAN (WLAN), use it to access and download with high speed.

Go to Menu, Settings, Network & connectivity, slide the slider toward right turn on WLAN. Press WLAN settings to check available WLAN networks. Select one open network, you can access to the network directly. If the network you selected is encrypted, you need to input password.

- **Bluetooth**

The phone supports Bluetooth. It can exchange information between devices including mobile phones wirelessly.

Through Bluetooth, you can sync phone and computer, exchange data with other Bluetooth devices, and can connect to Bluetooth earphone.

Go to Menu, Settings, Network & connectivity, slide the slider toward right to turn on Bluetooth. Before transmit data, you may need to match with other Bluetooth devices.

#### **4.20.2 Personalization**

- Theme settings: To set wallpaper for the phone.

- Sound settings: To set Silent, Vibration, Ring volume, etc.

- Notification settings: To turn on/off notification service, and select applications.

- Security settings

- **Phone Lock**

If turn on the phone lock, you need to input password every time when power on the phone. Select Change password to change phone code.

- **Change Password**

Input old password, then input new password and confirm new password to change.

- PIN Lock

The PIN (Personal Identification Number) code protects your SIM card from unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on.

Typing the ON incorrectly for three times, shall lock the SIM card and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press OK key or left soft key. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

- Change PIN

Input old password, then new code, press new code again to confirm.

- Change PIN2

You can modify the PIN2 number here.

- Mobile tracker

Enter password to activate mobile tracker function.

When user activated this function and lost the mobile, if someone pick-up the mobile and insert new SIM, the anti steal will send SMS to predetermined numbers to show detail of the lost mobile.

#### **4.20.3 System**

– Display settings: Set brightness and screen auto-lock

– Date & time settings: Set home city, time settings, and

date settings.

— Language & input: Set system language and international keyboards.

— Advanced settings: Check SIM usage, and input default password to restore factory settings. The default password is 1122.

#### **4.20.4 Applications**

— Call settings: Set parameters related to call, such as black list, white list, auto redial, etc.

— Contacts settings: Set contacts storage, set speed dial, backup contacts, etc.

— Messaging settings: Check memory status, set text message and multimedia message, etc.

#### **4.21 Tasks**

To check saved tasks or press “Add” to add new task.

#### **4.22 WLAN**

You can connect to a wireless LAN (WLAN), use it to access and download with high speed.

Press WLAN to check available WLAN networks. Select one open network, you can access to the network directly. If the network you selected is encrypted, you need to input password.

#### **4.23 World Clock**

You can check the time on the screen of the city you select and set. Press “Add” to add other cities, press “List” to check city time.

#### **4.24 Facebook**

You can use Facebook to communicate with other people. Before using this function, you need to check GPRS and WLAN settings.

#### **4.25 Opera Mini**

With Opera Mini, you can browse webpage quickly and conveniently. Before using this function, you need to check GPRS and WLAN settings.

### **5. Care and Maintenance**

---

#### **Battery care**

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
  - Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.
  - Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
  - Use the battery only for its intended purpose. Never use any charger or battery that is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the

battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
- Battery performance is particularly limited in temperatures below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cell phones are not considered household waste.

#### **Mobile phone maintenance**

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling

- can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
  - Do not paint the device Paint can clog the moving parts and prevent proper operation.
  - Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

#### **6. Technical Information**

---

Weight: 101g (with battery in)

Size: 116.5×62×11.8mm

Battery: 1100mAh

Networks: GSM

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

**All the configurations mentioned in this user manual is only for reference; please refer to the actual phone.**

#### **7. FCC STATEMENT**

---

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### **8. SAR INFORMATION**

---

##### **THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \*

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: YSEGO350.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a

substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

#### **9. Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.