


User's Manual

Congratulations on your new purchase of a Headrest Entertainment system. Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly operate your new Headrest Entertainment system.


Description of Buttons

POWER	DIMMER	V.SEL	EXIT	◀◀	▶▶	▶▶	■
DVD	USB/SD			V.SEL			
POWER	POWER ON/OFF			V.SEL			
DIMMER	DIMMER ON/OFF			V.SEL			
V.SEL	V.SEL MODE DISPLAY			V.SEL SCREEN OFF			
EXIT	BACK TO PREVIOUS FOLDER			◀◀	▶▶	▶▶	■
◀◀	PREV CHAPTER	FILE UP	UP	▶▶	NEXT CHAPTER	FILE DOWN	DOWN
▶▶	PLAY/PAUSE	SELECT	■ X1	STOP	STOP	■ X2	DVD READY
■ X1	STOP	STOP	DVD READY	USB/SD MAIN MENU			

Description of Remote Control

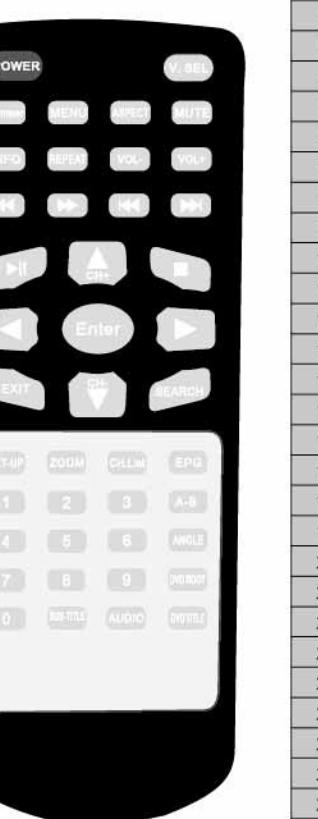

1	POWER	POWER ON/OFF
2	VSEL	Video Mode Selection
3	DIMMER	DIMMER ON/OFF
4	MENU	MENU OSD Display
5	ASPECT	Select from Normal/PS,Normal LB and Wide
6	MUTE	MUTE ON/OFF
7	INFO	Information of current playing file or Disc
8	REPEAT	Repeat playing of currently selected file
9	VOL-	Decrease volume level
10	VOL+	Increase volume level
11	◀◀	Fast Forward (X2,X4,X8,X16)
12	▶▶	Rewind (X2,X4,X8,X16)
13	◀◀	Previous Chapter
14	▶▶	Next Chapter
15	▶▶	Play or Pause the file or Disc
16	■	Stop the file or Disc
17	EXIT	EXIT from Folder or MENU
18	SEARCH	Search Target position on the DVD or Media file
19	▲	Cursor UP
20	▼	Cursor Down
21	◀	Cursor Left
22	▶	Cursor Right
23	ENTER	Function Select
24	SET-UP	SET-UP MENU Display and EXIT
25	ZOOM	X2,X3,X4 times ZOOM up, 1/2, 1/3, 1/4 times ZOOM Down
26	CH.LIST	DTV use only
27	EPG	DTV use only
28	1~0 keys	Number keys
29	A-B	A-B
30	ANGLE	Angle adjust of picture (Only selected file or Disc)
31	DVD ROOT	Move to DVD ROOT Menu
32	DVD/TITLE	Move to DVD/TITLE Menu
33	SUB-TITLE	SUB-TITLE Selection
34	AUDIO	Audio mode for Mono, Mono Left, Mono Right and Stereo

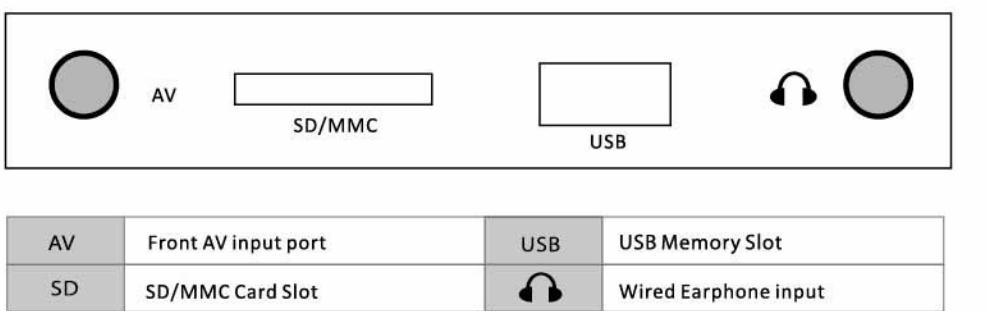


MENU

MENU	Detail Selection	Default setting
Brightness	-9~9 adjustable	0
Contrast	-9~9 adjustable	0
Hue	-9~9 adjustable	0
Saturation	-9~9 adjustable	0
IR	IR-A,IR-B and OFF	IR-A
FM	88.1/88.3/88.5/88.7/88.9/89.1 and OFF	88.1
VOL	0~20	17
RESET	Press ENTER to RESET MENU to default setting	

How to change Video Sources

This unit has 5 different Modes. DVD, USB,SD, AV, AV2

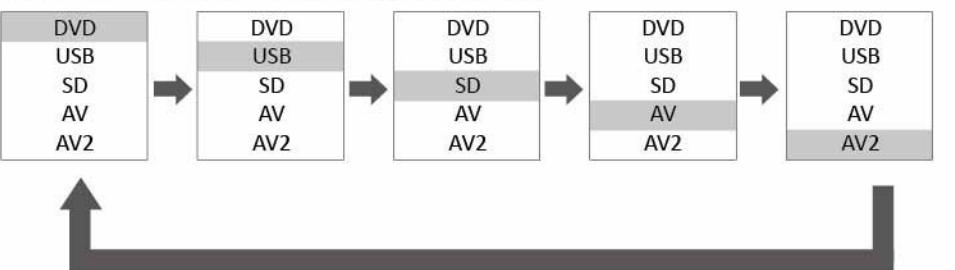

1. DVD
 - 1) Press OPEN button on the unit to load DVD or CD disc
 - 2) Completely close the LCD flip until you hear the sound "Click".
 - 3) DVD or CD disc will be playing automatically.

2. USB
 - 1) Put USB Memory on the slot located on right bottom side (Inside of folding flip)
 - 2) Press VSEL button on the unit or Remote to move cursor to SD on the screen
 - 3) Select target file using ▲/▼ buttons on the unit or ▲/▼ button on the remote
 - 4) Press "PLAY" button on the unit or remote to play & pause the file.
 - 5) Press "EXIT" button on the unit or remote to move to previous folder

3. SD
 - 1) Put SD Card on the slot located on left bottom side (Inside of folding flip)
 - 2) Press VSEL button on the unit or Remote to move cursor to SD on the screen
 - 3) Select target file using ▲/▼ buttons on the unit or ▲/▼ button on the remote
 - 4) Press "PLAY" button on the unit or remote to play & pause the file.
 - 5) Press "EXIT" button on the unit or remote to move to previous folder

4. AV
 - 1) AV input located on the left bottom side of unit (Inside of folding flip)
 - 2) You can simply connect Portable or Handheld devices to this front AV input

5. AV 2
 - 1) AV 2 input located on the DIN to RCA cable (Together with POWER and AV output)
 - 2) This input designed for slave external devices such as TV tuner or Game console.

MENU

MENU	00	<
Brightness	00	
Contrast	00	
Hue	00	
Saturation	00	
IR	IR-A	
FM	88.1	
VOL	17	
RESET		

SET-UP

SET-UP page is consist with 4 different settings. It's General set up page, Audio set up page, Video set up page and Preference page

* Preference page only able to OPEN when DVD is completely "STOP" or "No Disc" position When DVD is playing or only temporary stop, "Preference page" will not able to reach.

Please press "STOP" 2 times to make Disc completely stop or OPEN Monitor flip to reach "Preference page"

1. General Set up Page

Please use ▲, ▼, ▲ buttons and ENTER button to go inside of detail MENU and exit from detail menu

MENU	Detail Selection	Default Setting
TV Display	Select Normal/PS,Normal LB or Wide	Normal/LB/Wide
Angle Mark	Select On or Off	ON
OSD Language	Select one Language. 8 Languages are available English, Chinese, French, German, Italian, Spanish, Portuguese and Russian.	English
Caption	Select On or Off	ON
Screen	SaverSelect On or Off	ON
Last Memory	Select On or Off	ON

2. Audio Set up Page

MENU	Detail Selection	Default Setting
Speaker Set up	Select LT/RT or Stereo	Stereo

3. Video Set up Page

MENU	Detail Selection	Default Setting
Brightness	-16~16	00
Contrast	-16~16	00
Hue	-9~9	00
Saturation	-9~9	00

4. Preference Set up Page

MENU	Detail Selection	Default Setting
TV Dype	Select PAL TV, Multi, NTSC TV	Multi
Audio	Select Audio Language from English, French, Spanish, Romania or Others	English
Subtitle	Select Audio Language from English, French, Spanish, Romania or OFF	English
Disc MENU	Select Audio Language from English, French, Spanish, Romania or Others	ADULT
Parental	Select one from KID SAF/G/PG/PG13/PG/R/Nc17/	ON
Pass Word	Password ON/OFF Selection S Password Change	Default is 8888
Default	RESET	Press ENTER to RESET

Important Safety Instructions

CAUTION PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

WARNING

DO NOT attempt to operate if picture fails or no sound is heard. Stop using the unit and turn it off immediately if there is any smoke or burning smell. If unit is damaged, it could cause fire or electrical shock.

This product is designed for DC 12V. It is recommended to check with a trained "Authorized Dealer" for using this unit in a RV, truck or bus application.

DO NOT install unit where it may obstruct driver's sight or cause possible injury to passengers.

DO NOT allow installation to interfere with normal vehicle operations. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.

DO NOT remove any screws or hardware from vehicle to install products.

The slots and openings in the unit is provided for necessary ventilation. These must not be blocked to ensure reliable operation.

WARNING

Inspect any vehicle areas before drilling any holes for mounting or wiring of unit. Make sure to check behind installation area to prevent damaging any existing vehicle wiring or other connections. Failure to do so could result in vehicle malfunction or impaired vehicle operation.

WARNING

All wiring must be routed safely and should not distract the driver's attention during normal operating conditions. DO NOT allow wiring to interfere with operation of the vehicle's brake pedal, shift lever or steering wheel.

WARNING

DO NOT cut or modify any DIN cables with fuse built-in. This could render such protective circuit inactive and potentially result in permanent damage to the unit or vehicle.

Make sure both DIN cable and other wiring is not run where it may be cut or damaged.

WARNING

DO NOT install unit where it may obstruct driver's sight or cause possible injury to passengers.

DO NOT allow installation to interfere with normal vehicle operations. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.

DO NOT remove any screws or hardware from vehicle to install products.

Wiring Diagram

1	AV2 Video In
2	AV2 Audio LIn
3	AV2 Audio RIn
4	Video Out
5	Audio L Out
6	Audio R Out