


User's Manual

Congratulations on your new purchase of an Overhead Entertainment System. Please take a moment to fully review this owner's manual thoroughly prior to the initial operation, which will provide you with the best understanding to properly operate your new Overhead Entertainment System.

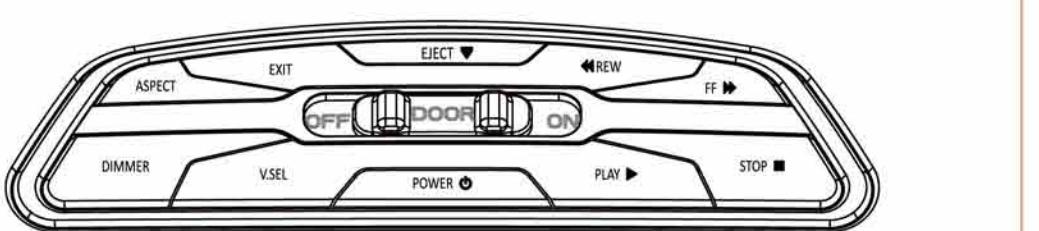

ASPECT Adjust screen aspect ratio as 16:9 and 4:3

EXIT Exit from the MENU or return to previous folder

EJECT Eject the Disc from the unit

PREV Previous chapter or move up on USB/SD mode

NEXT Next chapter or move down on USB/SD mode

DIMMER Dimmer ON and OFF

V_SEL Select Video mode from USB, SD, AV2,SMART and DTV(optional)

POWER Power ON and OFF

PLAY Play or pause the file on the USB/SD


STOP Stop playing the file on the USB/SD



AV	front AV input port	SD/MMC	SD/MMC Slot
SMART	SMART LINK input port	USB	USB Slot & Smart Phone Charging

How to change VIDEO Sources

This unit has 7 different Modes. DVD,USB,SD, AV, AV2, SMART, DTV

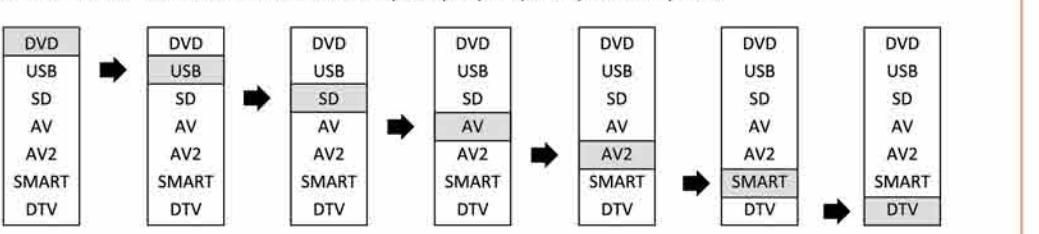

1. DVD
1) Put DVD or CD on the slot located on Right side panel
2) Press V_SEL button on the unit or Remote to move cursor to DVD on the screen
3) Select desired features using Play button on the unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop playing the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "REW" or "FF" button on the unit or remote to rewind or fast forward
8) Press "EJECT" button on the unit or remote to take the DISC out from unit

2. USB
1) Put USB memory on the port located on left side panel
2) Press V_SEL button on the unit or Remote to move cursor to USB on the screen
3) Select desired features using Play button on the unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop playing the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "EXIT" button on the unit or remote to move to previous folder or screen

3. SD
1) Put SD Memory on the slot located on the side panel (Left side of the unit)
2) Press V_SEL button on the unit or remote to move cursor to SD on the screen
3) Select target file using </> buttons on the unit or remote
4) Press "PLAY" button on the unit or remote to play & pause the files.
5) Press "EXIT" button on the unit or remote to move to previous folder

4. AV
1) AV input locate on the Side Panel (Left side of the unit)
2) You can simply connect Portable or Handheld devices to this front AV input

5.AV2
1) AV2 input locate on the top of unit (marked as AV 2 IN)
2) This input designed for slave external devices such as TV tuner or Game console

6.SMART
1) Please connect SMART LINK cable from external unit to Overhead's SMART input port.
2) Please change Video mode to SMART
3) Operate External device (especially video). Same picture as external device will be shown on the Overhead screen

7. DTV
1) This input designed for Digital TV.
2) Only able to watching Digital TV Connect with TV-300 tuner box (sold separately).
3) Default Position method is explained on TV-300 Manual.

Description of Remote Control



1 POWER	Power On/Off
2 MENU	Menu display On/Off
3 ASPECT	4:3, 16:9 changes
4 V_SEL	Video Mode selection
5 DIMMER	Dimmer On/Off
6 CH.LIST	DTV use only
7 SEARCH	Search Target Position on the DVD or Media File
8 EPG	DTV Use Only
9 MUTE	Mute On/Off
10 ▲	Cursor Up
11 ▼	Cursor Left
12 ▶	Cursor Right
13 ▶	Cursor Down
14 EXIT	EXIT from Folder or MENU
15 ENTER	Function select
16 ▶▶	Play & Pause
17 ■	Stop
18 SET-UP	DVD / DTV Menu Set-up
19 INFO	Information of current Playing File or Disc
20 REPEAT	Repeat playing of currently selected File
21 ▲	Fast Forward
22 ▶▶	Rewind
23 ▲	Previous Chapter
24 ▶▶	Next Chapter
25 1~0 Keys	Number keys
26 ZOOM	X2,X3,X4 times ZOOM up, 1/2, 1/3, 1/4 times ZOOM Down
27 ANGLE	Angle adjust of Picture (Only selected file or Disc)
28 DVD TITLE	Move to DVD TITLE Menu
29 DVD-ROOT	Move to DVD ROOT Menu
30 SUB-TITLE	Sub-Title selection
31 AUDIO	Audio Mode For Mono, Mono Left, Mono Right and Stereo

DVD / Set-up

SET-UP page is consist with 4 different settings. It's General Set up page, Audio Set up page, Video Set up page
* Preference page only able to OPEN when DVD is completely "STOP" or "No Disc" position When DVD is playing or only temporary stop, "Preference page" will not able to reach.

Please press "STOP" 2 times to make Disc completely stop or OPEN Monitor flip to reach "Preference page"

1. General Set up Page

MENU	DetailSelection	Default Setting
TV Display	Select Normal/PS,Normal LB or Wide	Normal/LB/Wide
Angle Mark	Select On or Off	ON
OSD Language	Select English,Chinese,French,German,Italian,Spanish,Portuguese and Russian.	English
Caption Screen	SaverSelect On or Off	ON
Last Memory	Select On or Off	ON

2. Audio Set up Page

MENU	Detail Selection	Default Setting
Speaker Set up	Select LT/RT or Stereo	Stereo

3. Video Set up Page

MENU	Detail Selection	Default Setting
Brightness	-16~+16	00
Contrast	-16~+16	00
Hue	0~+9	00
Saturation	-9~+9	00

4. Preference Set up Page

MENU	Detail Selection	Default Setting
TV Type	Select PAL,TV,Multi, NT,SCVT	Multi
Audio	Select Audio Langage from English,French,Spanish,Romania or Others	English
Subtitle	Select Audio Langage from English,French,Spanish,Romania or Others	ADULT
Disc MENU	Select one from KIDS/AF/G/PG/P/G13/PGR/R/NC17/	ON
Parental	Password ON/OFF SelectionS	8888
Pass Word	Password Change	RESET
Default		


* Smart phone Interface

1) Basically, operation for SMART LINK function of Smart phone is same as above
2) To operate your Smartphone, please connect the specific cable shown below
3) Please make sure USB needs to be connected on the port to activate SMART LINK function on the smart phone

MENU

PICTURE	Picture Mode Standard Color Temperature Aspect Ratio Noise Reduction	Default picture Mode is, "Picture Mode Standard" also, you can change the picture mode to Mild User Dynamic
PICTURE	Picture Mode Color Temperature Medium Aspect Ratio Noise Reduction	Default Color Temperature is, "Color Temperature Medium" also, you can change the Color Temperature to Warm User Cool
PICTURE	Picture Mode Color Temperature Medium Aspect Ratio 16:9 Noise Reduction	Default Aspect Ratio is, "16:9" also, you can change the Aspect Ratio to Auto 16:9
PICTURE	Picture Mode Color Temperature Medium Aspect Ratio 16:9 Noise Reduction Middle	Default Noise Reduction is, "Middle" also, you can change the Aspect Ratio to Off Low High
SOUND	Sound Mode Standard Balance Surround Sound EQ	Default Sound Mode is, "Standard" also, you can change the Sound Mode to Music Movie Sports User
SOUND	Sound Mode Balance 0 Surround Sound EQ	Default Balance is, "0" also, you can change the Balance to -50~+50
SOUND	Sound Mode Balance Surround Sound Off EQ	Default Surround Sound is "Off" also, you can change the Surround Sound to Surround
SOUND	Sound Mode Balance Surround Sound EQ	Default EQ Value is "50" also, you can change the Value level from 0~100 120Hz 0~100 500Hz 0~100 1.5KHz 0~100 5KHz 0~100 10KHz 0~100
OPTION	OSD Language English Restore Factory Default Blending Osd Duration Off IR On FM TX Off	Default OSD Language is "English" also, you can change the OSD Language to Spanish Portuguese French Chinese Russian
OPTION	OSD Language Restore Factory Default Blending Osd Duration Off IR On FM TX Off	Press "Yes" on Restore Factory Default if you want to go back to Factory Setting
OPTION	OSD Language Restore Factory Default Blending Low Osd Duration Off IR On FM TX Off	Default Blending is "Low" also, you can change the OSD Language to Middle High Off
OPTION	OSD Language Restore Factory Default Blending Osd Duration Off IR On FM TX Off	Default Osd Duration is "Off" also, you can change the OSD Language to 5 Sec 10 Sec 15 Sec
OPTION	OSD Language Restore Factory Default Blending Osd Duration Off IR On FM TX Off	Default IR is "On" also, you can change the IR to Off
OPTION	OSD Language Restore Factory Default Blending Osd Duration Off IR On FM TX Off	Default FM TX "Off" also, you can change the FM TX to FM TX from 88.1-107.9MHz

Wiring Diagram

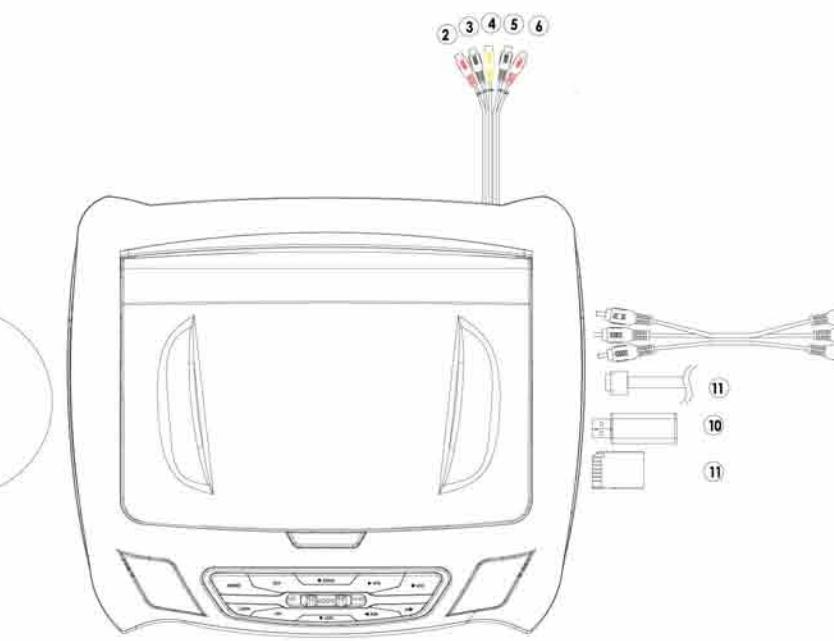


Materials On The Box

1 Main Unit
2 Inter changeable ceiling base cover
3 Inter changeable LCD Rear cover
4 Metal plate
5 Screw (BM4.0*8)X4
6 Plastic Cover Remover
7 Remote control
8 User's Manual
9 Power Cable
10 AV Cable

* Smart phone Interface Diagram

SMART USB ① Android ② Galaxy S3 ③ iPhone 4/4S ④ iPhone 5

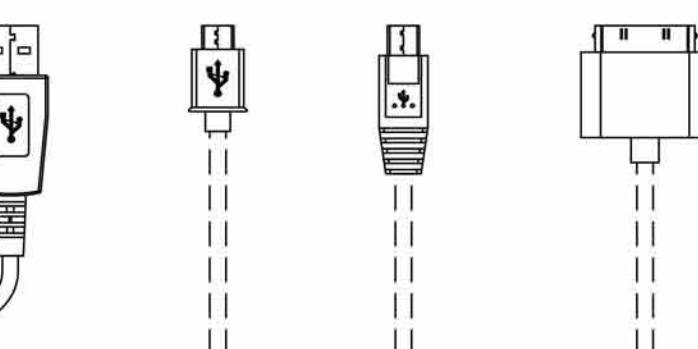

Mobile Link Vision



Mobile Link 1080p Player Overhead Monitor Series
10.3" Wide Mobile Link Vision Overhead Monitor with DVD & Full-HD 1080p USB/SD/MMC Player

Operating Instruction

General Specifications

No	Functions	10.3" Wide Overhead DVD
1	Power	DC 12V (11V~16V)
2	LCD Size	10.3" Wide
3	Resolution	1024 X R.G.B 500
4	Aspect Ratio of LCD	16:9
5	DVD Player	Built-in DVD Player
6	AV inputs	2 AV inputs (One on the side panel)
7	Video input level	1Vpp, 75Ohm (Capacitive)
8	IR Frequency	2.3MHz / 2.8MHz
9	IR Transmitter range	1m +/- 30 degree 3m +/- 15 degree
10	Media Player	Play back upto 1080P Video, audio, photo
11	Media input	Via Smart, USB and SD slot (Video, Audio