


1box
by M1

INTRODUCING YOUR DEVICE

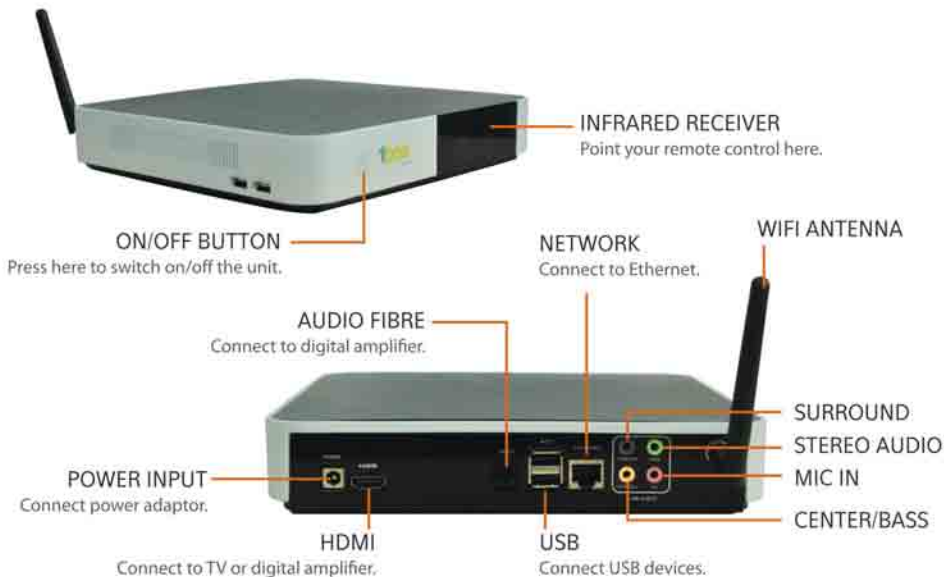

REMOTE CONTROL



VIDEO SET UP

Your new unit is set to a default video setting to ensure compatibility with most display sets in the market. This setting might not be the optimum setting for your display (TV) screen. To enjoy the best possible video quality for your display, please perform the instructions below. Before you begin, please identify your display (TV) optimum resolution.

- Go to Settings → Video
- Select your display's optimum video resolution and press "OK".
Make sure you select the correct resolution as provided by your display's user.
- Select OK button on screen and press "OK".
- If you do not see any picture on the display, this means your display does not support the selected video setting.
- To reset the unit to default factory settings, press the numbers 1 5 9 3 5 7 in sequence on the number pad of your remote control.
Doing this will reset the unit to factory default for all video, audio and network setting.



VIDEO CALIBRATION

Upon setting your optimum video resolution, it is advisable to check and calibrate your video dimensions to ensure the best viewing size for your unit. This ensures no part of the screen is overscanned by your TV.

- Go to Settings → Screen Adjustment.
- Press “Left, Right, Up, Down” to adjust the position to fit right to the edge of the screen. You should see an arrow sign in white color at the top left corner
- Press “OK” to proceed to the next edge of the screen i.e. bottom right corner.
- Press “OK” to proceed to adjust the subtitle position.
- Press “OK” to proceed to adjust the rectangle. Adjust into a perfect square.
- Press “MENU” once all adjustments are completed to save your settings and exit.



AUDIO SET UP

Your new unit is set to a default audio setting to use HDMI output with automatic stereo downmixing to ensure ease of use with today's LCD TVs. If you have an advanced home theatre system or would like to use external speakers, you can further set the audio to provide optimum home theatre surround sound effects

■ Go to Settings → Audio Output.

■ Select desired audio output.

- Analog - 3.5mm audio jack for stereo or 5.1 channels
- HDMI - HDMI output to the TV or to digital amplifiers
- SPDIF - Digital audio output to digital amplifiers

■ Select additional settings.

- Downmix - to enable complete audio when playing multi channels audio track using stereo or TV speakers
- AC3 Receiver - to enable surround effects with AC3 capable amplifiers
- DTS Receiver - to enable surround effects with DTS capable amplifiers

■ If you do not hear any sound or missing sounds, please refer to your digital amplifier's manual for tuning. To reset the unit to default factory settings, press the numbers 1 5 9 3 5 7 in sequence on the number pad of your remote control.

Doing this will reset the unit to factory default for all video, audio and network settings



NETWORK SET UP

To fully enjoy your system, it is advisable to connect your unit to the internet. Your unit has multiple ways to be connected to the internet

- Go to Settings → Network.

- Select your connection settings.

For wireless option, you will need to ensure that your external antenna is properly installed to maximize the signals.

- Select the mode for your home internet network.

Static - fixed IP

DHCP - dynamic auto assigned IP (most common in home network)

- If your internet service provider requires unique DNS, please key in your DNS addresses.

- Select OK button on screen and press "OK".

- If your unit is successfully connected to the internet, a solid orange glow circle can be seen at the bottom right of the screen, next to the weather or the date and time. Else, it will be a blank orange glow.



PIN SET UP

You are allowed to set a PIN Number to restrict your child or other person to access your content in Movies, Music, Games or Education modules.

- Go to Settings → PIN.
- Select ON to enable PIN field and press "OK"
- Key in a 6-Digit PIN at Six-Digit PIN field.
- Re-key in the PIN at Re-enter to Confirm field.
- Select the modules you want to activate the PIN and press "OK"
- To save the settings and Exit, select the OK button at the bottom of the screen and press "OK"



Please refer to on screen Help and User Guides for detailed functions and features tutorials.
Please check th Help and User Guides periodically to learn new features and functions
updated automatically if you are connected to the internet.

UPDATES

When any new updates is available for your unit, there will be a notification icon, indicated at the right side above the Advertisement banner. Follow the steps below to update your unit.

- Go to Settings → Updates.

- Select the OK button on the screen and press "OK."

Update your 1Box regularly to ensure that you maximize your enjoyment!

ACCESSORIES

Your unit is compatible with most USB devices and PC-speakers available in the market. You can purchase optional accessories to enhance your experience of using your unit.



Contact M1 Customer Support for additional information about compatible products.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

WARRANTY INFORMATION

OBTAINING SERVICE:

M1 VALUES YOUR BUSINESS AND ALWAYS ATTEMPTS TO PROVIDE YOU THE VERY BEST OF SERVICE. IF THIS PRODUCT REQUIRES MAINTENANCE, EITHER CONTACT THE DEALER FROM WHOM YOU ORIGINALLY PURCHASED THE PRODUCT OR VISIT OUR PRODUCT SUPPORT WEBSITE AT WWW.M1.COM.SG FOR INFORMATION ON HOW TO OBTAIN SERVICE OR A RETURN MATERIAL AUTHORIZATION (RMA). IF IT IS DETERMINED THAT THE PRODUCT MAY BE DEFECTIVE, YOU WILL BE GIVEN AN RMA NUMBER AND INSTRUCTIONS FOR PRODUCT RETURN. AN UNAUTHORIZED RETURN (I.E. ONE FOR WHICH A RMA NUMBER HAS NOT BEEN ISSUED) WILL BE RETURNED TO YOU AT YOUR EXPENSE. AUTHORIZED RETURN MUST BE SHIPPED IN AN APPROVED SHIPPING CONTAINER, PREPAID AND INSURED, TO THE ADDRESS PROVIDED ON YOUR RETURN PAPERWORK. YOUR ORIGINAL BOX AND PACKAGING MATERIAL SHOULD BE KEPT FOR STORING OR SHIPPING YOUR EMAGINE PRODUCT, TO CONCLUSIVELY ESTABLISH THE PERIOD OF WARRANTY, CHECK THE WARRANTY EXPIRATION (SERIAL NUMBER REQUIRED) VIA WWW.M1.COM.SG. M1 SHALL HAVE NO LIABILITY FOR LOST DATA REGARDLESS OF THE COST, RECOVERY OF LOST DATA, OR DATA CONTAINED IN ANY PRODUCT PLACED IN ITS POSSESSION.

LIMITED WARRANTY:

M1 WARRANTS THAT THE PRODUCT, IN THE COURSE OF ITS NORMAL USE, WILL BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR, UNLESS OTHERWISE REQUIRED BY LAW AND WILL CONFORMED TO m1's SPECIFICATIONS THEREFORE. THIS LIMITED WARRANTY PERIOD SHALL COMMENCE ON THE PURCHASE DATE APPEARING ON YOUR PURCHASE RECEIPT. EMAGINE SHALL HAVE NO LIABILITY FOR ANY PRODUCT RETURNED IF EMAGINE DETERMINES THAT THE PRODUCT WAS STOLEN FROM EMAGINE OR THAT THE ASSERTED DEFECT A) IS NOT PRESENT, B) CAN NOT REASONABLY BE RECTIFIED BECAUSE OF DAMAGE OCCURRING BEFORE EMAGINE RECEIVES THE PRODUCT, OR C) IS A ATTRIBUTABLE TO MISUSE, IMPROPER INSTALLATION, ALTERATION (INCLUDING REMOVING OR OBLITERATING LABELS AND OPENING OR REMOVING EXTERNAL ENCLOSURES, UNLESS THE PRODUCT IS ON THE LIST OF LIMITED USER-SERVICEABLE PRODUCT AND THE SPECIFIC ALTERATION IS WITHIN THE SCOPE OF THE APPLICABLE INSTRUCTIONS AS FOUND IN WWW.M1.COM.SG), ACCIDENT OR MISHANDLING WHILE IN THE POSSESSION OF SOMEONE OTHER THAN EMAGINE. SUBJECT TO THE LIMITATIONS SPECIFIED ABOVE, YOUR SOLE AND EXCLUSIVE WARRANTY SHALL BE, DURING THE PERIOD OF WARRANTY SPECIFIED ABOVE, AND AT EMAGINE'S OPTION, THE REPAIR OR REPLACEMENT OF THE PRODUCT. THE FOREGOING WARRANTY OF EMAGINE SHALL EXTEND TO REPAIRED OR REPLACED PRODUCTS FOR THE BALANCE OF THE APPLICABLE PERIOD OF THE ORIGINAL WARRANTY OR NINETY (90) DAYS FROM THE DATE OF SHIPMENT OF A REPAIRED OR REPLACED PRODUCT, WHICHEVER IS LONGER. THE FOREGOING LIMITED WARRANTY IS m1's SOLE WARRANTY AND ITS APPLICABLE ONLY TO PRODUCTS SOLD AS NEW. THE REMEDIES PROVIDED HEREIN ARE IN LIEU OF A) ANY AND ALL OTHER REMEDIES AND WARRANTIES, WHETHER OR EXPRESSED, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND B) ANY AND ALL OBLIGATIONS AND LIABILITIES OF EMAGINE FOR DAMAGES INCLUDING, BUT NOT LIMITED TO ACCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, OR ANY FINANCIAL LOSS, LOST PROFITS OR EXPENSES, OR LOST DATA ARISING OUT OF OR IN CONNECTION WITH THE PURCHASE, USE, OR PERFORMANCE OF THE PRODUCT EVEN IF EMAGINE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.