

Thank you very much for using IDENTITY tab.

Find out how to set IDENTITY tab and how to use the key functions through the Quick Start Guide.

You can also refer to the Instruction Book included in the package when you purchase the product. Please check the product and its accessories are all included. If there are any missing accessories, please contact Enspert or the agency you purchased the product from. The images of the product and the accessories may differ from the actual product and its accessories. Some accessories are subject to change.

- This guide contains the installation procedures and initial uses of this product.
- Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use

1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.

Product and Accessories

The following items are the product and the accessories included in the package when you purchase the product. Please check the product and its accessories are all included. If there are any missing accessories, please contact Enspert or the agency you purchased the product from. The images of the product and the accessories may differ from the actual product and its accessories. Some accessories are subject to change.

• This guide contains the installation procedures and initial uses of this product.

- Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use


1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.

Frontal View

Press and hold the Power button to turn on or off IDENTITY tab.

• When turning off the power, a pop-up window appears. Tap Power off.

To switch to Standby mode while using IDENTITY tab, press the Power button quickly. The screen is turned off, but all the functions are operating normally.

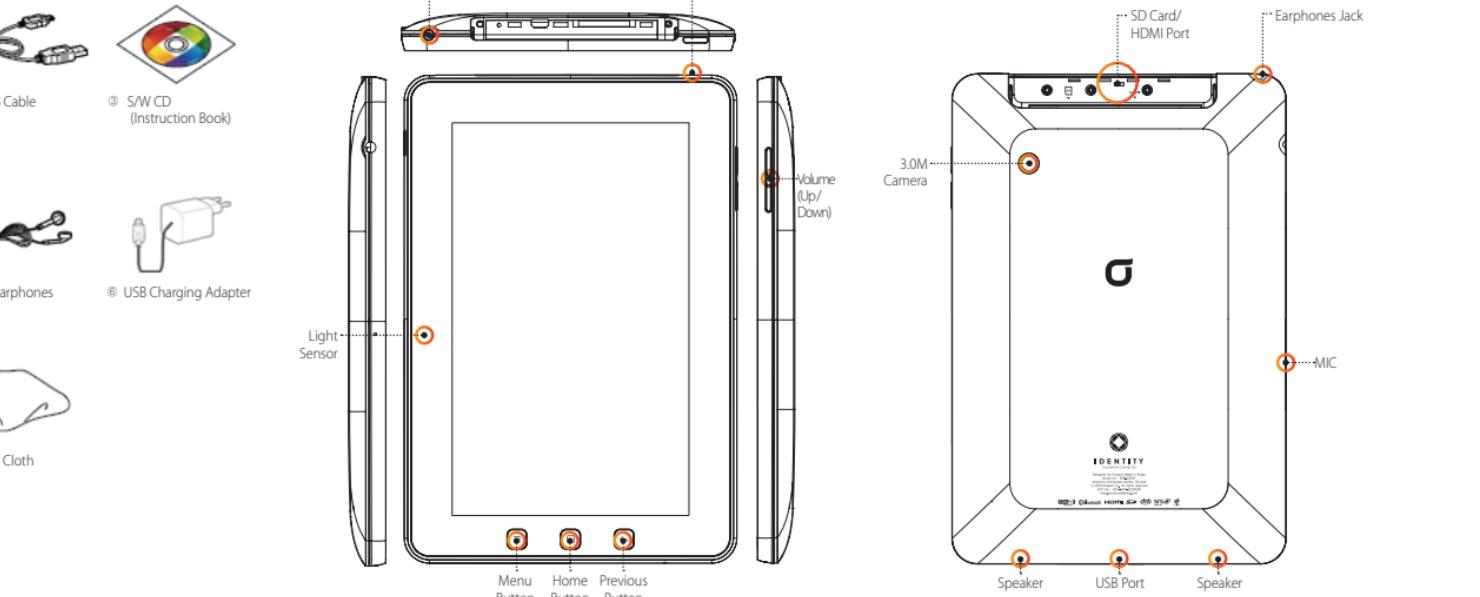

Rear View

Inside the rear cover, IDENTITY tab has an SD card slot and a Micro HDMI port, and an earphones jack on the right. Ensure that you insert your SD card in the correct direction. You can use the Micro HDMI port when connecting IDENTITY tab to your TV or PC. There is a jack for earphones on the right and also a DMB antenna port. IDENTITY tab has two speaker holes and a Mini USB port in the middle at the bottom.

• When turning off the power, a pop-up window appears. Tap Power off.

To switch to Standby mode while using IDENTITY tab, press the Power button quickly. The screen is turned off, but all the functions are operating normally.

Setting Home Screen

When you press the Home button, the Home screen appears. IDENTITY tab has three Home screens in total. Tap and hold down on a blank space of the Home screen, a window for adding widgets will appear. Select the icon again on the same manner reduces the screen. You can use the Internet feature to change the screen. If you need to config the screen, please follow the procedure below.

• Select the icon that you want to add, and then the widget you selected will be added on the Home screen. While you are dragging the icon, the screen will switch to the Home screen.

• Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use

1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.

Applications on the Home Screen

When you press the Home button, the Home screen appears. IDENTITY tab has three Home screens in total. Tap and hold down on a blank space of the Home screen, a window for adding widgets will appear. Select the icon again on the same manner reduces the screen. You can use the Internet feature to change the screen. If you need to config the screen, please follow the procedure below.

• Select the icon that you want to add, and then the widget you selected will be added on the Home screen. While you are dragging the icon, the screen will switch to the Home screen.

• Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use

1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.

Widgets on the Home Screen

When you press the Home button, the Home screen appears. IDENTITY tab has three Home screens in total. Tap and hold down on a blank space of the Home screen, a window for adding widgets will appear. Select the icon again on the same manner reduces the screen. You can use the Internet feature to change the screen. If you need to config the screen, please follow the procedure below.

• Select the icon that you want to add, and then the widget you selected will be added on the Home screen. While you are dragging the icon, the screen will switch to the Home screen.

• Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use

1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.

Connecting to the Internet

When you press the Home button, the Home screen appears. IDENTITY tab has three Home screens in total. Tap and hold down on a blank space of the Home screen, a window for adding widgets will appear. Select the icon again on the same manner reduces the screen. You can use the Internet feature to change the screen. If you need to config the screen, please follow the procedure below.

• Select the icon that you want to add, and then the widget you selected will be added on the Home screen. While you are dragging the icon, the screen will switch to the Home screen.

• Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use

1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.

Browser

When you press the Home button, the Home screen appears. IDENTITY tab has three Home screens in total. Tap and hold down on a blank space of the Home screen, a window for adding widgets will appear. Select the icon again on the same manner reduces the screen. You can use the Internet feature to change the screen. If you need to config the screen, please follow the procedure below.

• Select the icon that you want to add, and then the widget you selected will be added on the Home screen. While you are dragging the icon, the screen will switch to the Home screen.

• Please read this guide carefully for the correct use of the product before you actually use it.

• Please keep this guide for your reference - it contains how to use the product and how to change its settings. The figures in this guide may differ from the actual product.

• The contents of this guide may vary depending on the software versions or the communications service providers. The contents are subject to change without prior notice to users.

• A/S Request

1. Call center: XXXX-XXXX
2. Opening hours:
9 am to 6 pm during weekdays / Closed on weekends and national holidays.

• Precautions for battery use

1. Do not disassemble the battery, put it in the mouth or eat it (also keep away from pets).
2. Ensure that any leaked battery liquid does not come in contact with the eyes, skin or cloth.
3. Do not impact the battery or make a hole in it with a sharp object.