



**IDENTITY**  
TOMORROW CONNECTED

---

**IDENTITY CRON**

**User Guide**

# CONTENTS

## 4 Before You Proceed

---

- 5 Safety Precautions
- 7 How to Safely Use IDENTITY CRON
- 7 Symbols in the Manual
- 8 Product, Accessories & Optional Components
  - 8 Check Product and Accessories
  - 8 Optional Components
  - 9 IDENTITY CRON Bottom
  - 9 How to Correctly Hold IDENTITY CRON
- 10 Button Functions
- 10 Charging the Battery

## 12 Basic Features

---

- 13 Turning On/Turning Off/ Resetting
  - 13 Turning on
  - 13 Resetting
- 14 Home Screen
- 17 How to Use Touchscreen
- 17 Precautions Before Use
- 17 Tapping
- 18 Holding
- 18 Dragging
- 19 Zooming In
- 19 Zooming Out
- 20 Entering Text
- 20 Editing text
- 21 Executing Features
- 21 Executing on the Home screen
- 22 Usage by screen display
- 25 Adjusting the Volume
- 26 Connecting Accessories
- 26 Connecting earphones
- 27 Using the DMB Antenna

- 28 Inserting/Removing the Micro SD Card
- 29 Connecting with an HDMI device

## 30 Other Features

---

- 31 Gmail
- 32 Setting Gmail
- 33 Talk
- 34 Setting Talk
- 35 Map
- 36 Map Directions
- 37 Map Layer
- 38 Market
- 39 DMB
- 39 Before Use
- 39 Watching DMB
- 40 Managing Favorite Channels
- 41 ThinkFree Office
- 42 Smart Note
- 42 Creating a new memo
- 42 Deleting a memo
- 42 Sending a memo
- 43 Email
- 43 Setting Up an Email Account
- 45 Sending an Email
- 45 Adding an Email Account
- 46 Setting Up Your Work Email
- 46 Deleting an email account
- 47 Task Manager
- 47 Ending a Program
- 48 Address Book
- 49 Managing the Address Book
- 50 Sending an Email
- 50 Synchronizing
- 51 Camera

52	File Manager	79	Enspert Customer Service Center
53	ConvergenceOne™	79	Disposal of product and battery
53	Installing ConvergenceOne™ on a PC	80	Index
55	Program Screen		
56	Playing Multimedia Content on a PC		
57	Playing Multimedia Content on IDENTITY CRON		

## 58 Preferences

---

59	Wireless Network
60	Sound
61	Display
62	Location and Security
63	Applications
64	Account and Synchronization
65	Privacy
66	Managing Memory
67	Searching
68	Language and Keyboard
69	Voice Input & Output Settings
70	Accessibility
71	Date and Time
72	About system

## 73 Appendix

---

74	Firmware Upgrade
74	Managing IDENTITY CRON Data
75	Copyright/Authentication. Trademark/ Disclaimers
75	Copyright
75	Trademark
75	Disclaimers
75	Internet Service Types
76	Before Requesting a Service
79	Customer Service Center

## Before You Proceed

---

Safety Precautions

How to Safely Use IDENTITY CRON  
Product, Accessories & Optional Components

IDENTITY CRON Exterior

How to Correctly Hold IDENTITY CRON

Button Functions

Charging the Battery

# Safety Precautions

Class B Device (Residential Broadcasting and Communications Device): IDENTITY tab is for residential environments (Class B) and is certified for EMC (Electromagnetic Compatibility). This device is mainly used in residential environments and can be used in all regions.

## ⚠ Warnings

Breaching this safety instruction may result in death or major injury to the user.

## ⚠ Cautions

Breaching this safety instruction may result in minor injury to the user and product damage.

⚠ Please avoid the places as listed below in order to correctly and safely use your IDENTITY tab.

- Places close to home appliances such as a TV, audio equipment or a refrigerator
- Places affected by heat or direct sunlight
- Steel structures or places enclosed with thick walls
- Dusty places
- Wet or damp places

⚠ Turn off IDENTITY CRON in places where the use of radio devices is prohibited.

- A problem or danger may arise with radio waves.
- Turn off IDENTITY CRON when boarding an airplane. The radio waves emitting from IDENTITY CRON may affect the electronic aviation systems and endanger the airplane.
- Turn off IDENTITY CRON in a hospital. The radio waves emitting from IDENTITY CRON may affect medical equipment.

## ⚠ Precaution When Using the Power

- Do not pull out the adapter cord or touch the power plug with wet hands.
- Do not plug many power plugs into the same extension cord.
- Do not use a damaged power cord or plug, or a loose power outlet.
- Do not use the device in an area with a high temperature or humidity.
- IDENTITY CRON may break if you drop it or severely impact it.
- Do not arbitrarily disassemble, repair or modify the device.
- Do not paint or put a sticker on your IDENTITY CRON.

# Safety Precautions



## Precautions When Using the Battery

- Never disassemble the battery, put it into the mouth, nor eat it (also keep away from pets).
- Ensure that no leaked battery fluid comes into contact with the eyes, skin or cloth.
- Do not impact the battery or make a hole in it with a sharp object.
- Do not peel the surface of the battery or modify it.
- Ensure that the battery is charged with a standard charger certified by an authority designated by the government.
- Do not arbitrarily impact or disassemble the battery.
- If an uncertified battery is used, it may explode.
- Do not place the battery in the vicinity of a heat source (heater, microwave, etc.). Also, do not heat up the battery or leave it in a sauna where the temperature is very high.
- Ensure that the battery charging terminals do not make contact with metal substances.



## Precautions When Using the Product

- Do not drop or impact IDENTITY CRON.
- Ensure that the device is always used or kept in a clean area.
- Do not leave the device in a humid, dusty, or sooty area.
- Use a soft cloth dampened with a neutral detergent when you clean your IDENTITY CRON and charger.
- The battery may spontaneously discharge during distribution. If this happens, charge the battery for more than 5 hours before use.



## Other precautions

- Learn how to correctly use the antenna. Do not touch the antenna or where the antenna is embedded. This may discharge the battery faster.
- If the same screen is continuously displayed, an afterimage may appear on the screen.
- If a protective film or a sticker is stuck on the screen, the touchscreen may malfunction.

## How to Safely Use IDENTITY CRON

---

- Do not download suspicious applications.
- Do not visit unreliable websites.
- Delete suspicious messages and mails sent by unidentified senders.
- Use the password setting feature and change your password regularly.
- Turn on wireless interfaces such as Bluetooth only if necessary.
- If an abnormal symptom persists, check if the device is affected by malicious code.
- Run a virus check before opening a downloaded file.
- Install an anti-virus application and run a virus check regularly on the external devices connected to your IDENTITY CRON.
- Do not modify the structure of the platform.
- Update the OS and anti-virus application to the latest version at all times.

## Symbols in the Manual

---

### Note

Additional description of the corresponding feature or cautions when using the feature

### How to Execute

Description of the order of execution



 
Description for the connecting menu of the corresponding feature or relevant features

# Product, Accessories & Optional Components

## Check Product and Accessories



IDENTITY CRON




USB cable for charging the battery and connecting external devices to IDENTITY CRON



IDENTITY CRON's exclusive earphones for superior sound quality



 Quick Start Guide for quick access to IDENTITY CRON's features



5-pin power adapter



- The items above comprise the product and accessories inside the package when you purchase the product.
- Please check that the product and all accessories are included. If there are any missing accessories, please contact Enspert (at 82-1588-6136) or the agent where you purchased the product.
- The images of the product and accessories may differ from the actual product and accessories. Some accessories are subject to change.

## Optional Components


Protective film, premium pouch and mount, small mount, silicon urethane case, car mount, etc.



- Since the earphones that come with your IDENTITY CRON are to be used only with IDENTITY CRON, they may not be compatible with cellular phones and MP3 players.
- Using the accessories that come with your IDENTITY CRON will deliver you the best performance.
- When purchasing optional components, check if they are compatible with your IDENTITY CRON and use only registered ones.
- Some optional components are subject to change depending on the circumstances.
- Please be aware that Enspert shall not assume responsibility for the shortened life span or failure of your IDENTITY CRON resulting from the use of non-authorized optional components.
- The external appearance and specifications of IDENTITY CRON may be changed without notice in order to improve its performance. The release of optional components may be changed depending on the circumstances of Enspert. You may find optional components on Enspert's homepage ([www.identitynet.co.kr](http://www.identitynet.co.kr)).

## IDENTITY CRON Exterior


### IDENTITY CRON Bottom

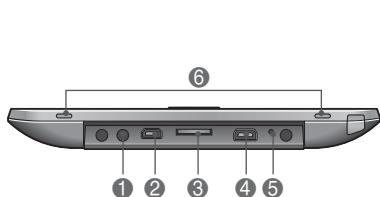

①	Earphone Jack
②	Micro-HDMI Port
③	Micro SD Card Slot
④	Mini USB Port (For charging the battery/ transferring data)
⑤	Reset Button
⑥	Speakers

## How to Correctly Hold IDENTITY CRON

When using your IDENTITY CRON, hold it properly as shown in the figure below.

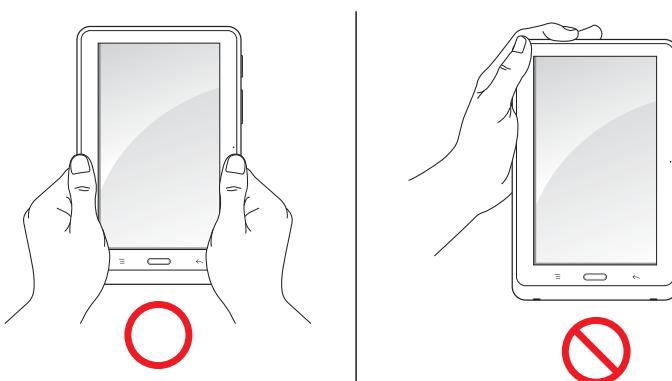

- Touching the area where the Wi-Fi antenna is embedded during data communication may reduce the quality of communication or increase the consumption of the battery.
- Using accessories such as metallic stickers around the area where the Wi-Fi antenna is embedded may reduce the quality of communication.


## Button Functions

Button	Name	Function
	Power	Turns on or off the screen
	Menu	Opens the corresponding linked menu
	Home	Executes the last menu when the button to go to the home screen is pressed and held
	Previous	Returns to the previous menu
	Volume	Adjusts the volume Sets the silent mode when the bottom of the button is pressed and held
	Reset	Resets the device

## Charging the Battery

The IDENTITY CRON's battery can be charged by connecting it to the USB power adapter or the USB cable.

- 1 To charge the battery, open the USB port cover and connect the USB power adapter or the USB cable to IDENTITY CRON in the proper direction.

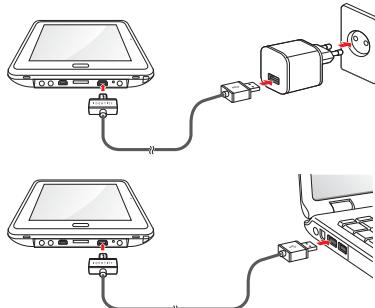

[Connect the 5-pin power adapter or the USB cable to charge the battery]



- When you start charging the battery, the battery icon  is displayed at the top of the screen.
- The battery lasts up to 5 hours for continuous video playback and up to 130 hours for standby (this may vary depending on the environment).

## Charging the Battery

---

2 When the battery is charged, disconnect the power adapter or the USB cable from IDENTITY CRON.

---



- When the battery is charged using the 5-pin power adapter, disconnect the adapter from IDENTITY CRON or plug out the power cable.
- The battery may be charged by connecting IDENTITY CRON to the USB port on either a PC or a laptop with the USB cable provided upon the purchase. However, it may not be charged when connected to a USB port on a certain device such as some car audio or a TV set top box.
- The battery may slowly charge while charging it with the USB cable. (The battery may drain due to its slow charging when running multimedia such as watching a video or DMB.)
- It is recommended that you sufficiently charge the battery when you use your IDENTITY CRON after not using it for an extended length of time.
- If you charge the battery after it is fully discharged, the IDENTITY CRON power will not turn on immediately.

---



- IDENTITY CRON has an internal 4400 mAh rechargeable Li-polymer battery. Never disassemble your IDENTITY CRON and touch the battery.
- The IDENTITY CRON's battery is a consumable part, and thus its life span slowly decreases. If the battery usage decreases by half as compared to when you first purchased it, contact the Enspert Customer Service Center (at 82-1588-6136) to replace it.

## **Basic Features**


---

Turning On/ Turning Off/ Resetting  
Home Screen  
How to Use Touchscreen  
Entering Text  
How to Use Features  
Adjusting the Volume  
Connecting Product and Accessories  
Connecting with External Devices

# Turning On/ Turning Off/ Resetting

## Turning on

- 1 When the power is off, press and hold the **Power button** to turn on the device.

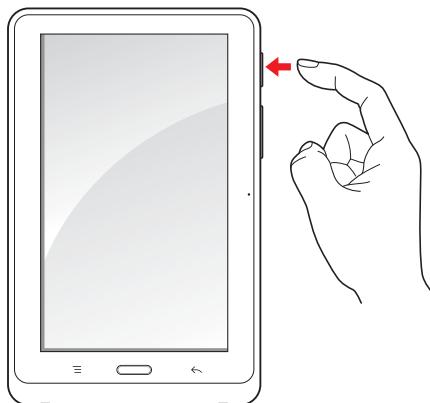


## Resetting

If an error occurs while using the device and the device does not work properly, refer to the image below and reset the system by pressing the **Reset button** with a thin, long metal object such as a ballpoint pen.



- When using the **Reset button**, **the user's data on the device or the product may be damaged**. We recommend to avoid resetting.
- Since the volume is initialized after the reset, adjust the volume with the **Volume button**.

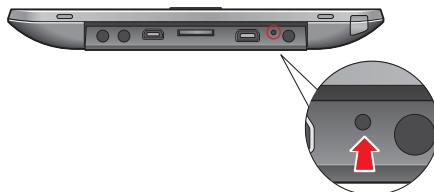

# Home Screen



①	Status bar	A status icon, notification icon and current time are displayed on the status bar.
②	DMB 2x Soft Key	Use this key to watch DMB faster.
③	Menu Soft Key	Use this key to quickly view the App list.
④	Internet Soft Key	Connect to the internet through Google's internet browser.

Press the Home button, and then select a launcher. A default Home screen for Android 2.3.4 will be displayed.

## Menus on the Home Screen

Press the **Menu button** on the Home screen or an application screen to use various menus.



<b>Add</b>	Add <b>shortcuts, widgets and folders.</b> Change the Home screen with the desired wallpaper.
<b>Wallpaper</b>	Change the Home screen wallpaper.
<b>Search</b>	Search files saved on the menu or IDENTITY CRON, or by synchronizing with Google.
<b>Notifications</b>	Check various notifications.
<b>Settings</b>	Configure settings.
<b>Service Info.</b>	Check the information regarding programs.

## Home Screen

---

### Checking the Notification Indication

Check the information regarding communication services and notifications on the currently used feature. If you drag the status bar downward on the Home screen or while executing the menu, the Notifications screen will appear.



---

 You may delete all notifications by tapping **Clear**.

## Home Screen

### Icons at the Top of the Screen

Email		Receive new emails
Battery		The battery needs to be charged
		Remaining Battery Level
		The battery is charging
		The battery is not recognized
Wi-Fi		Open Wi-Fi networks are available
		Wi-Fi connection Status
Warnings		System warning
		The internal memory capacity is low
		SD card warning
Status		USB connection status
		USB debugging status
		Uploading from the Market
		Downloading from the Market
DMB		DMB is in use
Schedule		Schedule registration status
Alarm		Alarm setting status
Bluetooth		Bluetooth connection settings
		Connecting Bluetooth
Synchronization		Synchronizing
		Synchronization warning
Playback		Playing music
		Playing Mnet

# How to Use Touchscreen

## Precautions Before Use

- A touchscreen utilizes a digital electrostatic capacity technic that operates by detecting the minute electric current from the human body.
  - Do not press hard on the screen with a plastic pen.
- Do not press hard on the touchscreen. - Sensors may be damaged when pressing it too hard or applying excessive pressure onto it.
- Ensure that no substances with electric current make contact with the touchscreen. - The touchscreen may not work properly due to electrical stimulation such as static electricity.
- When using the device in a humid place or when the touchscreen is wet, dry the device before use.
  - If not, the touch sensor may not properly operate.
- The touch sensors may not work properly when LCD protective films or accessories that are available on the market are adhered onto the touchscreen.

## Tapping

You can select or execute a feature by tapping the desired menu or item.



# How to Use Touchscreen


## Holding

You may check additional options by pressing and holding the desired menu or item.



## Dragging

You may hold and drag an item in order to relocate it on the desired location or on a different screen.

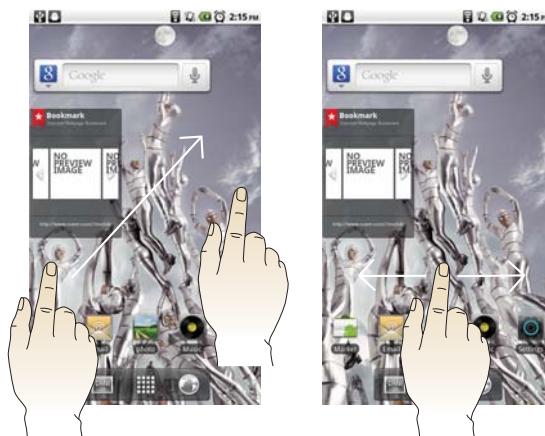


[Moving and deleting an icon] [Switching the screen]

## How to Use Touchscreen

---


### Zooming In

Touch the screen with two fingers and drag them outward to enlarge the screen.

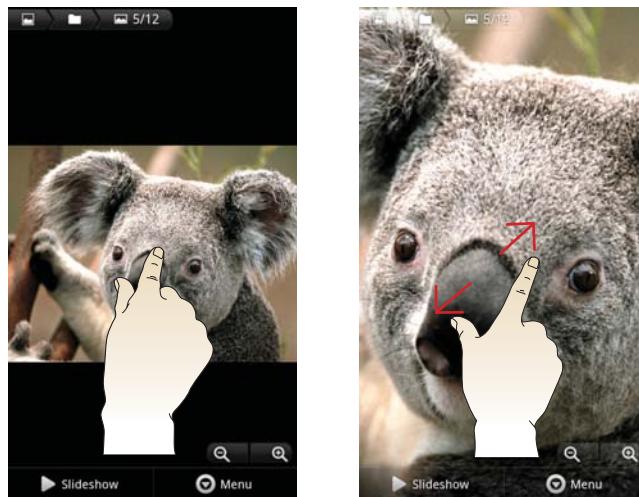

### Zooming Out

Touch the screen with two fingers and drag them inward to reduce the screen.

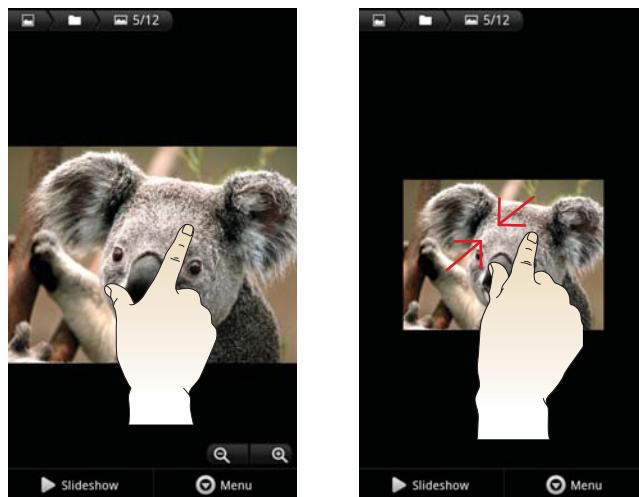

# Entering Text

Enter Korean characters, English letters, numbers, and symbols by using the QWERTY keypad.



	Deletes a character on the left side of the cursor
	Switches between the Korean, English, and number/symbol input modes
	Android Keyboard Settings
	Input mode for Korean double consonant and diphthong as well as English upper case (only the character entered first is applicable)
	Korean and English lower case input mode
	Maintains English upper case input mode

When holding () or tapping it twice, it will switch to ().

## Editing text

When pressing and holding the character entered, an editing menu appears. You may edit the text by cutting, copying and/or pasting the desired characters.

<b>Select all</b>	Selects all the characters entered
<b>Select text</b>	Selects/selects and cancels some characters entered
<b>Cut All</b>	Cuts selected characters or all characters entered
<b>Copy All</b>	Copies selected characters or all characters entered
<b>Paste</b>	Pastes copied characters
<b>Input method</b>	Selects an input method

You may set the keypad on the Settings. Please refer to the 'Language and Keyboard' section. (Page 88)

# Executing Features

## Executing on the Home screen

### Adding icons

Add frequently used features as icons

- 1 Press and hold a blank space on the screen, or tap on the **Menu button** and select 'Add'.
- 2 Tap on the shortcut and then select a feature to add.

### Adding Widgets

Add widgets.

- 1 Press and hold a blank space on the screen, or tap on the **Menu button** and select 'Add'.
- 2 Tap on Widget and select a widget to add.

### Deleting icons and widgets

- 1 Press and hold an icon or a widget to delete.
- 2 The Recycle Bin icon appears at the bottom center.
- 3 Drag and drop the icon or widget to delete into the Recycle Bin.

### Executing on the main menu screen

You may quickly execute the desired feature.

When an application installed, its icon is added to the main menu screen.

#### ■ To execute


Home Screen > 

## Executing Features

### Usage by screen display


#### When a scroll bar appears

When a scroll bar appears, you may scroll up and down to view all items.

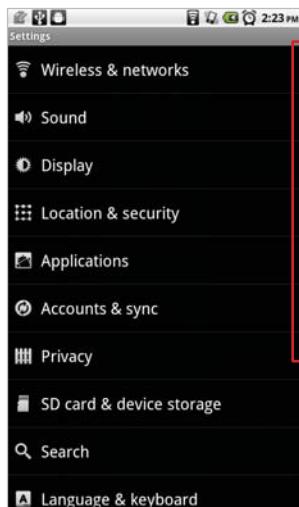

#### When tabs appear

When tabs appear, you may tap on the desired tab to select it.

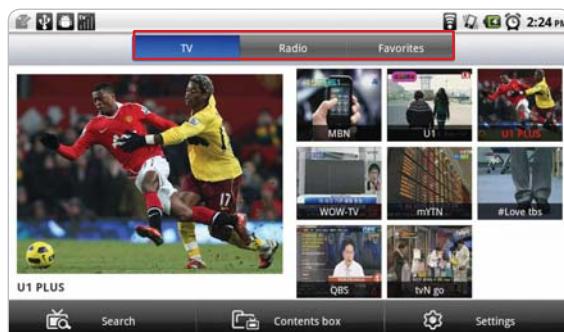

## Executing Features


### When is displayed

Tap on  to enable/disable the relevant feature. When the feature is set,  is displayed.



### When is displayed and


Tap on  to set detailed options.

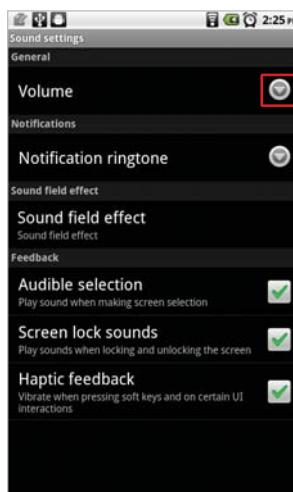

## Executing Features


### When is displayed

If you need to select an item from multiple items,  is displayed. When the item is selected,  is displayed.

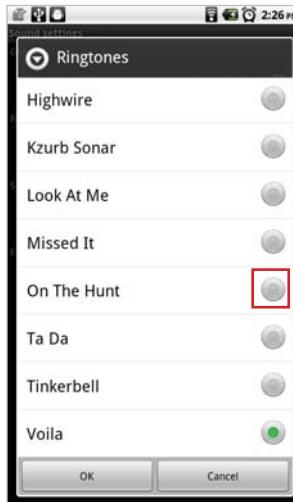

### When a control bar appears

When fine-tuning is necessary, hold the control bar and drag it left or right to adjust.

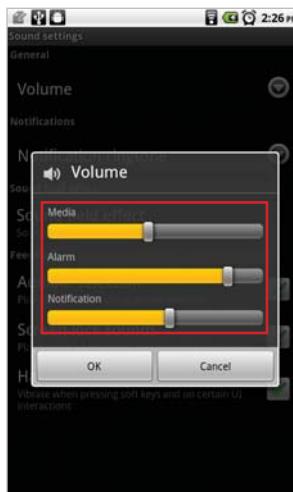

# Adjusting the Volume

Use the **Volume key** at the top right corner of IDENTITY CRON to adjust the volume.



Briefly press the key to adjust the volume. You may set a silent mode, media volume, feature sound effect, listening to selected sound, micro SD card alert, alert sound, and sound effect on the **Sound** under the **Settings**. Please refer to the 'Sound' section for details. (Page 80)

 The volume may vary for the same content. Since the MP3 files are optimized according to IDENTITY CRON's features, design specifications and business demands, the volume and tone of the same content may sound different from other models by us or other companies.


## Note

- SRS WOW HD™ (Sound Retrieval System): Enjoy live stereophonic sound just like you were in a movie theater or a concert hall. Use this feature when listening to music or watching a movie.
- SRS WOW HD™ is a package of various technologies and is custom designed to reproduce natural audio, which, thus, produces sound that are close to the original sound.
- SRS WOW HD™ greatly improves the audio playback quality to create an entertainment experience based on a dynamic 3D sound with rich bass and clear high frequency sound for clear details.

# Connecting Accessories

## Connecting earphones

Plug earphones into the earphone jack on IDENTITY CRON.

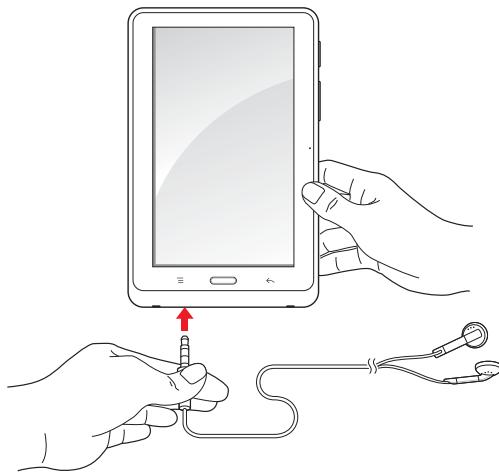


- You may not hear external sound when using earphones. Do not use earphones when a potential danger exists. If you use earphones at a high volume while walking or driving, it may distract you and cause an accident.
- If you use earphones at a high volume for an extended length of period, they may affect your hearing.
- Earphones provided with IDENTITY CRON are only for IDENTITY CRON (4 pins) and may not be compatible with other products.
- If you need to use extra earphones, purchase 4-pin earphones. IDENTITY CRON is optimized for 4-pin earphones.
- You may use earphones as a DMB antenna.

## Connecting Accessories

### Using the DMB Antenna

---

**1** IDENTITY CRON has a built-in DMB antenna. Extend the antenna as shown in the figure to receive a signal.

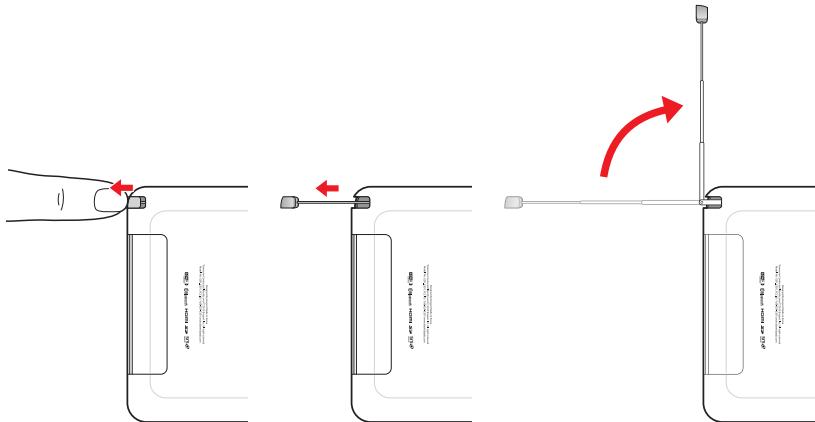

---

**2** Turn on IDENTITY CRON.

**■** When connecting the DMB antenna with a DMB terminal, ensure to not bend the antenna. You may not have a sufficiently strong signal to watch DMB.

---

**3** Execute the DMB application after the device turns on.


#### How to increase the T-DMB/DAB signal reception:

Ensure the DMB signal is not blocked in the basement or by buildings. If the antenna is touched while watching or listening to broadcasts, the reception may reduce.


## Connecting Accessories

### Inserting/Removing the Micro SD Card

- 1 Properly fix the terminal part.

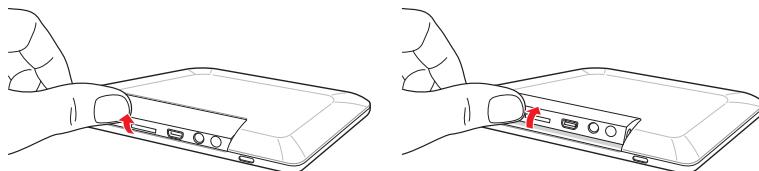

- 2 Face the SD card upward as shown in the figure and slowly push it into the slot until it makes a clicking sound.

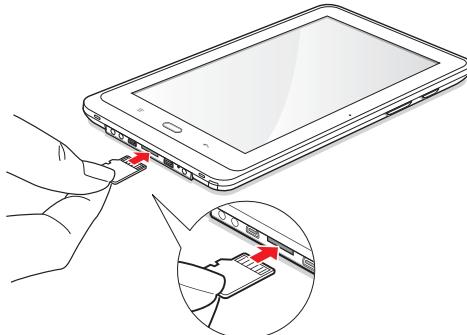

- 3 Push the inserted micro SD card again to take it out.




- Do not force the micro SD card to insert.
- Do not take the micro SD card while being used.  
Doing so may delete the data or cause malfunctioning of IDENTITY CRON.
- If the micro SD card is inserted in a wrong orientation, IDENTITY CRON may fail or the SD card may not be removed.
- If the micro SD card is not recognized or causes malfunctioning, format the card before use.
- The FAT file system is recommended when formatting the micro SD card.
- A micro SD card is not included. It is an optional component.
- The data path to save on a micro SD card is "/sdcard/sd".

## Connecting with External Devices

---

### Connecting with an HDMI device

Use the micro-HDMI port on IDENTITY CRON to display images on external digital devices such as a TV, cell phone or monitor.

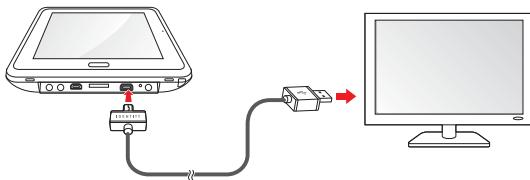

- 1** Connect the micro-HDMI port on the right side of IDENTITY CRON with an external digital device (TV, cellular phone, monitor).
- 2** When everything is connected, turn on IDENTITY CRON and the external digital device (TV, cell phone, monitor).

---

**■**

- When the device is connected with an external digital device through the micro-HDMI port, you may enjoy superior resolution and sound quality.
- Since the micro-HDMI port supports digital image and audio signals, an extra audio signal cable is not necessary.
- If an external digital device does not support HDMI input, you cannot use the micro-HDMI port.
- You may set the HDMI output on **Settings**. Please refer to 'Sound' and 'Display' sections for details. (Pages 80 and 81)

## Other Features

---

Gmail  
Talk  
Map  
Market  
DMB  
ThinkFree Office  
Gallery  
Video  
Smart Note  
Task Manager  
Address Book  
Camera  
File Explorer  
ConvergenceOne™

Gmail is an email service provided by Google, which you may use to send and receive emails on IDENTITY CRON in the same way as on a PC. Please register an account on Gmail prior to use.

■ To execute

Home Screen >  > **Gmail** > Select the desired mail and then confirm




<b>Refresh</b>	Check received mails on the latest list.
<b>Compose</b>	Send a mail to the desired recipient.
<b>Accounts</b>	Select and check a mail that is received via the registered account.
<b>Go to labels</b>	Check mails in the Inbox and Sent Mail, and set Spam and Trash.
<b>Search</b>	Search received mails with keywords.
<b>More &gt; Settings</b>	Set default settings or alerts for sending and receiving mails.
<b>More &gt; Help</b>	Search and view Help on the internet regarding the Market.
<b>More &gt; About</b>	Check the Gmail version.

## Setting Gmail

■ To execute

Home Screen >  > **Gmail** > Select the desired mail and then confirm

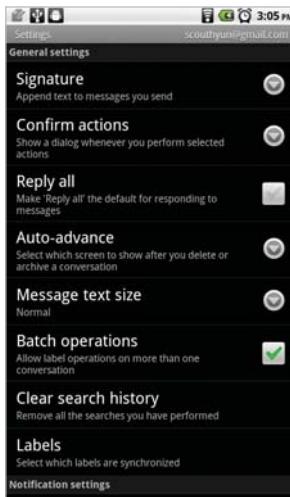


General Settings	<b>Signature</b>	Set a signature to attach on the message to send.
	<b>Confirm actions</b>	Select and display one among archive/delete/send whenever executing the selected job.
	<b>Auto-advance</b>	Select a screen to be displayed after deleting or saving a conversation.
	<b>Message text size</b>	Set the font size in five levels.
	<b>Batch operations</b>	Set to allow a labeling job on more than two conversations.
	<b>Clear search history</b>	Delete all search history.
	<b>Labels</b>	Set the mail box and days to synchronize.
Setting Alerts	<b>Email notifications</b>	Set to display a notification on the status bar when received an email.
	<b>Select ringtone</b>	Set an alert sound.
	<b>Vibrate</b>	Set to enable or disable vibration mode.
	<b>Notify once</b>	Set to notify once when received a new email.

## Talk

By using your Google account, you may freely chat with friends without installing or registering a separate program. Please register an account on Google prior to use.

### ■ To execute

Home Screen >  > **Talk** > Select the desired mail and then confirm

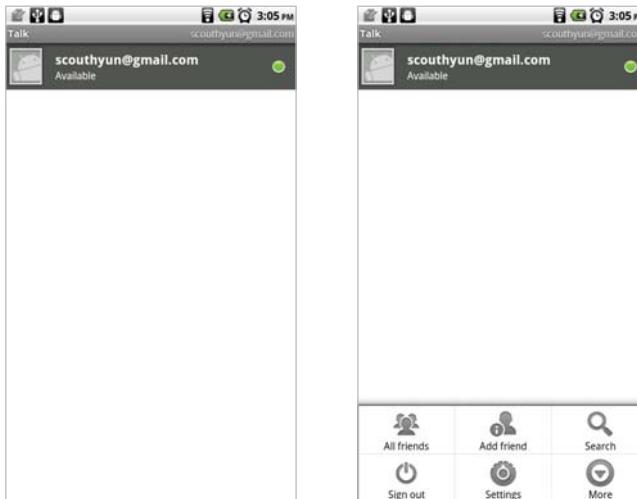


<b>All friends</b>	View all friends registered on Talk.
<b>Add friend</b>	Invite and add friends via mail.
<b>Search</b>	Search friends.
<b>Sign out</b>	When signing out the account, Talk is also signed out.
<b>Settings</b>	Set an Away status, alert sound and more.
<b>More &gt; Close all chats</b>	Close all current chat windows.
<b>More &gt; Invites</b>	View an invited friends list who are waiting to confirm.
<b>More &gt; Blocked</b>	View a blocked friends list.

# Talk

## Setting Talk

### ■ To execute

Home Screen >  > **Talk** > **Menu Button** > Select the desired mail and then confirm

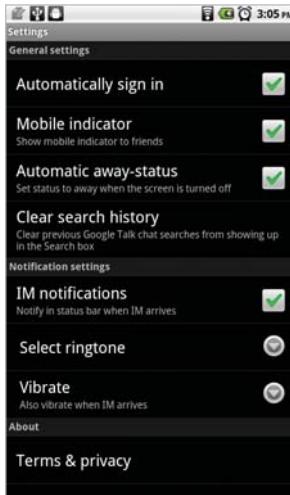


General Settings	Automatically sign in	Set to automatically sign in the set account without entering login information.
	Mobile indicator	Display friends who registered for a sign-in status.
	Automatic away-status	Set the connection status to an automatic-away status when the screen switches to a protection mode and turns off.
	Clear search history	Set to delete and to not display previous Google Talk chatting search keywords on a search window.
Setting Alerts	IM notifications	Set to display a notification on the status bar when a message is received from the registered friend.
	Select ringtone	Set a notification ringtone.
	Vibrate	Set to enable or disable vibration mode.
Information	Terms & Privacy	You may check Google's legal notice.

# Map

Search the desired location or view various information regarding the corresponding location based on the GPS technology. You may automatically search my location in order to find a driving route, public transit directions, and/or walking directions from the current location to the destination. Also, you may use a web search, satellite photos map and other features for the location.

## ■ To execute

Home Screen >  > **Maps** > Select the desired location and then confirm

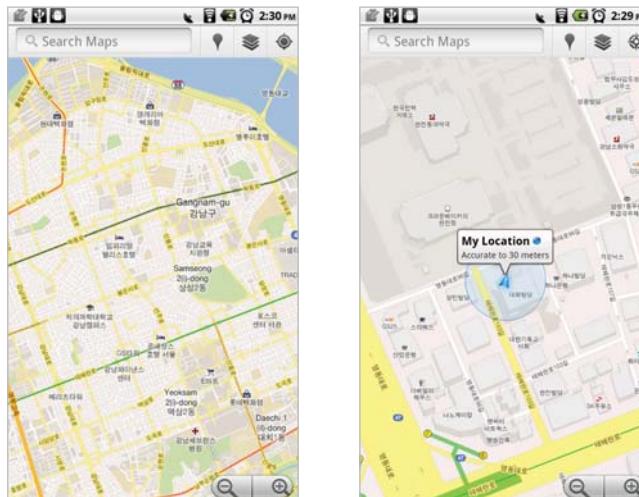

- Move the map by dragging up/down/left/right the screen with a finger.
- Touch the screen twice to enlarge the map.
- Touch and hold the desired location on the map in order to view the address.


<b>Search</b>	Search and view the desired location on the map.
<b>Directions</b>	You may select and use the car, public transportation and walking directions feature.
<b>Layers</b>	View the map with various layers such as traffic information, satellite and topography.
<b>My Location</b>	View my current location.
<b>Clear Map</b>	Delete all location information on the map.
<b>More</b>	View the information regarding account switching, help, and terms of use.

# Map

## Map Directions

### ■ To execute

Home Screen >  > **Map** > **Menu Button** > Check the desired route with directions

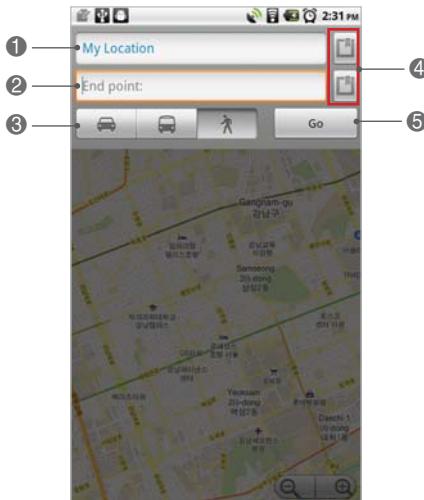


①	Enter start point	Enter a name or address of the place to start.
②	Enter destination point	Enter a name or address of the destination.
③	Travel method	Select and view the traveling method from by car/by public transit/walking.
④	Select a start point/destination	Select a start point/destination directly from the address book or on the map.
⑤	Go	Check the route after setting the starting point and destination.

# Map

## Map Layer

### ■ To execute

Home Screen >  > **Map** > Layer Button

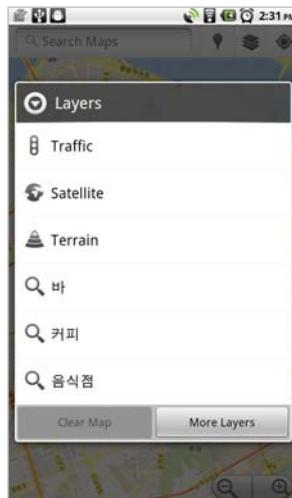


<b>Traffic</b>	Display traffic information on the map.
<b>Satellite</b>	Display the map as a satellite view.
<b>Terrain</b>	Change the map view to check the elevation of the terrain.
<b>Clear Map</b>	Delete all location information marked on the map.
<b>More Layers</b>	View my map and public transit routes.

# Market

Market is Google's application market. You may download and use various applications including games on the device.

## ■ To execute

Home Screen >  > **Market** > Select and use the desired application

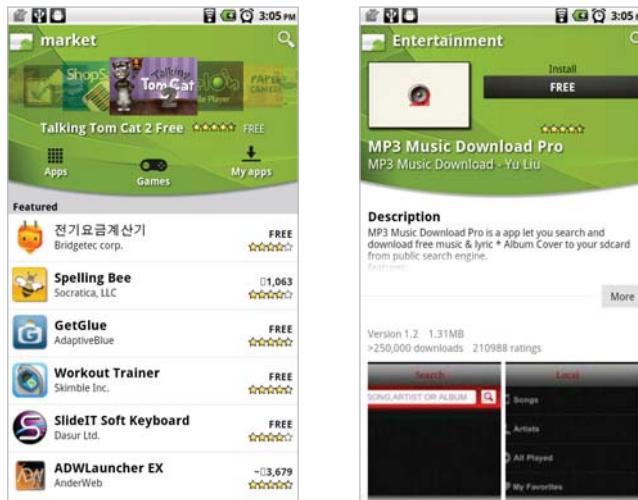

<b>Search</b>	Search the desired application.
<b>My apps</b>	Check the downloaded and installed applications list.
<b>Settings</b>	Set to alert any updates for installed applications and games.
<b>Help</b>	Search and view Help on the internet regarding the Market.

You may watch TV or listen to the radio by receiving T-DMB/DAB signals.

## Before Use

- Watching and listening DMB services are free.
- TV and radio broadcasts are not related to Wi-Fi signals.
- Since the device receives the signal from a station, you may need to go to a different location when there are tall buildings or mountains between receiving points or when you are in the basement or building with no repeater or in a signal dead spot.
- You have to use either the provided external antenna or stereo earphones in order to watch DMB programs. If you use other accessories other than provided stereo earphones and external antenna, the receiving signal may reduce.
- Please refer to the 'Using the DMB Antenna' section for details. (34 Page )

## Watching DMB

■ To execute

Home Screen>  > **DMB** or Home screen



 When executing the DMB feature, () appears at the top of the screen.

## DMB

- WatchTV or broadcasts on Favorites, or listen to the radio.

 If you watch DMB on the device for the first time, search channels in the region before the use.

- **Search:** Search new channels. Searched channels may vary by region.
- **Contents box:** Save files recorded or captured while watching TV or listening to the radio.
- **Settings:** Adjust the **screen size** or **brightness**.

### Managing Favorite Channels

#### Add Favorites

■ To execute

Channels List Screen > **Menu button** > **Select and add channel.** > Select the desired channel > **Done** > **OK**

■ or

Touch and hold the channel list to add > **Add favorite** > **OK**

#### Delete Favorites

■ To execute

Favorites List Screen > **Menu button** > **Select and Delete Favorites./delete all** > Select a channel to delete **Done** > **OK**

■ or

Touch and hold the channel list to delete > **Delete favorite** > **OK**



## ThinkFree Office

This is an office package to manage documents online/offline which is compatible with Microsoft Office. You may view and edit various Office document files (PDF, Text, Word, Excel, Power Point, etc.) saved on a micro SD card (an external memory card). If you have an account on the ThinkFree website, you can also manage your documents online.

■ To execute

Home Screen> > ThinkFree Office



You need a Wi-Fi connection in order to manage documents on the ThinkFree website. Please refer to the **Wireless & Networks** for details.  
(Page 79)



## Smart Note

You may write a simple memo by selecting one from the picture memo, text memo or voice memo feature on the smart note app. The memo may be sent as a message.

### ■ To execute

Home Screen > > To execute

## Creating a new memo



New Memo	You may simultaneously make both picture and text memos.
Memo List	View the saved memos list.



- A voice memo may be recorded up to one hour.
- You may use the recorded voice memo as an alert sound.

## Deleting a memo

### ■ To execute

Memo List > Select a memo to delete > > Delete Slide

## Sending a memo

### ■ To execute

Memo List > Select a memo to send > > Send > Select a transfer method



## Email

You may send or receive emails by synchronizing email accounts you are using on the Internet. Please register your email accounts prior to use.

■ To execute

Home Screen>  > Email



You need a Wi-Fi connection to use the email service. Please refer to the **Wireless & Networks** for details. (Page 79)

### Setting Up an Email Account

When using the email feature for the first time, you need to set up an account. You may also set up popular email accounts (hotmail, gmail, etc.).




List of the email providers

- Gmail (Gmail.com, googlemail.com, google.com, android.com)
- AOL (aol.com)
- Hotmail (hotmail.com, live.com, msn.com)
- Yahoo (yahoo.com, ymail.com, yahoo.co.kr)
- Naver (naver.com)
- Daum (daum.net, hanmail.net, hanmail.com)
- Nate (nate.com, lycos.co.kr, netsgo.com)
- Paran (paran.com, hanmir.com, hitel.net)
- Hanafos (hanafos.com)

## Email

---

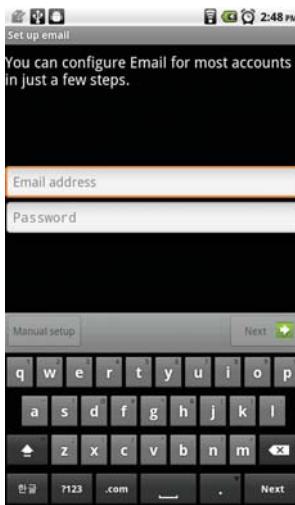

---

- 1 Enter an email address by tapping on the email address field.
- 2 Enter the password in the password field, and then tap on **Next**.
  - If you fail to connect to the server through the automatic registration, go back to the email setup screen and tap on **Manual setup**.
  - If you fail to access the server due to an incorrect user name or password, tap on **Edit Details** and try again by re-entering your user name and password.
  - When the automatic registration is complete, the account type selection screen does not appear. You may directly set a name for your account and sent messages.
- 3 When the screen for selecting an account type appears, select **POP3** or **IMAP**.
- 4 Enter the receiving and sending server information, and then tap on **Next**.
- 5 Set a name for your account and sent messages, and tap on **Done**.

---

# Email

## Sending an Email



## Adding an Email Account

You may register more than one email account.



 Refer to the 'Setting Up an Email Account' section for adding an email account. (Pages 60 and 61)

## Setting Up Your Work Email

You may receive information such as your emails, address book and schedule in real-time by directly accessing the exchange server that is used at your work.

---

- 1 Enter an email address by tapping on the email address field.

---

- 2 Enter the password in the password field, and then tap **Next**.

---

- 3 When the account type selection screen appears, select **Exchange**.  
 Please refer to the 'Setting up an Email Account' section in order to set **POP3** or **IMAP** accounts. (Page 64)

---

- 4 Enter the detailed information of the exchange server.  
 Please contact the server administrator to check the detailed server information.

---

- 5 Set the frequency of email checking and the number of emails to be synchronized, and then tap on **Next**.

---

- 6 Set a name for your account and sent messages, and tap on **Done**.

---

## Deleting an email account

 To execute

Inbox > **Menu Button** > **Accounts** > Touch and hold on the name of the account to delete > **Remove account**

## Task Manager

You may view a list of currently used programs and the memory capacity as well as installed programs.

■ To execute

Home Screen >  > **Task Manager**

■ or

Press and hold the **Home button** > **Task Manager**

## Ending a Program

You may increase the available memory by terminating programs that are running.

■ To execute


List of the programs that are running > **End all**

■ or

List of the programs that are running > **End**

## Task Manager

---

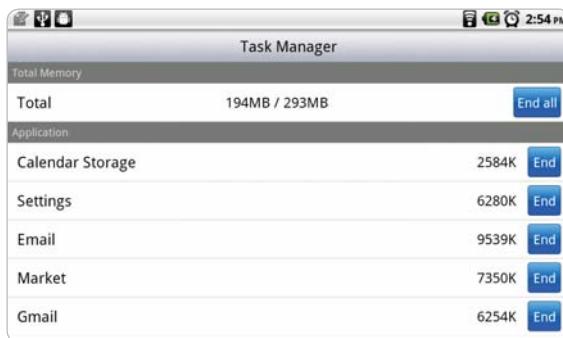

 Since Android as an OS program uses the memory, the total memory does not appear as 512 MB. This is not a hardware fault.




## Address Book

---

You may save and search various information such as telephone numbers and emails. You may also select an email address and send an email.

■ To execute

Home Screen>  > **Address Book**

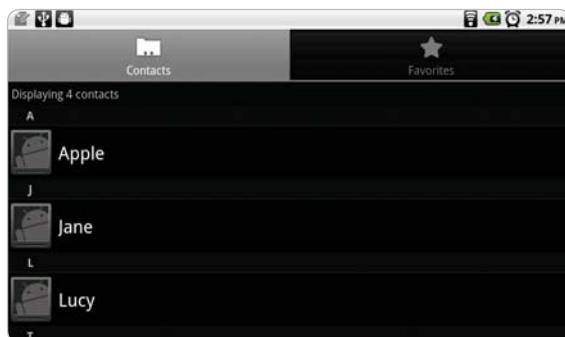


# Address Book

## Managing the Address Book

### Adding a new contact

#### ■ To execute

Address list >  > New Contact > Enter contact details to add > **Done**

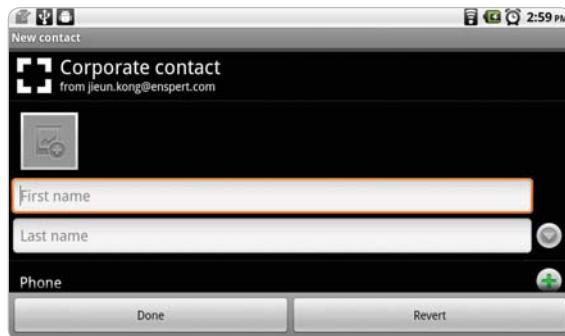

### Editing a contact

#### ■ To execute

Address list > Select a contact to edit >  > Edit Contact > Enter contact to be edited > **Save**

### Deleting a contact

#### ■ To execute

Address list > **Select an address to delete** >  > Delete Contact > **OK**

## Address Book

### Sending an Email

#### ■ To execute

Address list> Select an email address  to send an email

#### ■ or

Address list> Select the desired email address > **Send an email**



- In order to send an email, register an email account prior to use. Please refer to the 'email' section for details. (Pages 60 and 63)
- You need a Wi-Fi connection to send an email. Please refer to the **Wireless & Networks** for details. (Page 79)

### Synchronizing


You may manage your account by selecting information to be synchronized with your Google account.

#### ■ To execute

Home Screen> **Menu Button** > **Accounts & sync** > Select an account to synchronize



If you delete the address book after synchronization, the address book on the server is also deleted.

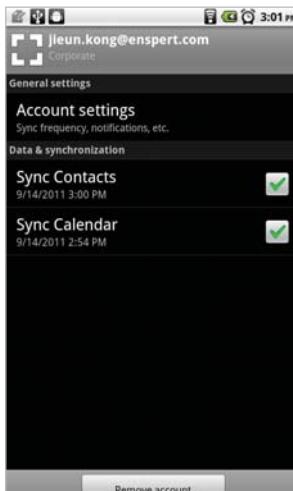

# ■ Camera

Take pictures with the camera.

## ■ To execute

Home Screen >  > **Camera**



- While taking pictures, set the camera on **Settings**.



<b>Camera Mode</b> 	<b>Settings</b> 	Set a focus, scene, size and color of the camera.
	<b>Store location</b> 	Save the information regarding the shooting location.
	<b>White Balance</b> 	Set white balance.
	<b>Enlarge/Reduce</b>	Enlarge/reduce the image.
	<b>Select a Camera</b> 	Select the front/rear camera.
<b>Video Mode</b> 	<b>Video Resolution</b> (High/Low/MMS/YouTube):	Set video resolution.




## File Manager

Manage the files and folders saved on the memory card.

■ To execute

Home Screen >  > File Manager

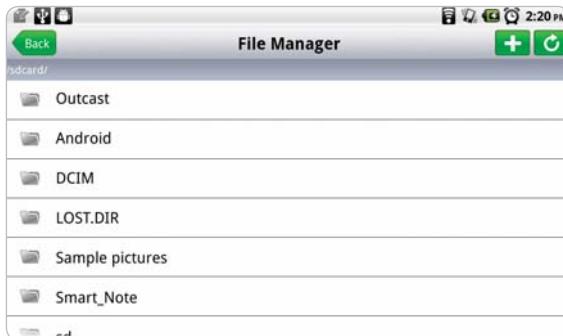

Touch and hold the **Menu button** to set the feature.

<b>Copy</b>	Copy the desired files and folders.
<b>Move</b>	Move the desired files and folders.
<b>Delete</b>	Select and delete files.
<b>Delete All</b>	Delete all files in the corresponding folder.
<b>Sort by</b>	Sort files and folders by name, size or date.
<b>Service Info.</b>	View the application information.

ConvergenceOne™ allows you to share multimedia contents on various digital devices via a wireless network. You may share and control devices and content without constraints to time and space through the "ConvergenceOne" feature between the TV, PC or smart pads that are connected via various network systems (DLNA, UPnP, Wi-Fi, Bluetooth). You need to connect to Wi-Fi to use ConvergenceOne™.



- Devices to share Wi-Fi need to use the same AP (Access Point). If devices use different AP's, then they may not be detected.
- When using the device in conjunction with a TV, check if the TV supports DLNA (Digital Living Network Alliance). Please refer to the product user's manual for the network settings on the TV.
- If multiple devices are connected to the same router or if other devices take a lot of network bandwidths, HD videos may not properly play.
- If a firewall such as anti-virus program is activated, the PC you want to connect may not be detected.
- Please refer to the '**Wireless & Networks**' section in order to set up the Wi-Fi for IDENTITY pad. (Page 79)

## Installing ConvergenceOne™ on a PC

### System requirements

- OS: Microsoft Windows XP, Windows Vista, Windows 7
- Free space on the HDD to install the program: 15 MB
- If you use the UAC (User Account Control) on Windows Vista, you need to allow the access when executing the program.



Download PC installation program from IDENTITY's website ([www.identitynet.co.kr](http://www.identitynet.co.kr)).

# ConvergenceOne™

1 Double click the installation file (ConvergenceOne\_Setup).

2 Complete the installation by following the installation guide.



## Program Screen



①	Select the device on which the multimedia content (pictures, music, videos) to share is saved.
②	A list of the pictures, music and videos on the storage device are displayed.
③	Select a device to play multimedia content.
④	Set file view mode or change the shared folder.
⑤	Search for the saved multimedia content and set file view mode.

## Playing Multimedia Content on a PC

---

- 1 Execute **ConvergenceOne™** on your PC.
- 2 Set a folder with multimedia content to share.
- 3 Select **a device** (PC) that contains multimedia content (pictures, music, videos) to play.
- 4 Select multimedia content to enjoy.  
 Only the shared files are displayed.
- 5 Click the **Play** button on the right side of the screen.
- 6 Select a device to play multimedia content.
- 7 The selected multimedia content plays.

---

## Playing Multimedia Content on IDENTITY CRON

---

1 Execute **ConvergenceOne™**.




**≡** It searches for a device that can be automatically connected. If there is no device that you want, tap on **Re-search** to try again.

---

2 Select a device (IDENTITY CRON) that contains multimedia content (pictures, music, videos) to play.

---

3 Select multimedia content to enjoy, and tap on the Watch (or Listen) button.

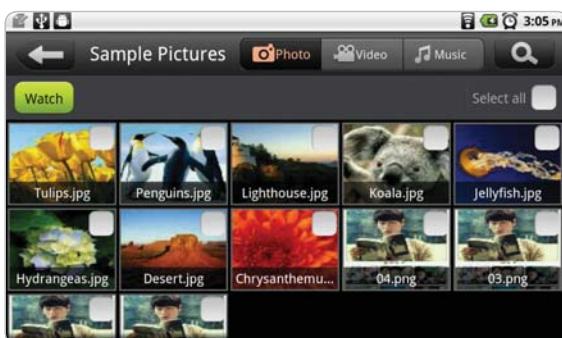

---

4 Select a device to play multimedia content.

---

5 Multimedia content is played on the selected device.

# Preferences

---

Wireless & Networks  
Sound  
Display  
Location and Security  
Applications  
Account and Synchronization  
Privacy  
Managing Memory  
Searching  
Language and Keyboard  
Voice Input & Output Settings  
Accessibility  
Date and Time  
About system

# Wireless Network

Change the wireless network settings.

## ■ To execute

Home Screen >  > **Settings** > **Wireless & networks** > Select the desired item and change its settings



<b>Airplane Mode</b>	Set to block all wireless connections.
<b>Wi-Fi</b>	Turn on or off Wi-Fi.
<b>Wi-Fi settings</b>	Set the network alert, and select or add a Wi-Fi network from the Wi-Fi list.
<b>Bluetooth</b>	Turn on or off Bluetooth.
<b>Bluetooth settings</b>	Set various features such as transferring data in order to use Bluetooth. When Bluetooth is on, you may rename devices, set the availability of searching and search for a device to connect.




- When an open Wi-Fi network is available, () appears at the top of the screen.
- When the Wi-Fi network is connected, () appears at the top of the screen.
- While Bluetooth is being connected, () appears at the top of the screen.

# Sound

Change the sound settings.

## ■ To execute

Home Screen >  > **Settings** > **Sound** > Select the desired item and change its settings

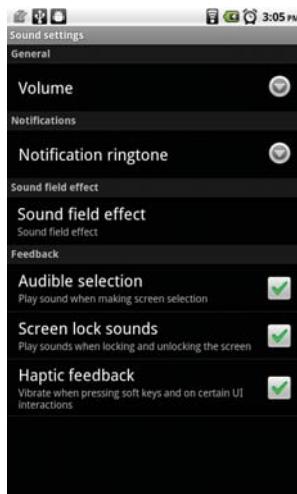


Sound	Volume	Set the volume for the media, alarm and notifications.
	Notification ringtone	Set a notification ringtone.
	Sound field effect	Set the SRS and equalizer.
	Audible selection	Set to enable or disable a touch sound when touching the screen.
	Screen lock sounds	Set to enable or disable sounds for locking and unlocking the screen.
	Haptic feedback	Set to vibrate when touching a soft key or using a particular UI (User Interface).

# Display

Change the screen settings.

## ■ To execute

Home Screen >  > **Settings** > **Display** > Select the desired item and change its settings

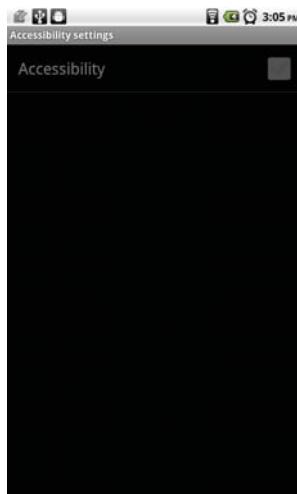

Display	<b>Brightness</b>	Set the brightness of the screen. If it is set as an auto brightness, the brightness is automatically adjusted by the light sensor.
	<b>Auto-rotate screen</b>	Set the display brightness in order to set the auto brightness.
	<b>Animation</b>	Set a window animation effect.
	<b>Screen timeout</b>	Set the screen timeout between 15 and 30 seconds.
	<b>TV Mode</b>	Set TV output mode as TCbCr/RGB.
	<b>TV Resolution</b>	Set the TV resolution between 480P/60/4:3 and 1080P/60q.

# Location and Security

## ■ To execute

Home Screen >  > **Settings** > **Location & security** > Select the desired item and change its settings



User Location	<b>Use Wireless Network</b>	Set to use the wireless network.
	<b>Use GPS satellites</b>	Set whether or not to use the satellite global positioning system.
Disable Screen Lock	<b>Set up screen lock</b>	Set to lock the screen by using a pattern or password.
PIN	<b>Visible passwords</b>	Set to show the password upon entering.
Certification Repository	<b>Use secure credentials</b>	Set whether or not to use a security certification encrypted with your personal information in order to use electronic information systems such as Internet banking.
	<b>Install from SD card</b>	Install an encrypted certification on your external memory card, which is necessary to use information systems.
	<b>Set Password</b>	Set or change your password to be used for the security certification.
	<b>Clear storage</b>	Delete all saved data and the password.

# Applications

Manage the installed applications and the programs that are currently in use.

## ■ To execute

Home Screen >  > **Settings** > **Applications** > Select the desired item and change its settings



<b>Unknown sources</b>	Set whether or not to install programs that are not released or have unknown sources.
<b>Manage applications</b>	View the information on the installed application and control its features.
<b>Running services</b>	View the list of the running programs.
<b>Memory Cache delete</b>	Delete memory caches.
<b>Development</b>	<b>USB Debugging:</b> When the USB cable is connected, you may enable or disable the debugging mode. <b>Stay awake:</b> You may enable or disable the screen to stay awake while charging the battery. <b>Allow mock locations:</b> You may enable or disable the temporary location mock locations.




If you save or run any program you downloaded from an unknown source, your personal information may be divulged or abnormal symptoms may occur in your telecommunications services or basic operations. Enspert shall not assume any responsibility for any loss or damage incurred from the aforementioned. If abnormal symptoms occur, immediately uninstall the program.

# Account and Synchronization

Change the detailed settings of the registered account, and add a new account.

## ■ To execute

Home Screen >  > **Settings** > **Account & sync** > Select the desired item and change its settings

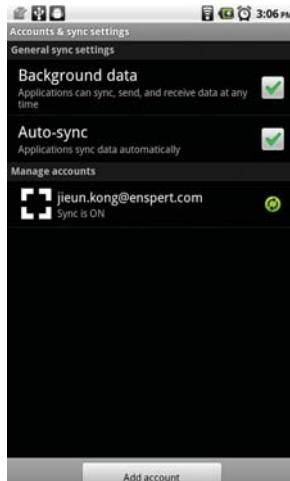


<b>Background Data</b>	When you are not using features that need to be synchronized, you may allow a background data transmission.
<b>Auto-sync</b>	Automatically set the synchronization of the set accounts.
<b>Manage accounts</b>	Add, delete, change or manage multiple email accounts.
<b>Add account</b>	Configure email accounts (Exchange accounts).

# Privacy

## ■ To execute

Home Screen >  > **Settings** > **Privacy** > Select the desired item and change its settings

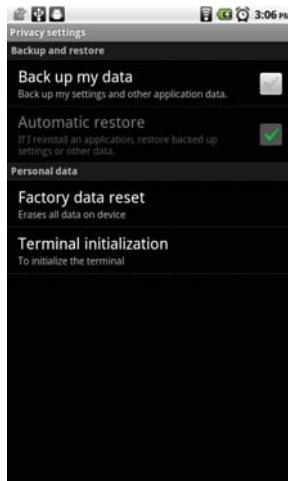

<b>Backup my data</b>	Set to backup the user settings and application data.
<b>Automatic restore</b>	When re-installing applications, you may restore the backup settings or other data.
<b>Factory data reset</b>	Delete data such as Google account, data and settings for systems and applications, and downloaded applications. Files on a micro SD card are not deleted.
<b>Terminal initialization</b>	Delete all data and backup data on the device.

# Managing Memory

## ■ To execute

Home Screen >  > **Settings** > **SD card & device storage** > Select the desired item and change its settings




SD Card	<b>Total space</b>	View the total memory size on the micro SD card.
	<b>Available space</b>	View the available space on the micro SD card.
	<b>Mount SD Card</b>	Prevent errors such as data loss when removing the micro SD card.
	<b>Format SD Card</b>	Initialize the micro SD card.
Internal Memory	<b>Available space</b>	View the available space on the USB device.
Internal SD Memory	<b>Available space</b>	View the available space on the internal SD memory.

# ■ Searching

Set the search feature to search while using Google.

■ To execute

Home Screen >  > **Settings** > **Search**

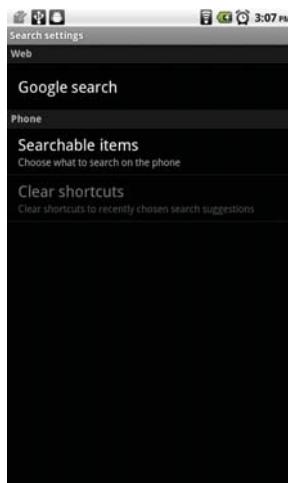


Web	<b>Google Search</b>	Set to suggest words under the input field before entering the entire search keyword.
Cell Phone	<b>Searchable items</b>	Set searchable items using the quick search box.
	<b>Clear shortcuts</b>	Delete shortcuts on the latest search results.

# Language and Keyboard

Set the text entry settings displayed on the screen.

## ■ To execute


Home Screen >  > **Settings** > **Language & keyboard** > Select the desired item and change its settings

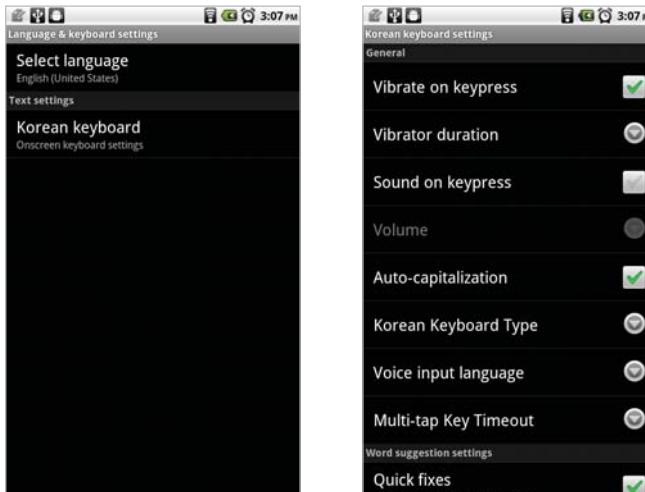

<b>Select Language</b>	Select a default language to be displayed on the device.
<b>Android Keyboard</b>	Set sounds, vibration, suggestions, auto complete and more.
<b>Android Keyboard (Settings)</b>	Set to vibrate or to play sounds when pressing keys or buttons.

## Voice Input & Output Settings

---

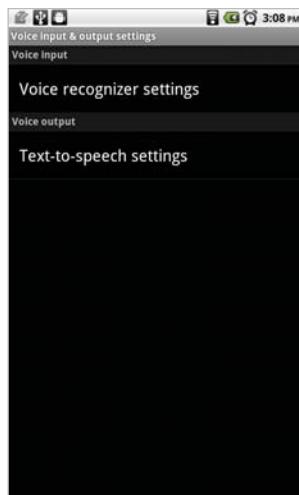

Voice recognizer settings	Set to use the voice recognizer.
Text-to-speech settings	Set various features for TTS.

# Accessibility

---




<b>Accessibility</b>	Collect all texts entered by the user except passwords.
<b>TalkBack</b>	Execute an application that collects text.

# Date and Time

Automatically or manually set the date and time.

## ■ To execute

Home Screen >  > **Settings** > **Date & time** > Select the desired item and change its settings

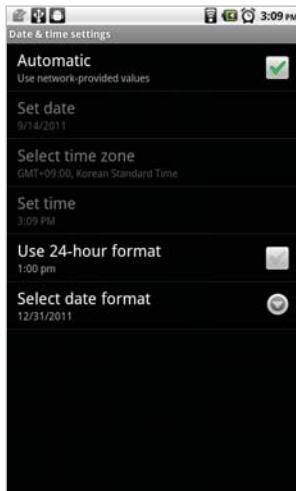

<b>Automatic</b>	Automatically synchronize the date and time by using the network value. Setting the date, selecting a time zone and setting the time are inactivated if it is set as an auto synchronization.
<b>Set date</b>	Manually set the date.
<b>Select time zone</b>	Manually select the time zone.
<b>Set time</b>	Manually set the time.
<b>Use 24-hour format</b>	Select to display the time in a 12-hour format or 24-hour format.
<b>Select date format</b>	Select the date format from four different formats.

# About system

View the system information and legal information.

## ■ To execute

Home Screen >  > **Settings** > **About system**



<b>Network</b>	Check the IP address, MAC address, DNS, subnet, and gateway.
<b>Battery</b>	Check the battery status and level.
<b>Battery use</b>	Check the current battery status.
<b>Legal Information</b>	Check the Open Source's license and Google's legal notices.
<b>Model Number</b>	Check the model number.
<b>Android Version</b>	Check the OS version of Google Android.
<b>Kernel Version</b>	Check the system OS version installed on the product.
<b>Build Number</b>	Check the build number.
<b>SW Version</b>	Check an available update in order to update software.

# Appendix

---

[Firmware Upgrade](#)

[Managing IDENTITY CRON Data](#)

[Copyright/Authentication. Trademark/Disclaimers](#)

[Internet Service Types](#)

[Before Requesting a Service](#)

[Customer Service Center](#)

[Index](#)

## Firmware Upgrade

---

Upgrade your IDENTITY CRON firmware to the latest version.

Firmware is a very important embedded program that operates various features on IDENTITY CRON. Firmware is regularly upgraded due to the following reasons: improvement in features, changes in policy and the environment, and error correction. Upgrade firmware to the latest version in order to use your IDENTITY CRON in an optimized environment.

---

- 1** If there are any updates for firmware, a pop-up window automatically appears asking if you want to download the updates.
- 2** When the circumstance allows downloading after confirming the updates, download and save firmware update program.
- 3** A pop-up window appears asking if you want to install firmware.
- 4** Upon confirmation, firmware is updated followed by rebooting of IDENTITY CRON.
- 5** When rebooted, the new firmware installation is complete.

---

## Managing IDENTITY CRON Data

---

ConvergenceOne™ will help you conveniently manage your personal information. While using IDENTITY CRON, the saved data may be lost due to loss or failure of your device. In order to prevent or to minimize any inconvenience that may arise from such loss, it is recommended to back up your personal data on a different device. Enspert shall not assume responsibility for the loss of your data.

Please refer to IDENTITY CRON's homepage ([www.identitynet.co.kr](http://www.identitynet.co.kr)) for detailed information regarding the latest software, software upgrade, and personal information management.

# Copyright/Authentication. Trademark/Disclaimers

---

## Copyright

Copyright © 2010 Enspert Inc. All rights reserved.

This User Manual is a property of Enspert Inc. and is protected by copyright law. This User Manual may not be partially or wholly reproduced, distributed, translated or altered into an electronic or printed format without the written permission of Enspert Inc.

Companies, organizations and products that are used in examples are not real data. Enspert Inc. does not intend to be associated with any company, organization, product, person or incident through this user manual. Please do not infer. It is the user's responsibility to follow the corresponding copyright laws.

## Trademark

Tomorrow Connected IDENTITY, ENSPERT and the Enspert logo are trademarks of Enspert Inc.

Android logo, Google Search, Voice Search, Map, Gmail, YouTube, Market and Talk are trademarks of Google Inc. All other company and product names may be corresponding company's brand names.

WOW HD, SRS and the  symbol are the trademarks of SRS Labs, Inc.

## Disclaimers

Enspert Inc. shall not assume responsibility for accidental damage or the damage from the unintended use and operation of IDENTITY CRON. The information in the User Manual was written based on the specifications of the current product. Enspert Inc. has added and supplemented new features and will also continue to utilize new technologies. All specifications are subject to change without prior notice.

# Internet Service Types

---

In order to use the internet service, you need a wireless internet Access Point. You may use the wireless internet via leased line, cable modem or line provided by other companies.

# Before Requesting a Service

LCD	No screen is displayed.	When the Internet is not connected or improperly connected, the screen may not be displayed.	Check the Internet connection.
		When IDENTITY CRON is on External Output Mode, the screen may not be displayed.	Switch to a different mode other than External Output Mode.
	Afterimages appear. Border lines appear.	<p>This occurs when you watch the same screen for an extended period of time.</p> <p>Have you played games for an extended period of time?</p> <p>Have you used the 4:3 screen for an extended period of time?</p> <p>When border lines on the left and right as well as at the top and bottom of the screen are fixed, or when the amount of penetrated light is different, border lines appear on the screen if you have it on for an extended period of time.</p>	<p>The fixed screen may cause a permanent damage to the touchscreen.</p> <p>If a paused screen continues to be displayed when playing a game, afterimages may appear.</p> <p>The fixed screen may cause permanent damage to the pad screen. Failure from the aforementioned is not covered by warranty.</p>
	The screen does not look clear.	The screen does not look clear under direct sunlight.	Use your device in a shaded area or in an area with sufficient light for reading.
Installation and Connection	The power is off.	The power switch is not on.	Press the power switch to turn on the device.
		The battery is completely discharged.	Charge the battery.
	The battery does not charge.	The charger is not connected to the device.	Check if the USB charger is properly connected to the device.
	IDENTITY CRON generates heat.	Since using IDENTITY CRON requires a lot of current, it may generate heat when you use the phone, play games or use internet for an extended period of time.	This is not a product failure and does not affect the life span or performance of your IDENTITY CRON.
	The screen is not displayed after connecting the product with an external device.	This may occur when IDENTITY CRON cannot be connected with the external device or is improperly connected.	Check the connection between two devices.

## Before Requesting a Service

Menu	The menu is not selected.	The menu is gray (inactive).	Menus vary depending on the model. Check the model when checking the feature.
Other	The product makes clicking noise.	This may happen due to the mechanical contraction or expansion of the exterior.	The clicking noise occurs when the product contracts or expands due to heat, which is not a failure of the product and you may continue to use the product.
	IDENTITY CRON is dirty.	Foreign substances got on IDENTITY CRON.	IDENTITY CRON may be damaged if you wipe it with alcohol, benzene or a synthetic detergent. Clean your IDENTITY CRON with a pencil eraser or a soft cloth.
	Data saved on IDENTITY CRON have been deleted.	If data were damaged by initialization or failure of the device, it cannot be recovered unless you have backup data.	Ensure that you backup the data on a safe external device at all times.
	The battery usage time (standby time) differs from the User Manual.	When you leave the charged battery at a low or high temperature, its usage time shortens. When using additional features such as entering text, playing games or using the Internet, the battery consumption increases. The battery is a consumable part for which the life span slowly shortens.	Use IDENTITY CRON at room temperature. End programs when you are not using IDENTITY CRON. When Bluetooth, Wi-Fi or GPS is not in use, turn off the feature.

## Before Requesting a Service

Wi-Fi	The Internet is often disconnected.	<p>The Internet connection may be delayed or may not be properly connected depending on the wireless AP condition.</p> <p>If you use the device while you are moving, the wireless Internet service may be disconnected depending on the wireless AP condition.</p>	Move to another area and try again.
Camera	The quality of an image is not as good as the one on the preview screen.	<p>The quality of an image is sensitive to surrounding environments and may vary depending on the shooting technique.</p> <p>Due to insufficient lighting in a dark place, at night or indoors, pictures may have noise or be out of focus.</p>	Take pictures in a bright area or in an area with sufficient lighting.
GPS	You cannot find your location indoors.	You cannot properly receive GPS signals in dead spots such as indoors.	Use a wireless network or use the device outdoors.
Earphones	Only one side of earphones works.	IDENTITY CRON is optimized for 4-pin earphones.	Use earphones provided upon your purchase. You may also purchase 4-pin earphones if you want to purchase an extra.

Due to technical limitations of the manufacturing process, the LCD panel on IDENTITY CRON may have bright or dark pixels of 1 PPM (millionth) which will not affect the product performance. (Number of LCD panel pixels: 480,000)

## Customer Service Center

### Enspert Customer Service Center

Please refer to our homepage for information regarding the exact location and a map to an Enspert Customer Service Center (82-1588-6136). Please visit IDENTITY CRON homepage ([www.identitynet.co.kr](http://www.identitynet.co.kr)).

# Customer Service Center

## Disposal of product and battery

Collected products and batteries are recycled, while their residues are processed in eco-friendly way. If you do not want to use the product any longer, send or bring it to the Enspert Customer Service Center (82-1588-6136) and we will process it in environmentally friendly way.

### FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Compliance Information :** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

### FCC RF EXPOSURE INFORMATION

#### Read this information before using your Tablet PC

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radiofrequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this Tablet PC complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage your "Tablet PC", or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### Body-worn Operation

This device has been tested for body-worn operation and meets FCC RF exposure guidelines. Body-worn operation is restricted to accessories that maintain a minimum of 1.5cm separation to the body and do not contain metallic components. Use of any other body-worn accessories may not comply with FCC RF exposure guidelines. For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

# Index

---

## A

Address Book 48  
Alert 15  
Applications 63

## B

Bluetooth 59

## C

Camera 51  
ConvergenceOne™ 53

## D

Display 61

## E

Email 43  
Ending the program 47  
Executing on the Home screen 21

## F

Favorite Channel 40  
Favorites 40  
Firmware 74

## H

Haptic feedback 60

## L

Lock 62

## M

Memo 42  
Memory 66  
Micro-HDMI 29

Micro SD Card 28

## P

Preferences 59

## •

Qwerty keypad 20

## R

Reset 13

## S

Scroll bar 22  
Sound 60  
SRS WOW HD 25  
Synchronizing your Google account 50

## T

Tap 22  
Task Manager 47  
ThinkFree Office 41

## U

Use GPS satellites 62

## V

Volume key 25

## W

Wallpaper 14  
Widget 21  
Wi-Fi 59  
Wireless & networks 59

IDENTITY  
**CRON**



**ENSPERT**

Encounter, be inspired