

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Digital Photo Frame



USER MANUAL

Troubleshooting

Symptoms and Problems	Causes and Solutions
Power supply failure	Check the power connection is correct
Time setting error	If it is not connected to power adapter for long time, the current time settings will be cleared. Always connect the power adapter
Preview is too slow	The preview speed may be slower when processing large images and more pictures
Fail to automatically play pictures	Ensure <Startup Mode> in <Settings> - <General> is set to <Image>
Unable to play image	Maybe incorrect image format and JPG image format
Fail to read the contents of memory card	Incorrect content format or bad memory card, ensure that it is correct
Unable to copy file	Memory card is full or file format is not supported or bad memory card, ensure enough space in the memory card and the file format is supported by the device
No sound output	Check the remote controller is set to silent mode and the sound volume is 0
Unable to connect to PC	Check the cable to connect PC is bad or poor contact between the interface and PC interface
Unavailable repeat play	Select Repeat Mode in <Settings> options
Jam when playing file	Check the memory card is damaged
Auto Shutdown	Close Auto-shutdown in <Settings> options
Remote failure	Check the battery power is inadequate. Remote controller shall be aimed to picture frame receiver
Images can not be displayed in full-screen or in proportion	Select Image Play Mode or select Full-screen Mode or Half-screen Mode in <Settings> options

 
Product Specifications

Category	Detailed Information			
Model	GB-7000d	GB-8200d	GB-1000d	GB-1200d
Display screen	Type	7" TFT LCD	8" TFT LCD	10" TFT LCD
	Resolution	800X480	800X600	1024X600
	Display scale	16:9	4:3	16:9
Internal storage	1GB	1GB	1GB	1GB
Supported image formats	JPG			
Supported music formats	Mp3 WMA			
Supported video formats	MPEG1 / MPEG2 / MPEG4/ AVI/ DIVX			
USB	Main frame (USB2. 0) /Device (USB2. 0)			
Power supply	DC 5V DC ≤2A		DC 12V DC ≤2A	
Dimension	230X169X23(mm)	232X191X28(mm)	307X216X33(mm)	333X273X33(mm)

The product design may vary according to different models, and for the reasons to improve product performance, the specifications are subject to change without notice.

Product and Component


Component Please check the product packaging contains all of the following components.




Name and Function of Component Part



Button	Instruction
OK	:Confirm
RIGHT	:Move Right
LEFT	:Move Left
EXIT	:Back to Previous Menu
UP	:Move Up
DOWN	:Move Down
POWER	:Power On/Off

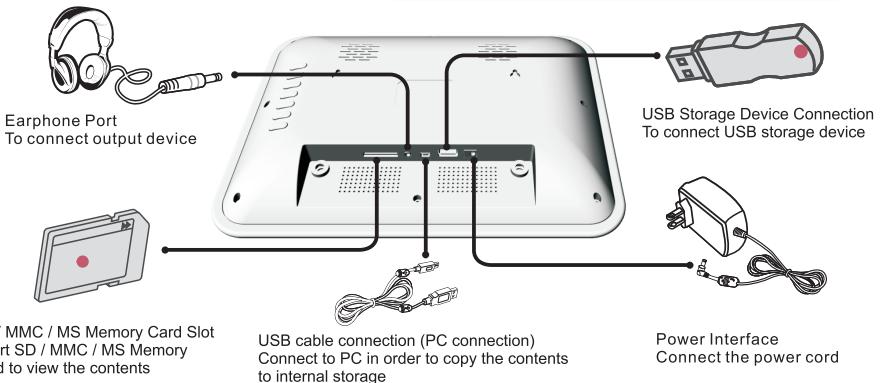

Remote Controller

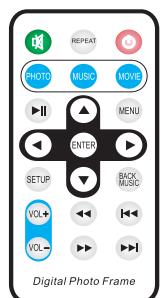

	:Power Off/On
	:Sound Off/On
	:Music + Photo
	:Function Setup
	:Play Music
	:Play Video
	:Display Photo
	:Play/Pause
	:Previous/Next
	:Back/Forward

Note: 7Inch , 8Inch component equipped with a bracket.

Menu Settings



(Option)

User may move the pointer by using **▲▼▶◀** buttons in Remote Controller to operate each menu function.

photo	In Main Menu, select photo option and press Confirm button, the system will automatically browse photo files in storage card or memory card, and user may select corresponding photo preview by pressing ○○ buttons in Remote Controller. If there is no image file the system will automatically return to the Main Menu.
Music	In Main Menu, select Music option and press confirm button, the system will automatically browse music files in storage card or memory card, and user may select corresponding music by pressing ○○ buttons in Remote Controller. If there is no music file the system will automatically return to the Main Menu.
photo + Music	In Main Menu, select Image + Music option and press Confirm button, the system will automatically load the other files for slideshow. If there is no file system will automatically return to the main menu.
Movie	In Main Menu, select Movie option and press Confirm button, the system will automatically browse movie files in storage card or memory card, and user may select corresponding video by pressing ○○ buttons in Remote Controller. If there is no video file the system will automatically return to the Main Menu.
Setting	<p>In Main Menu, select Setting option and press Confirm button, the system will automatically enter into Menu Manager, and user may edit each option in Menu Manager by pressing : ○○○○</p> <p>Image Setting:</p> <ol style="list-style-type: none"> 1. Interval Setting for Image Play 2. Effect Mode Switching for Image Play 3. Image Play Mode ○ [Half / Full Screen] 4. Image Auto Play Mode ○ [Normal / Sport Mode / Calendar Mode] 5. Image Browse Mode ○ [Thumbnail / File Management] <p>Startup Auto-Play Settings:</p> <ol style="list-style-type: none"> 1. Image ○ [Open / Close] 2. Music ○ [Open / Close] 3. Movie ○ [Open / Close] <p>Display Settings:</p> <ol style="list-style-type: none"> 1. Brightness ○ [Normal / bright / soft] 2. Contrast 3. TFT Brightness 4. TFT Contrast 5. TFT Saturation <p>Favorite Settings:</p> <ol style="list-style-type: none"> 1. OSD Language ○ [Chinese / English] 2. Literal Code 3. Repeat Mode ○ [Close / Repeat Single / Repeat Current Folder / Repeat all Files] 4. On-line Device ○ [NAND/SD/MMC/MS] 5. Preset ○ [Restore factory settings] <p>Exit Setting:</p>
Calendar	In Main Menu, select Calendar option and press Confirm button, the system will enter into Calendar Setting. Then select Date Setting by pressing ○○ and press Confirm to enter into Calendar Setting, for example, edit 2008/08/08, use ○○ buttons to select Year, press ○ to move to Month for editing. Press ○ to select OK to confirm after the editing is OK and finally press ○ to select Exit and press Confirm to exit.

Menu Settings

Clock	In Main Menu, select Clock option and press Confirm button, the system will enter into Clock Setting. Then use ○○ buttons to select Time Setting and press confirm to enter into Time Setting. Use ○○ buttons to select Clock and press ○ to move to Minute for editing, press ○ to select OK to confirm when editing is OK, then press ○ to select Exit and press Confirm to exit calendar setting.
Alarm Clock	In Main Menu, select Alarm Clock and press Confirm button to enter into Using, press ○ to select On and press Confirm to Open Alarm Function Setting, use ○ button to select Time Setting and press Confirm to enter, then use ○○ buttons to set alarm time, after is OK, press ○ to select OK and press Confirm, finally use ○ to select Exit and press Confirm to exit.
Auto On / Off	In Main Menu, select Auto On / Off option and press Confirm to enter, use ○○○○ buttons to select On / Off to enable auto timer function On / Off. If user uses timer function, then use ○ button to select Time Setting to set On / Off time. After setting, use ○ to select Exit and press Confirm to exit.
Edit	<p>In Main Menu, select Edit and press Confirm button, under this mode, user may copy files from memory card built-in memory, and also may delete files from built-in memory.</p> <p>Copy: This function can be used to copy files from a memory card into internal memory, after enter into the Manager, use ○○ buttons to select corresponding files and press Confirm button. Then press ○ to select Edit and press Confirm, Copy/Delete will appear. Then use ○○ to select Copy and press Confirm, and press ○ to select Built-in Memory and press Confirm, repeat press ○ to select Edit and press Confirm, Paste will appear, then press Confirm button to complete the operation.</p> <p>Delete: This function can be used to delete files from a memory card, after enter into the Manager, use ○○ buttons to select corresponding files and press Confirm button, then press ○ to select Edit and press Confirm, Copy/Delete will appear. Then use ○○ to select Delete and press Confirm, select Yes and press Confirm button, file delete operation will be completed</p>
Favorites	This function is mainly playing images in built-in memory. In the Menu, select Favorites, press Confirm button the system will automatically play images in built-in memory
E-book	This function is mainly playing e-books in built-in memory. In the Menu, select E-book, press Confirm button the system will automatically preview e-books in built-in memory