

# User Manual

**Description of Products:** Spinforce RC Cars

**Model Number:** 90001(27.14MHz)

## **PACKING CONTENTS**

02 spare tires

1 screwdriver

1 arena

2 radio controls

2 cars

2 sets stickers

NOT included – 8AAA(LR03) alkaline batteries

## **HOW TO PLAY-MASTERING AND TIPS**

Turn on the cars by switching the on button underneath them.

Place the cars in the arena clockwise.

Find which is your controller. Each car has a different frequency and a matching controller.

Press the left button on the controller first. This button is the normal speed.

Still holding the left button, press the right button of the controller for Turbo speed.

The cars will change course when accelerating or decelerating. As it accelerates, it will move towards the outside of the arena. And as it decelerates, it will move towards the center.

Use your skill to expertly adjust your speed and get behind your opponent's car and try to knock him out of the arena.

Be careful not to run too fast or your car will get out of the arena.

If your car gets out, you lose the game.

If your car falls on the floor, the armor may come out. Its easy to plug it back.

## **BATTERY SAFETY INFORMATION**

Only adults should install and replace batteries.

Switch toy off before opening battery compartment.

Insert batteries correctly. Match positive+ and negative- signs.

Alkaline batteries are recommended for best performance.

Rechargeable batteries are not recommended.

If rechargeable batteries are used, they are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the product before they are charged.

Do not recharge non-rechargeable batteries.

Only use batteries specified.

Only use batteries of the same or equivalent type that are recommended for use.

Do not mix different types of batteries: alkaline, standard(carbon-zinc), or rechargeable(nickel cadmium).

Do not mix old and new batteries.

Remove dead or exhausted batteries.

Remove the batteries during long periods of non-use.

Always remove exhausted batteries from the toy.

Battery leakage and corrosion can damage this product.

Dispose of batteries safely. Recycle where available.

Do not dispose of batteries in a fire or attempt to open the outer casing.

Never short-circuit the battery terminals.

Do not immerse battery-operated toys in water. Wipe clean only.

## **SAFETY INFORMATION**

To prevent entanglement, keep hair and fingers away from wheels.

Do not insert the finger in the tire gap while working.

Sharp edges-Some parts contain sharp edges.

Do not use the product for anything other than its intended use.

Choking Hazard: Do not wear plastic bag on head, or cover the face with bag to prevent risk of suffocation.

Throw away plastic bag and packing materials. These are not part of the toy.

Read the instructions carefully and keep this sheet for future reference.

Do not bang or drop the product.

Do not place the car in any area where it will be subjected to direct sunlight or extreme high or low temperatures.

This toy is not waterproof.

Do not immerse this toy in water.

If it gets wet, immediately wipe it with a clean cloth to dry.

Install batteries as indicated in the instructions.

Not suitable for children under 5 years old.

Adult assembly required.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.