

**Wireless Trackball Mouse  
M-IPT10MRS series  
User Manual**

Compliant model: MIPT10MR, MGR10

## Precautions



This manual describes the important precautions you should take for safe operation of this product. Observe these precautions carefully to avoid personal injury, damage, fire, and other problems.

### ■ Meaning of symbols

#### **WARNING**

Failure to observe precautions carries the possibility of serious personal injury or death due to fire, electric shock, or other causes.

#### **CAUTION**

Failure to observe precautions may result in personal injury due to electric shock or other causes, and may damage other equipment.

 Prohibited action

 Mandatory action

 Situation that needs attention

 Notes and reference information

## WARNING

 **If a foreign object (water, metal chips) enters this product, stop using immediately and remove the batteries.**

Continuing to use the product as it is may cause a fire or an electric shock.

 **If this product behaves abnormally, such as by generating heat or smoke, or giving off strange smells, cease usage immediately and shut down the connected device. After confirming that the product is not generating heat that will cause burns, remove the batteries from the product. Afterwards, please contact your dealer.**

Continuing to use the product as it is may cause a fire or an electric shock.

 **Please do not drop or hit this product.**

**In the event that the product is damaged, cease usage immediately. Turn OFF the power and remove the batteries. Afterwards, please contact your dealer.**

Fires or electric shocks may occur if this product is used when damaged.

 **Do not attempt to disassemble, modify, or repair this product.**

Doing so may cause a fire, electric shock, or product damage.

Malfunctioning is not covered under warranty.

 **Do not put this product in fire.**

Breakage may cause fire or injury.

## CAUTION

 **Do not place this product in any of the following environments:**

- In a car exposed to sunlight or a place exposed to direct sunlight.
- In a place that becomes hot, such as around a heater.
- In a moist place or a place where condensation may occur.
- In an uneven place or a place exposed to vibration.
- In a place where a magnetic field is generated (such as near a magnet.)
- In a dusty place.



**This product does not have a waterproof structure. Use or store in a place not exposed to liquids such as water.**

Any liquid such as rain, water spray, juice, coffee, steam, and sweat, may cause this product to breakdown.



- Only use this trackball with PCs, smartphones, tablets, and video game systems.
- Do not use this product with any device that may significantly be affected in the case of this product malfunctioning.
- When you no longer need to use this product and the batteries, be sure to dispose of them in accordance with the local ordinances and laws of your area.

## ■ **Batteries**

### **CAUTION**



**Please use either AA alkaline batteries or AA manganese batteries.**



**When not using this product for long periods of time, remove the batteries.**

Not removing them may cause leakage or malfunction.

## ■ **Cleaning the Product**

If the body of this product becomes dirty, wipe it with a soft, dry cloth.



Using a volatile liquid such as paint thinner, benzene or alcohol may affect the material quality and/or discolor this product.

Please note the following for disinfection.



Gently soak a cleaning cloth, such as a microfiber cloth, in the disinfectant solution. Make sure there are no loose droplets and gently wipe the product using the cloth.

After wiping, dry thoroughly and wipe off any residual liquid.

\* Do not spray any liquid onto the product directly. Doing so can cause electric malfunctions.

### 

### **IMPORTANT**



**Do not spray any liquid onto the product directly.**

Not doing so can cause malfunctions.

 **Do not use organic solvents or ultraviolet lights.**

Usage can result in deterioration of the housing components or paints, which can cause damage to the exterior.

 **We recommend using disposable gloves.**

 **When using any alcohol-based products, please check that it is appropriate for the specific purpose and that it is used properly.**

 **Please note that the customer is fully responsible for repair costs in the event that the product is damaged or operates abnormally due to the disinfection process.**

 **We recommend that you disinfect your hands before and after using PCs and peripheral devices that are used by multiple people in order to prevent the spread of infection through the equipment.**

 **Please ensure to turn off any connected devices.**

- \* When in sleep or hibernation mode, turn off connected devices.
- \* Please unplug the AC adapter and power cable from the power outlet.

## Cautions for Wireless Equipment

This product is a wireless device that can use the entire 2.4 GHz band, and is able to avoid the mobile entity identification device range. The GFSK method is adopted as the radio wave method, and the interference distance is 10 m. The 2.4 GHz band is also used in medical devices, Bluetooth, and wireless LAN devices of the IEEE 802.11b/11g/11n standards.

- Before using this product, check that there are no other "radio stations" \* operating nearby.
- If electromagnetic interference occurs between this product and other "radio stations" \*, move this product to another location or stop using this product.

\* Other "radio stations" refer to industrial, scientific and medical devices using the 2.4 GHz band, the same as this product, other radio stations of this type, licensed radio station premises for a mobile object identification system that is used in factory production lines, certain non-licensed low power radio stations, and amateur radio stations.

## **WARNING**

 • Do not use in equipment which may cause serious effects due to it malfunctioning. There are rare cases in which an external radio wave at the same frequency, or the radio wave emitted from a mobile phone, causes this product to malfunction, slow down, or fail to operate.

• Do not use this product in places where radio wave usage is prohibited, such as hospitals. Radio waves of this product may affect electronic devices and medical devices (for example pacemakers).

- Due to the possibility of hindering safe navigation of aircraft, use of wireless trackball in aircraft is prohibited by the Civil Aeronautics Act. Turn off the power of the wireless trackball before boarding and do not use after boarding.

\* ELECOM is not liable for any accidents or any indirect or consequential damage incurred due to the failure of this product.

## How to use



### Items included in this package



The following are included in this package. Verify the package to ensure all items are accounted for prior to using this product. While every effort has been made to ensure proper packaging, in the event that any shortage or damage is discovered, please contact the retailer where the product was purchased.

#### Product main unit

- **Trackball main body × 1**
- **Receiver unit × 1**

#### Consumables

- **Ball (36 mm) × 1**
- **Bearing support parts × 3**
- **AA alkaline dry cell batteries for confirming operability × 2**
- **USB Type-C® to USB-A cable (approx. XX m) × 1**
- **Removal tool × 1**




The ball, support unit, batteries and receiver unit are already installed on the trackball body.

Please remove the battery insulating pull tab before use. Also, take out the receiver unit as needed.

## Name and function of each part



### ■ Trackball

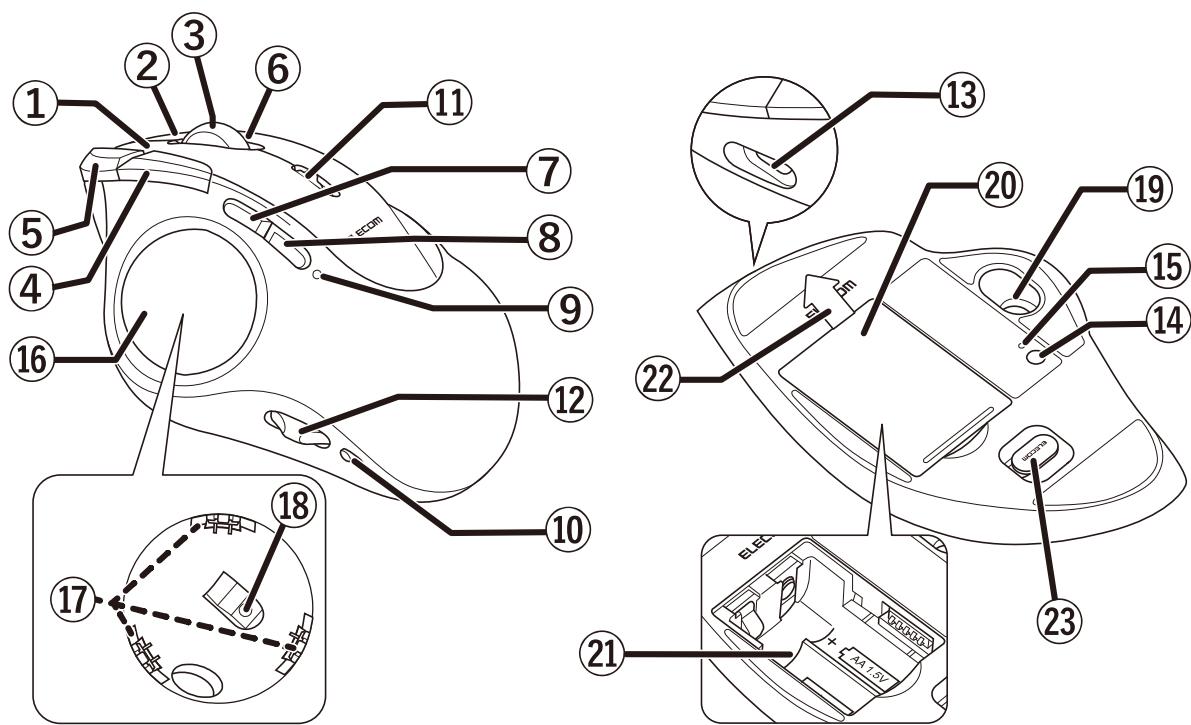

### ① Left button

To left click on your PC.


### ② Right button

To right click on your PC.

### ③ Tilt wheel

Rotate forward and backward or click like a button to operate your PC.

You can scroll horizontally by tilting the wheel to the left or right.

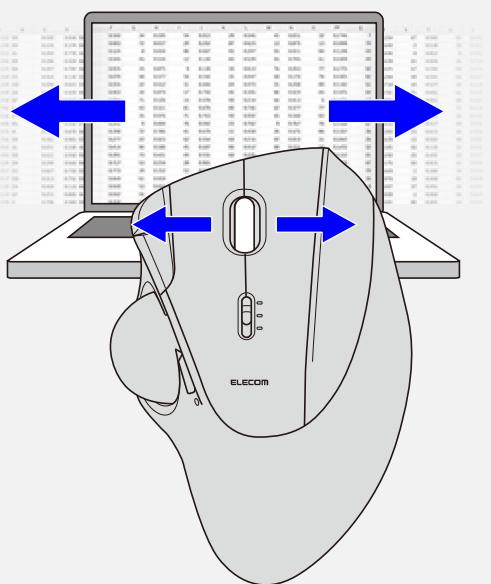

You will need to install the "ELECOM Mouse Assistant V6 Windows version" from our website to use the left and right scroll function on Windows. Refer to "[Install ELECOM Mouse Assistant V6](#)".

### ④ "Back" button

\* Screenshots will be replaced with English version when it's ready.

Performs the "Back" function on the Web browser.

## ⑤ "Forward" button

Performs the "Forward" function on the Web browser.



You will need to install the "ELECOM Mouse Assistant V6 Mac version" from our website to use the "Back" and "Forward" button on Mac. Refer to "[Install ELECOM Mouse Assistant V6](#)".

## ⑥ Multi-function button 1

## ⑦ Multi-function button 2

## ⑧ Multi-function button 3

Functions can be assigned to this button. At the time of purchase, no functions have been assigned.



In order to assign functions to buttons, download and install "ELECOM Mouse Assistant V6" from our company website. Refer to "[Install ELECOM Mouse Assistant V6](#)".


## ⑨ LED light

- The status light will light up for a period of time when the mouse is switched ON.
- When the connection destination is switched, this lights up for 3 seconds in the following colors.
  - Bluetooth connection: Blue
  - Wireless connection: White
  - Wired connection: Green
- Blinks blue while pairing with a Bluetooth connection.
- LED starts blinking red when the battery level is low.
- When the count number is changed, the current count number is shown by the color and number of blinks.
  - Blink once: Low/500 counts

- Blink twice: Mid/1000 counts
- Blink thrice: High/1500 counts


## ⑩ Power switch

Turn the trackball power ON and OFF.

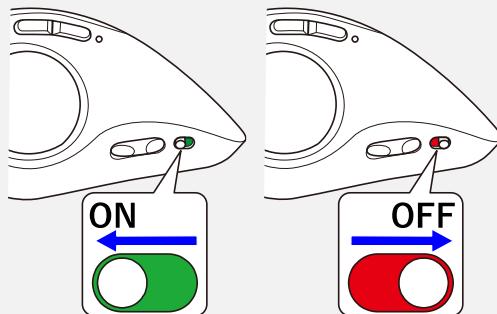

## ⑪ Pointer speed change switch

Count number (pointer movement speed) can be changed between 3 stages, Low/Mid/High.

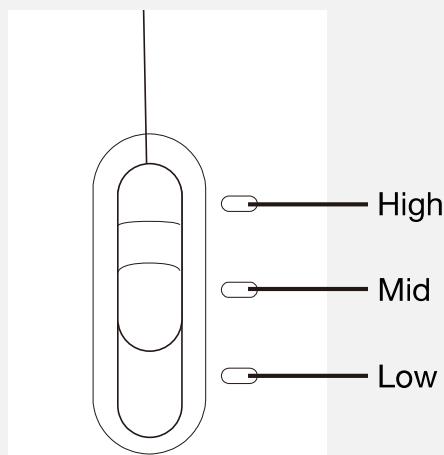

When the count number is changed, the light blinks depending on the stages.

- Blink once: Low/500 counts
- Blink twice: Mid/1000 counts
- Blink thrice: High/1500 counts



The count number for Low/Mid/High can be changed. In order to do so, download and install "ELECOM Mouse Assistant V6" from our company website. Refer to "[Install ELECOM Mouse Assistant V6](#)".

## ⑫ Connection selection dial

Turn this to switch between devices connected to this product.

Please refer to "[Switch connected device](#)".

## ⑬ USB Type-C port

- Connect to your computer by wired connection using the included USB Type-C - USB-A cable.
- When the separately sold battery pack is stored in the battery compartment, it can be charged by plugging in the included USB Type-C - USB-A cable.

## ⑯ Pairing button

Pair this product with your PC's Bluetooth module or a Bluetooth adapter.

## ⑯ Connection destination light (white)

- Blinks when the Bluetooth connection is in the pairing standby state.
- It turns off when pairing is complete.

## ⑯ Ball (36mm)

Rotate using your fingertips to move the cursor.



Separately sold ball

- Replacement 36 mm ball (M-B10SV)

## ⑯ Support parts (bearings)

Support the ball.

Support parts are consumables. Compatible support parts can be purchased separately to replace existing support parts.



Optional Parts

- Replacement bearing support parts (M-BS10)
- Replacement artificial ruby support parts (M-RS10)

## ⑯ Optical sensor (under the ball)

This sensor will detect the trackball's movements when you move the trackball.

## ⑯ Ball removal hole

Push the ball out from here to clean the support parts in the housing.

\* See "[How to clean the trackball](#)" for details.

## ⑯ Battery cover

Remove this cover and insert batteries or a battery pack (sold separately).

## ⑯ Battery storage compartment

Holds batteries or a battery pack (sold separately).



Optional Parts


- Battery Pack (M-BP10)

## ⑯ Battery insulating tab


Remove this tab before using.

## ⑯ Receiver unit storage compartment

The receiver unit can be stored here when the trackball is not in use.

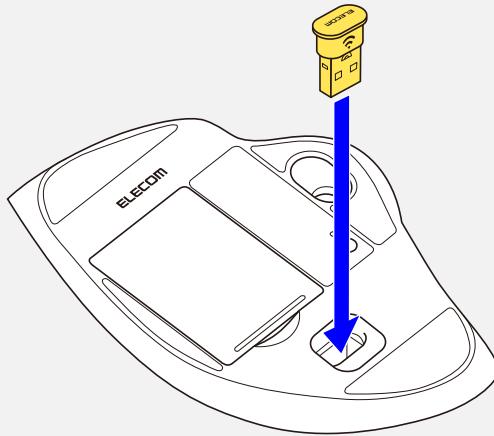


## ■ Receiver unit

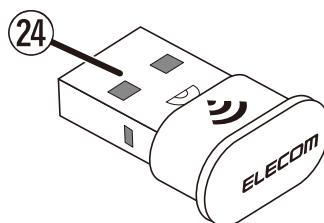

### ② USB Type-A plug

Connects to the PC USB-A port.

## ■ Removal tool

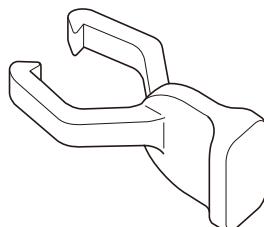

\* See "How to replace support parts" for details.

## Switch connected device

You can switch between the following connection destinations using the connection selection dial.

- 2 Bluetooth devices (⌘1 ⌘2)
- 1 wireless connection (Wi-Fi)
- 1 wired connection (Ethernet)
- 2 custom connections (⚙2 ⚙1)




In order to set up custom connections, download and install "ELECOM Mouse Assistant" from our company website. Refer to "[Install ELECOM Mouse Assistant V6](#)".

### 1) Switch between connections using the dial.

When the connected device is ⌘1 or ⌘2, the LED light is blue. When the connected

device is  , the LED light is white. When the connected device is  , the LED light is green.

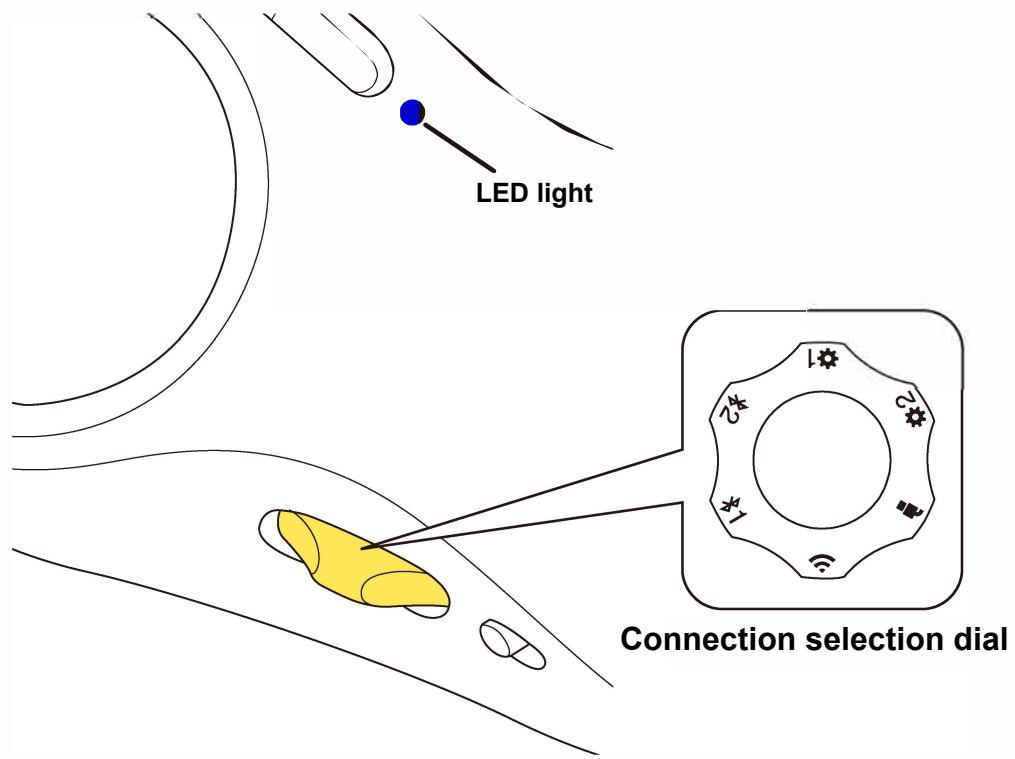

When paired with only one of either 1 or 2 Bluetooth device, the existing connection will be lost when you switch to the unpaired channel.

Switching back to the channel paired with a connected device will restore the connection.



To pair, please refer to "How to use" → "Connecting and setting up the trackball" → (OS specific) → "2. Pair with PC".

## Connecting and Configuring the Trackball



### Windows®




#### Using Bluetooth connection




#### 1. Turn the power ON


1) Remove the battery cover.

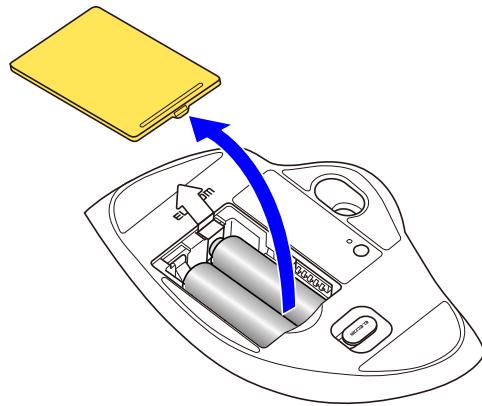


**2) Remove the battery insulating tab.**

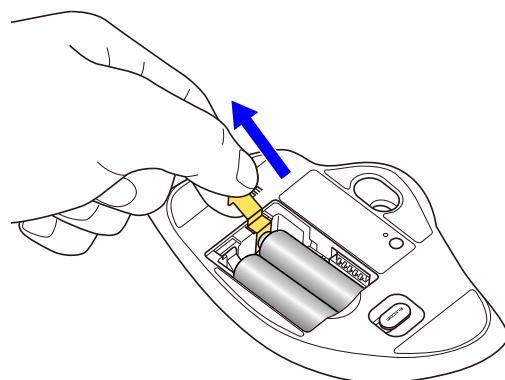

**3) Put the battery cover back on.**

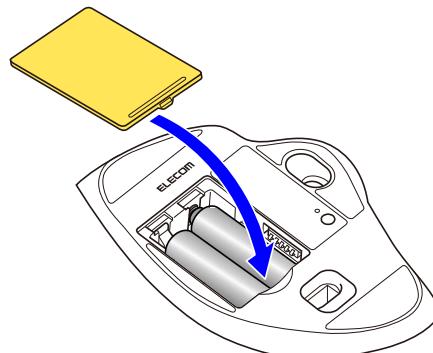

**4) Slide the power switch to the ON position.**

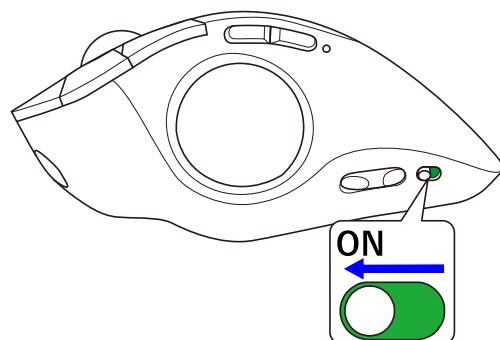

\* When the battery level is running low, the LED light will blink red slowly for a period of time.



**Power-saving mode**


When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.


\* For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

### Replacing the batteries...


#### 1) Remove the battery cover.

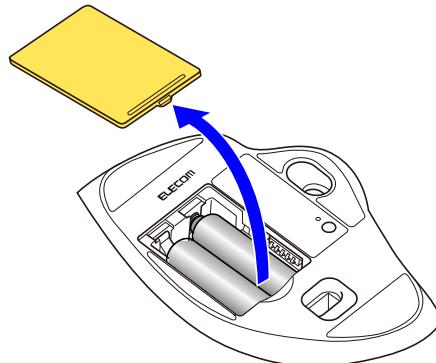

#### 2) Remove the batteries.

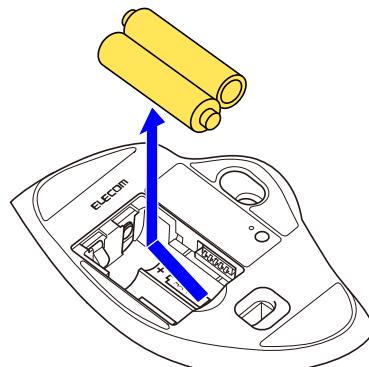

#### 3) Insert the batteries according to the positive (+) and negative (-) marks indicated in the battery compartment.

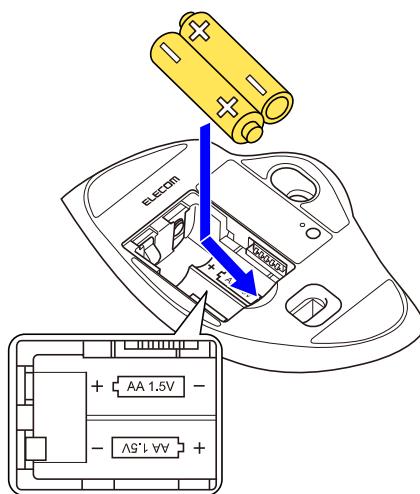


• Insert the batteries in the correct positive (+) and negative (-) polarity direction.

\* Screenshots will be replaced with English version when it's ready.

- Do not use batteries of different types or use a mixture of old and new batteries. The batteries may leak and cause malfunction.

#### 4) Replace the battery cover.

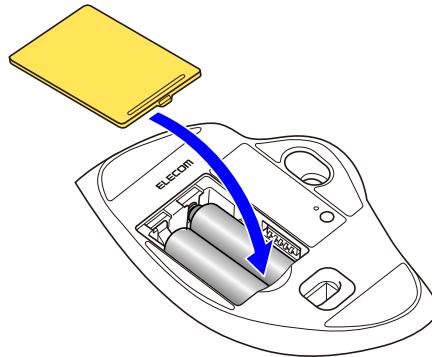

This product can be charged using the included USB Type-C - USB-A cable when the separately sold battery pack is inserted into the battery compartment.

## 2. Pairing with a PC

- Pairing involves registering Bluetooth devices (in this case, this product and your device) with each other, and authorizing a connection between them.
- This section covers Windows standard Bluetooth functions. Depending on your device or Bluetooth adaptor, unique Bluetooth functions may be used. Please read the respective manuals for each function.
- Use your current mouse or the touchpad on your device to operate your device until pairing is complete.
- The following instructions are for Windows 11 (23H2).

### 1) Right click on "Start" on the bottom of the screen and then, click on "Settings".


The "Settings" page will appear.




\* Screenshots will be replaced with English version when it's ready.

## 2) Under "Home", click "Add Device" under "Bluetooth Devices".

The "Add Devices" page will appear.

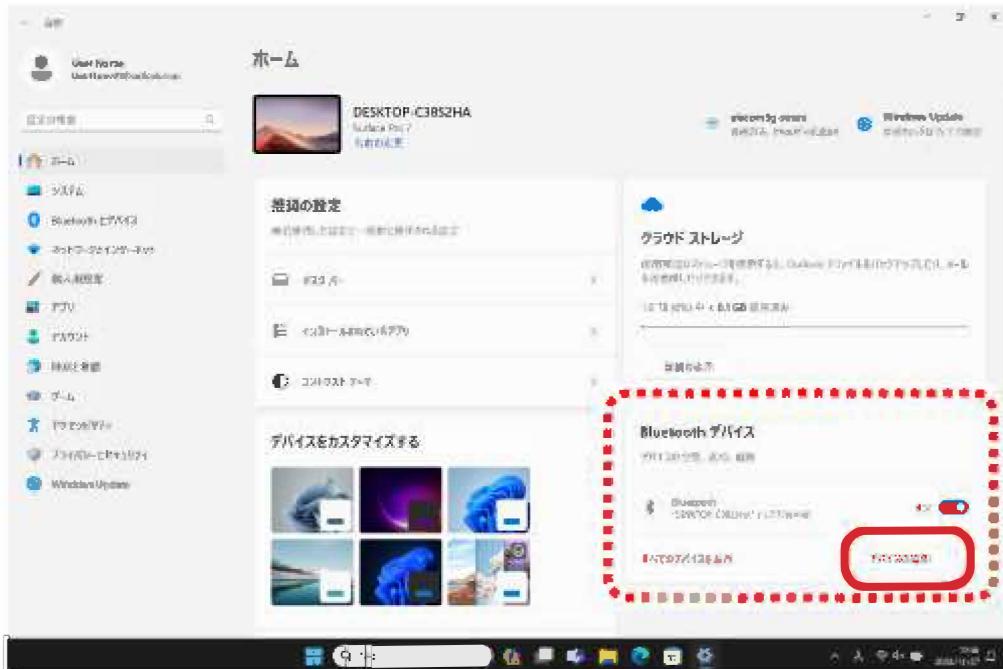

If "Bluetooth" is off, turn it on.

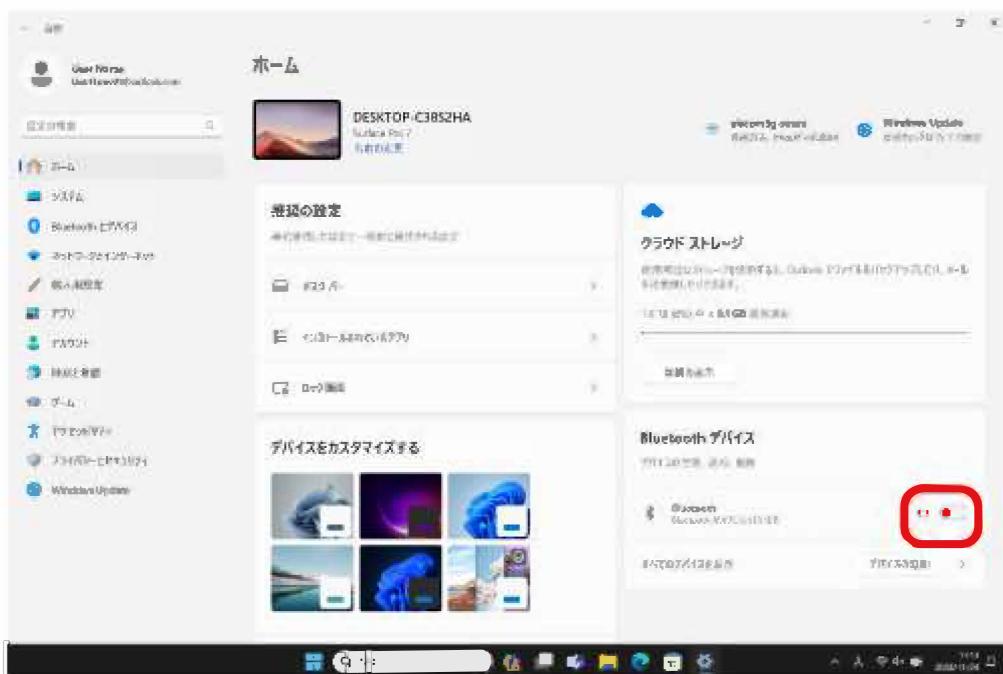

## 3) Turn the connection selection dial to either $\textcircled{*1}$ or $\textcircled{*2}$ to select the connection destination.

- You can register up to 2 Bluetooth® devices.
- The selected connected Bluetooth device will be registered under your paired devices.



Please refer to "Switch connected device" to switch between connected devices.

## 4) Click "Bluetooth".

\* Screenshots will be replaced with English version when it's ready.




**5) When the add device screen is displayed, hold down the pairing button on the bottom for 3-4 seconds.**

The pairing mode is entered, and the LED light on the side (blue) and the connection destination light (white) on the bottom will blink slowly.



Connection destination light

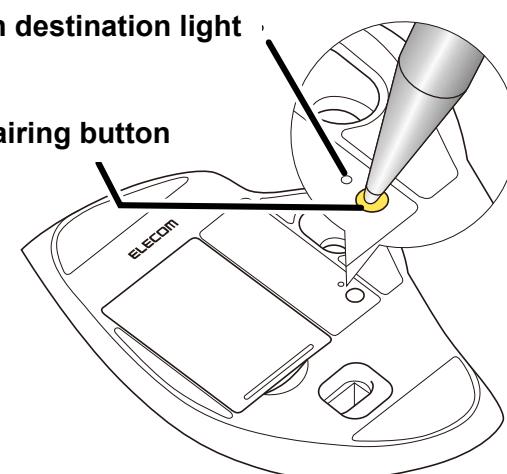

**6) Click on "ELECOM IST PRO".**

\* Screenshots will be replaced with English version when it's ready.

Pairing begins.




7) When the status changes to "Your device is ready to go!", click on "Finish".



When pairing is complete, the connection destination light (white) on the bottom will blink quickly then stop. The LED light on the side also lights up blue for 3 seconds.

8) Pairing is complete when this product is added to "Bluetooth Devices" and the status is "Connected".

\* Screenshots will be replaced with English version when it's ready.

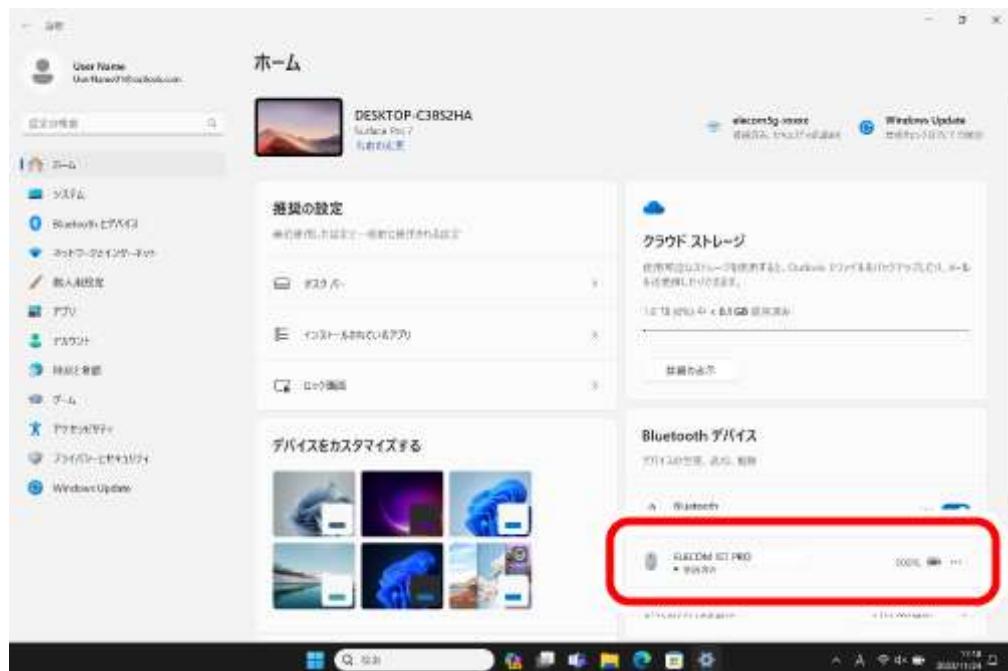


You can now use the trackball.

### Using wireless connection




## 1. Turn the power ON


### 1) Remove the battery cover.

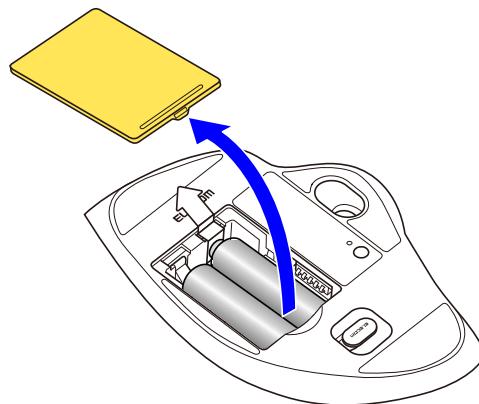


### 2) Remove the battery insulating tab.

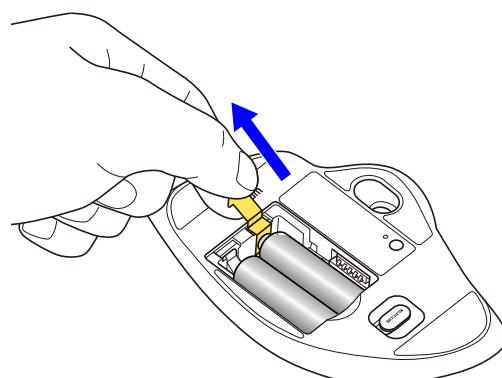


### 3) Put the battery cover back on.

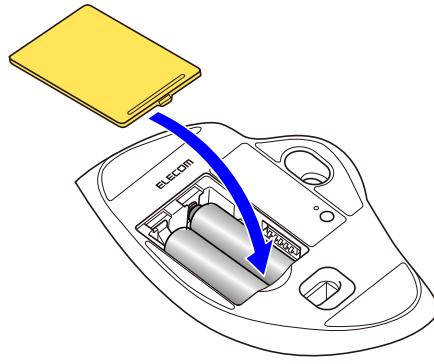

**4) Remove the receiver unit.**

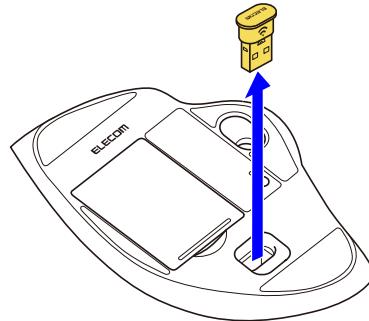

**5) Slide the power switch to the ON position.**

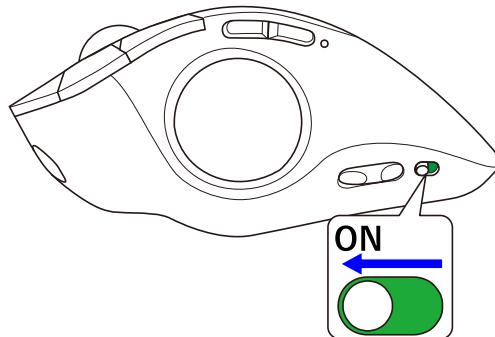

\* When the battery level is running low, the LED light will blink red slowly for a period of time.



**Power-saving mode**


When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.


\* For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

**Replacing the batteries...**


**1) Remove the battery cover.**

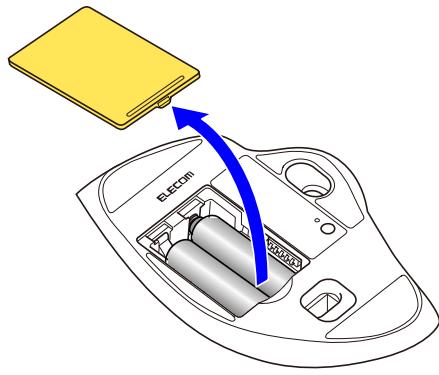

**2) Remove the batteries.**

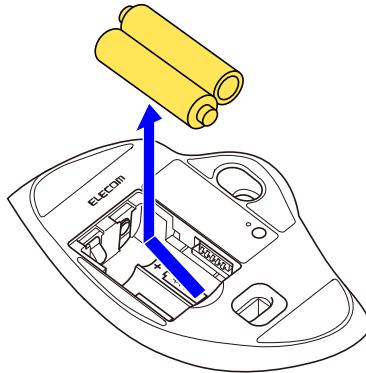


**3) Insert the batteries according to the positive (+) and negative (-) marks indicated in the battery compartment.**

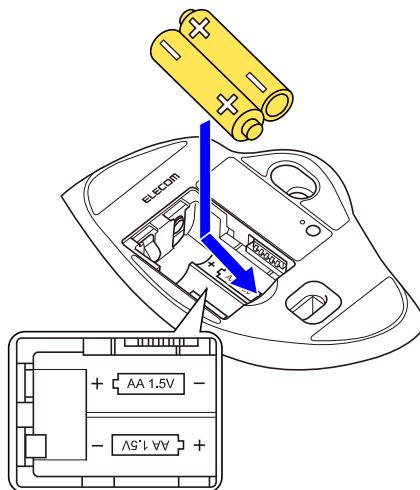

- Insert the batteries in the correct positive (+) and negative (-) polarity direction.
- Do not use batteries of different types or use a mixture of old and new batteries. The batteries may leak and cause malfunction.

**4) Replace the battery cover.**

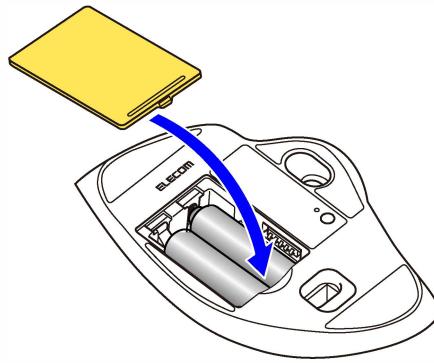


This product can be charged using the included USB Type-C - USB-A cable when the separately sold battery pack is inserted into the battery compartment.

## 2. Connect to a PC

### 1) Start up your PC.

Please wait until the PC has started up and can be operated.

### 2) Insert the receiver unit into the PC's USB-A port.

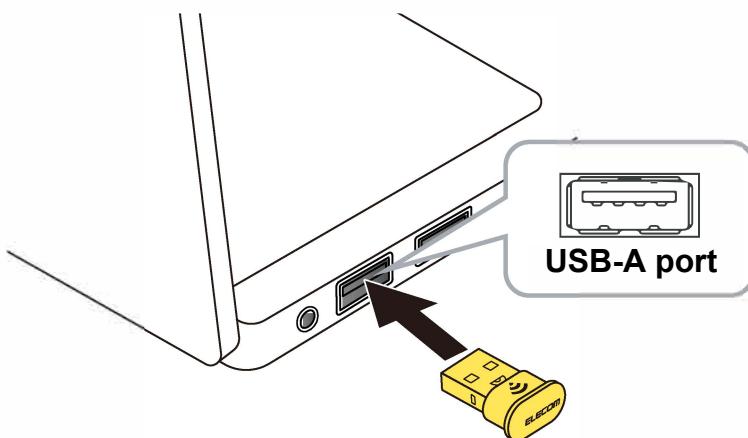

You may use any USB-A port.



- Ensure that the connector is correctly oriented to the port.
- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.
- Do not touch the terminal portion of the USB connector.

### 3) Turn the connection selection dial to to select the connection destination.



Please refer to "Switch connected device" to switch between connected devices.



#### When removing the receiver unit

This product supports hot plugging. The receiver unit can be removed while the PC is on.

### 4) The driver is automatically installed and the trackball can be used.

The LED lights up white for 3 seconds.


You can now use the trackball.

### Using wired connection



#### Connecting to a PC


- 1) Plug the Type-C connector of the included USB Type-C - USB-A cable to the USB Type-C port of this product.

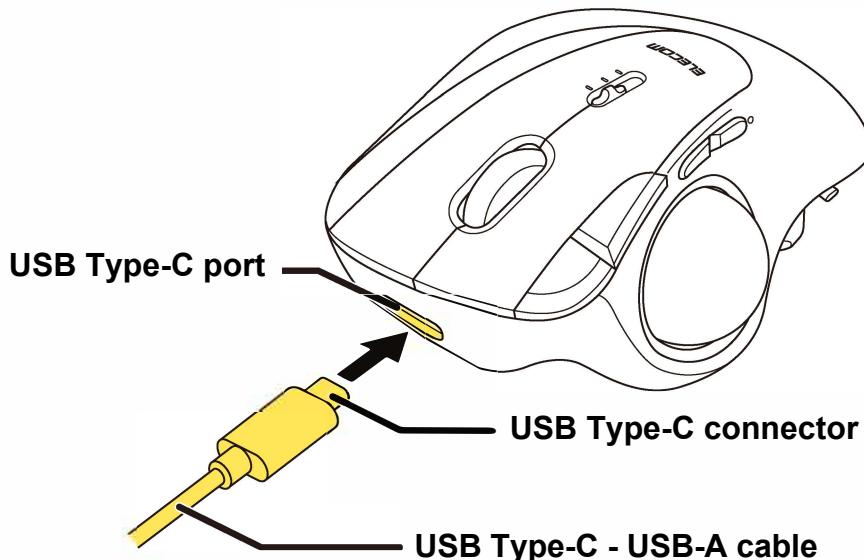

- 2) Start up your PC.

Please wait until the PC has started up and can be operated.

- 3) Plug the USB-A connector of the USB Type-C - USB-A cable into the USB-A port of the PC.

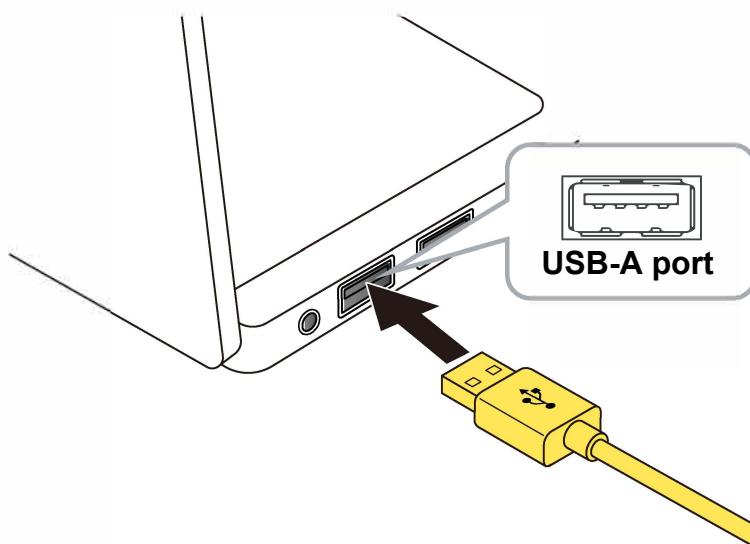

You may use any USB-A port.



- Do not pull or bend the cable using excessive force. A fire or electric shock may result from broken wires.
- Ensure that the connector is correctly oriented to the port.

- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.
- Do not touch the terminal portion of the USB connector.

#### 4) Turn the connection selection dial to to select the connection destination.



Please refer to "Switch connected device" to switch between connected devices.



##### To remove the trackball

This product supports hot plugging. The trackball may be removed while your PC is in operation.

#### 5) The driver is automatically installed and the trackball can be used.

The LED lights up green for 3 seconds.

#### You can now use the trackball.

By downloading and installing the "ELECOM Mouse Assistant V6" from our company website, settings such as custom connections, CPI switching, and function assignment can be performed. Please proceed to "[Install ELECOM Mouse Assistant V6](#)".

### Change the mouse pointer speed

Adjust the mouse pointer movement speed on your PC if the mouse pointer moves too fast or too slow.


#### ■ For Windows 11

##### 1) Click on "Start" on the bottom of the screen and click on "Settings".


The "Settings" page will appear.

##### 2) Click on "Bluetooth & devices" and then "Mouse".

\* Screenshots will be replaced with English version when it's ready.

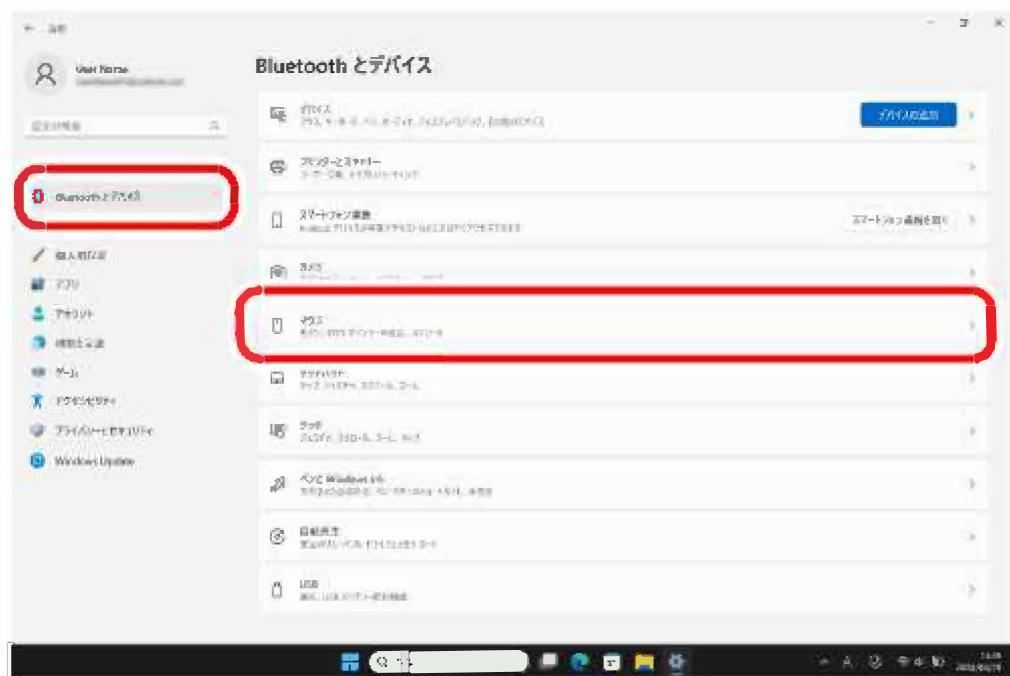

- 3) Adjust the “Mouse pointer speed” slider bar to adjust the mouse pointer movement speed.

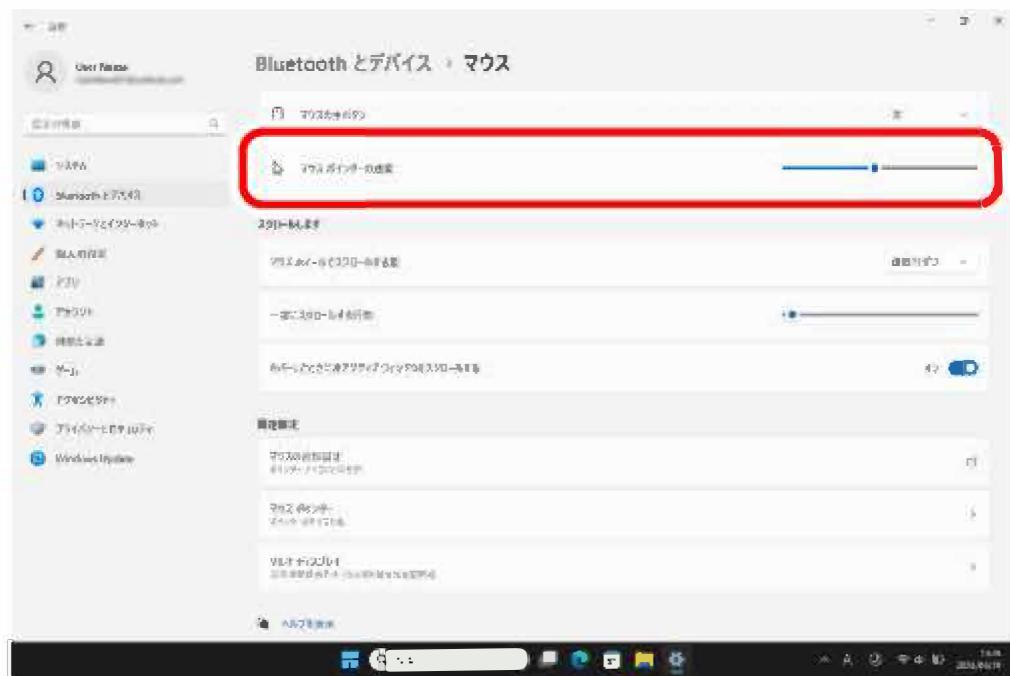

## ■ For Windows 10


- 1) Open “Mouse” properties.

From the start menu, click the Settings icon, select “Devices” → “Mouse”, then click “Additional mouse options” under “Related Settings”.

- 2) Select the “Pointer Options” tab.

- 3) Adjust the “Select a pointer speed” slider bar to adjust the mouse pointer movement speed.

\* Screenshots will be replaced with English version when it's ready.

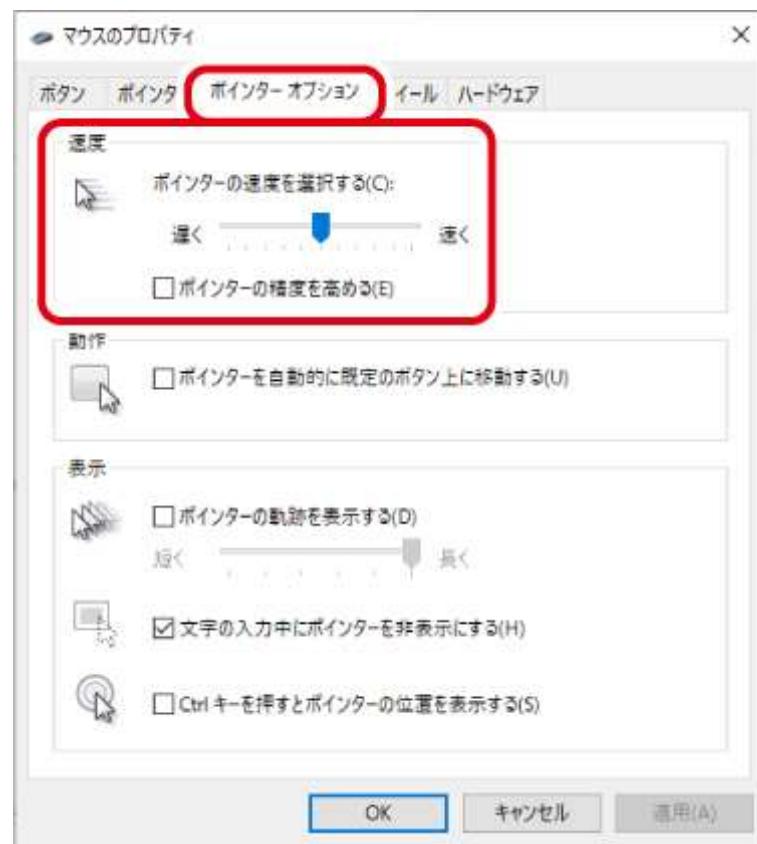


## Change the number of lines scrolled in one wheel turn

### ■ For Windows 11

1) Click on "Start" on the bottom of the screen and click on "Settings".


The "Settings" page will appear.

2) Click on "Bluetooth & devices" and then "Mouse".

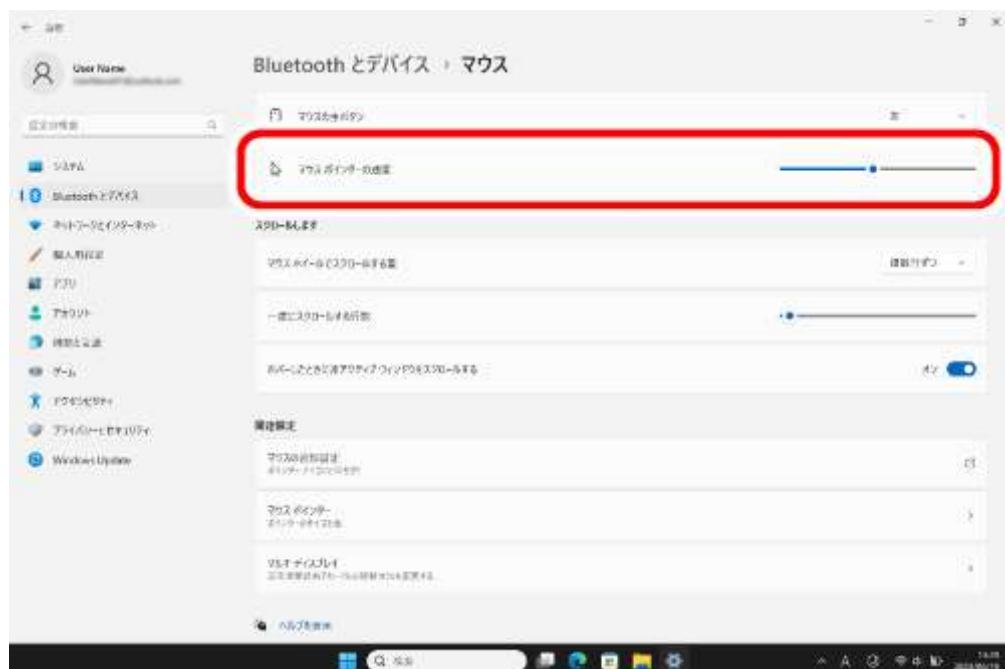

3) Adjust the "Lines to scroll at a time" slider bar to adjust the number of lines per scroll.

\* Screenshots will be replaced with English version when it's ready.

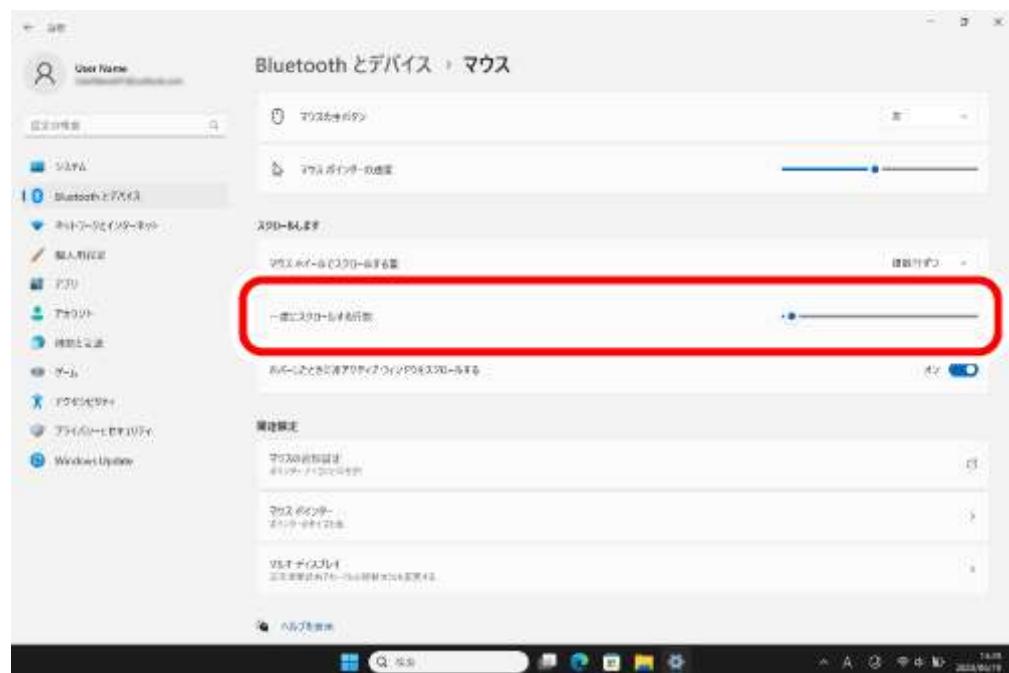


## ■ For Windows 10

### 1) Open "Mouse" properties.

From the start menu, click the Settings icon, select "Devices" → "Mouse", then click "Additional mouse options" under "Related Settings".


### 2) Select the "Wheel" tab.

### 3) Change the value of "The following number of lines at a time" under "Roll the wheel one notch to scroll"

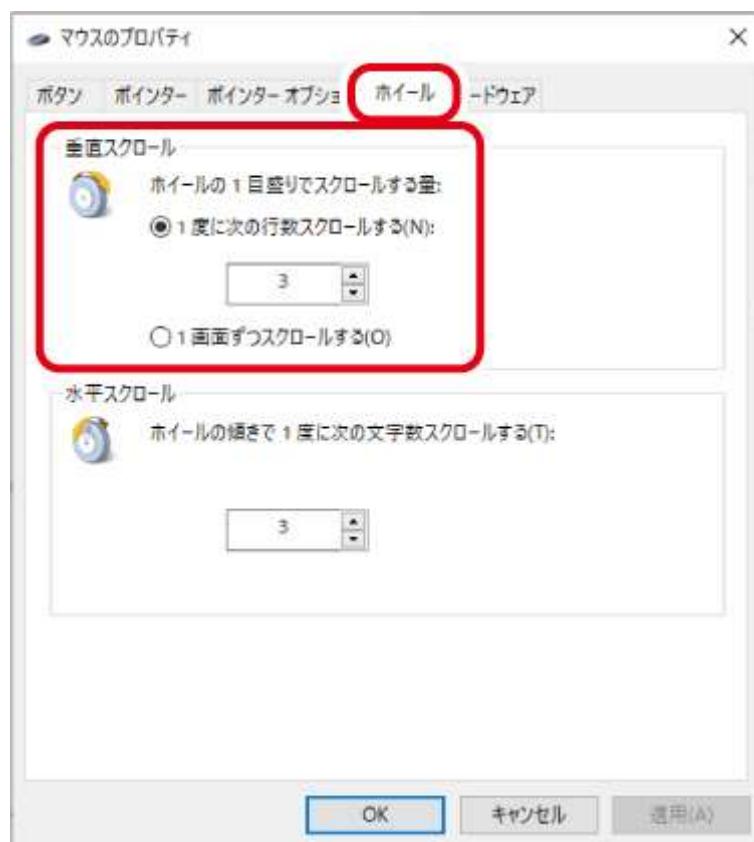


## 1. Turn the power ON


1) Remove the battery cover.

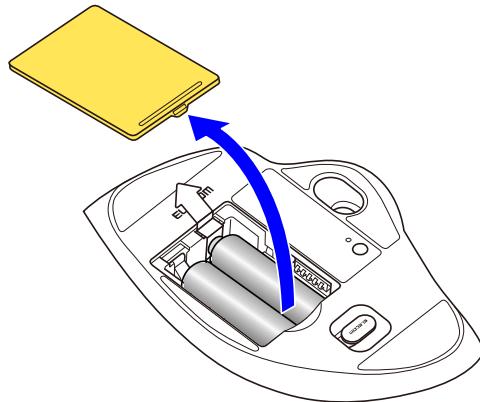


2) Remove the battery insulating tab.

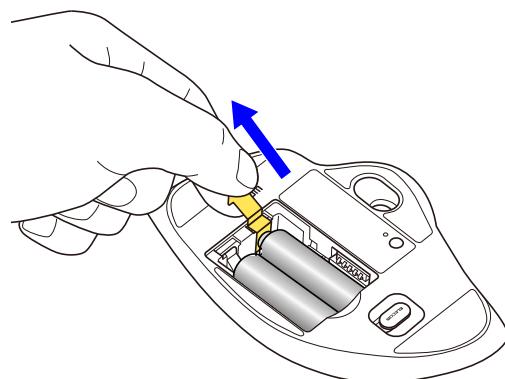

3) Put the battery cover back on.

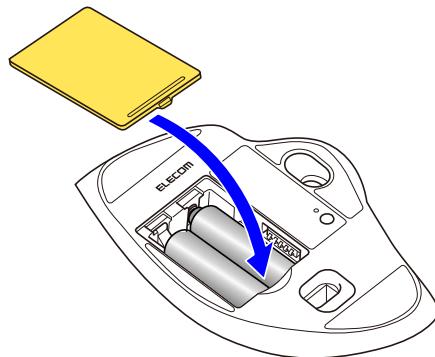

4) Slide the power switch to the ON position.

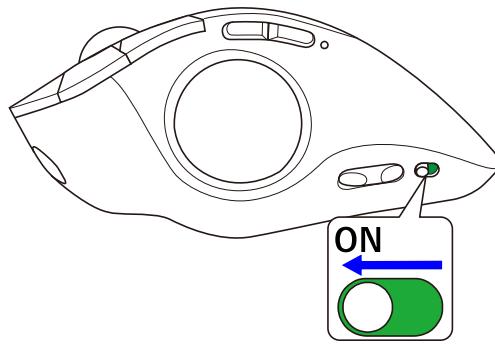

\* When the battery level is running low, the LED light will blink red slowly for a period of time.



### **Power-saving mode**


When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.


\* For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

### **Replacing the batteries...**


#### **1) Remove the battery cover.**

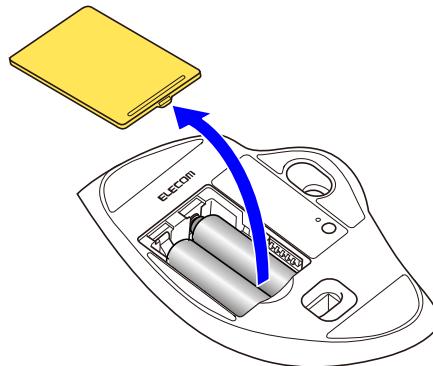

#### **2) Remove the batteries.**

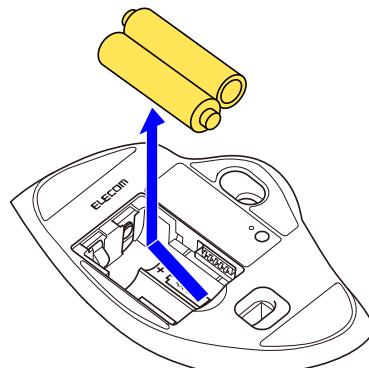


#### **3) Insert the batteries according to the positive (+) and negative (-) marks indicated in the battery compartment.**

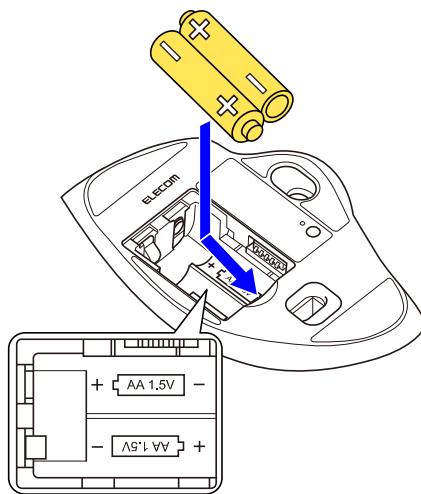

- Insert the batteries in the correct positive (+) and negative (-) polarity direction.
- Do not use batteries of different types or use a mixture of old and new batteries. The batteries may leak and cause malfunction.

#### 4) Replace the battery cover.

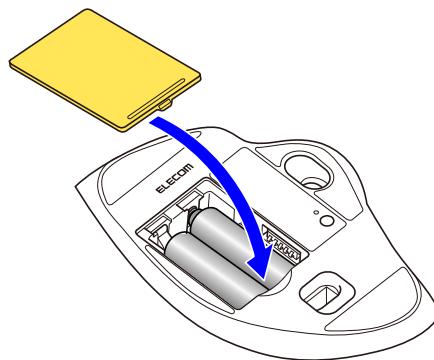

This product can be charged using the included USB Type-C - USB-A cable when the separately sold battery pack is inserted into the battery compartment.

## 2. Pairing with a PC

- Pairing involves registering Bluetooth devices (in this case, this product and your device) with each other, and authorizing a connection between them.
- This section covers macOS standard Bluetooth functions. Depending on your device or Bluetooth adaptor, unique Bluetooth functions may be used. Please read the respective manuals for each function.
- Use your current mouse or the touchpad on your device to operate your device until pairing is complete.
- The following instructions are for macOS Ventura (13).

### 1) From the Apple menu, click on “System Settings...”


The System Settings window will appear.

\* Screenshots will be replaced with English version when it's ready.



## 2) Click on "Bluetooth" to turn on "Bluetooth".

The "Bluetooth" system settings page will appear.

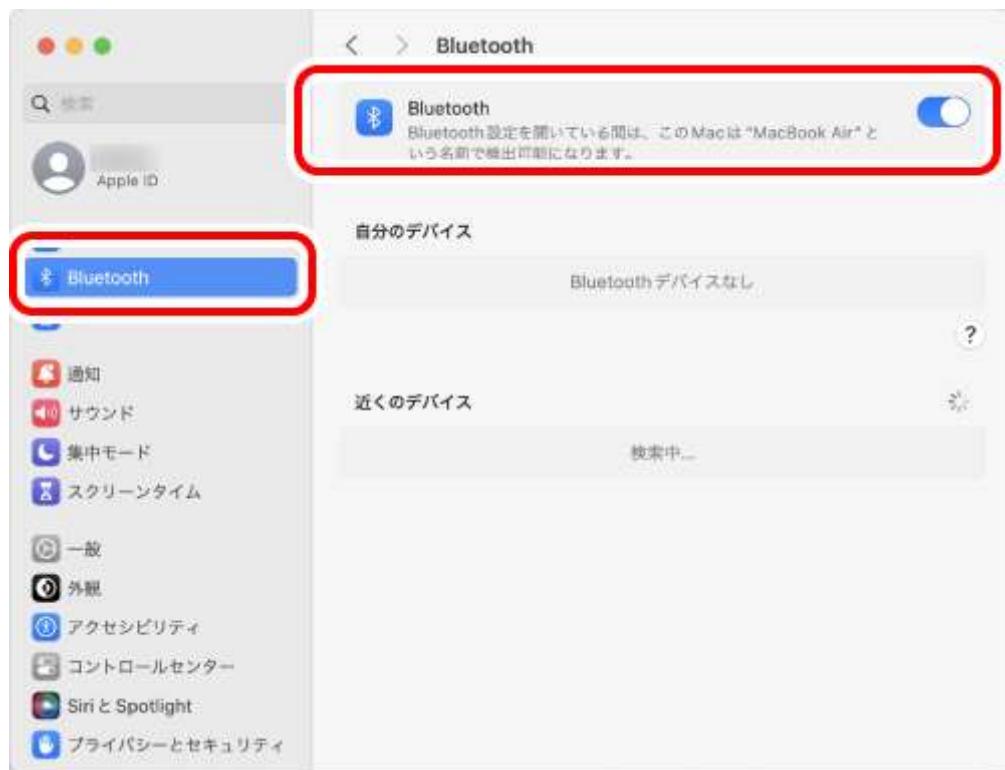

## 3) Turn the connection selection dial to either \*1 or \*2 to select the connection destination.

- You can register up to 2 Bluetooth® devices.
- The selected connected Bluetooth device will be registered under your paired devices.




Please refer to "Switch connected device" to switch between connected devices.

\* Screenshots will be replaced with English version when it's ready.


#### 4) During the device search, hold down the pairing button on the bottom for 3-4 seconds.

The pairing mode is entered, and the LED light on the side (blue) and the connection destination light (white) on the bottom will blink slowly.

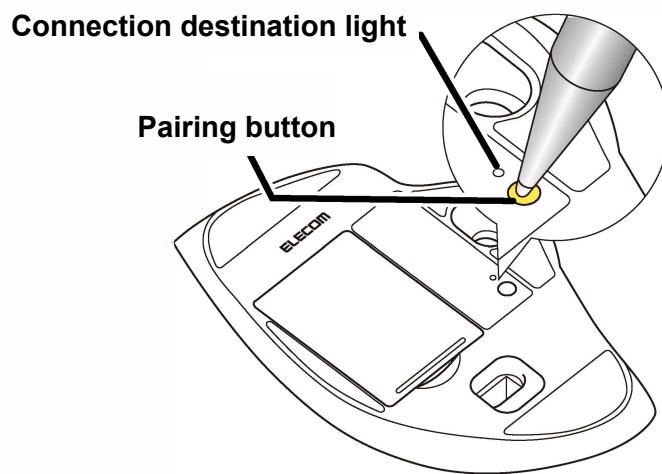


#### 5) When "ELECOM IST PRO" is detected under "Nearby Devices", click "Connect".

Pairing begins.

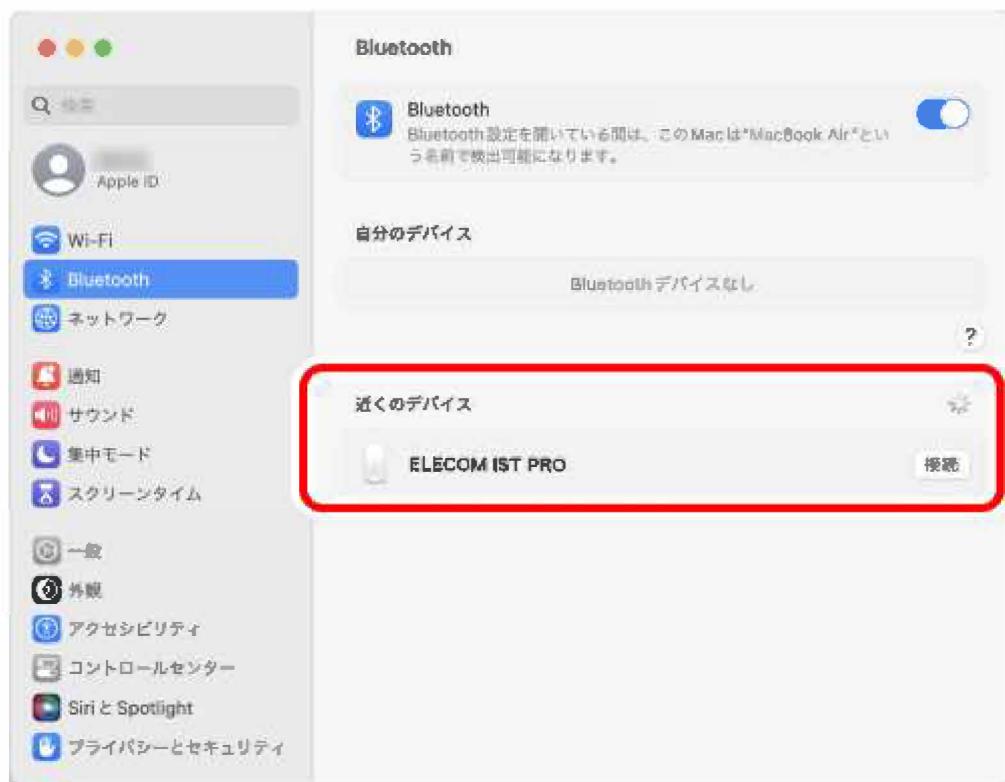

#### 6) Pairing is complete when the status of "ELECOM IST PRO" changes to "Connected".

\* Screenshots will be replaced with English version when it's ready.

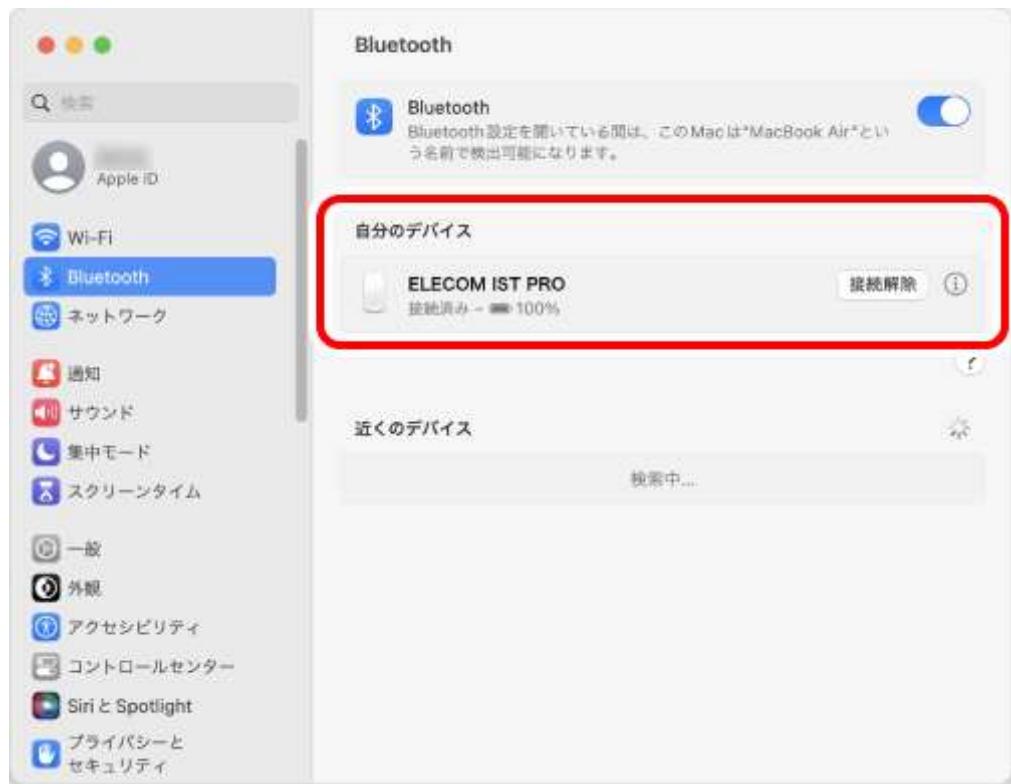


When pairing is complete, the connection destination light (white) on the bottom will blink quickly then stop. The LED light on the side also lights up blue for 3 seconds.

**You can now use the trackball.**


### Using wireless connection

#### 1. Turn the power ON


##### 1) Remove the battery cover.

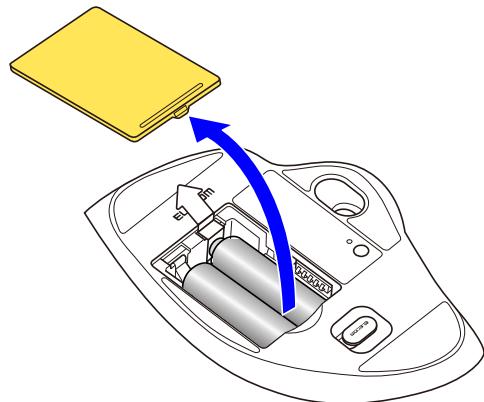


##### 2) Remove the battery insulating tab.

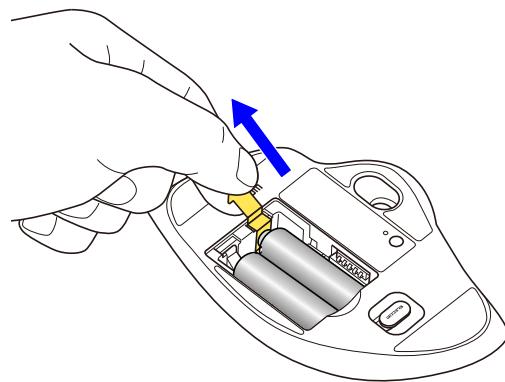


**3) Put the battery cover back on.**

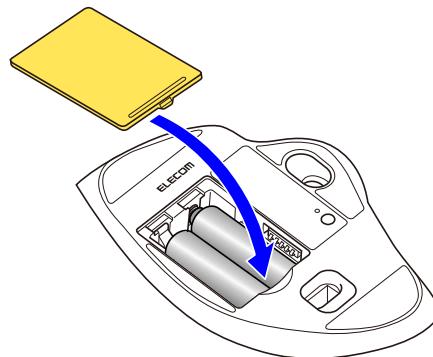

**4) Remove the receiver unit.**

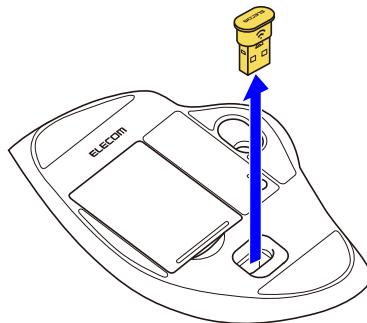

**5) Slide the power switch to the ON position.**

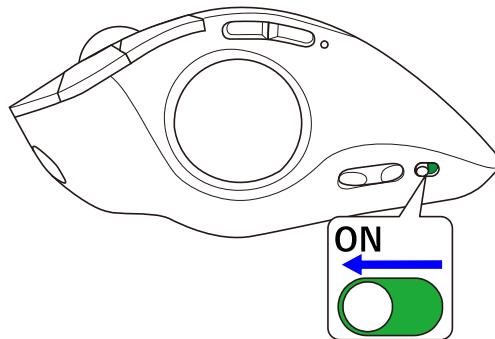

\* When the battery level is running low, the LED light will blink red slowly for a period of time.



**Power-saving mode**


When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.


\* For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

## Replacing the batteries...


### 1) Remove the battery cover.

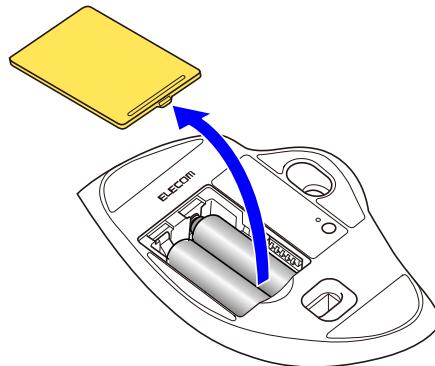

### 2) Remove the batteries.

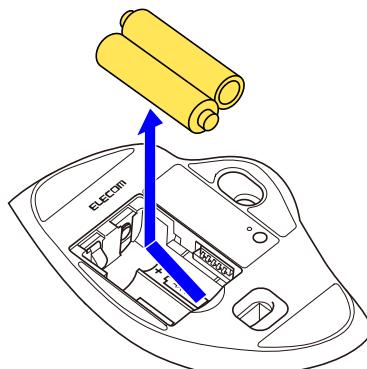


### 3) Insert the batteries according to the positive (+) and negative (-) marks indicated in the battery compartment.

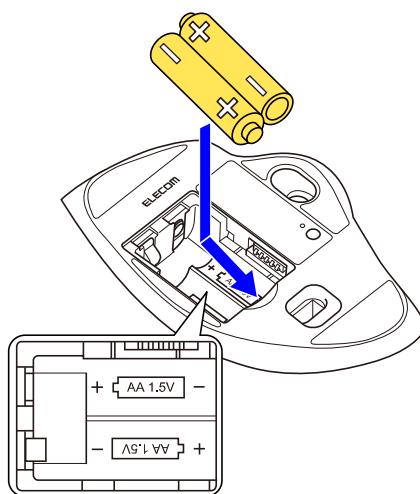

• Insert the batteries in the correct positive (+) and negative (-) polarity direction.

- Do not use batteries of different types or use a mixture of old and new batteries. The batteries may leak and cause malfunction.

#### 4) Replace the battery cover.

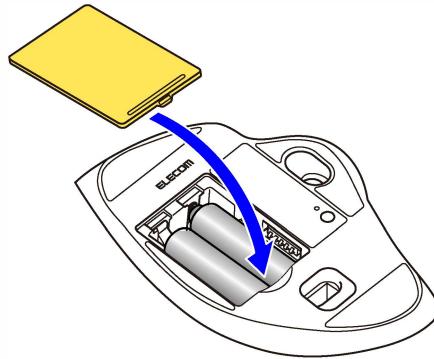


This product can be charged using the included USB Type-C - USB-A cable when the separately sold battery pack is inserted into the battery compartment.

## 2. Connect to a PC

### 1) Start up your PC.

Please wait until the PC has started up and can be operated.


### 2) Insert the receiver unit into the PC's USB-A port.

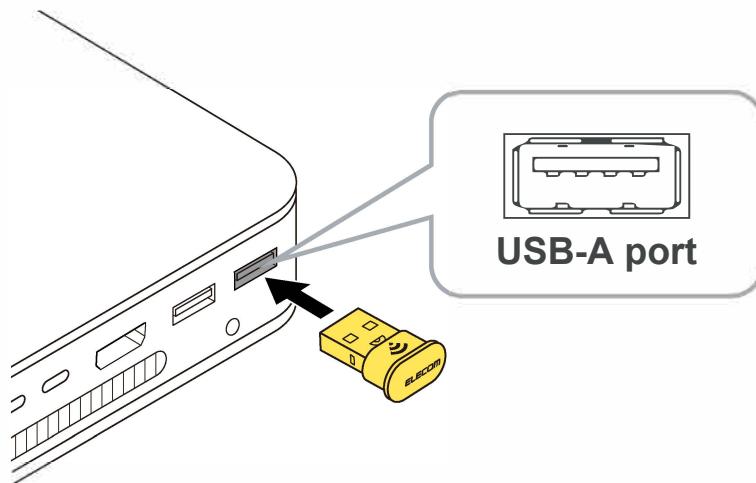

You may use any USB-A port.



- For terminals that do not have a USB-A port, such as a MacBook, use the USB Type-C® hub.

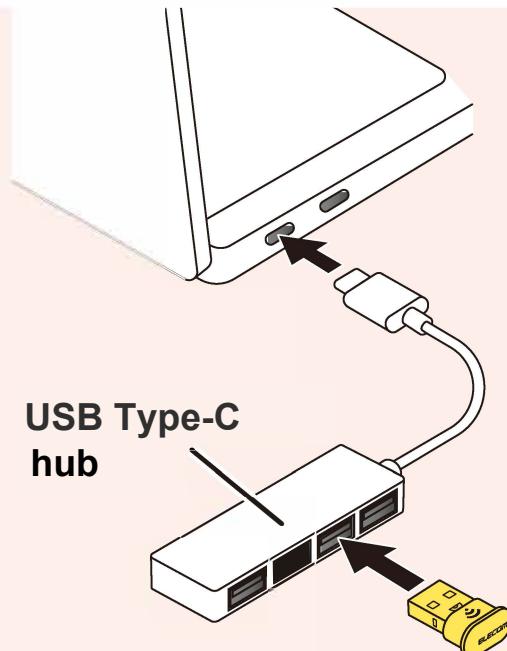

- Ensure that the connector is correctly oriented to the port.
- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.
- Do not touch the terminal portion of the USB connector.

### 3) Turn the connection selection dial to to select the connection destination.



Please refer to "Switch connected device" to switch between connected devices.



#### When removing the receiver unit

This product supports hot plugging. The receiver unit can be removed while the PC is on.

### 4) The driver is automatically installed and the trackball can be used.

The LED lights up white for 3 seconds.


You can now use the trackball.

#### Using wired connection



#### Connecting to a PC


##### 1) Plug the Type-C connector of the included USB Type-C - USB-A cable to the USB Type-C port of this product.

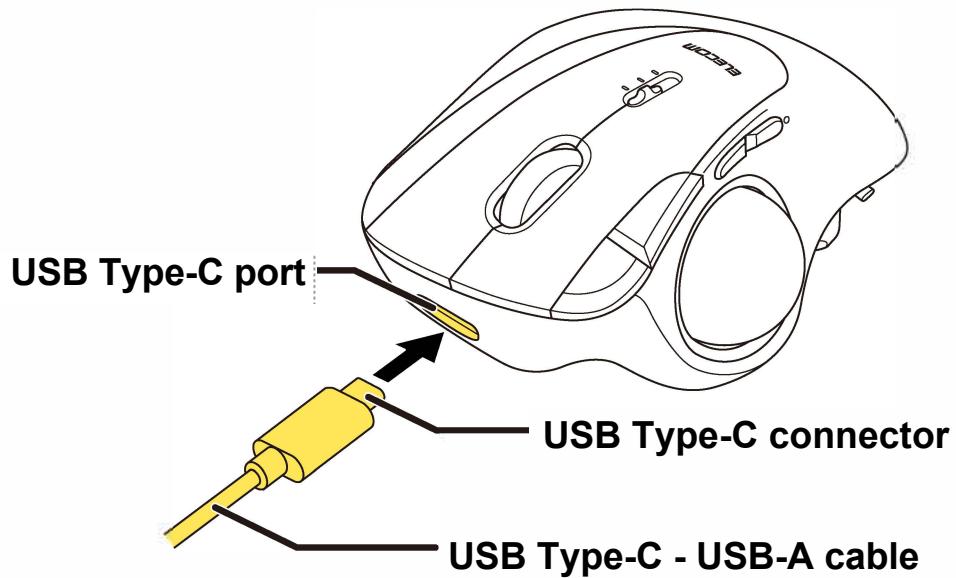

## 2) Start up your PC.

Please wait until the PC has started up and can be operated.


## 3) Plug the USB-A connector of the USB Type-C - USB-A cable into the USB-A port of the PC.

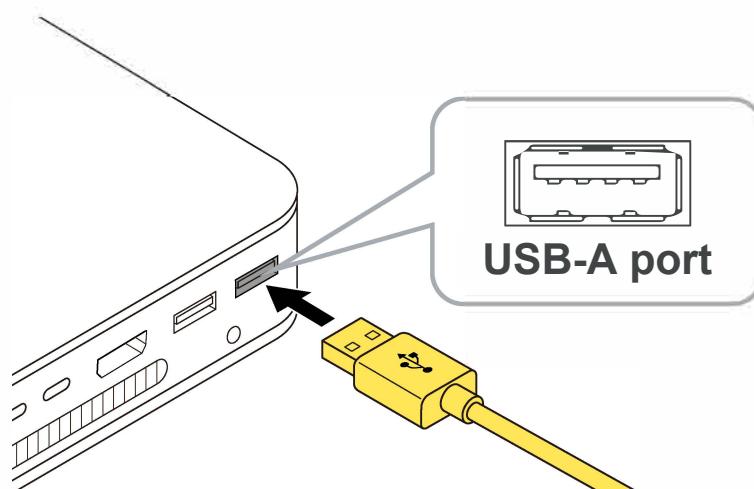

You may use any USB-A port.



- For terminals that do not have a USB-A port, such as a MacBook, use the USB Type-C® hub.

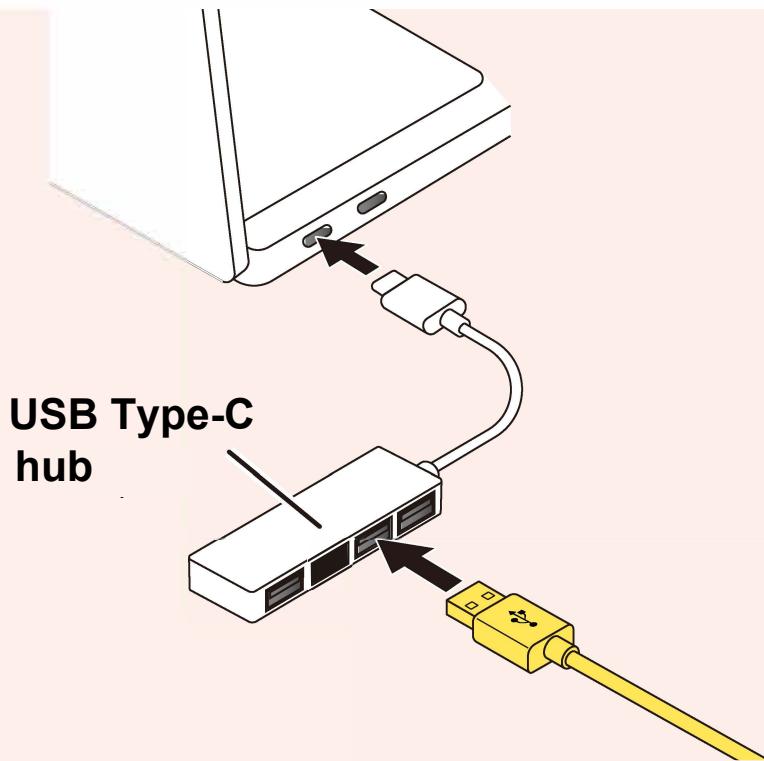

- Do not pull or bend the cable using excessive force. A fire or electric shock may result from broken wires.
- Ensure that the connector is correctly oriented to the port.
- If there is strong resistance when inserting, check the shape and orientation of the connector. Forcibly inserting the connector may damage the connector, and there is a risk of injury.
- Do not touch the terminal portion of the USB connector.

#### 4) Turn the connection selection dial to to select the connection destination.



Please refer to "Switch connected device" to switch between connected devices.



##### To remove the trackball

This product supports hot plugging. The trackball may be removed while your PC is in operation.

#### 5) The driver is automatically installed and the trackball can be used.

The LED lights up green for 3 seconds.

##### You can now use the trackball.

By downloading and installing the "ELECOM Mouse Assistant V6" from our company website, settings such as custom connections, CPI switching, and function assignment can be performed. Please proceed to ["Install ELECOM Mouse Assistant V6"](#).

#### Change the mouse pointer speed

Adjust the mouse pointer movement speed on your PC if the mouse pointer moves too fast or too slow.


\* Screenshots will be replaced with English version when it's ready.

## 1) Click "Mouse" under "System Settings".

The "Mouse" settings page will load up.



## 2) Adjust the "Tracking speed" slider to adjust the speed of the mouse pointer.

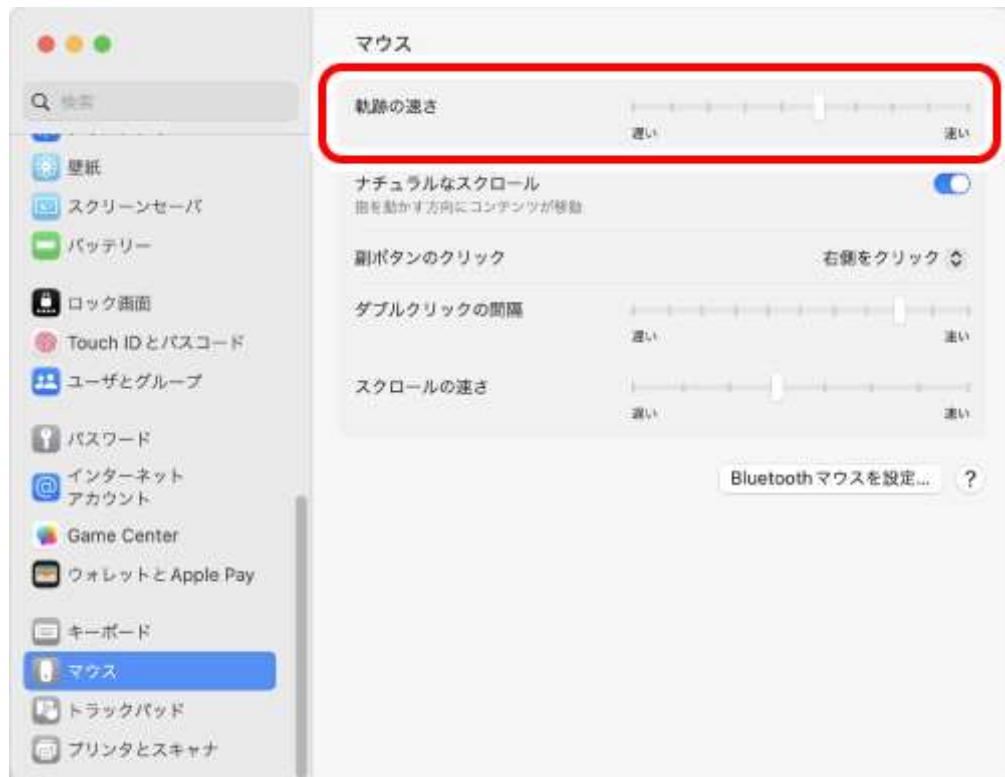


Unchecking "Natural scrolling" will cause the scroll direction to be reversed.

iPhone, iPad




## 1. Turn the power ON


1) Remove the battery cover.

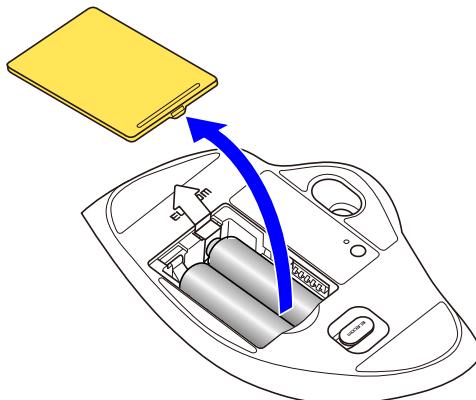


2) Remove the battery insulating tab.

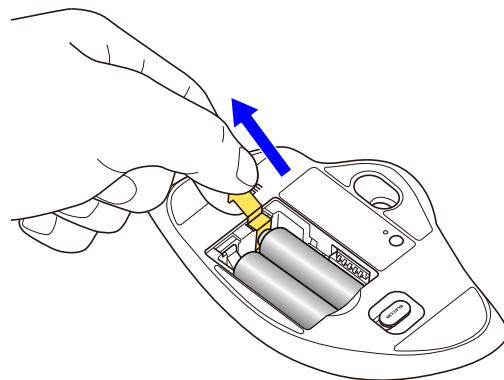

3) Put the battery cover back on.

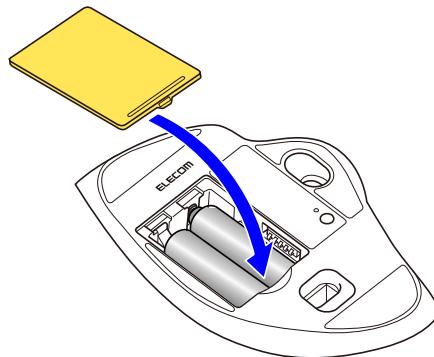

4) Slide the power switch to the ON position.

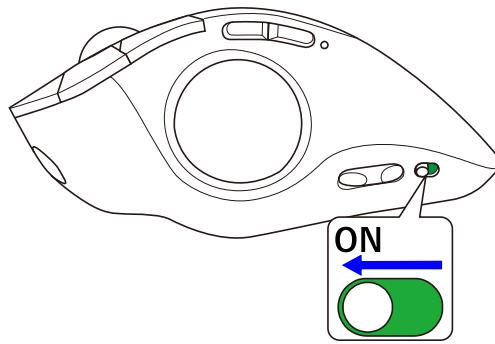

\* When the battery level is running low, the LED light will blink red slowly for a period of time.



### **Power-saving mode**


When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.


\* For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

### **Replacing the batteries...**


#### **1) Remove the battery cover.**

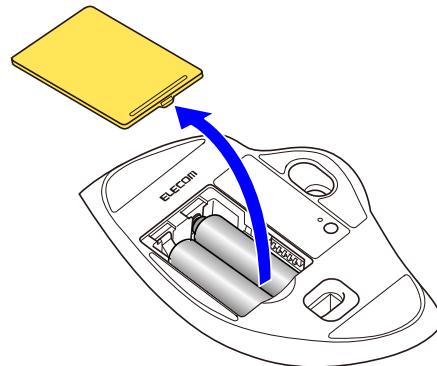

#### **2) Remove the batteries.**

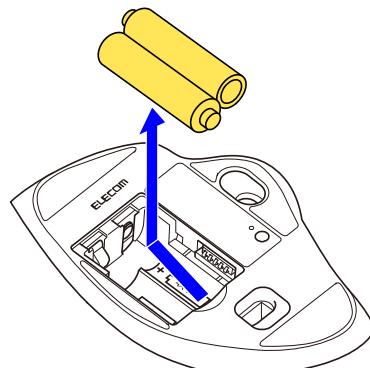


#### **3) Insert the batteries according to the positive (+) and negative (-) marks indicated in the battery compartment.**

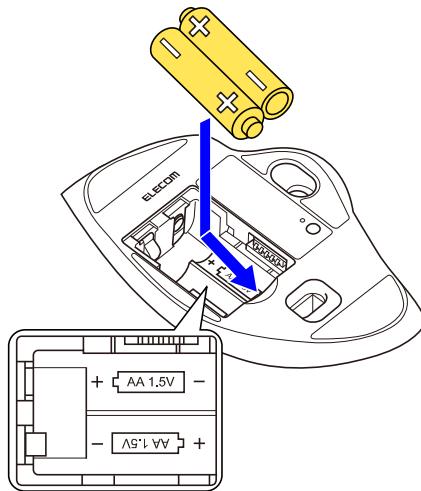

- Insert the batteries in the correct positive (+) and negative (-) polarity direction.
- Do not use batteries of different types or use a mixture of old and new batteries. The batteries may leak and cause malfunction.

#### 4) Replace the battery cover.

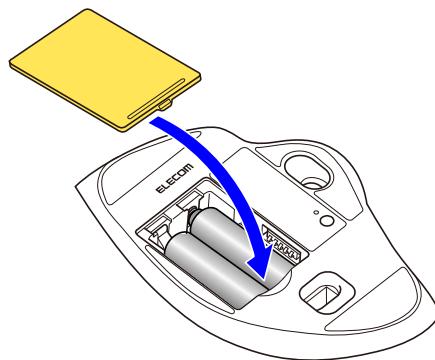

This product can be charged using the included USB Type-C - USB-A cable when the separately sold battery pack is inserted into the battery compartment.

## 2. Pairing with an iPad or an iPhone


- Pairing involves registering Bluetooth devices (in this case, this product and an iPad or an iPhone) with each other, and authorizing a connection between them.
- Tap to operate the iPad or iPhone device until pairing is complete.
- The following instructions are for iPadOS Ver.16.5.

#### 1) Tap on “Settings” from the home page.

\* Screenshots will be replaced with English version when it's ready.



2) Tap on "Bluetooth" to turn on the "Bluetooth".

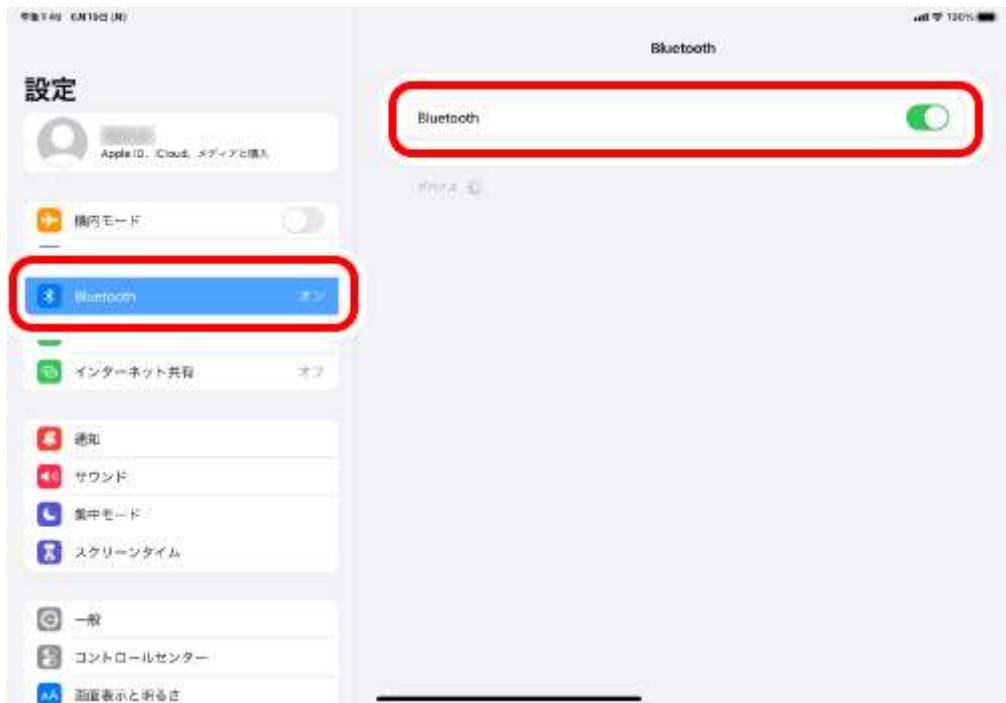

3) Turn the connection selection dial to either  $\text{\#1}$  or  $\text{\#2}$  to select the connection destination.

- You can register up to 2 Bluetooth® devices.
- The selected connected Bluetooth device will be registered under your paired devices.




Please refer to "Switch connected device" to switch between connected devices.

4) During the device search, hold down the pairing button on the bottom for 3-4 seconds.


\* Screenshots will be replaced with English version when it's ready.

The pairing mode is entered, and the LED light on the side (blue) and the connection destination light (white) on the bottom will blink slowly.

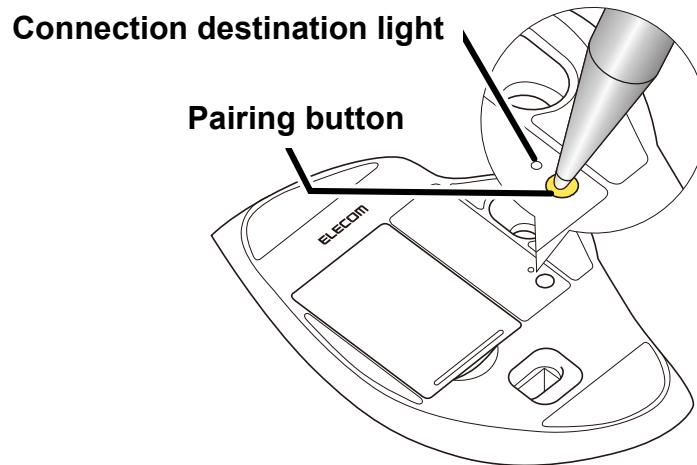


## 5) Tap on “ELECOM IST PRO” when it is detected under “Devices”.

Pairing begins.

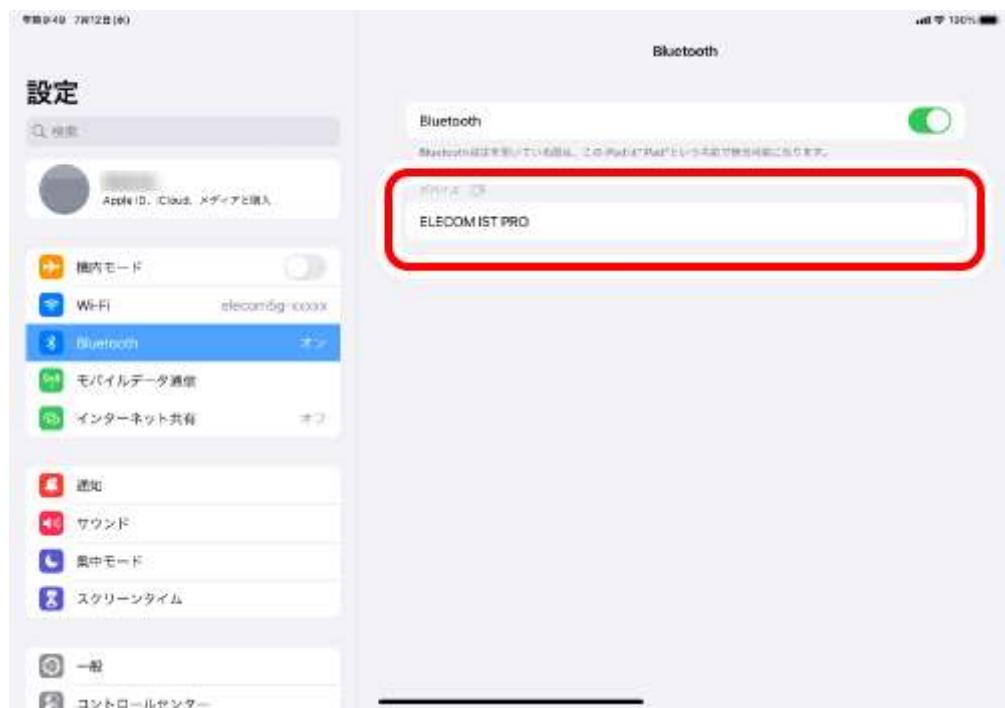


## 6) When the “Bluetooth Pairing Request” page loads, tap on “Pair”.

\* Screenshots will be replaced with English version when it's ready.

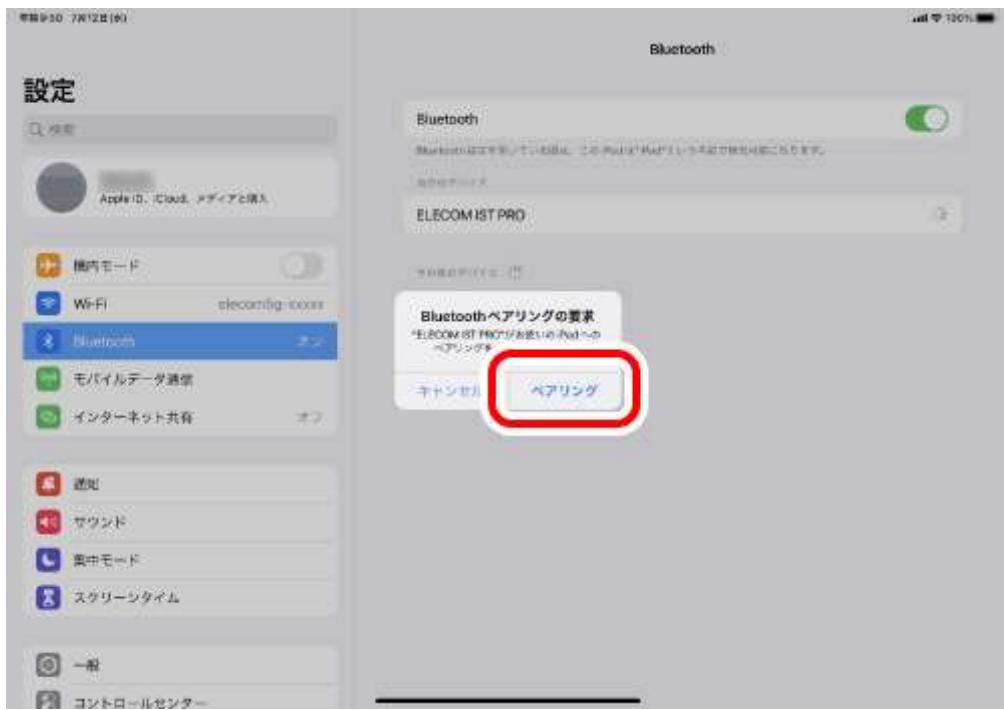

## 7) You can use the trackball when the status shows "Connected"

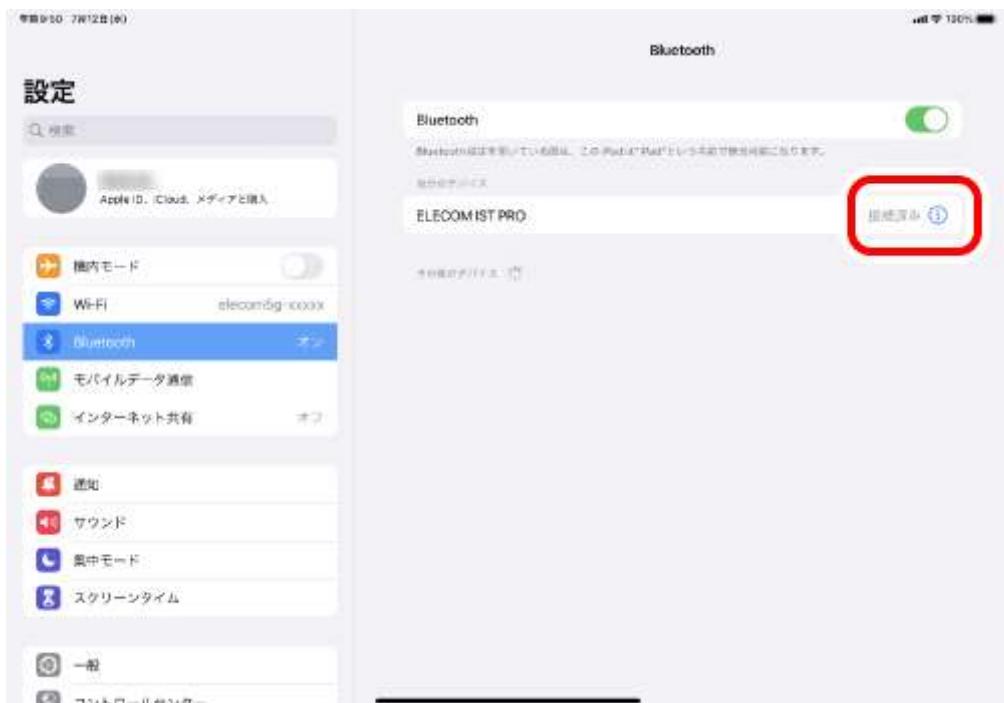

When pairing is complete, the connection destination light (white) on the bottom will blink quickly then stop. The LED light on the side also lights up blue for 3 seconds.


**You can now use the trackball.**

**Using wireless connection**




## 1. Turn the power ON


### 1) Remove the battery cover.

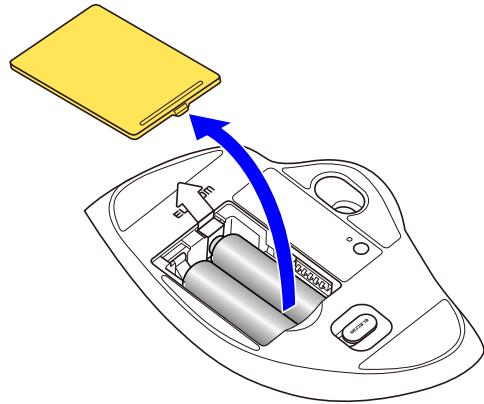


**2) Remove the battery insulating tab.**

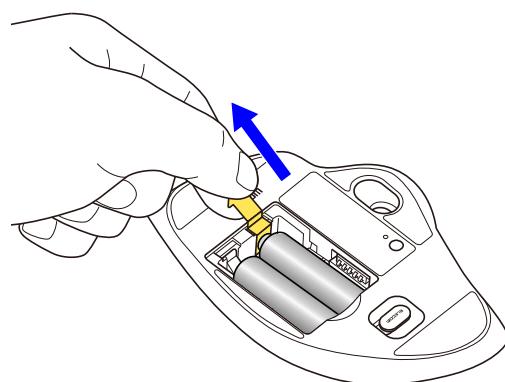


**3) Put the battery cover back on.**

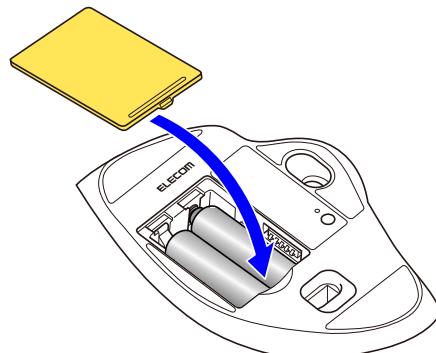

**4) Remove the receiver unit.**

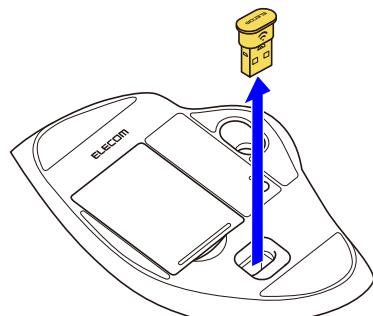

**5) Slide the power switch to the ON position.**

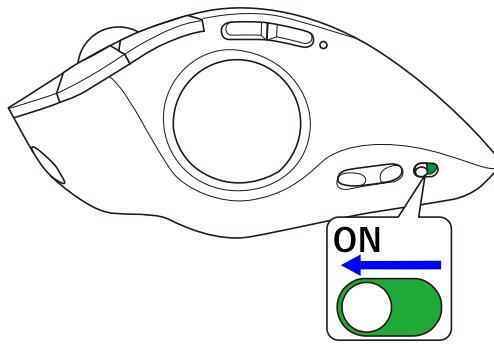

\* When the battery level is running low, the LED light will blink red slowly for a period of time.



### **Power-saving mode**


When the trackball is left untouched for a fixed period of time while the power is ON, it automatically shifts to power-saving mode.

Moving the trackball restores it from energy saving mode.


\* For two to three seconds after restoring from energy saving mode, trackball operation may be unstable.

### **Replacing the batteries...**

#### **1) Remove the battery cover.**

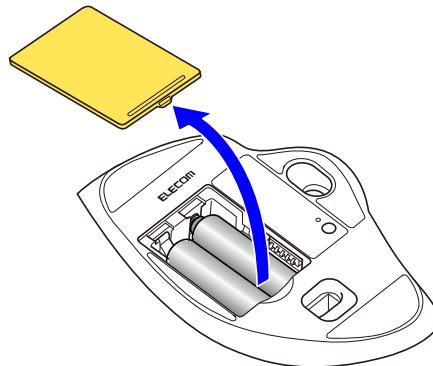

#### **2) Remove the batteries.**

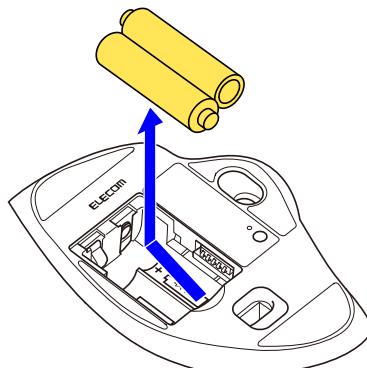

#### **3) Insert the batteries according to the positive (+) and negative (-) marks indicated in the battery compartment.**