

Quick Manual

○ Package Contents



WebTube



Remote control



HDMI cable

 


Adaptor




Quick Guide



Real Panel

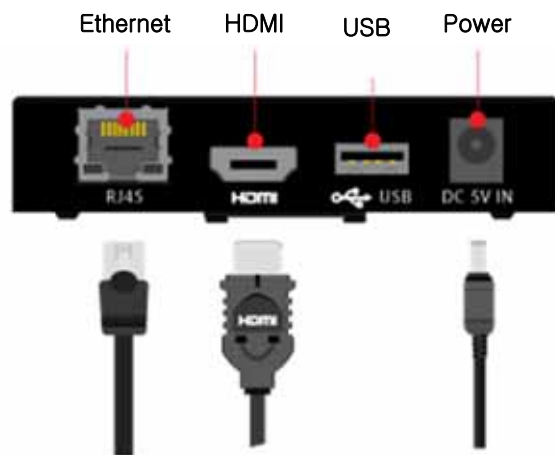

Installation

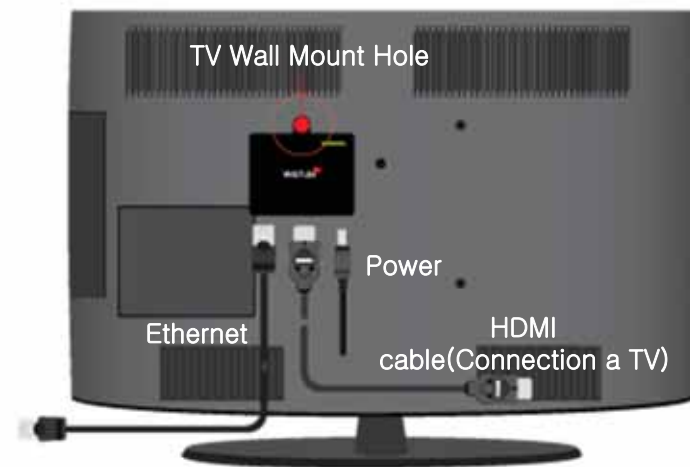 

○ Ethernet Setting (Case of Static IP)

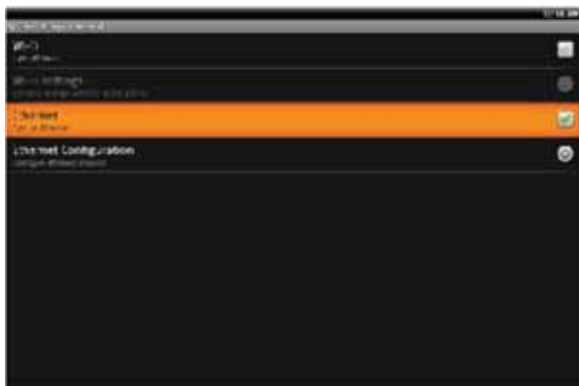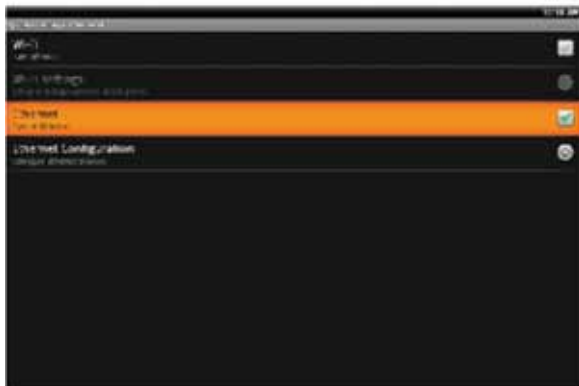  

Note

- The initial network setting is set to “DHCP” automatically.
- For a “static IP”, please follow the procedure below.

1. Select the “**System Setting**” in the Main Menu.

2. Select the “**Network**” menu.

System Setting > Network

3. Select the “**Ethernet**” mode. (confirm to ‘check box’)

4. Select the “**Ethernet Configuration**” menu.

System Setting > Network > Ethernet Configuration

○ Ethernet Setting (Case of Static IP)

Ethernet Configuration

5. Setting to the “Ethernet Configuration”.

Configure Ethernet Device

Ethernet Devices:
eth0

Connection Type
☐ Dhcp
☒ Static IP

IP address
192.168.1.0

Netmask
255.255.255.0

DNS address
61.41.153.2

Default Router
192.168.10.1

Save Cancel

Ethernet Configuration Setting Tip


- Initial setting is “DHCP” type.
- If your network is not “DHCP”, choice to “Static IP” check box.
- Setting to your Network “IP Address / Netmask / Default Router / DNS address” numbers.

192.168.1.0

1	2	3	-
4	5	6	+
7	8	9	⌫
⌂	0	⌵	Next

○ Remote Controller Pairing

 Press the “OK” key after booting. (For over 1 second)

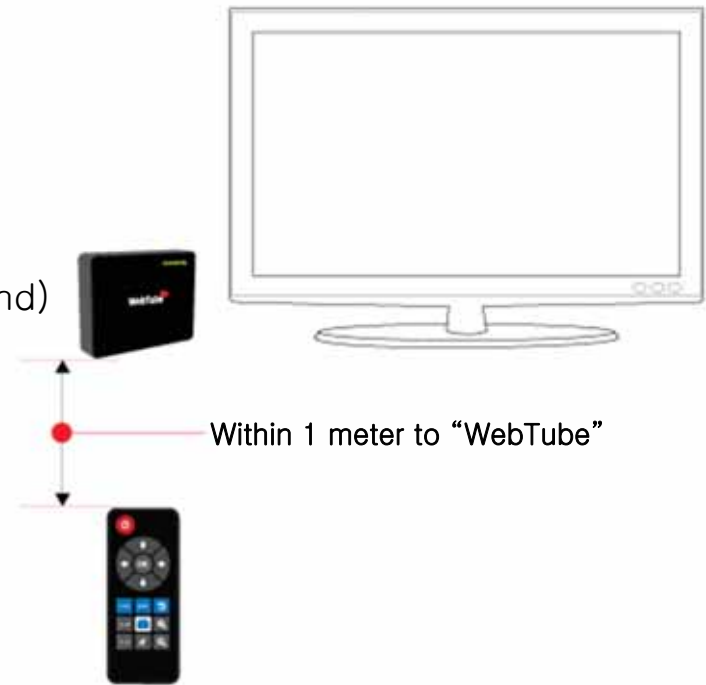

○ PAL / NTSC Setting

Note

 
- The initial PAL / NTSC setting is set to your area format.
- If your TV is not initial set format. please follow the procedure below.

Press the “Power” key For 5 seconds. (PAL ↔ NTSC)

5 seconds



Manual

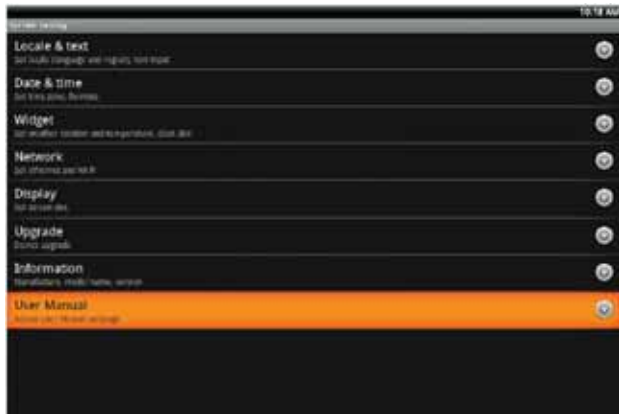

Note

- This User Manual is the E-Manual, so it should be an Internet connection.

1. Select the “System Setting” in the Main Menu.

2. Select the “User Manual” menu.

System Setting > User Manual

TV Application Market

Note

- To download TV applications must select the “Application Market” in the Main Menu.
- It should be an Internet connection.

Press the “Apps” key, for downloaded TV applications used.



FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This Device may not cause harmful interface, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- 1.4. Consult the dealer or experienced radio/TV technician for help.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

“CAUTION : Exposure to Radio Frequency Radiation.

Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation. The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit. The minimum separation distance of 20cm from the antenna to the body of user required.”