



M7 MultiPAD User Manual

www.cydle.com

Contents


Introduction	2	HDMI	15
		How to Use HDMI	
Pre-caution			
Safety and Handling Information	3	Web Browsing	16
Important Safety Information	4	Connecting to the Internet	17
		To Start Internet Browser	18
		Bookmark	
Before you start			
M7 at a Glance	5	Syncing	19
Battery	6	How to Use the Mini USB Port	20
Detachable Stand	7	How to Use Your Micro SD	21
		Pairing a Wireless Device	
Getting Started			
Turning the M7 MultiPAD On/Off	8	App Square	22
Home Screen and Applications Tab	8	To Start App Square	23
How to Manage Icons	9	Manage Account	24
Status Indicator on Device	10	Application	25
Music Playback	12–13		
Gallery		Specification	26
Video Gallery	13	Notice	27
Photo Gallery	14	Copyright	28
		Warranty Card	29

Introduction

Thank you for choosing Cydle

We hope you will find the instructions in this manual clear and easy to follow. Please take a few minutes to look through the Quick Manual to learn how to use all the features of Cydle M7 MultiPAD.

What's in the Box

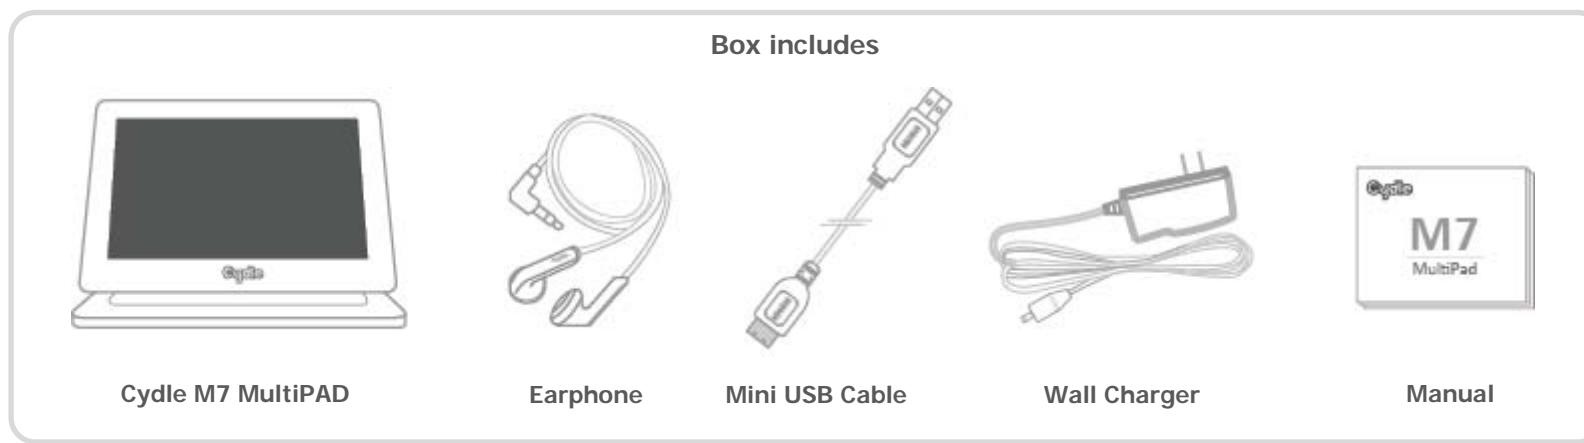

Web site

Please visit our website or contact a Cydle representative if you have any inquires while using the Cydle M7 MultiPAD.

Get the latest software update at the Cydle website at no cost.

Register as a Cydle Member for the latest updates, promotions and new product information.

Contact <http://www.cydle.com>

e-mail cydle@cydle.com

Cydle customer service Toll free number **1-877-810-5818**

Pre-caution

Safety and Handling Information



Be sure to carefully read the operating instructions and adhere to the safety precautions before using your M7 MultiPAD to ensure correct usage and user safety. Cydle Corporation will not be responsible for incidents that occur due to failing to follow instructions presented. This information applies to all Cydle Corporation products.

Operating in a safe place:



This product should be used for personal use only and used as intended in accordance with the user's manual. Do not operate or adjust settings while driving, cycling, or walking near traffic.

Stop using the M7 MultiPAD if you find it disruptive or distracting while operating any type of vehicle, or performing any other activity that requires your full attention. Check and obey the applicable laws and regulations on the use of earphones and devices such as M7 MultiPAD in the areas where you drive or ride. Be careful and attentive while driving.



Proper handling:

Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into M7 MultiPAD.

Unit contains electronic components that can be permanently damaged when exposed to shock or vibration.

Please keep your unit in a stable place and avoid dropping the unit.

Do not operate unit in high-shock and high-vibration environments.

Do not attempt to take apart, open, service, or modify the product. Refer all servicing to qualified personnel.

Repair



Clean only with cloth dampened with water, gently wipe dry with dry cloth.

Do not apply liquid directly to the unit.

Never attempt to repair or modify the M7 MultiPAD yourself. If the M7 MultiPAD has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to an Cydle Authorized Service Provider. The M7 MultiPAD doesn't contain any user-serviceable parts. Disassembling the M7 MultiPAD, including the removal of the back cover, may cause damage that is not covered under warranty.

Customer Service contact

For service information, please visit our support center at www.cydle.com

The rechargeable battery in M7 MultiPAD should be replaced only by an Cydle Authorized Service Provider.

Pre-caution

Important safety Information

■ Caution: Power Adapter Usage

When using the Power Adapter to charge the M7 MultiPAD, make sure that the Power Adapter is plugged into the power outlet. Do not connect or disconnect the Power Adapter while hands are wet. Do not use any other Power Adapter other than the AC/DC Power Adapter certificated by Cydle to charge your M7 MultiPAD. (Make sure that the rated Voltage of the M7 MultiPAD is 5V)

The Power Adapter may become warm during normal use. Always allow adequate ventilation around the Power Adapter and use care when handling.

■ Unplug the Power Adapter if any of the following conditions exist:

1. The power cord or plug has become frayed or damaged.
2. The adapter is exposed to rain, liquids, or excessive moisture.
3. The adapter case has become damaged.
4. You suspect the adapter needs service or repair.
5. You want to clean the adapter.

■ Caution: Battery Care & Recycle regulation




THERE IS A RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.



This unit contains materials such as battery, circuit boards, cables, electromagnetic compatibility gaskets and connectors which may contain lead and copper/beryllium alloys that require special handling and disposal at end of life. Before this unit is disposed of, these materials must be removed and recycled or discarded according to applicable regulations.

Before you start


M7 MultiPAD at a Glance

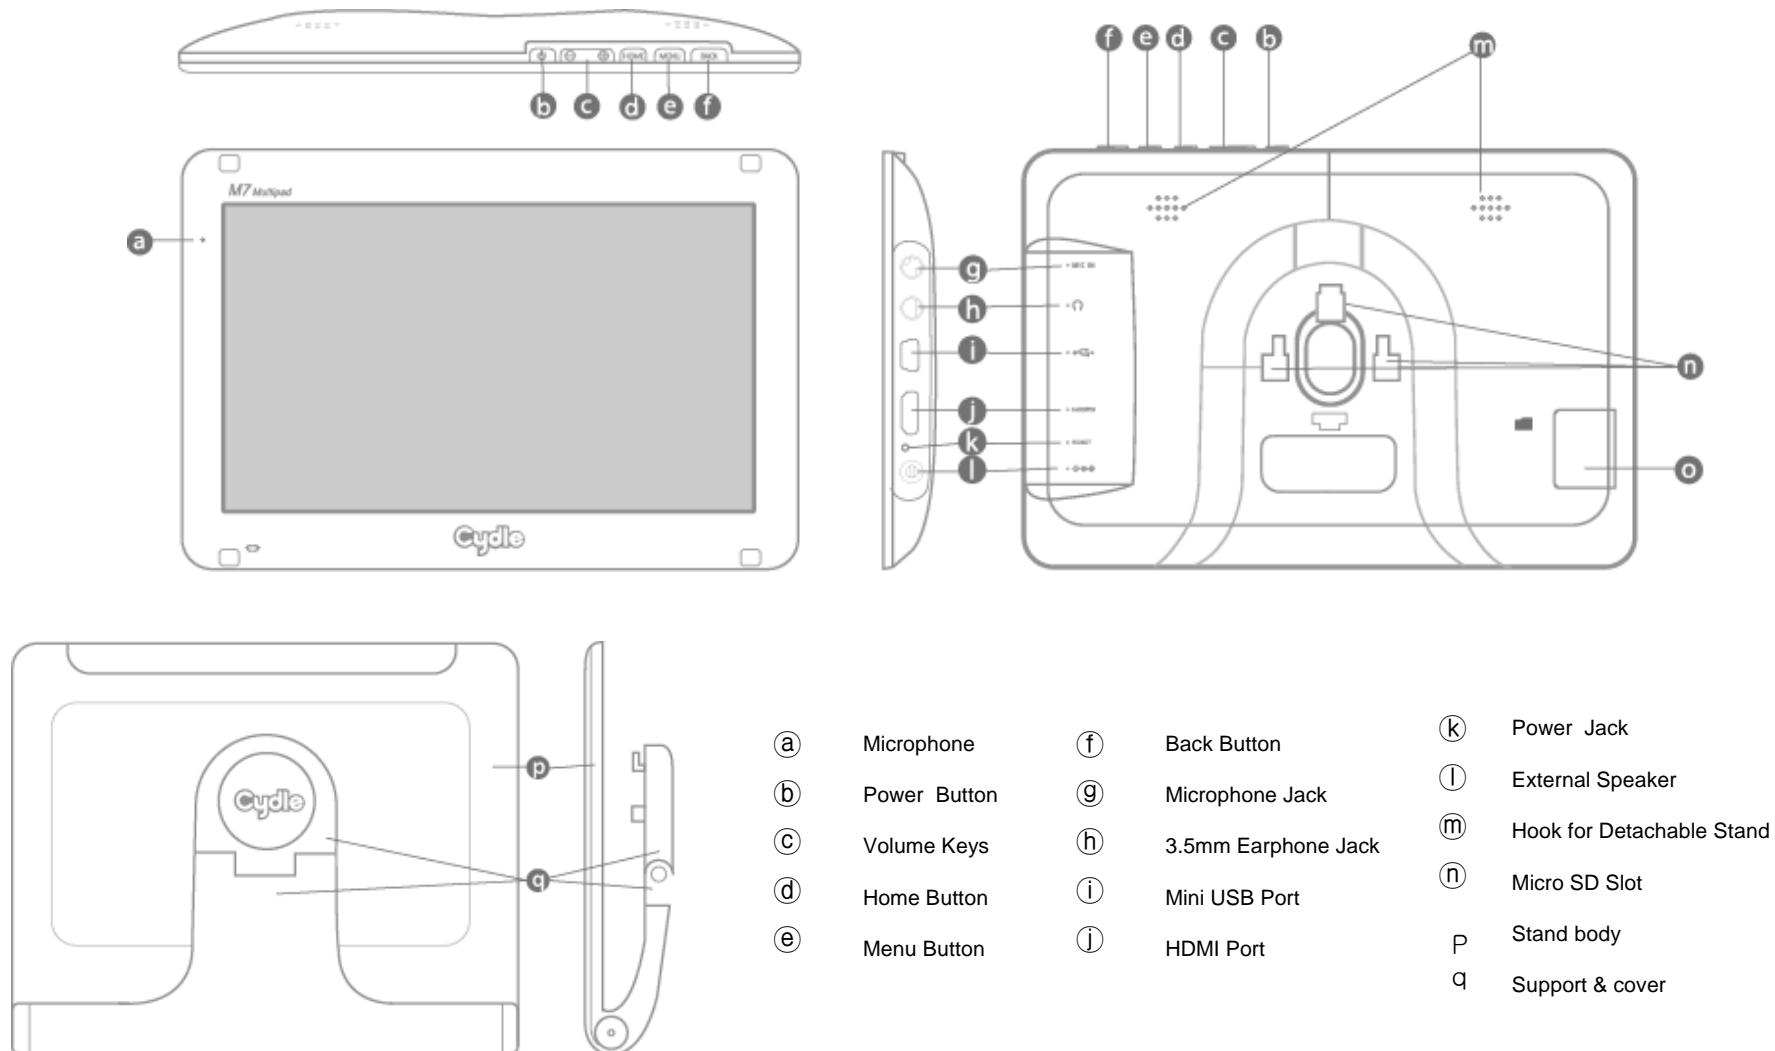

Before you start

Battery

Charge the M7 MultiPAD with the original Power Adapter included in the box.

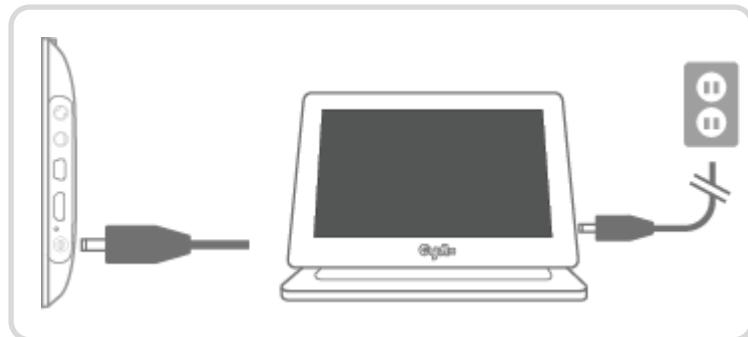

Charging the Battery

1. The Power Jack is located on the bottom right of the unit.
2. Plug in the Power Adapter to the Power Outlet.
3. Connect the Power Adapter to the M7 MultiPAD.
4. The M7 MultiPAD will begin charging. The Battery Icon will change to the Charging Icon on the top right of the screen.

Use only the adapter(5V,2A) included in the box.

Understanding Battery Status

When the M7 MultiPAD is connected to a power source, the battery icon changes to show that the battery is charging or fully charged.



Battery charging (lightning bolt).



Battery fully charged with Power Adapter connected.



Battery fully charged without Power Adapter connected.

When the M7 MultiPAD isn't connected to a power source, a battery icon on the M7 MultiPAD screen shows approximately how much battery life is left.



Red is shown when battery is less than 10% remaining.



Yellow is shown when battery is more than 10% or less than 20% remaining.



Green is shown when 20% or more is remaining.

Use Battery

The charge time can vary but when the M7 MultiPAD battery has completely depleted, expect about 5 hours to charge the M7 MultiPAD completely.

The charging time can be different when using the M7 MultiPAD while charging.

Before you start

Detachable Stand

Use the M7 MultiPAD Detachable Stand to set on top of the desk for a hands free operation or use as a Screen Cover when collapsed, to protect the LCD screen when mobile.

How to turn the stand



Gently lift up the Screen to set the M7 MultiPAD for horizontal view, turn the Screen to the left for vertical view.


How to attach the stand




To attach the Detachable Stand to the M7, place the M7 as shown in the picture. Insert the hook of the Detachable Stand to the specified connecting point of the M7 MultiPAD and push up until a clicking noise is heard.

How to detach the stand

The Detachable Stand can be easily disassembled using the following 2 options:

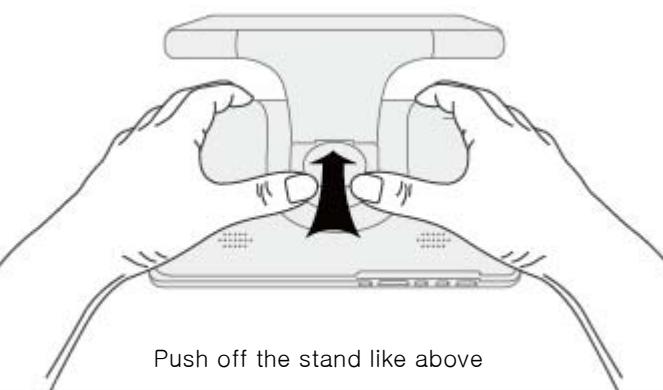

Push off the stand like above

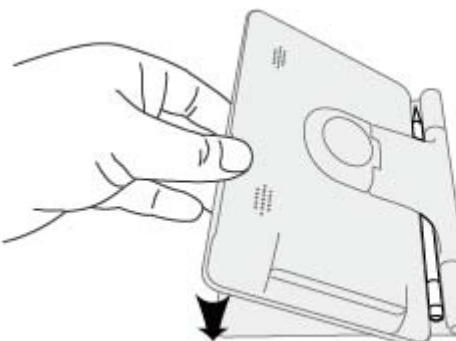

Place a pen or pencil between the M7 and stand, then close the M7 to easily detach.



WARNING: For user safety, users must follow the instructions outlined in the manual and proceed with caution when detaching the stand. All damages resulting from failing to follow the outlined instructions will be the responsibility of the user.

Getting Started

■ Turning the M7 Multi PAD On/Off

To turn Power On/Off, press the Power Button for 3 seconds, located on top of the unit.



Unlock:

Slide the Green Lock Icon up to green spot to unlock the screen.

Sleep Mode:

Press the power button to activate Sleep mode.

To activate the screen again, hold the power button for 3 seconds.

■ Home Screen and Applications Tab

The Home Screen is what you see when turning on the M7 MultiPAD. It gives you access to shortcuts, widgets and more. The Home Screen expands further by dragging the screen to the left or right.



The M7's LCD is a Resistive Touch Screen so utilizing a stylus pen might be more convenient to control the screen.

Getting Started

■ How to manage Icons

1. All downloaded applications will appear on the App Page.



2. To create an App shortcut on the Home screen: Press and hold the desired App for 3 seconds to automatically place a shortcut on the Home Screen.




3. To delete an App Icon on the Home screen: Press and hold the App for 3 seconds to enlarge Icon. The arrow on the Grey tab will show a Trash Bin, move Icon Into the Trash Bin to delete



4. To add Widgets, Folders and Wallpapers to the Home Screen: Press and hold the Home Screen (place finger on area with no Icons) for 3 seconds to open the Tools Window.



Select the desired function.

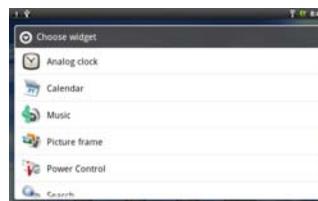

<Choose Widgets>



<Choose Wallpapers>

Getting Started

Status Indicator on Device

Current Status Indicators are shown on the Top Bar in the upper screen. Icons will appear to show SD Card in use, USB connection, Wi-Fi connection, Wireless Device connection, and more. Please see the corresponding icons for more details.




	WiFi Connection		Wireless Audio System Mode ON
	Alarm Set		Pairing Wireless Device
	Micro SD Card is removed		Music Playing
	Uploading Content		Caution Message from the Operating System
	Downloading Content		Preparing for Recognition of Micro SD card
	Insufficient Internal Memory Capacity		Battery Low
	USB Connection		


■ Music Playback

1. Tap on 'Music' icon.
2. Choose a song or browse through categories located on the top of the Music Screen
3. Select desired Music from the list.


1) Artists : Browse through Artists sorted by A to Z

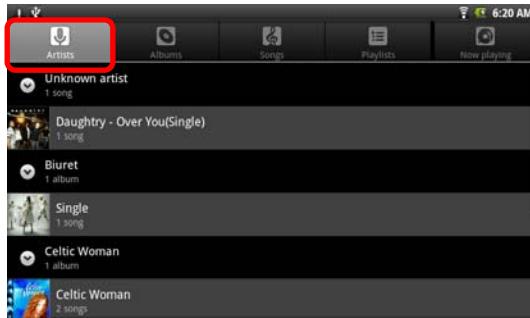


3) Songs : Songs are sorted by A to Z

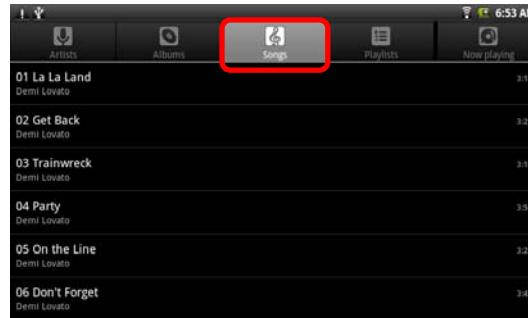

2) Albums : Browse through Albums sorted by A to Z

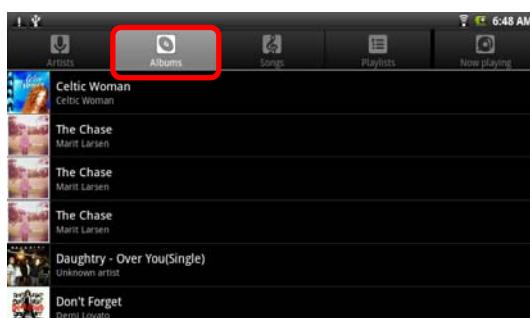

4) Playlists : Browse through Playlists sorted by A to Z and choose songs recently added

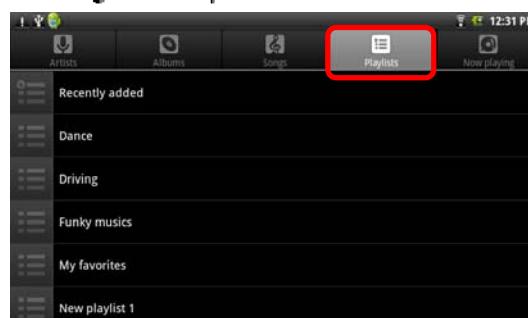


Music

Music Playback


4. Playback options to Shuffle or Repeat music will be located on the screen.

1) Move Back to Play List

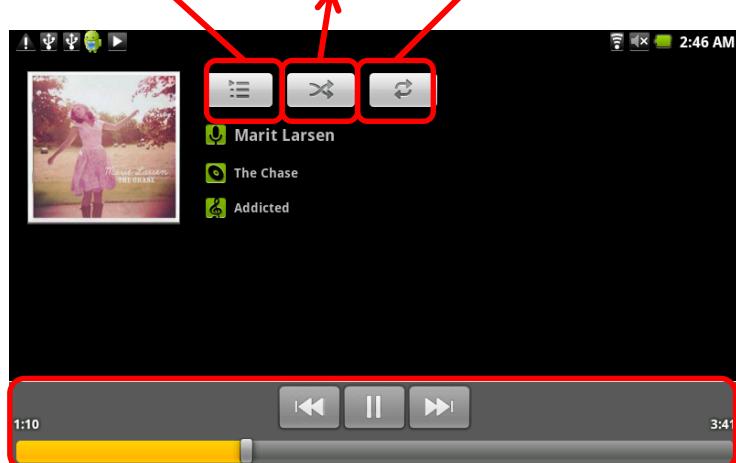

5. Change, pause or play a song with the Music Controls.


4. Additional menu options will appear on the Play Screen when the "Menu" button is selected. To add the current song to a new playlist, tap on "Add to playlist" icon.

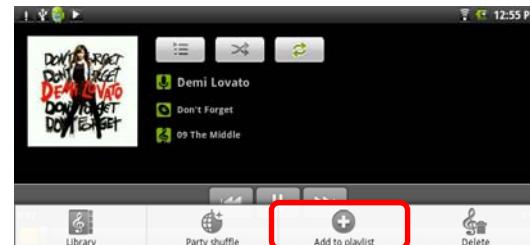

5. To create new playlist, select "New"




6. Name your new playlist, then tap on "Save"

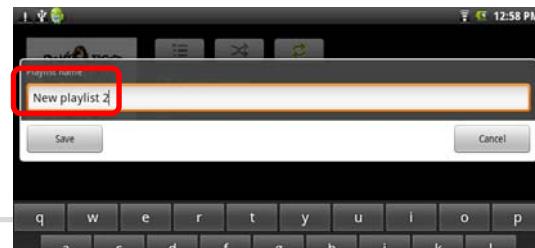


Gallery

■ Video Gallery


1. Tap on 'Gallery' icon.
2. Select the desired folder and tap on the Video you wish to view.
3. To managing movie files and display settings, press the "Menu" button

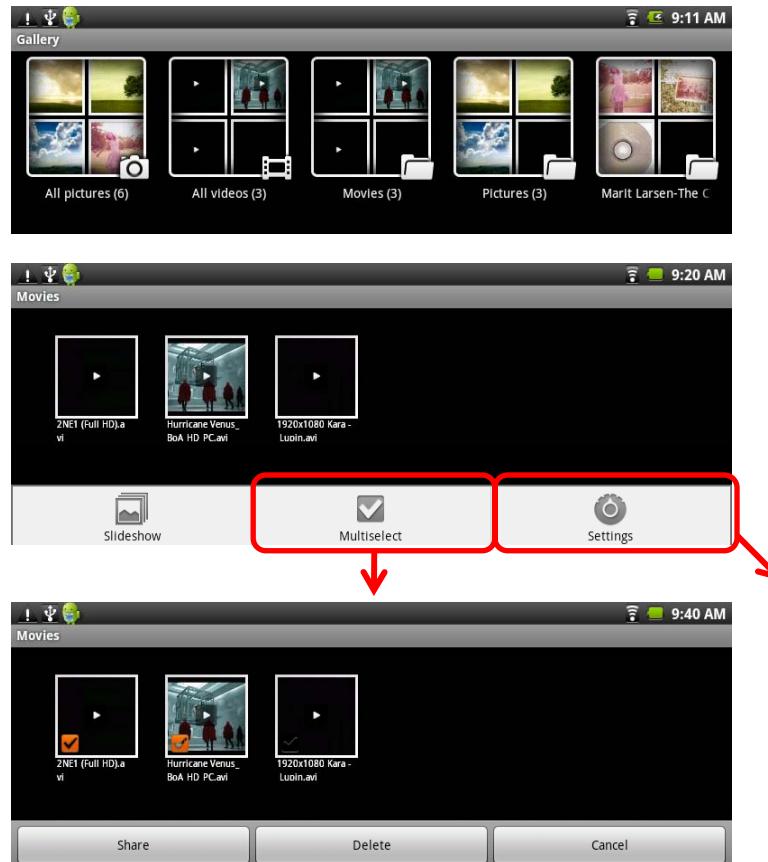

<File Managing Screen>

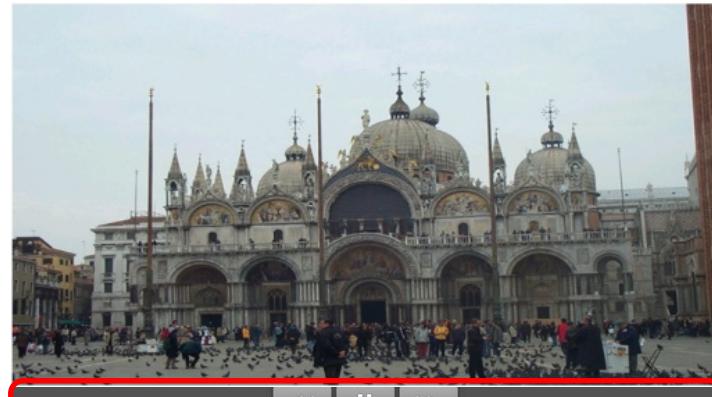

<Video Play Screen>

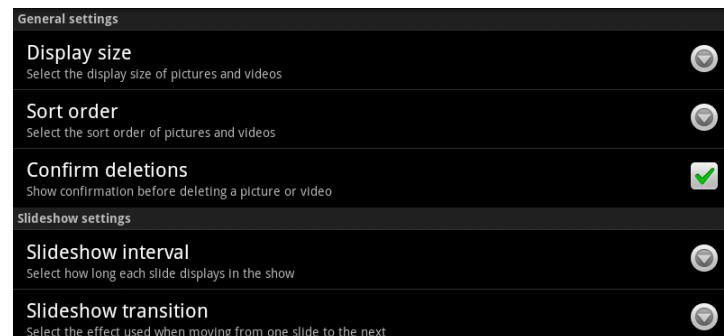


<Gallery Setting Screen>


Gallery

Photo Gallery


1. Tap on 'Gallery' icon.
2. Select the desired folder and the tap on the Photo you wish to view.
3. To manage picture files and slide show (settings), press the "Menu" button

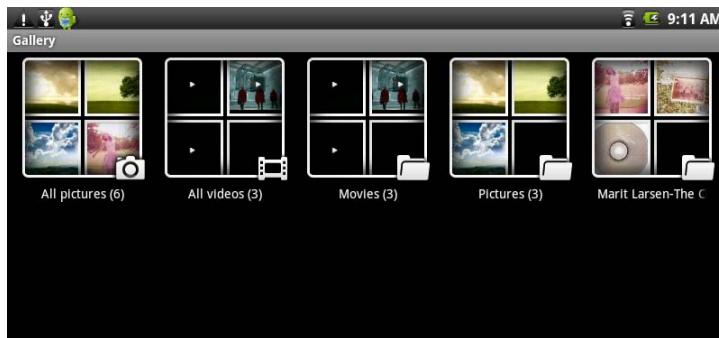

4. To play Slide Show, tap on the "Slideshow" icon

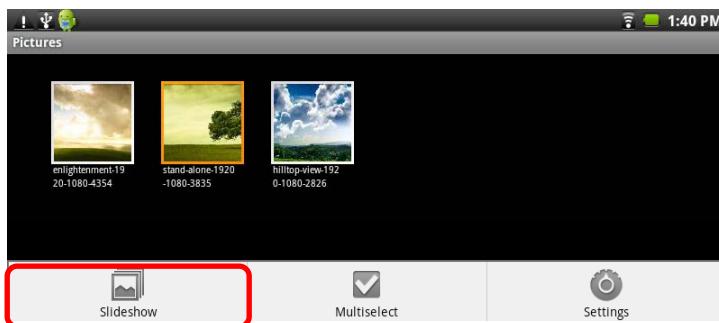

5. Touch the screen for Photo Controls to maximize, minimize and view previous or next photo.

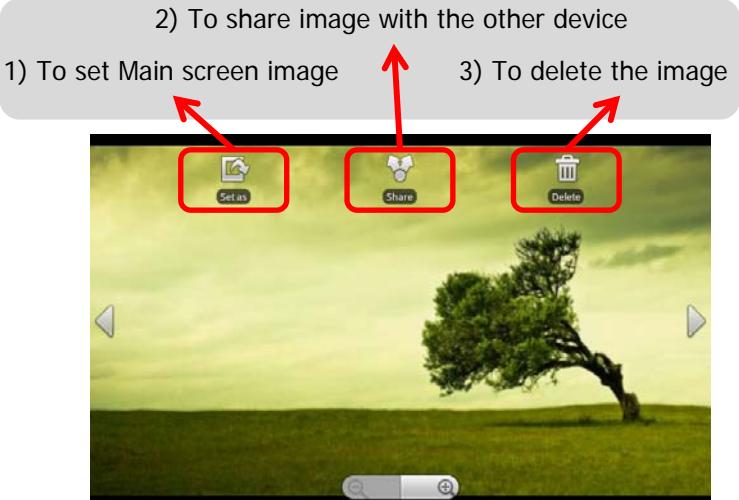

6. To edit and manage present image, press the "Menu" button.





- 1) To rotate the image
- 2) To crop the image

How to use HDMI


The M7 MultiPAD fully supports 1080p HDMI. Connect to your television or monitor to enjoy your favorite movies on a bigger screen.

1. Tap on the ‘Settings’ icon from the Home Screen.

2. Go to Sound & Display > Output Select.

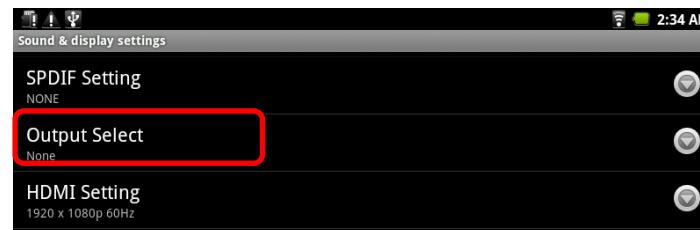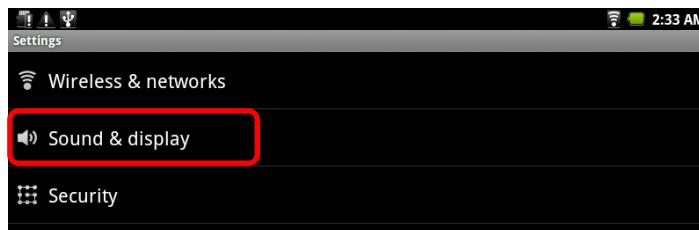

3. Select “HDMI” option

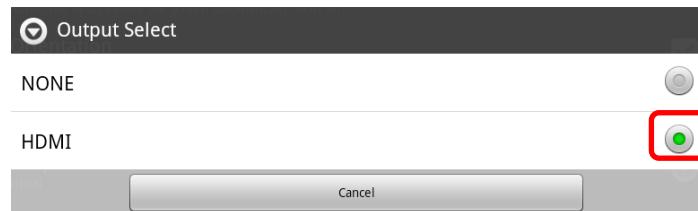


Specification of HDMI Port : Mini HDMI: C-19 Pin

Wi-Fi Set Up

■ Connecting to the Internet

1. Tap on 'Settings'.
2. Go to 'Wireless & Networks'.

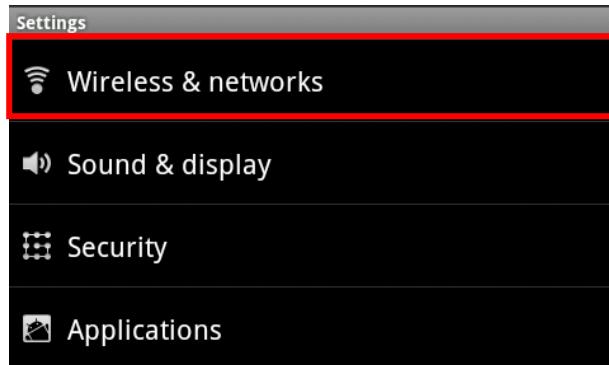

3. Turn on the 'Wi-Fi' by placing a check in box.
4. Tap on 'Wifi Settings'



5. Choose the network you wish to connect with.



6. Once connection is completed, the Wi-Fi icon will be seen on the top right of the Top Bar.



7. Wifi Access Point can be lost due to status of the router. In the event this happens, restart your router or reconnect the Wifi on the M7 MultiPAD.

 Click on "Wi-Fi > Wi-Fi On/Off" to reconnect and reinstate connection to the Wi-Fi

Internet Browsing

■ To Start Internet Browser

1. Tap on the 'Internet' icon.




3. When the keyboard pops up, input the URL of desired website and tap on the "Go" or Enter button.



2. The Internet Browser will open. To browse other websites, touch the Address Bar



4. Enjoy mobile web surfing.

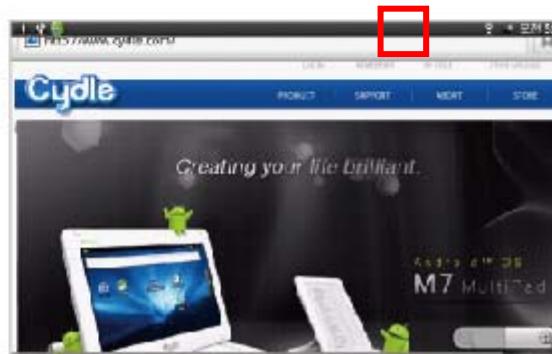

To zoom in and out web screen, Use the Zoom In/Out icon located on the bottom right or double touch the screen.

Internet Browsing

■ Bookmark

Tap on the “Bookmark” icon located on the top right of the address bar to display the web browsing History and Favorites.




<Most Viewed>



<History>

To Create Bookmark

1. Select Bookmark
2. Tap on “Add” icon located on the top left.
3. Input the name you would like displayed in the Bookmark List. Then tap on “Done” to complete

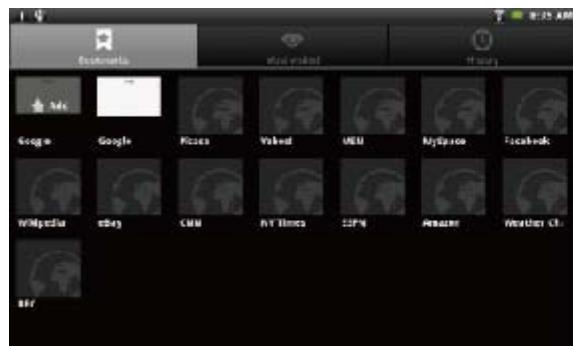

Syncing

How to use the Mini USB Port

You can use the M7 MultiPAD as a 'Mass Storage' by connecting to the PC with the Mini USB Cable. The Micro USB Port supports USB 2.0.


1. Connect the M7 MultiPAD to the PC using the Mini USB Cable, the USB icon will appear on the top left of the Top Bar.




2. Drag down the Top Bar to open the window. Tap on 'USB connected(Internal)' .



- 3.A separate window will pop up and ask if you wish to "Mount" or "Don't Mount". Select "Mount" to complete connection.

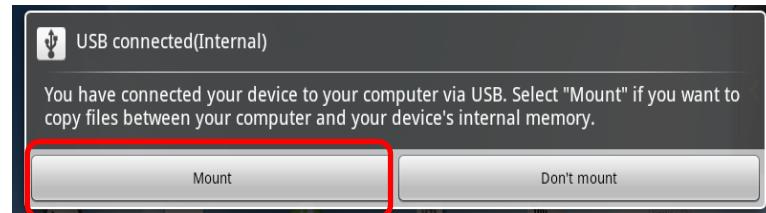

- 4.To disconnect drag down the Top Bar and tap on "Turn Off USB". Select "Turn off" to complete.

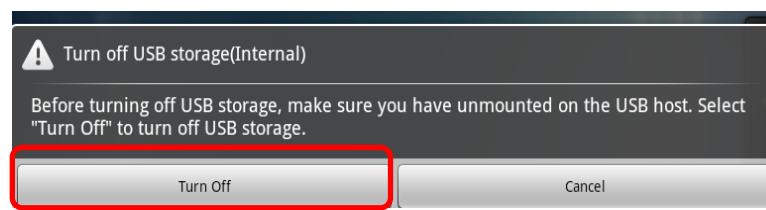

Syncing

■ How to use your Micro SD

Expand the memory of the M7 MultiPAD by using a Micro SD card.


► How to enjoy the contents in Micro SD card from M7

1. Insert your Micro SD Memory Card into the SD card Slot of the M7 MultiPAD.
2. The Memory Card icon will show up and disappear on the top left side of the Top Bar.



► How to enjoy the contents in Micro SD card inserted in M7 MultiPAD on your PC.


1. Insert your Micro SD Memory Card into the M7 MultiPAD and connect to the PC using the Mini USB Cable. When the Memory Card icon appears on the Top Bar.
2. To connect Micro SD, drag down the Top Bar to open window. Once the window opens, tap on USB connected(External).
3. A separate window will pop up and ask if you wish to "Mount" or "Don't Mount". Select "Mount" to complete connection.
4. To disconnect Micro SD, drag down the Top Bar to open window. Once the window opens, tap on Turn off USB storage(External).
5. A separate window will pop up and ask if you wish to "Turn Off" or "Cancel". Select "Turn Off" to complete disconnection. And then take Micro SD card off the M7 MultiPAD.

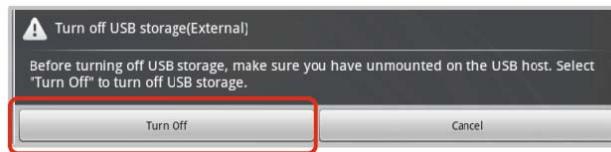

Syncing

■ Pairing a Wireless Device


1. Make sure to set the Wireless Device is in “Pairing”
2. Tap on ‘Settings’.
3. Go to “Wireless & networks”

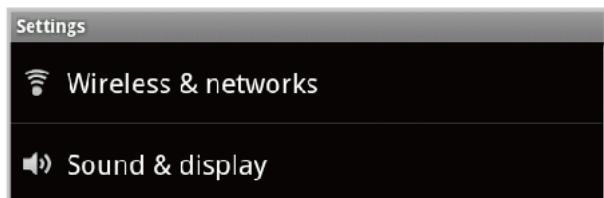

4. Turn on “Wireless Audio System” by placing a check mark in box.
5. Select “Wireless Audio System settings” to locate the Wireless Device you wish to pair.



6. Choose the device you wish to pair with the Cydle M7 MultiPAD.
7. When paired successfully, “Connected to device and media audio” will appear under the Wireless Devices list and the icon will also be displayed at top right corner of the screen.

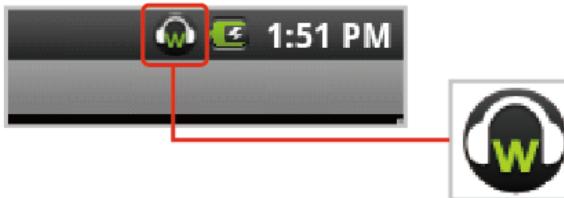

8. If the wireless device required pin number to pair with M7, a separate window will pop up and ask you to input a “PIN number”.


* The PIN number can usually be found on the package box or the User’s Manual of the Wireless Device.

App square

■ To Start App Square

► Registration

1. Tap on 'App Square' icon on the Home Screen
2. A window will appear where you will need to proceed to Registration to continue , select "Yes"

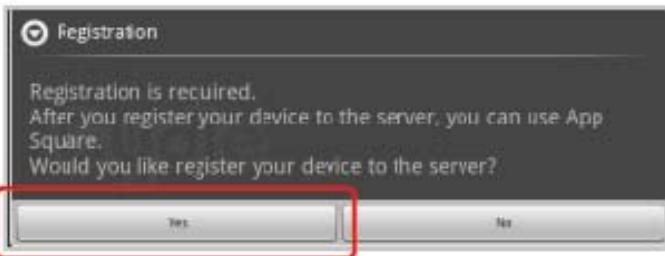


3. Register for an App Square Account. Tap "Done" to complete.



Before you use App Square, M7 has to be connected with Wifi Network (Page 17)

4. Press the Menu button located on top of the M7 MultiPAD to open the App Square Main Menu screen. Proceed to MyInfo.

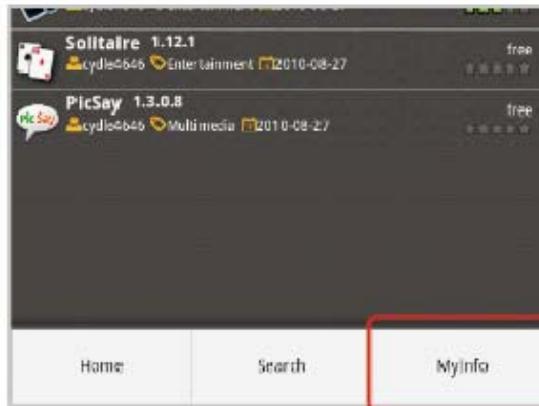

5. Review and manage your account information.



App square


■ Manage Account

► To edit App Square Account

1. Tap on 'Edit' icon on the "My Information" Screen




2. Modify your App Square Account. Tap "Done" to complete.


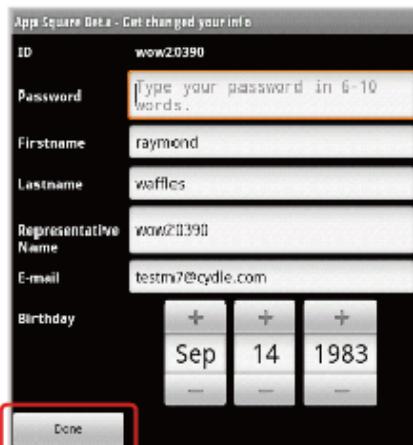


► To delete App Square Account

1. Tap on 'Delete Account' icon on the "My Information" Screen

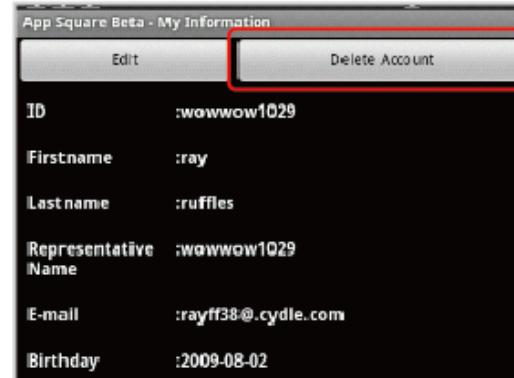

2. Tap "Yes" and put your App Square pin number to delete your account from both your device and the Cydle Server.

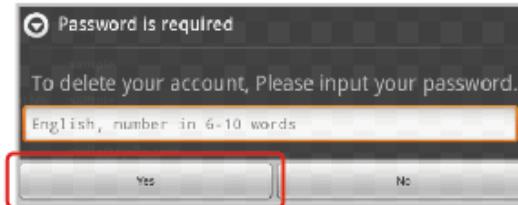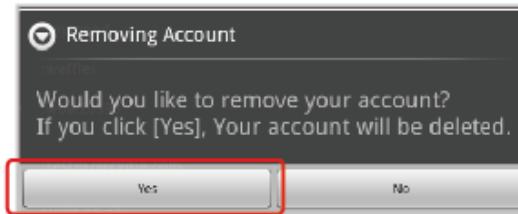

App square

Application

► How to use App Square Applications.


1. Tap on 'App Square' icon on the Home Screen
2. Select an App to download from the featured Apps, browse through the App Categories or search for Apps.




3. Apps can be sorted by Recent, Top Sales or A to Z.



4. You can access the App Square Menu from the Menu button located on the top of the M7.

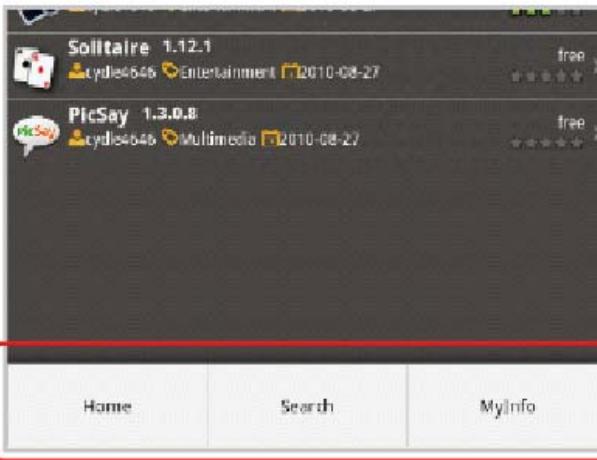

5. Search for a desired App.

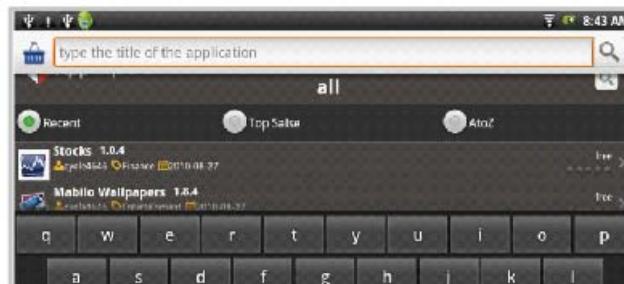


App square


Application

► How to use App Square Applications.

6. Select an App in the App Square.
7. Scroll down the App details page.
8. Click “Install” to download the App to the M7 MultiPAD

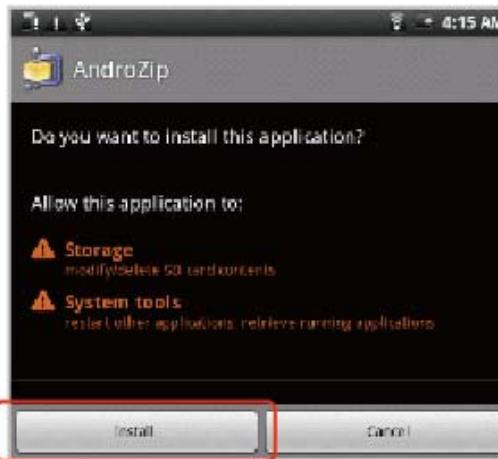

9. Press the Done icon to complete download.

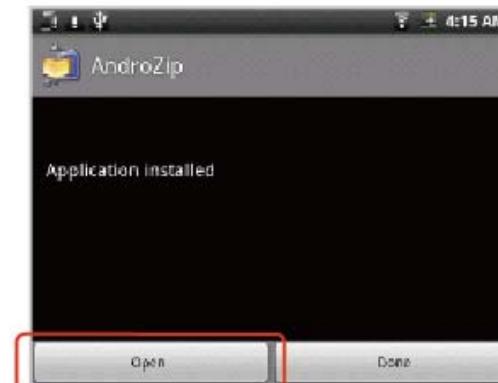

App Square is an Android based application market that will provide you with access to new, fun and cool apps. Explore the App Square to find the app you want!

Specification

Weight	0.92lb (420g)
Dimension	7.1 X 4.8 X 0.7 inch (181 X 124 X 19 mm)
Operating temperature range	-5~ +55 (23 F – 131 F)
Charging temperature range	0~ +40 (32 F – 104 F)
Data storage	Internal memory and optional removable Micro SD card.
Computer interface	USB 2.0
Power input	Power Cycle M7 MultiPAD using the car battery adaptor or AC power using an optional accessory. (5V,2A)
Battery	4500mA, Un-swappable rechargeable Lithium polymer battery
Battery Life	Up to 10 hours of audio playback Or up to 4 hours 30 minutes of video playback Or up to 5 hours 40 minutes of Web browsing Battery life can vary, depends on usage.

► FCC Declaration of Conformity

This Device Compiles with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This Device may not cause harmful interference, and 2) This Device must accept any interference received, including interference that may cause undesired operation.



FCC ID: YXQM7



This product passed and certified by CE

FCC Notice

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRIED OPERATION.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

NOTE : This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Copyright



All right reserved by Cydle Corp.

America.

4030 N. Palm Street #305, Fullerton, CA92835

Korea.

12th floor, Kofomo Tower, Sunae-Dong, Bundang-Gu, Seongnam-City, Kyonggi-Do, Korea

All rights reserved. Copyright and intellectual property rights of all documents written by **Cydle Corporation** are the property of the **Cydle Corporation**.

Cydle Corporation has copyright and intellectual property rights of our software and documents including this manual, and the use of product follows license agreement.

No part of this manual can be copied, reproduced, transmitted without the prior written consent of Cydle Corporation. Cydle grants permission to download a copy of this manual into a hard drive or other electronic storage to be viewed and to be printed on copy, which must contain this copyright notice.

"Cydle" is the **Cydle Corporation's** own brand and is a registered trademark.

All names are trademarks or registered trademarks of their respective owners. You cannot infringe ownership without permission.

Information in this document is subject to change without prior notice. Cydle reserve the right to change or improve the products and change the contents without notice. Visit Cydle Website to check the current update and supplemental information concerning the use and operation of Cydle's products.

All other trademarks, whether claimed or registered, are the exclusive property of their respective owners.

WARRANTY CARD

Limited Warranty Cydle M7 Multipad

This Cydle product is warranted to be free from defects in material or workmanship for one year from the date of purchase. Within this period, Cydle Corp. will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor. The warranty does not cover failure due to abuse, misuse, accident or unauthorized alteration or repairs in which case Cydle Corp. will not cover the costs of repair or replace.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS.

IN NO EVENT CYDLE CORP. SHALL BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT.

Cydle Corp. retains the exclusive right to repair or replace the unit or software or full refund of the purchase price at its sole discretion. Such remedy shall be your sole and exclusive remedy for any breach of warranty.

To obtain warranty service, contact Cydle on Tel. 310 542-5818, Fax. 310 542-5850
4030 N. Palm Street #305, Fullerton, CA 92835

For service instructions, shipping instruction and an RMA tracking numbers, please contact the call center with your serial number of your unit. Securely pack the unit and attach a copy of the original sales receipt, which is required as the proof of purchase for warranty repairs. Write the tracking number clearly on the outside of the package.

Please do not ship the unit to Cydle with the Cydle navigator cradle, Super suction cup, Car battery adaptor and any accessories. Packages shipped with these items included will attract the full transportation costs for which Cydle will not be liable.



Cydle America Corp.
www.cydle.com

The Cydle warranty and "Service promise" is only valid within US.
Cydle will not be liable for any transportation to the Cydle service center from outside of the US borders.