

# 使用手册

## USER MANUAL



### MiPad

产品名称：移动平板电脑

型号：SL07DW01

输入电流：DC == 5V, 2A

中国苏州双林塑胶电子有限公司

江苏省苏州市吴中区石湖西路166-168号

## 欢迎使用Fasion MID 使用本产品前请详细阅读以下声明：

- 本公司产品因版本升级、规格变化，文档中使用的图片或文字与实际产品可能不一致，以客户实际产品为准，恕不另行通知。
- 请您将重要资料进行备份，因资料丢失，损坏等造成的损失，本公司概不负责。
- 如果您的机器发生故障或需要技术支持，请拨打我们的服务热线：  
4008868780，也可以登陆我们的产品官方网站  
[Http://www.mipad.com.cn](http://www.mipad.com.cn) 我们会第一时间为您提供帮助。


### 随机配件：

MID 主机  
5V 2A直流充电器  
快速入门指南  
合格证  
保修卡  
USB 连接线

## 产品外观及接口



- **电源按钮：** 若要开/关主机，请长按电源键；
- **返回按键：** 在任何时候短按返回键可回到上个界面；
- **休眠/唤醒：** 若要让主机进入休眠模式，请短按一次电源按键，再按一次电源按键可为主机解锁。
- **Menu键：** 显示当前窗体的菜单项 (UI上有软按键)。
- **音量键：** 任务栏中的Volume +, Volume-实现音量的增减

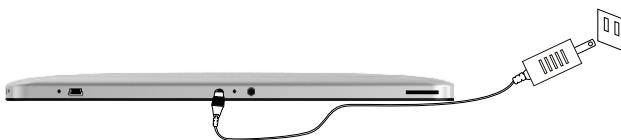

- **电源适配器：** 将电源适配器插入电源插座，同时将另一端插入主机进行充电。  
(注意：包装盒内主机并未完全充满电，请您务必于第一次使用前为主机进行充电至完全饱和状态。)

## 主画面

主机主画面提供多种应用程序，按相应的程序快捷图标可启动主机相应的程序，还可由右往左选择更多的新增应用程序。

状态栏



### 状态栏

- 主画面上方状态栏图示。右边显示主机的网络状态、电量、时间、音量调节、菜单、返回；左边显示主页，您可通过轻触其图标进行设定。
- 当您轻触菜单图标“≡”时，主画面下方会显示快速启动工具栏提供您最常用的应用程序-壁纸、设置、搜索等。

## 操作技巧

您可以用手指或触控笔长按图示栏位以启用其它功能，例如在浏览器上长按网址栏弹出键盘输入网址。

您可以用手指或触控笔轻触屏幕上/下/左/右拉动以移动或阅读更多内容。

## TF卡使用

TF卡插入本机，被本机识别后，点击桌面的“安装器”，即可读取TF卡的内容。

卸载TF卡，在“设置” / “SD卡和系统内存” / “卸载SD卡”卸载SD卡，否则在下次使用的时候可能无法读取SD卡。

## USB连接

使用USB连接本机和PC机，  
默认的连接方式是同步模式。  
可以拖动状态条往下拉，  
出现如右图界面：



## 主要功能：

### 网络连线设定/启动网络连接

#### \*WIFI无线连接

点击主菜单中的“设置”图标，进入“系统设置”界面，点击“无线和网络”进入“无线和网络”设置界面。点击“WIFI”一栏可以快速打开WIFI功能，点击“WIFI设置”一栏可以进入“WIFI设置界面”，如下图所示：



在“WIFI设置”界面中（上图），点击WIFI一栏也可以打开和关闭WIFI功能，点击“网络通知”会列出MID搜索到的无线路由器，点击搜索到的无线路由器名会弹出设置窗口，请依据提示完成WIFI网络的链接。有些加密网络，需要输入有效密钥。链接示意图如下：



### GPS卫星导航(选配)

支持GPS导航，点击主菜单中的“设置”图标，进入“系统设置”界面，点击“使用GPS卫星”进入“GPS”设置界面。



### 摄像头(选配)

点击主菜单中的“图库”，进入“图库”主界面，点击MENU，选择“拍摄照片”或“拍摄视频”，即可以打开摄像头进行拍照或拍摄。



### HDMI

使用HDMI连接线，连接本机和具有HDMI输入接口的设备。在“设置”/“声音和显示”/“OutPut Select”中选择HDMI输出模式，系统转为HDMI输出。

如选择HDMI输出，可以在“HDMI Setting”里面选择更改输出制式。



## 网页浏览：

当连接好网络后，打开网页浏览器输入网址，即可快速浏览网页；或通过在主桌面的搜索条中输入网址，打开网页。



## 音乐播放

点击主菜单中的“音乐”图标，即可进入音乐播放界面。这里默认会列出系统中用户数据区域的所有的音频文件。如下图所示：



## 视频播放

点击主菜单中的“图库”，进入“图库”主界面，这里会列出所有的视频文件和图片文件。如下图所示：



## 图片浏览

点击主菜单中的“图库” / “所有照片”，这里会列出所有的图片文件。如下图所示：




选择图片文件，进入图片播放界面，如下图所示。可以选择“放大”，“缩小”，“共享”，“上一张”，“下一张”，“设置为”以及“删除”等操作。



## 触摸校准

系统第一次启动的时候会默认调用触摸校准程序。用户也可以在主菜单中选择“触摸校准”，进入触摸校准程序。按照提示完成校准操作，如果触摸校准成功。点击确认跳出程序，如下所示：

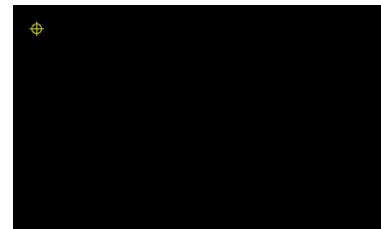

备注：电容屏无需触摸校准。

## 安全公告：

- \* 不可自行拆卸或修理
- \* 请防止水和灰尘进入，避免太阳长时间直射
- \* 请用软布清洁，勿使用化学溶剂擦拭
- \* 请勿使用其它电源适配器、电池或附件
- \* 请勿用坚硬或表面粗糙的物体触碰
- \* 请避免跌倒或撞击
- \* 请切断电源，如产品长时间不使用或无人照看

## 电池

### 关于电池：

- \* 为减少火灾或烧伤的危险，请勿自行拆卸、挤压、穿刺或丢弃在火、水中。

### 重要指示（针对服务人员）：

- \* 维修替换时只能用制造商建议的相同或同等类型的电池，否则有爆炸的危险。
- \* 电池必须回收或妥善处理。

## Welcome to use Fasion MID

The following steps and safety precautions is very important and useful, please read the instruction carefully and follow them when using it.

\*This product updates and specification change prompt. Do not worry when you find it not match with the pictures or text with reality.

\*Please keep safety with your information to avoid lossing message.

\*if you have any questions or needs, please contact customer service center as below

Customer service hotline: 4008868780

### Accessories:

- FASION MID host
- 5V2A DC charger
- Quick start guide
- Certificate
- Warranty card
- USB cable

## Product Appearance And Interface




\***Power button**: if you want to open or close host, please press power key longer

\***Back button**: return key can return to short last interface at any time

\***Sleep/wake-up button**: if you want your host into sleep mode, please short press at once, then press the power button for unlock.

\* **Menu button**: display the current form Menu item (UI has soft keys).

\* **Volume button**: Volume +/ - Add or reduce Volume

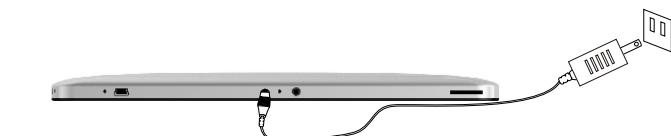


\***Adapter**: insert adapter outlet, while the other end into the host to carry on the charge.

(Note: host in the box is not fully charged, please make sure to charge host to full saturation before first use)

## Main screen

\* Main screen offers a variety of applications, according to relevant procedures quick icon can start the corresponding program, for more applications you can choose from right to left.

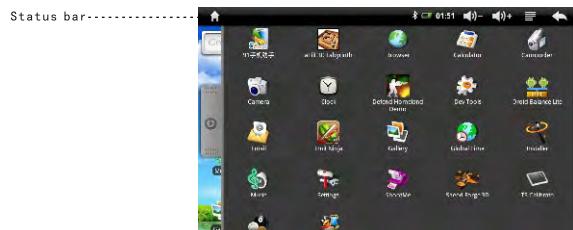

### Status bar

\* The top of the main screen is status bar. The right shows host network status, power, time, volume, menu, return. The left shows home page, you can tap the icon to set.

\* When you touch menu icon “≡” quick start toolbars provide you the most commonly used applications – wallpaper, settings, search, etc.

### Operation skills

You can use your fingers or touch pen press the icon field to enable other functions, such as browser pop-up keyboard, press and enter the URL address bar.

You can use your fingers or touch pen light touch screen up/down/left/right pulled to move or read more content.

### TF card using

TF card into the machine, after identification, click desktop “installer”, and then read TF card content. Uninstall TF card, in the “Settings” / “SD card and system memory” / “remove SD card” uninstall SD card, otherwise in the next time when use may not be able to read SD card.

### USB connection

Use USB connect the unit. The default connection mode is synchronous mode. You can drag status bar go down and out Now as picture shows interface:




## Main functions:

\* Network connection Settings/start network connections

\* WIFI wireless connections

Click on the main menu of “Settings” icon, enter system settings, click “wireless and network” into wireless and network set interface. Click “WIFI” column can quickly open WIFI function, click “WIFI Settings” can enter WIFI set interface, as below:

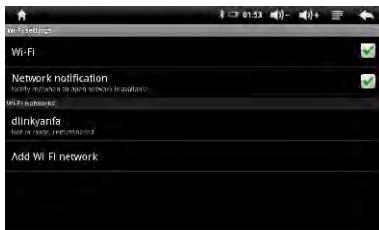

\* “WIFI Settings” interface (above), click WIFI column can also open and shut WIFI function, click

“network” notice it will list the MID to search wireless router, click searched wireless router names will pop-up Settings window, please according to clew complete WIFI network links. Some encrypted network, need to enter a valid keys. Link schemes are as follows:




## GPS satellite navigation (optional)

\*Support GPS navigation, click on the main menu of “Settings” icon, enter the system settings, click “interface using GPS satellite” enter “GPS” set interface.



### Camera(optional)

\*Click on the main MENU of “Image”, enter “image” main interface, click the MENU, select the “photo” or “shooting video”, then can open cameras photograph or shooting.

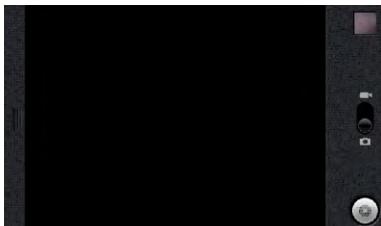

### HDMI

\*Use HDMI cable, connect the unit and have HDMI input interface equipment. In “Settings” / “sound and display” / “OutPut the Select” Select HDMI OutPut mode, then system into HDMI OutPut.

If choose HDMI output, can be in “HDMI Setting” inside choose change output formats.



### Web browsing:

\*When connected network, open the web browser input, can fast browsing the web site, Or through in the Lord of desktop to open the page directly.



### Music play

Click on the menu of “music” icon, and enter music broadcast interface. All of the songs will displayed for you choose.



### Video playback

Click on “gallery” interface, all of the video files and image files will displayed.



## Image browse

Click on the “gallery” / “all photographs” all the photo will displayed




Choose picture file into images broadcast interface as shown. Can choose to “Zoom” “narrow” “share” “previous” “next” “set” “delete” and other operation.



## Touch calibration

 When you first start the system will default to call the touch calibration procedure. Users can also in the main menu, select “touch calibration”, enter the touch calibration procedure. Follow the prompts to complete the calibration, if the touch calibration success. Click OK out of process, as follows:



Note: No need to touch capacitance screen calibration

## Security bulletins:

- \* Do not disassemble or repair by yourself
- \* Please prevent drop it to water, avoid sun point-blank and much dust on screen.
- \* Keep it clearing with soft cloth clean, do not use other chemical liquid.
- \* Don't use other adapter, battery or accessories, may cause damage
- \* Please don't use a sharp objects destruction
- \* Don't fall or bump, avoid electric shock and fire
- \* Please shut off the power when you do not using.

## About The Battery:

- \* Use a specified battery in the equipment .
- \* Caution: this unit contains a non-replaceable internal Lithium Ion battery . The battery can burst or explode, releasing hazardous chemicals . To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.
- Important instructions ( for service personnel only )**
- \* Caution : risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions .
- \* Replace only with the same or equivalent type recommended by the manufacturer.
- \* The battery must be recycled or disposed of properly .
- \* Use the battery only in the specified equipment.

## FCC Compliance Statement:

The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna on the affected receiver.
- Increase the separation between this device and the receiver. Connect this device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

## RF Exposure warning:

This device and its antenna(s) must not be collocated or operating in conjunction with any other antenna or transmitter.