

User Manual



Thank you for using our Mobile Phone. To guarantee the best performance of your phone, please read this manual carefully.

We reserve the right to make modification on print errors or update specifications without prior notice.

Contents

Safety Instructions	3
Phone controls	4
Preparation before use	5
Installing the SIM card	5
Installing the Memory card	6
Installing the battery	6
Charging the battery	6
Power On/Off	7
Security number	7
General features	8
Make a call by dialing	8
Answer a call	8
To end a call conversation	9
Emergency calls	9
To make an international call	9
Call Voicemail	9
Adjusting the volume	9
Keypad lock	10
Standby mode	10
Phone Menu	10
Short Message	12
Write New SMS	12
SMS Read view	13
Save message as draft	14
SMS Message settings	24
Phonebook	15
Create contact	15
Browse mode	15
Group	16
Speed dial	16
Copy all	16
Delete all entries	16
Call Records	17
Incoming calls	17
Outgoing calls	17
Missed calls	18

Call Duration	18
Settings	18
Phone settings	18
Display settings	18
Security settings	19
Clock settings	19
Keypad locking settings	19
Factory default	19
Network select mode	19
Call settings	19
Shortcut settings	20
Profiles	21
SIM Toll Kit	21
Tool	22
MP3 Player	22
FM Radio	23
Voice Recorder	24
File Manager	24
Alarm	25
Calculator	26
Calendar	26
Conversion	26
Maintenance	27
Battery instructions	27
Security Requirements	27
Traffic safety	28
Flight Safety	28
FCC Part 15 Compliance	29
Specific Absorption Rate (SAR) information	30

Safety Instructions

These instructions are intended for the safe and effective use of your phone. Please follow these guidelines. Failure to do so might cause the product to malfunction, or even a potential hazard to your health.

-  Do not use your mobile phone while driving. Park the car before making or answering a call.
-  Turn off your phone when refueling.
Do not use your phone near a gas station, flammable, or chemical substances.
Warning! It may explode when exposed in fire.
-  Do not use your phone during a flight. Wireless devices can cause interference in the aircraft.
-  Do not use your phone near medical equipments like pacemaker without requesting permission from the physician or medical staff.
-  Radio signals may affect the performance of your phone.
-  Do not touch any exposed parts of the antenna while in a call, it will affect the call reception and waste battery power.
-  Do not attempt to disassemble or modify the phone by yourself. Only authorized personnel should perform this service.
-  When you connect accessories to your phone, please read the safety guidelines carefully. **Do not use unauthorized products.**
-  Please use only the original accessories or products that are authorized by our company.
-  Keep out of children's reach.

Phone controls



Use the control buttons to do the following:



Navigations keys (Up/Down/Left/Right)

- Press to move the selection/control up, down, left, or right during options programming.
- Use to move the cursor around the lcd screen.



Left Soft key

- Press to operate the function that is displayed on the bottom left side of the lcd screen.



Talk key

- Press to make or to receive a call.
- Press in standby mode to open the call lists.

**Auto Keypad lock**

- Press and hold to activate the Auto keypad lock.

**Center key**

- In standby mode, press and hold to turn the Flashlight On or Off.

**Right Soft key**

- Press to operate the function that is displayed on the bottom right side of the lcd screen.

**Power/End key**

- Press to end an active call.
- Press to exit and return to standby mode.
- Power On/Off: Press and hold for 3 seconds to turn the phone On or Off.

**Silent mode On/Off key**

- Press and hold to turn the Silent mode profile to On or Off.

Preparation before use

Installing the SIM card

Your Subscriber Identity Module (SIM) card identifies you to the wireless network. Your phone will not work without the SIM card.

- 1 Remove the back cover by pushing it downward.
- 2 Insert or remove the SIM card:
 - Insert the SIM card into the slot, copper contacts facing down as shown.
 - To remove an already-installed SIM card, pull the front edge with your fingertip and then take out the card.



Installing the Memory card

Your phone has a slot for a microSD flash memory card. It is located at the top right side, just above the battery compartment.

Insert or remove the SD card:

- To insert an SD card, push the card into the slot, copper contacts facing down and with the notched edge facing left. Push the card in gently until it fits into place.
- To remove an already-installed SD card, pull out the card gently with your fingertip.



Installing the battery

- 1 Insert the battery as shown in the picture. Make sure that the terminals on the battery aligns with the metal contacts on the phone.
- 2 Replace the back cover. Push it upward until the locking tabs clicks into place.



Charging the battery

- 1 Connect the AC adapter plug to an electrical outlet and connect the other end to the USB port at the upper left side of the phone.
- 2 When the power comes on, "Charging..." will be displayed on

the LCD screen, and the charge indicator will start to scroll. It will only stop after the battery comes to full charge. If a battery is completely discharged, it may take a few minutes before the charge indicator appears on the LCD screen.

- 3 To fully charge when the phone is discharged, keep charging for at least three hours.
- 4 After the battery charge comes to full, disconnect the charger from phone and the socket of the alternating current.

Warning!

- Do not take out the battery when it is being charged.
- To ensure the best performance, please use original accessories. Using any unauthorized accessories may affect your mobile phone's performance.
- Personal data and settings in your phone and SIM card might lost when you take out the battery.

Power ON/OFF

Press and hold **Power** key to turn on or power off your phone.

Security number

■ PIN1

PIN (Personal Identity Number), is usually provided to a SIM card by the network operator. If you enter a wrong PIN three times in a row, it will be locked. You need to enter your PUK (Personal Unblocking Key) number to unlock. Please contact your network operator for more details.

■ PIN2

PIN2 is provided to some SIM. If you enter a wrong PIN three times in a row, it will be locked. You need to enter your PUK2 to unlock. Call your network operator for more details.

■ PUK

PUK (Personal Unblocking Key) is used to unlock the PIN. PUK is provided to a SIM card. If you lose or forget the password, contact your network operator.

■ Phone code

You can turn on the Phone code for your personal security and protects your phone against unauthorized use.

General features

Make a call by dialing

You have several choices for placing a call.

Dial the number	In standby mode, enter a phone number, press Delete key to clear a wrong entry. Press Talk key to dial out the number.
Dial from contacts	Find the number you want to call in your phone book and then press Talk key to dial out the selected contact.
Dial from the call list	Press Talk key in standby mode. The call lists will display starting from the most recently called number.
	Press Talk key to automatically dial the displayed record, or press Up or Down key to scroll the list. Press Talk key to dial the selected record.

Answer a call

When a call comes in, phone will ring and/or vibrate according to your phone profile setting. It will show the caller's name if the network supports it. The caller's name display depends on whether you have saved it in your phonebook. Press **Talk** key, or press **Option>Accept** to answer.

In call options:

Mute	Press Option>Mute/Unmute key to activate or deactivate the mute mode.
Turn on the Speakerphone	Press Option>Handsfree to turn on the speakerphone. Press Option>Handsfree off to return to normal talk mode.
Hold a call	Press Hold key to hold the call.

Other options when receiving an incoming call:

Turn off the Ringer	Press Option>Ringer off to turn off the ringer.
----------------------------	---

Reject a call

Press **End** key or press **Reject** to reject the call.

To end a call conversation

When you have finished talking, press **End** key to end a call. You can also press **End** key if you want to terminate a call after you dialed.

Emergency calls

You do not need to own a SIM card to make emergency calls. Emergency calls may differ from different network operators, please contact your network operator to get your local emergency call number.

To make an international call

To make an international call, press * key successively until a "+" sign appears on the screen. Enter the country code, area code (without the first zero), and the phone number:

For example: Enter **49** for Germany, **44** for UK, **86** for China.

Enter +8613798297223, when making an international call to China.

Call Voicemail

Before using this feature, first setup the **Voice mailbox number** in **Menu>Phonebook>Special number>Voice mail**

- 1 Select **Listen to Voice Mail messages** in the **Menu>Phonebook>Special number>Voice mail**
- 2 Your voicemail number is dialed.
- 3 When the call connects, follow the voice prompt to retrieve your voice mail message.

Adjusting the volume

During a phone conversation, press the **Right** arrow key to open the Volume control display and then press **Up or Down** keys to adjust the volume of the earpiece or headset to your comfortable listening level.

Keypad lock

The Keypad lock function prevents an accidental pressing of keys that causes unnecessary operation of your phone.

In standby mode, press and hold * key to lock the keypad. To

disable the keypad lock, press **Unlock** key and then press * key.

(To enable permanent keypad lock setting, please see "Keypad Locking settings" on Phone settings menu.)

Standby mode

With phone in standby mode, you can access the following functions:

Menu	Press Menu key to open the phone menu.
Phonebook	Press Phonebook key to directly access the Phonebook home menu.
Flashlight	Press and hold to turn the flashlight On or Off .

Phone Menu

■ Call Records

- 1 Incoming Call
- 2 Outgoing Call
- 3 Missed Call
- 4 Call Duration
- 5 Delete All

■ Phonebook

- 1 Create
 - 1 Save to SIM
 - 2 Save to Phone
- 2 Browse
- 3 Group
 - 1 Family
 - 2 Friends
 - 3 office
 - 4 Others
- 4 Special number
 - 1 Own number
 - 2 Voice mail
- 5 Advanced

1 Speed dial
2 Copy
3 Delete all entries
6 Storage status

■ Short Message

1 Write message
2 Inbox
3 Outbox
4 Draftbox
5 Templates
6 Delete all
8 Message setup
9 Broadcast message
10 Storage status

■ Settings

1 Phone settings

1 Display settings
1 LCD contrast
2 Backlight
3 Wallpaper
4 Greeting note
5 Language
6 Date Time display
2 Security settings
1 Power on PIN1
2 Change PIN2
3 Phone code
3 Clock settings
1 Date & Time setting
2 Date display format
3 Date separator
4 Time display format
4 Keypad Locking settings
5 Factory default
2 Network select mode
1 Automatic selection
2 Manual selection
3 Call settings
1 Caller ID
2 Auto redial
3 Any key answer
4 Call waiting
5 Call forwarding
1 Unconditional divert
2 Busy divert
3 No answer divert

- 4 No service divert
- 6 Call barring
 - 1 All Outgoing calls
 - 2 All Int'l call
 - 3 Int'l except to home
 - 4 All incoming call
 - 5 Incoming while roam
- 4 Shortcut settings
 - 1 Left key
 - 2 Right key
 - 3 Up key
 - 4 Down key
- 5 Profiles
 - 1 Standard
 - 2 Conference
 - 3 Outdoor
 - 4 Mute
 - 5 Customize

■ SIM Tool Kit

- Tool
 - 1 MP3 Player
 - 2 FM Radio
 - 3 Voice Recorder
 - 4 File Browser
 - 5 Alarm
 - 1 Alarm 1
 - 2 Alarm 2
 - 3 Alarm 3
 - 6 Calculator
 - 7 Calendar
 - 8 Conversion

Short Message

Write New SMS

Before you start, make sure that the number of the service center is set. The number is supplied by the service provider and is usually saved on the SIM card.

- 1 Press **Menu** and select **Short Message>Write Message**
- 2 Type your message. As you type, you'll be able to track

how many characters you're creating.
■ Press **Delete** to clear a wrong input, press and hold **Delete** to clear the whole entry.

- Press # key repeatedly to set the text input mode; *language guobi (eng or es), abc, Abc, ABC, or 123.*
- If the next letter you want is located on the same key as the present one, wait until the cursor is shown and key in the letter.
- To add a common punctuation mark, press 1 key repeatedly until the character is displayed.
- To add a symbol, press * key, scroll to the character and press **OK** to input.

3 After completing your message, press **Option** and select:

Only send - Sends the message by dialing the recipient number or search the recipient from the Contact list.

Only Save - Stores the message in the Draftbox memory.

Send and save - To send and then save the message in the Outbox memory.

Send to many - To send the message to two or more recipients. You can add up to 5 recipients.

SMS Read view

When receiving a text message, a message alert will be heard. Press **Select** and then **OK** key to open the message.

Reading a Text message: Open the **Short message> Inbox** folder. The message lists will display starting from the Unread or most recently viewed. Select the message in the list and then press **OK** key to read the content.

From an SMS message read view, press **Option** to do the following:

Delete Deletes the current message.

Text Reply	Opens the Message write box to reply the message sender.
Forward	Forwards the message to other contact/s.
Edit	Opens the Message edit box. You can then edit the message draft before sending.
Dial back	Calls the message sender.
Extract number	Displays the phone number of the message sender. You can then call, or save the number to your phonebook.

Save message as draft

- 1 While composing, press **Option> Only save**.
- 2 To use a stored message in the draftbox menu, select the message from the list and then select **Edit**. After editing, you can then select the option to send it.

SMS message settings

To set your SMS setting preferences, press **Menu>Short Message> Message setup**.

Service Center	Select to view/change the service center Number. Note: The service center number is usually assigned by the SIM card provider.
Protocol type	Sets the message protocol type to Text, Fax, or Email. The option is set to Text by default.
Validity Period	Sets the time interval during which the SMS Center will try to send the message; 1 Hour, 12 Hours, 24 Hours, 1 Week, 1 Month, 3 Months, or Maximum .
Status Report	Set to On if you want the network to send a delivery report, otherwise set the option to Off .
Reply Path	Set to On if you want the network to send

a reply back information to the receiver, otherwise set the option to **Off**.

Storage media Sets the message storage memory location; **SIM** or **Phone preferred**.

Phonebook

To view the contacts on your phone, press **Menu>Phonebook** and select **Browse**.

Create a contact

- 1 In the Phonebook menu, select **Create**.
- 2 Select the memory location; **Save to SIM** or **Phone**, and then press **OK** key.
- 3 Input the number and then press **Save**.
- 4 Input the name and then press **OK** key to confirm.

Browse mode

A way to find a contact quickly is to press a letter key (**A~Z**) that corresponds to the first letter of a name, and the search will jump to the first entry beginning with that letter.

Press **Up** or **Down** key to scroll through the list.

Also, you can press **Option** to do the following:

Call	Calls the selected contact.
Send SMS	Sends SMS message to the selected contact.
Detail/Edit	Displays the stored information on the selected contact. You can then edit the displayed detail.
Delete	Deletes the selected record.
Create	Adds new phonebook record.
Copy to SIM/ Phone	To copy the selected record in the phone memory or vice versa.
Storage status	To view the SIM and Phone memory status.

Group

You can assign Phone contacts into Groups.

- 1 In the Phonebook menu, select **Groups**.
- 2 Select; **Family**, **Friends**, **Office**, or **Others**.
- 3 On the next menu, select:
 - Group member**: To display the records stored under the selected group category. In the Option context menu, you can have an option to Add or Delete a member on the group.
 - Rename**: To edit the group name.
 - Alert tone**: To assign a distinctive tone on the group. When a member from the group calls in, the assigned ring tone will play.

Speed dial

You can assign Speed dial numbers to the keys **2 ~ 9** and make a call via speed dialing.

- 1 In the Phonebook menu, select **Advanced>Speed dial**.
- 2 Select a Speed dial key location and then press **OK**.
- 3 Select **Set/Change**.
- 4 Browse the phonebook record you wish to assign and then press **OK**.

To make a Speed dial call:

In standby mode, press the Speed dial key memory location and then press **Call** Key to dial out the stored number.

Copy all

You can copy your contact list from SIM to Phone or vice versa.

- 1 In the Phonebook menu, select **Advanced>Copy**.
- 2 Select; **From SIM card to Phone** or **From Phone to SIM card**.

Delete all entries

- 1 In the Phonebook menu, select **Advanced>Delete all entries**.
- 2 Select; **Delete all phone entries** or **Delete all SIM**

entries.
3 Press **OK**.
4 In the prompt, press **OK** again to confirm.

Call Records

Your phone records the Missed call, Incoming call, Outgoing call, and Call Duration.

Incoming Call

Shows the answered incoming calls. It shows the telephone number or the name (if the caller's number is identified with the name and number that is stored in the Phonebook memory), date, and time of the call.

- 1 In the Call Records display, select **Received Call**.
- 2 The received call list will display, select the record you wish to view.
- 3 Press **Option** and then select:
Dial, Send SMS, Delete, Save to Phonebook, Delete all, or Show number.

Outgoing Call

Shows the list of phone numbers that you have most recently dialed or attempted to call.

- 1 In the Call Records display, select **Outgoing Call**.
- 2 The dialed call list will display, select the record you wish to view.
- 3 Press **Option** and then select:
Dial, Send SMS, Delete, Save to Phonebook, Delete all, or Show number.

Missed Call

Shows the latest records of unanswered incoming calls, if available from the network.

- 1 In the Call Records display, select **Missed Call**.
- 2 The missed call list will display, select the record you wish to view.
- 3 Press **Option** and then select: **Dial, Send SMS, Delete,**

Call duration

Shows the elapsed time of incoming calls, Outgoing calls, and the most recent last call.

- 1 In the Call Records display, select **Call duration**.
- 2 The LCD screen will display the **Outgoing Duration**, **Incoming Duration**, and the **Last Call Duration**.

Press **Reset** key to reset the time duration back to zero.

Settings

You can set the general functionality of your phone. Press **Menu** and then select **Settings**.

Phone settings

Press **Menu>Setting** and then select **Phone settings** to set the following:

Display settings

LCD contrast	Sets the brightness display of the LCD screen. Press Left or Right arrow to adjust the contrast to your desired brightness level.
Backlight	Sets the back light behavior; Always on , 15 seconds on , or 30 seconds on .
Wallpaper	Sets the wallpaper screen display; Wallpaper 1 , 2 , or 3
Greeting note	Select Enable if you want to add a greeting message display during start up.
Language	Sets the operating language. The language list available on your phone depends on the model version.
Date time display	Select Enable if you want to show the date and time in the standby mode.

Security settings

Power on PIN1 Set to **On** to enable the PIN1 code entry of your SIM before the phone proceeds to turn on. You can also select **Change PIN1** to change the PIN1 code.

Change PIN2 Changes the PIN2 code. This function is network dependent. Please call your SIM network to get more details.

Phone code Set to **On/Off**, or **Change the phone code**. The default phone code setting is **0000**.

Clock settings

Date & Time setting Sets the time and date display of your phone.

Date display format Sets the display format of the date.

Date separator Sets the display to separate the date.

Time display format Sets the time format to either **12 hours** or **24 hours**.

Keypad Locking Settings

Sets the keypad locking behavior; **Disable**, **30 Seconds**, or **60 Seconds**.

Factory Default

Select to change the phone settings back to default.

Network select mode

Select a wireless operator network via manual scanning, or select a network automatically.

Call settings

Caller ID Sets the option to; **Default setting**, **On**, or **Off**.

Auto redial	Set to Enable or Disable . When enabled, your phone will automatically redial the number you called if the called party is busy or does not answer.
Any key answer	Set to Enable or Disable . When enabled, you can answer a call by pressing any of the functional keys except End key.
Call waiting	To display incoming calls when you are on a call. Select to Activate or Deactivate the call waiting function of your phone.
Call forwarding	Diverts a call to another number. Selects how you want the Unconditional , when Busy , No answer , and No service call to be handled.
Call barring	This feature is network dependent. Please call your SIM network to get more details. Select: All outgoing calls , All Int'l call , Int'l except to home , All incoming calls , or Incoming while roam .
Shortcut settings	<p>A quicker way to access a function is by using the shortcut setting of your phone. You can set the most often used functions in the shortcut keys to access them via touch of a button.</p> <ol style="list-style-type: none"> 1 Press Menu>Setting and then select Shortcut settings. 2 Select the function key: Left key, Right key, Up key, or Down key. 3 Select the relevant function that you wish to assign on the selected key: Inbox, Phonebook, Call Records, Alarm, Multimedia, Short Message, or File Browser. <p>With the phone in standby mode, press the function key (Left, Right, Up, or Down) to quickly access the assigned function.</p>

Profiles

You can choose how your phone operate in different environment.

- 1 Press Menu>Setting and then select **Profiles**.
- 2 Select; **Standard, Conference, Outdoor, Mute**, or **Customize**.
- 3 Set the selected profile to; **Set as default**, **Personalize**, or **Reset**. When choosing reset, the profile settings will change back to default.

Personalize Profile settings

You can customize the following options;

Ringing tone: Sets the call ringing tone. Browse the list to select your desired incoming call ring tone.

SMS alert tone: Sets the Message tone. Browse the list to select your desired SMS ring tone.

Call alert: Set to; **Ring once**,or **Repeat ring**.

Ringing volume: Sets the volume level of the call ringing tone. Press **Left** or **Right** key to adjust the volume to your desired level.

Key volume: Sets the volume level of the key tone. Press **Left** or **Right** key to adjust the volume to your desired level.

Vibrating alert: Set to **On** to enable the vibrate mode, otherwise set to **Off**.

Title: Enters a name for the personalized profile.

SIM Tool Kit

This menu option allows you to access a range of SMS based services that helps you do more. Simply select the desired service from the service menu. To get the list of services available for your handset or for assistance on any of these services, please call your SIM network.

There are different menus according to different SIM cards.

Tool

MP3 Player

Your phone can play MP3 songs. Press Tool>MP3 Player to open the MP3 player controls.

To add MP3 songs in the playlist;

- 1 In the Mp3 player home, press **Option>Playlist**
- 2 Press **Add**
- 3 Press **Open** to browse the MP3 files on the Memory card.
- 4 To add the selected song, press **Option>Mark** and then press **OK**.
You can also use **Option>Mark all** and then press **OK** to add more songs in one setting.

Note: You can only mark a maximum of 10 songs to add in the playlist.

- 5 Press **Option>Play** to start playing the MP3 song.

While a song is playing:

- > Press **【#】** key to increase, or press **【*】** key to decrease the sound volume level.
- > Press **Right** key to move the song selection forward. Press **Left** key to return to the previous.
- > Press **Center** key to pause/resume the play.
- > Press **Stop** key to stop the play.

Also, you can select the following by pressing the **Option** key:

Playlist Access the song playlist.

Play Mode Sets the MP3 play mode: **Single Once**, **Repeat Single**, **List Once**, **Repeat List**, or **Random**.

EQ setting Sets the sound equalizer: **Normal**, **Classic**, **Pop**, **Bass**, or **Rock**.

Lock keypad Activates the keypad lock function.

Play in the Background To play the MP3 song on the background. Select **On** and then press **Enable**.

Browsing the Playlist:

- 1 In the Mp3 player home, press **Option>Playlist**
- 2 Use Up or Down keys to browse the MP3 list
- 3 Press **Option** to do the following:

Add To add more songs in the Playlist.

Delete Deletes the selected song.

Delete all Deletes all the songs in the Playlist.

Set as ring Sets the selected song as your incoming call ring tone.

FM radio

Note: Plug the earphone before using the FM radio.

Press **Menu** and then select **FM Radio**.

FM Channel Auto Search:

- 1 In the FM radio controls menu, press **Menu>Auto search**.
- 2 The display will prompt "Preset list?"
- 3 Press **Yes**. The phone will scan for active and clear FM radio channels and stores them in the Channel list memory.

FM Channel Set Frequency:

You can manually enter the band width frequency of your favorite FM radio station.

- 1 In the FM radio controls menu, press **Menu>Set Frequency**.
- 2 Input the band width frequency. To enter a decimal point, press # key twice.
To save the channel into the Channel list, press **Menu>Save Channel**.

Changing channels:

While tune in to a current FM channel, press **Center** key to change Channel, or

- 1 Press **Menu>Channel** to display the Channel list.

2 Use **Up** or **Down** keys to browse the FM channel list.
Press **Menu>Select** to open the selected channel.
While in the Channel list, you can also press **Menu** to do the following:

Delete Channel: Deletes the selected channel.

Rename: Edits the channel name reference.

Play FM radio in the Loudspeaker;
While tune in to a current FM channel, press **Menu>Set Loudspeaker**. Select **On** and then press **OK**.

Adjusting the receiver volume;
While tune in to a current FM channel, Press **【#】** key to increase, or press **【*】** key to decrease the sound volume.

Voice Recorder

Press **Menu>Tools** and then select **Voice Recorder**.

- 1 Press **Create** to start recording. When recording, make sure to speak directly near the microphone. You can record a sound up to 30 seconds length.
- 2 Press **Save** to store the recorded voice in the memory. Input the name and then press **OK**. You can store up to 3 recordings in the phone memory

To play a recorded voice;

- 1 In the Voice Recorder home, browse the voice record file that you want to play.
- 2 Press **Option>Play**.

Also, you can select the following by pressing **Option** key:

Delete Deletes the selected file.

Create Makes a new voice recording.

Rename Edits the file name.

Delete all Deletes all the songs in the Playlist.

File Manager

1 In the Tool home, select **File Browser**.

2 Select:

- Open** To browse the Memory card content.
- Details** Displays the Storage memory condition.
- Format** To format the Memory card.

Managing a Folder

- 1 In the File browser menu, press **Up** or **Down** key to access the folders.
- 2 Press **Option** to do the following:

- Open** To access the content of the selected folder.
- Add Folder** Adds new folder into the list.
- Rename** Edits the name of the selected folder.
- Copy** Copies the folder including it's content into the pasteboard memory.
- Cut** Cuts the folder including it's content in the current list where you can move it to other memory location.
- Paste** Place the copied or cut folder into the selected location.
- Delete** Deletes the selected folder.
- Delete All** Deletes all of the folder and/or files in the selected memory location.
- Mark** Marks the selected folder.
- Mark All** Marks all of the folder and/or files in the selected memory location. You can then press **Option** to delete, copy, or cut the marked folders and/or files.
- Details** Displays the folder details.

Alarm

You can set three alarm time options in your phone.

Setting the Alarm clock

- 1 Press **Menu>Tools** and then select **Alarm**.
- 2 Select: **Alarm 1, 2, or 3**.
- 3 Input the Alarm data:
 - Alarm x:** Set to **On** to enable the alarm setting.
 - Time:** Set the alarm time.
 - Type:**
 - One shot alarm: Plays the alarm in single setting.
 - Weekly Alarm: Plays the alarm according to the mark dates. Set the date/s and press **Done**.
 - Snooze Time:** Sets the time interval of the snooze mode.
 - Alarm Tone:** Sets the alarm tone.
- 4 Press **Save**.

Calculator

The calculator allows you to carry out simple arithmetic operation (addition, subtraction, multiplication, and division).

To access the calculator menu:

- 1 Press **Menu>Tools** and then select **Calculator**.
- 2 Input the first number/s (not more than 9 digits).
- 3 Select the arithmetic operation.
 - Up** key: + (Addition)
 - Down** key: - (Subtraction)
 - Left** key: x (Multiplication)
 - Right** key: / (Division)
- Press **#** key to enter a negative sign before the number, or press ***** key to enter a decimal point.
- 4 Input the second number/s (not more than 9 digits).
- 5 Press **Equals** key to display the result.

Calendar

To view the calendar.

- 1 Press **Menu>Tools** and then select **Calendar**.
- 2 The calendar will display.
Press **Up** key repeatedly to view the calendar date on previous months.
Press **Down** key repeatedly to view the calendar date for coming months.

Conversion

Your phone can perform several unit conversions.

- 1 Press **Menu>Tools** and then select **Conversion**.
- 2 In the Type field select; **Currency, Landmeasure, Energy, Length, Quality, Power, Pressure, Temperature, Time, Velocity, or Volume.**
- 3 Press **Down** key once. Set the unit reference.
- 4 Press **Down** key to move the cursor on the Input field. Enter the number.
- 5 Press **Down** key to move the cursor on the target Unit field. Press **Left** or **Right** key to select the target unit reference.

The converted result will be displayed.

Maintenance

Battery instructions

When the phone automatically turns off or indicates the alarm information of power shortage, please charge the battery in time.

- For the first few times, please charge the battery fully.
- When not in use, please separate the battery with power supply. Overcharging will shorten the life of the battery.
- Do not expose your products to extreme high or low temperatures. Do not expose the battery to temperature above +40 °C.
- Do not use damaged battery.
- Do not expose your mobile phone to direct sunlight or in hot areas. High temperatures can shorten the life of electronic devices.
- Do not expose the battery into fire or throw it away. Return the worn-out battery to the provider or put it in the appointed recycle place. Do not throw it in familial rubbish.

Follow these guidelines to protect your product:

- keep the product out of children's reach
- Keep your product dry. Do not expose it to liquid or moisture.
- Do not short-circuit the battery, as this can cause excessive heat to bring about fire.

- Do not expose your mobile phone to direct sunlight or in hot areas. High temperatures can shorten the life of electronic devices.
- Do not attempt to disassemble the phone and battery by yourself.
- Prevent any liquid from leaking into your phone.
- Please only use original accessories. Using any unauthorized accessory may affect your mobile phone's performance.

Security Requirements

Before making or answering a call, you should pay attention to the local laws about the use of wireless mobile phones and take them into account in practical use.

Traffic safety

- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Without enough shield, some electronic devices in the car might interfere to the radio frequency of your phone.
- If you have to use your phone in a car, make sure it has an antenna.
- Only qualified technician can install your phone into your automobile.

Flight Safety

Please turn off or set your GSM mobile phone to **Flight** profile before the airplane takes off or landing. This is in order to protect the airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off or landing should get aircrew's permission according to safety regulations.

Do not use your phone where a potentially dangerous atmosphere exists.

Operating of mobile phone may interfere with medical devices like hearing aids and pacemakers.

Please strictly observe with the restrictions on the use of wireless devices.

Warning!

- 1 The performance of the phone depends on your local network operator's card and how you actually use it.
- 2 We are not responsible for any damage/s due to inappropriate use.
- 3 We reserve the right to make any modifications on this manual without prior notice.

FCC Part 15 Compliance

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg.