

## **Instruction Manual**

Starting up: Slide switch to “ON” position at the bottom of Selfie wand, then the LED indicator will keep lighting up for every 2 seconds.

Pairing and connection:

- 1.Slide switch to “ON”, the blue LED indicator will quickly flash for every 1 second.
- 2.Turn on Bluetooth in your mobile device, then search to pair/connect with “BSD-RS”
- 3.After Bluetooth connected with “BSD-RS”, the blue LED indicator will keep lighting up for every 2 seconds.

Photos taking

Enter the camera mode on your mobile device and press button for 1 second to take photos every time.

Shut down: Slide switch to “OFF” position.

Electrical:

Operating ambient temperatures:-10 to 40°C

Relative humidity range:10 to 90%

Battery capacity:45mAn

Charging voltage:5V DC

Charging time:1 hour

Standby time:100 hours

Autodyne Frequency:500 times or above

Support Systems:Android 3.0 IOS 4.0 or above

Monopod:

Maximum loading capacity:500g

Flex heights:235 to 1005mm

Main material:stainless steel

Flex height:7sections

Clamp:

Available range for clamping a mobile phone or digital camera:

Length:100-165mm

Width:55-87mm

Notes:

This product supports IOS 4.0/Android 3.0 or above. Because Android is open source system, some smartphones or Tablet may not support our products.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation