



Insert battery according to diagram.

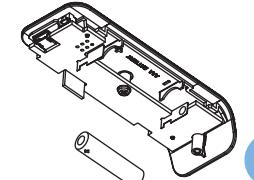


3

Slide battery cover to access battery area.

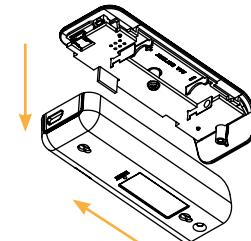

2

Remove screw from back battery cover.

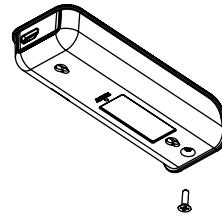

1


Installing The Hub's Battery

Plug in supplied AC power adapter to Hub.




4

Replace battery and cover on Hub.

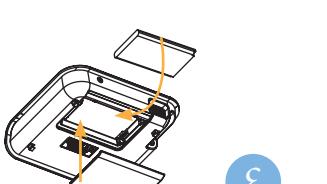

3

Pull battery tab from battery.

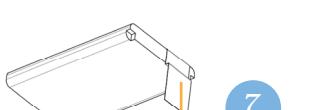

2

Slide Hub cover to access battery area.



1

Please install battery prior to operating the device.

Note: the Hub will not operate without the battery installed.

Installing The Hub's Battery

Setup Wizard

Note: Hub must have battery installed and AC adapter plugged in to operate.

1

Power On

Install included Li-ion battery into Hub. Connect the included AC power adapter to Hub.

5

Hub Name

Enter a name or identifier for the Hub. This is the identifying name that you (and your designated contacts) will receive SMS (text) messages from on your cell phone.

3

Password

You have the option to create a four-digit password that would allow only you to make changes to the system settings.

4


Wi-Fi

Connecting to a Wi-Fi network provides a second method for the Hub to transmit alerts to your cell phone. If there is no Wi-Fi network or the network

becomes disabled, the Hub will transmit alerts using the cellular telephone network. The Hub can only connect to one Wi-Fi network.

Wall Mount Installation (Hub and Sensors)


1

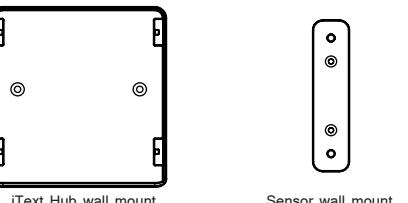

Use the mounting bracket as a template to mark pilot holes for the mounting screws.


Pilot holes may not be necessary in some materials.

2

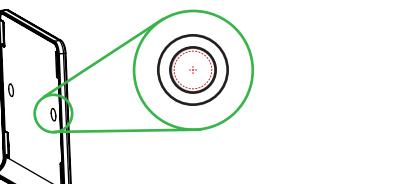

Drill 1/16" pilot holes. Install the mounting bracket using the included screws.


3

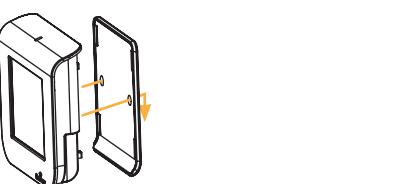

Fasten the Hub or Sensor to the bracket. The double-sided tape may be used to fasten the mounting bracket instead of securing with the screws.

Hub Hard Key

Note: please push on the power button to access the hard key.

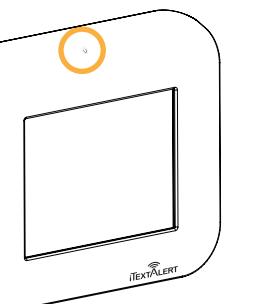


The hard key is used to put the Hub in sleep mode, wake the Hub up from sleep mode, and reboot the system. The Hub will only power down when the battery pack is depleted.



Hard Key Functions

- Press and hold hard for 5 seconds to place Hub in sleep mode.
- Press and release the hard key to wake the Hub from sleep mode. (Note: Do not hold the hard key down.)

If the system shuts down, use a paperclip to hit the Reset button on the back side of the Sensor. Push in carefully until the button clicks.

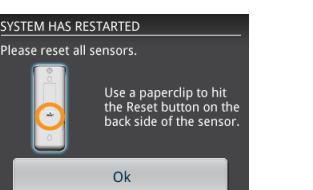

accepts any interference received, including interference that may cause undesired operation. Following two conditions: (1) This device may not cause harmful interference, and (2) this device must void the user's authority to operate the equipment.

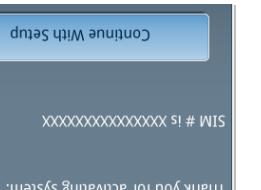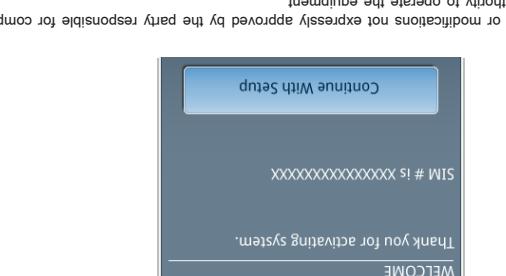

SIM # is XXXXXXXXXXXXXXXXX

Thank you for activating system.

WELCOME

Continue With Setup

2992 between the hours of 7:00 AM to 7:00 PM Central time

For customer service or technical support, please call 855-810-

zone, Monday through Friday or visit us at www.iTextAlert.com.

2992 between the hours of 7:00 AM to 7:00 PM Central time

For customer service or technical support, please call 855-810-

phone until you have completed activation.

been registered. You will not receive SMS alerts to your cell

the activation reminder will be present on your Hub until it has

www.iTextAlert.com or calling 855-810-2992. Please note that

To begin using your system, please register either logging into

www.iTextAlert.com or calling 855-810-2992. Please note that

the convenience of your cell phone. The IT-A-1 allows you to

receive alerts from and to send commands to your Hub via SMS

to 8 remote sensing devices using wireless technology and

systems. With this product, you have the ability to monitor up

systems. Thank you for purchasing the IT-A-1 monitoring and alerting

(text) messaging.

Welcome,

Thank you for purchasing the IT-A-1 monitoring and alerting

(text) messaging.

receives alerts from and to send commands to your Hub via SMS

the convenience of your cell phone. The IT-A-1 allows you to

receive alerts from and to send commands to your Hub via SMS

to 8 remote sensing devices using wireless technology and

systems. With this product, you have the ability to monitor up


systems. Thank you for purchasing the IT-A-1 monitoring and alerting

(text) messaging.

Welcome,

Activation

Menu Navigation

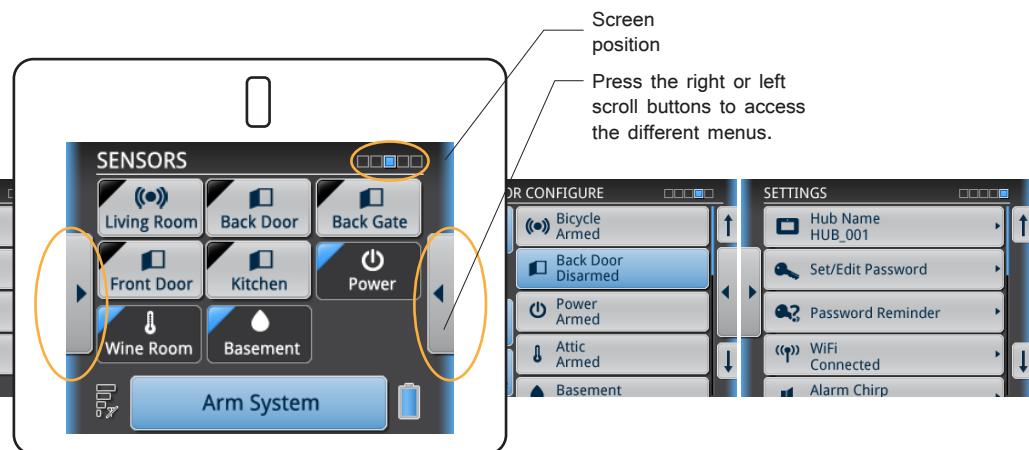

Event Log
Chronologically lists the last 50 system events.


Contacts
Lists the designated contacts (maximum of 5).


Sensors
Lists the maximum of 9 sensors (Power is a default Sensor).

Sensor Configure
Lists all the sensors, their types, and their locations. From this screen, individual sensors can be edited or deleted.


Note: After the initial setup, Sensor Settings can be edited without connecting the Sensor to Hub via the provided USB cable.

Settings:
Lists the settings for the Hub and Sensors.

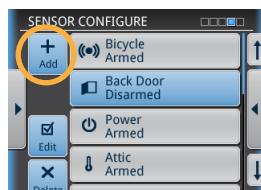1 
Go to Sensor Configuration screen and press [+ symbol] to add a Sensor (maximum of 8).

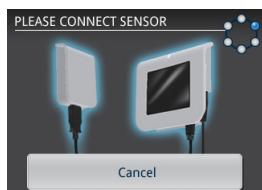
3 
The connecting screen will appear; once the Hub recognizes the Sensor, the screen will advance to the specific Sensor Settings screen.

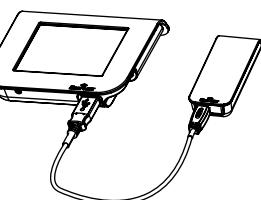

2 
Connect the Sensor to the Hub via the provided USB cable.

Note: When resetting the sensor, it is not required to connect the Sensor to the Hub via USB cable.

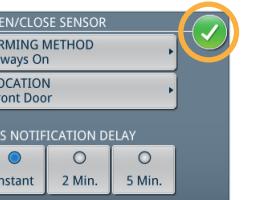

4 
Adjust the settings; then press the [✓ symbol] to confirm the settings.



Stationary/Move - alerts once the Sensor is physically moved.



Open/Close - alerts once the Sensor disconnects/connects.



Temperature - alerts once the Sensor has reached its threshold.



Wet/Dry - alerts the Sensor has reached the wet/dry level based on its configuration.



Power - alerts once the Hub has lost or regained power.


Remote Configuration

Commands:
You can send a SMS command to the Hub.

XY
Command Sensor
1Y - Disarm
2Y - Arm
3Y - Dismiss

ex. Send "25" will Arm Sensor 5 (Kitchen)

Sensor Screen Grid Number

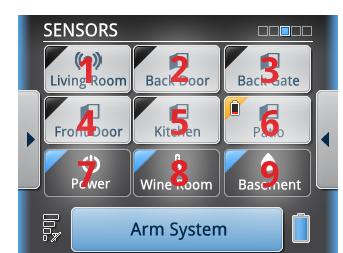

Please cut along the dotted lines for a quick reference sheet.

Reply Commands

3 or OPTION	Option Menu
4 or DISARM	Disarm System
5 or ARM	Arm System
6	Reply to see Disarmed Sensor List
7	Reply to see Armed Sensor List
8 or STATUS	Reply to see all Sensor Disarmed/Armed Status
9 or TEST	Send Test SMS to all contacts


Sensor List

1. 11-Disarm 21-Arm 31-Dismiss
2. 12-Disarm 22-Arm 32-Dismiss
3. 13-Disarm 23-Arm 33-Dismiss
4. 14-Disarm 24-Arm 34-Dismiss
5. 15-Disarm 25-Arm 35-Dismiss
6. 16-Disarm 26-Arm 36-Dismiss
7. 17-Disarm 27-Arm 37-Dismiss
8. 18-Disarm 28-Arm 38-Dismiss
9. 19-Disarm 29-Arm 39-Dismiss

Sensor Status



Status Indicator

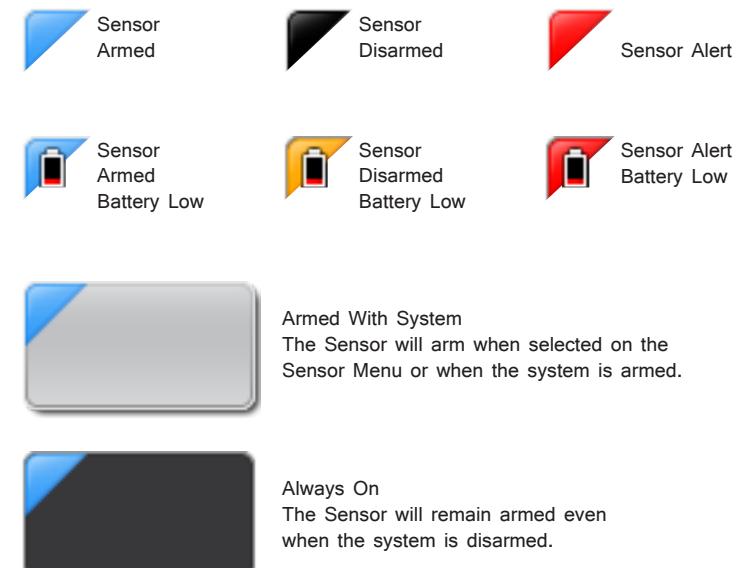

SMS Notifications

The commands allow you to communicate with your Hub via SMS on your mobile device.

- 3 or MENU - Option Menu
- 4 or DISARM - Disarm System
- 5 or ARM - Arm System
- 6 - Reply to see Disarmed Sensor List
- 7 - Reply to see Armed Sensor List
- 8 or STATUS - Reply Sensor Disarmed/Armed Status
- 9 or TEST - Send Test SMS to all contacts
- 11 to 19 - Disarm individual Sensor
- 21 to 29 - Arm individual Sensor
- 31 to 39 - Dismiss individual Sensor

Other Graphics



SMS signal strength



Wi-Fi strength



Hub battery level



Settings confirmation



Incoming SMS



Outgoing SMS



Entire system


Sticker added to Quick Start Guide

The user is cautioned to maintain a 20 cm
(8 inches) spacing from the product to ensure
compliance with FCC requirements



Quick Start Guide

Model iTA-1 Rev. A

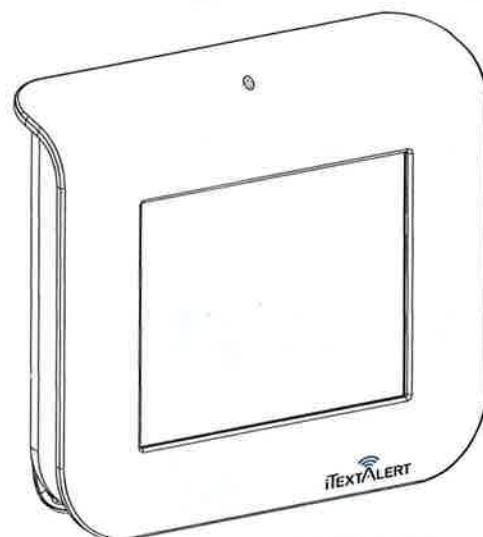

iTextAlert, LLC
111 East First Street
Geneseo, Illinois 61254
Customer Service: 855-810-2992
www.iTextAlert.com