

Skyworth

Mobiles Alive in You



N100 Convertible

User Guide

N100 Convertible



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

CONTENTS

01 Safety Information

02 Other Guidelines for Phone Use

03 Get Started

- 3.1 What's in the Box
- 3.2 Assemble Your Phone
- 3.3 Charge the Battery

04 Phone Basics

- 4.1 Parts of the Phone
- 4.2 Switch the Phone On/ Off
- 4.3 If You Have Two Sim Cards
- 4.4 Shake To Switch SIM
- 4.5 Basic Use

05 Navigate The Phone Menu

- 5.1 Standby Mode
- 5.2 My Shortcuts
- 5.3 Menu
- 5.4 What the Status Icons Mean

06 Make/Receive Calls

- 6.1 Make Calls
- 6.2 Go Hands-free
- 6.3 Receive Calls
- 6.4 Customize Call Settings
- 6.5 View Call Log

07 Messages

- 7.1 Enter Text
- 7.2 SMS
- 7.3 Messages Settings
- 7.4 MMS
- 7.5 View MMS
- 7.6 Broadcast Messages

11.6 Listen to FM Radio

11.7 Slide Show

12 More Features

- 12.1 Access the Web
- 12.2 Applications
- 12.3 Back-up Phone Data
- 12.4 Reset the Phone

08 Personalize Your Phone

- 8.1 Dual SIM Cards
- 8.2 Change the Language
- 8.3 Set the Date and Time
- 8.4 Customize the Display
- 8.5 Customize User Profiles
- 8.6 Set Security Features

09 Get Organized

- 9.1 Contacts
- 9.2 Personal Organizer

10 Use Bluetooth

- 10.1 Connect the Bluetooth Headset
- 10.2 Other Bluetooth Functions
- 10.3 Bluetooth Settings

11 Multimedia On Your Phone

- 11.1 Install a Memory card
- 11.2 Take photos
- 11.3 Record Videos
- 11.4 Record Audio Clips
- 11.5 Play Music

01

02

- **Safety Information**
- **Other Guidelines
for Phone Use**



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

Safety Information

Use your phone in a safe and responsible manner.

■ **Normal use**

Use your phone only in its normal position: place near the ear with the antenna pointing over the shoulder.

■ **When driving**

Using a hand-held mobile device while driving may be dangerous. Park your vehicle, or use a hands-free headset or speaker phone.

■ **Near medical equipments or devices**

Switch off your phone as it may affect the performance of medical equipments and medical devices. Follow all regulations and warnings in hospitals and other health-care facilities.

■ **With pacemakers**

Keep your phone with a minimum separation of 15cm from the pacemaker. If you suspect any interference is taking place, switch off your phone immediately.

■ **In potentially explosive areas**

Switch off your phone at refueling points (service stations) or other potentially explosive areas. Obey all warning signs and instructions.

■ **In an aircraft**

Switch off your phone as it may interfere with electronic equipments on an aircraft.

■ **Interference**

All mobile phones are subject to radio frequency interference which may affect their performance.

■ **Emergency calls**

To make emergency calls, the phone must be switched on and in service. If needed, press the End key to clear other functions. Then dial the emergency number and press the Send key. Emergency calls will not end until you hang up.

■ **Specific Absorption Rate (SAR) certification**

Your phone meets international standards that limit exposure to radio waves. The recommended SAR limit for mobile phones is 2.0 watts/kilogram (W/kg).

The highest SAR values of the N100 Convertible are 0.322 W/kg for DCS and 0.665 W/kg for GSM. During normal use, the SAR level can be well below the maximum as the phone is designed to operate at the lowest power required to reach the nearest base station.

CAUTION : Listening to a headset at high volume can damage your hearing. Use only the minimum volume setting necessary to hear the voice or listen to music.

Other Guidelines for Phone Use

- Back up the data from your phone to your computer or other media regularly.
- Keep your phone and its accessories out of reach of young children.
- Avoid your phone to get wet. It is not waterproof.
- Clean the phone with a soft cloth slightly dampened with a mild soap solution. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Rough handling can damage internal circuit boards. Treat your phone with care.
- Keep your phone away from dusty and dirty areas.
- Keep your phone away from very hot or very cold areas.
- Do not paint your phone. Paint can clog the parts and cause improper operation.
- Do not connect incompatible accessories or devices to your phone.
- Use only Skyworth Wireless approved batteries and accessories. Incompatible products may damage your phone.
- Repair your phone only at Skyworth Wireless approved service centers.
- The acceptable ambient temperature for the N100 Convertible is as follows:

Charging: 0°C to 45°C

Discharging: -20°C to 45°C

CAUTION: Replacing the battery with an incorrect type may present a risk of explosion. Dispose of used batteries according to the manufacturer's instructions.

03

■ Get Started

- 3.1 What's in the Box
- 3.2 Assemble Your Phone
- 3.3 Charge the Battery



Dual SIM



Shake to
Switch SIM




Camera
1,3 Mpx



FM radio

3.1 What's in the Box

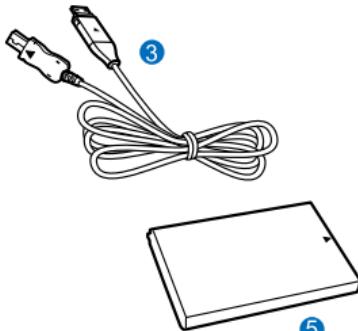

The items included may vary depending on your service provider or region.


1. Mobile Device
2. USB Ear-mic
3. USB Cable
4. Travel Adapter
5. Battery

Dual-SIM mode


Your N100 Convertible allows you to install and use two SIM cards at the same time. You can change SIM preferences to choose one-card or dual-card mode. If you are installing only one SIM card, insert it in the slot labeled SIM1.

NOTES: Accessory contents may differ by countries


3.2 Assemble Your Phone

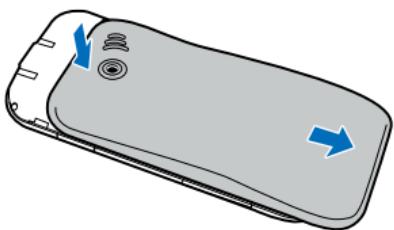


1. Remove the back cover.

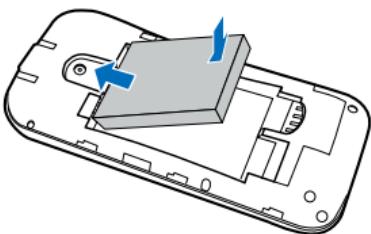

3. Insert the battery.

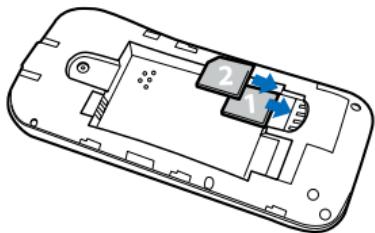


2. Insert the SIM card(s).

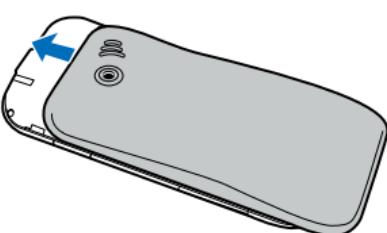

4. Replace the back cover.

3.3 Charge the Battery

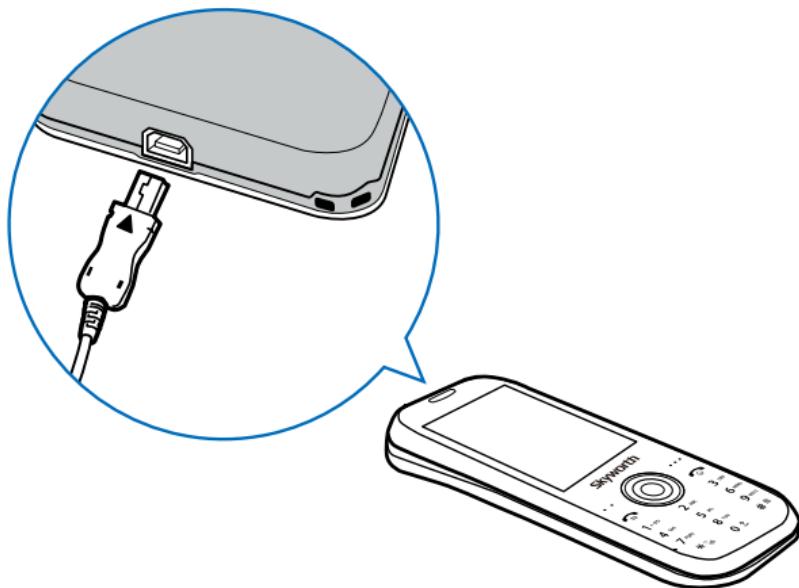

To charge the battery for the first time, use the power adapter. It will take about three hours.

Your mobile phone can also be charged using the USB cable provided. Charging via the USB cable is not as effective as charging from a power outlet.

04

■ Phone Basics

- 4.1 Parts of the Phone
- 4.2 Switching the Phone On / Off
- 4.3 If You Have Two SIM Cards
- 4.4 Shake To Switch SIM
- 4.5 Basic Use



Dual SIM



Shake to
Switch SIM




Camera
1.3 Mpx



FM radio

4.1 Parts of the Phone

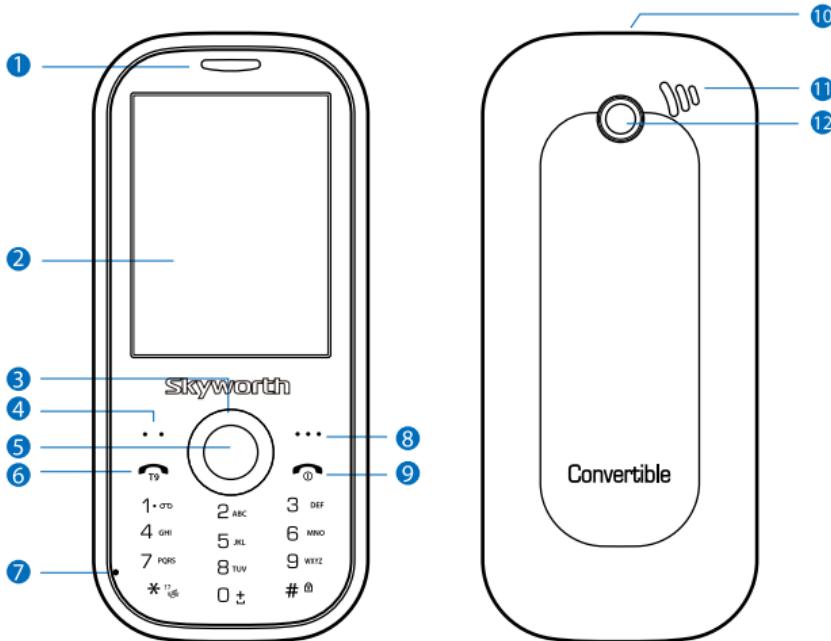

1. Earpiece	5. Mainmenu / Ok Key	9. Power / End Key
2. Display	6. Send Key	10. Multifunction Connector
3. Navigation Key (4-way)	7. Mouthpiece	11. Speaker
4. Left Selection Key	8. Right Selection Key	12. Camera Lens

4.2 Switch The Phone On/Off

1. To switch the phone on, press and hold the **Power key**.
2. If a PIN code is needed, enter it and tap **OK**. Be careful not to enter the PIN incorrectly three times in a row as it will block your SIM card. To switch off the phone, press and hold the **Power key** again.


4.3 If You Have Two SIM Cards

When two SIM cards are installed, both will be powered on and active. SIM1 is the default line for all outgoing calls and messages.

To change these defaults, see “**Dual SIM Cards**” on page 30.

4.4 Shake To Switch SIM

This model N100 Convertible comes with Default SIM Selection (DSS) feature, which allows you to switch between two phone lines for making calls and sending SMS text messages. The SIM 1 line is selected by default for which you can configure phone settings, such as ringtone, wallpaper and user profile. In order to switch the default SIM line from SIM 1 to SIM 2 or vice versa, you may simply shake the phone, then the default SIM line will be switched over to the other SIM line after a short vibration and a pop-up message informing the change of default SIM line.

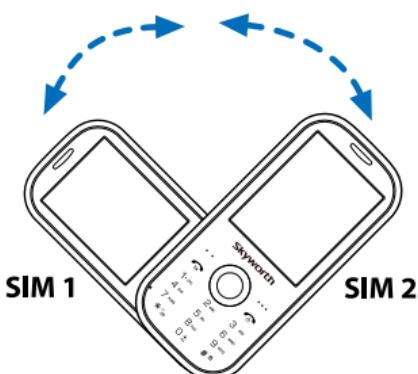

4.5 Basic Use

■ Make a call

Enter the number and press the  **(Send key)**. During a call, press the Center selection key to use the speaker phone and adjust the volume control.

■ Answer a call

Press the  **(Answer key)**.

■ End a call

Press the  **(End key)**.

■ Send a text message

Press the **Navigate key [Left]** to compose a text message.

■ Change ringtones and alerts

Select **Menu** >  **User Profiles**

to customize and activate any of the user profiles. You can set the ringtone, volume, alert type, and other options (see page 32).

■ Switch to silent mode

To quickly switch to Silent mode, press and hold the **star (*) key**.

Press and hold the **star (*) key** again to return to the default profile.

■ Lock/unlock the keypad

To lock the keypad and prevent any accidental operation, press and hold the **hash (#) key**.

To unlock the keypad, press the **unlock key**. You can also set the keypad to lock automatically after a specified interval if there is no activity.

Select  **(Settings) > Security > Auto keypad lock.**

05

■ **Navigate the Phone Menu**

- 5.1 Standby Mode
- 5.2 Menu
- 5.3 My Shortcuts
- 5.4 What the Status Icons Mean



Dual SIM



Shake to
Switch SIM




Camera
1.3 Mpx



FM radio

5.1 Standby Mode

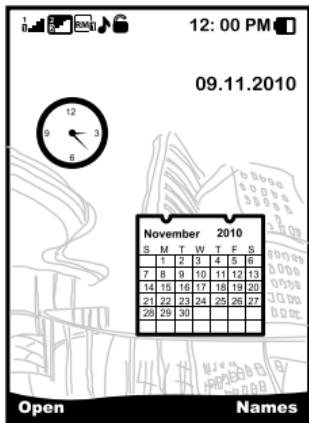

◀ Status icons

◀ Desktop

◀ Selection Menu

5.2 Menu



Press the **Menu** to display the menu icons



Call log



Organizer



Messages



User profiles



Contacts



File manager



Web



Display



Apps



SIM manager




Multimedia



Settings

5.3 My Shortcuts

■ Keypad Shortcuts

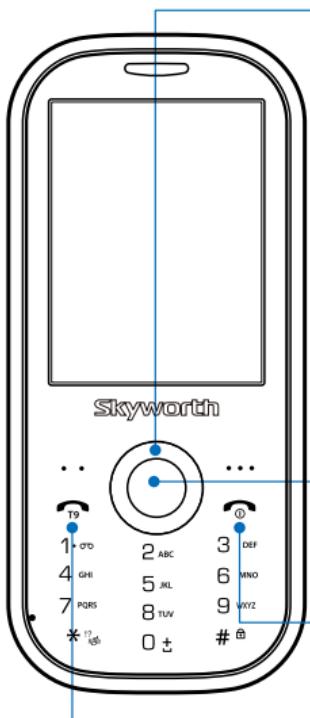

Navigation key

Navigate [Left]	Write
Navigate [Right]	Calendar
Navigate [Up]	Media player
Navigate [Down]	Camera

Center selection key

Press the **Center selection key** to access the Menu.

End key

Keylock / Screen Off Function

Send key

Press the Send key to access the Call log.

5.4 What the status icons mean

Icon	Definition
	2 SIM card 1 activated only
	2 SIM card 2 activated only
	2 Default line selected to SIM 1
	2 Default line selected to SIM 2
	Incoming message
	Missed call
	Incoming call with music
	Incoming call with music and vibration
	Incoming vibration

Icon	Definition
	SIM card 1 roaming
	SIM card 2 roaming
	Keypad unlocked
	Keypad locked
	Battery power level
	Bluetooth activated
	GPRS activated
	EDGE activated
	Alarm activated

06

■ Make / Receive Calls

- 6.1 Make Calls
- 6.2 Go Hands-Free
- 6.3 Receive Calls
- 6.4 Customize Call Settings
- 6.5 View Call Log



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

6.1 Make Calls

Make a call	Enter the number and press the  Send key .
Make an International call	Hold down the 0 key till the + symbol appears on the screen. Then enter the country code and phone number.
Redial a number	Hold down the  Send key to display the Call Log and select the number.
Speed dial a number	Press and hold the assigned key (2 to 9).
Call from contacts	Select Names to display your contacts.

■ Select the SIM card for a call

To select a different SIM card for a call, select **Options > Call**.

■ During a call

To increase or decrease the volume, press the Navigation key or Volume control button up or down respectively.

Options during a call include:

- Hold single call, end the single call, or record the current call.
- Call another number
- Browse the phonebook.
- Send a message.

6.2 Go Hands-Free

Speaker phone	During a call, press the Left selection key to activate the speaker. To return to normal call mode, press the Left selection key again.
Bluetooth headset	See “ Use the Bluetooth Headset ” on page 38.
Other headset (optional accessory)	Plug the headset into the multifunction connector at the top (USB socket) of the phone. The phone will detect it automatically.

6.3 Receive Calls

Answer a call	Press the Send key .
Reject a call	Press the End key .
Mute the ringtone	Press the Center selection key or by turning the phone over.

To answer a call using any key, select the Answer mode setting in a user profile. See “Customize User Profiles” on page 32.

6.4 Customize Call Settings

Select  **(Settings)** > **Call settings** to customize the following:

- SIM1 or SIM2 call settings such as caller ID display, call waiting, and call divert (depending on your service provider).
- Auto redial - Choose whether to redial unsuccessful calls automatically.
- Call time display - Display the duration of completed calls.
- Call time reminder - Activate a reminder when a call exceeds a specified duration.
- Auto quick end - End a call after a specified duration.
- Reject by SMS

6.5 View Call Log

Select  > **(Call log)** to view the following:

- Recent calls made, received, and missed.
- Call duration.
- Number of messages sent and received.
- Amount of data sent and received.

You also have the option to clear the call lists and reset the counters.

07

■ **Messages**

- 7.1 Enter Text
- 7.2 SMS
- 7.3 Messages Settings
- 7.4 MMS
- 7.5 View MMS
- 7.6 Broadcast Messages



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

7.1 Enter Text

The N100 Convertible supports sending and receiving text (SMS), multimedia (MMS), and email messages. For subscription to these services, contact your service provider.

■ Enter text

Use the keypad to enter text.

■ Text input with the keypad

- Press a number key (2 to 9) repeatedly until the desired character appears.
- Press 0 to add a space.

■ Predictive text input (T9)

1. Press a number key only once for each letter (for example, to enter 'cat' press 2,2, and 8). Word choices are displayed and change as you press each key.
2. Press the Navigation key [**Up**] or [**Down**] to scroll through the word choices. Press the Center selection key to select the word you want.

■ Shortcuts

You can use the following shortcuts:

Send key	Enable or disable T9 input.
Hash (#) key	Switch between uppercase and lowercase input.
Start (*) key	Insert special characters.

Options depend on the message type. They include:

- Paste text from a template.
- Add pictures and insert symbol.
- Format the message.
- Insert contact names or numbers from the phonebook.
- Send the message from SIM1 or SIM2.

7.2 SMS

Menu >  (Messages) > SMS

■ Send SMS

1. Select **Create message**.
2. Compose your message.
3. Select **Send options** and send the message.

■ View SMS

Messages are organized as follows:

Inbox	Incoming messages
Sent items	Successfully sent messages
Outbox	Draft messages
Templates	Often-used text to be added to your message

They specify the message center number, message type and validity period.

- Activate voicemail server.

7.4 MMS Menu > (Messages) > MMS

■ Send MMS

1. Select **Write message**.
2. Enter the number or email address of the recipient(s) and a subject.
3. Compose your message.
4. Select **Options** to add multimedia files. You can also add more slides. A Preview options lets you view the MMS before sending.
5. When finished, select **Done** to select **Save and Send** options.

7.3 Message Settings

Select **Message Settings** to:

- Set preferred storage (phone or SIM card)
- View the amount of memory used.
- Define SMS profiles, if needed.

7.5 View MMS

Message are organized as follows:

Inbox	Incoming messages
Outbox	Outgoing messages that have not been sent yet
Drafts	Incomplete messages
Templates	Templates you created as well as predefined templates.

Select Message settings to:

- Set preferences for composing messages and define your signature.
- Define how the phone sends and retrieves messages.
- Filter messages.
- Define MMS server profiles, if needed. They specify account details and connection type.
- View the amount of memory used.

7.6 Broadcast Messages

Selection Menu >  (Messages) > Broadcast messages

Broadcast messages are broadcast to mobile phones within a specific service area.

They include traffic reports, weather information, and advertisements.
You can:

- Choose whether to receive info messages and filter them by language.
- Select channels to filter messages by subject.

08

■ Personalize Your Phone

- 8.1 Dual SIM Management
- 8.2 Change the Language
- 8.3 Set the Date and Time
- 8.4 Customize the Display
- 8.5 Customize User Profiles
- 8.6 Set Security Features



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

8.1 Dual SIM Management

Select Menu >  (SIM manager)

■ Dual SIM Cards

When two SIM cards are installed, both will be powered on and active, in which SIM1 is the default line for all outgoing calls and messages. When you return a call or reply to a message, it will be sent from the same SIM line that the call or message was received on. You can change the SIM settings as described below.

■ Select active SIM card(s)

You can choose to have both SIM cards active, only one active, or both powered off and inactive (flight mode).

1. Select **Dual SIM Settings**.
2. Select your preferred option and tap **OK**.

■ Select default SIM card

1. Select **SIM Manager**

2. Select the **SIM Manager** - set **default SIM** and tap **OK**.

The selected SIM will be the default line for all outgoing calls and messages.

■ Select SIM card for a call or message

If you don't want to use the default SIM for a particular call or message, do the following:

- When calling, **Option> Call**, then can select SIM1 or SIM2
- When sending a message, press **Options > Send text message**, and then select SIM1 or SIM2

8.2 Change the Language

Select Menu >  (Settings)

You can change the phone language as well as the writing language for composing messages.

8.3 Set the Date and Time

Select Menu >  (Settings)

Select **Time & Date** to set your time zone, preferred date and time formats, as well as the date and time. The N100 Convertible can synchronize the date and time with your service provider. To do so, set **Settings > Auto update of date and time to On**.

8.4 Customize the Display

Select Menu >  (Display)

Select Display to do the following:

- Wallpaper can be saved separately by SIM1 and SIM2.
- Select the wallpaper, screen saver and Power On/Off display. You can choose from images provided by the phone or your own images.
- Choose whether to display the date and time, and your phone numbers on the wallpaper.
- Choose the language you like.
- You can write the greeting text such as Welcome, Hello;Ketc or any text you like.
- Select LCD to set the brightness of the display. The phone automatically dims the display after a specified interval (up to 60 seconds) if there is no activity.
- Choose the Clock type.
- Show owner number.

8.5 Customize User Profiles

Select Menu >  (User profiles)

A user profile defines the tone setting, volume, alert type, ring type, extra tone, answer mode, and other options.

1. Select **User profiles** to display a list of predefined profiles.
2. Select a profile to activate or customize it.

Note: The Headset and Bluetooth profiles are automatically activated when you connect a wired headset or a Bluetooth headset respectively.

The settings that can be customized are:

- **Tone settings** - The ringtones for incoming calls and messages, as well as keypad tone.
- **Volume** - The ringing volume and keypad tone volume.
- **Alert type** - Ring, vibrate, or a combination of both.
- **Incoming call alert** - Play the ringtone once, repeatedly, or with increasing volume.

- **Extra tone** - Choose to play additional alerts, for example, to indicate a warning or error.
- **Answer mode** - Answer a call using any key.

8.6 Set Security Features

Select Menu >  (Settings) >

Security settings

Select Security to set the following:

- SIM card security - Lock the SIM card with a password to prevent unauthorized use, allow outgoing calls to selected numbers only, or prevent outgoing calls to selected numbers.
- Lock the phone with a password to prevent unauthorized use. To enable this feature for the first time, enter **0000**. Then change the password.
- You can also set the phone to automatically lock the keypad. See
- Lock/unlock the keypad on page 16.

09

■ Get Organized

9.1 Contacts

9.2 Personal Organizer



Dual SIM



Shake to
Switch SIM



Camera
1,3 Mpx



FM radio

9.1 Contacts

Selection Menu >  (Contacts)

Contacts can be saved to the SIM card or phone memory. The phonebook will show all the contacts from the SIM cards and phone. Only two details can be saved to a SIM card, name and phone number. More details can be stored in the phone memory, including multiple phone numbers, pictures, and video.

■ Contact details to save

Select Menu >  (Contacts) > Options

You can choose the **Send message**, **Writing language**, **Speed dial**, **Call**, **IP dial**, **Send contact** and **Edit** for contact details in phonebook.

■ Default storage for contacts

Select Menu >  (Contacts) > Options > Contacts settings

- Select **Preferred storage** to define the default storage location for contacts: phone or SIM card.
- Select **Memory status** to see the number of contacts and available space.
- Select **Blacklist** to set blacklisted contacts list (up to max. 20 contacts).

■ Add a contact

1. Select **Add new contact**.

2. Choose where to save the new contact: phone or SIM card.

3. Enter details.

You can also save phone numbers from the call log or from messages (select the **Save option** from the **Options** menu).

■ Copy, move, or delete contacts

- From the **Contacts** menu, select **Copy** all to copy all contacts from the phonebook memory to a SIM card or vice versa.
- Search for a contact and select **Options** to find the **Copy**, **Move**, and **Delete** functions.

■ Create caller groups

You can organize your contacts into caller groups such as family, friends, or business, and customize the attributes for each group.

Note: Only contacts from the phone memory can be added to caller groups.

1. Select **Caller groups**.
2. Select the group to edit.
3. Choose the ringtone, picture, and video.
4. Select **Member list** and then **OK** to show the members in this group.
5. From the Member list, select **Options** to add and remove members.

9.2 Personal Organizer

Select Menu >  (Organizer)

Use the personal organizer to keep track of events and tasks.

■ Calendar 12

From the **Calendar - Options** menu:

Select **Add event** to add reminders, meetings, and other events. Each type of event lets you enter different details.

Select **View** and select date to view all events for that day.

Select **View all** to view all upcoming events.

■ Tasks

From the **Tasks** menu, to add your task with date and time. Create to add these different types of tasks, and set **Alarm** reminders for the tasks.

■ Alarm clock

1. Select any of the profiles to display the alarm settings.
2. Activate the profile by setting it to **On**.
3. Set the alarm time and other settings.
4. Select **Done**.

■ World clock

The world clock shows the current time for various cities around the world. Press the **< and >** key to scroll through the cities.

■ Notes

You could write any notes here for your memory.

10

■ Use Bluetooth

- 10.1 Connect the Bluetooth Headset
- 10.2 Other Bluetooth Functions
- 10.3 Bluetooth Settings



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

Select Menu >  (Settings) > Bluetooth

Select Power to enable or disable Bluetooth on your phone.

Bluetooth technology enables the N100 Convertible to connect to compatible devices within a range of 10 meters. Although the devices need not be in direct line of sight, the connection may be affected by other electronic devices or obstructions such as walls.

NOTE: Make sure that the device you want to add has the Bluetooth function activated and visible.

10.1 Connect the Bluetooth Headset

CAUTION

Listening to a headset at high volume can damage your hearing. Use only the minimum volume setting necessary to hear the conversation or music.

■ Register Bluetooth headset

The first time you use the Bluetooth headset, select **Bluetooth> My device to Search new device**. Then, **Register** the headset to pair it with the phone. The headset is automatically connected and ready for use. Subsequently, you will only need to use the Register headset option if you are having connection problems with the headset.

■ Connect or disconnect Bluetooth headset

Select headset > Connect or Disconnect.

10.2 Other Bluetooth Functions

■ Connect with audio devices

Select **Search audio devices** to automatically search for and connect with compatible audio devices (such as wireless headphones).

■ Connect with other devices

To connect with other Bluetooth devices such as a notebook computer or another mobile phone:

1. Select **My devices > Search new device** to enable your phone searches for and lists any Bluetooth devices in range.
2. Select a device and select **Pair** to connect.
3. You may be required to enter a pass code, depending on your authentication setting. Successfully paired devices are listed in My devices.
 - To share data with a paired device, select **Options > Connect**.
 - To disconnect a paired device, select **Options > Delete**.

10.3 Bluetooth Settings

■ Select settings for these Bluetooth options:

- **Visibility** - Choose whether to allow other Bluetooth devices to find and pair with your phone.
- **My name** - Rename your phone.
- **Audio path** - Choose whether to send audio to the Bluetooth headset.
- **Sharing permission** - Specify full control or read-only when sharing data with another device.

11

■ **Mutimedia on Your Phone**

- 11.1 Install a Memory card
- 11.2 Take photos
- 11.3 Record Videos
- 11.4 Record Audio Clips
- 11.5 Play Music
- 11.6 Listen to FM Radio
- 11.7 Slide Show



Dual SIM



Shake to
Switch SIM




Camera
1.3 Mpx




FM radio

11.1 Install a Memory Card


The camera and other multimedia features on the N100 Convertible require an external microSD memory card. SDHC is also supported.

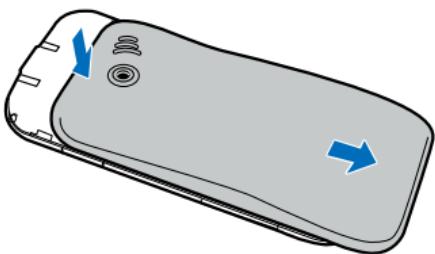

1. Remove battery cover and battery.
up.

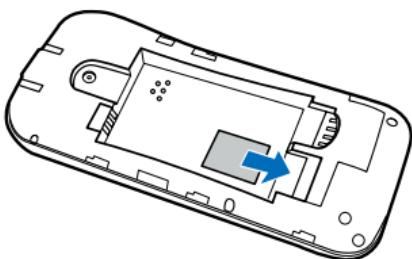

2. Insert memory card with label facing

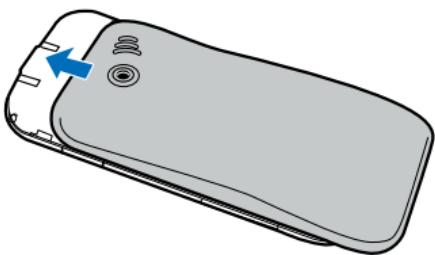

3. Replace the battery cover.

11.2 Take photos

1. Select **Camera**.
2. Press the **Center selection Key** to take a photo.
3. Press the Left selection key to save it.

Change settings

From the **Options** menu, change camera settings, size and quality, lighting, and special effects.

View photos

Select **Multimedia > Image viewer**
From the Options menu, choose **View, Print, Browse style, Rename, Delete** and **Storage** location.
You can use a picture or animation as a wallpaper or screen saver, attach it to a contact in the phonebook, or send it in an MMS.

11.3 Record Videos

1. Select **Video recorder**.
2. Press the **Center selection key** to start recording. Use it to pause and resume recording as well.
3. Press the Right selection key to stop and save the recording.

Change settings

From the **Options** menu, change camcorder settings, size and quality, special effects, storage location.

Check memory

Select **Options > Storage**.

Play Videos

Select **Video player** to play video clips and movies.

Options

You can use a video clip as a screen saver, or send it in an MMS.

11.4 Record Audio Clips

1. Select **Sound recorder**.
2. To start recording, select **Options > Record**.
3. Select **Stop** to stop recording.

Play audio clip

Select **Options > Play** to play an audio clip.

Change settings

From the **Options** menu, select the recording format (AMR, WAV or AWB) and storage (phone memory or memory card).

Other options

Use audio clips as ringtones for incoming calls, and send them in an MMS.

11.5 Play Music

Select **Media player** to play music.

Change preferences

Select **Options > Settings** to change playback preferences.

11.6 Listen to FM Radio

1. Connect a headset to the multi-function connector at the top of the phone.
2. Select **FM radio**.

Add radio channels

Auto search or manually input radio channels. You can save up to 9 FM radio channels.

11.7 Slide Show

Select **Slide show** to see the photos in slide format.

12

■ More Features

- 12.1 Access the Web
- 12.2 Applications
- 12.3 Back-up Phone Data
- 12.4 Reset the Phone



Dual SIM



Shake to
Switch SIM



Camera
1.3 Mpx



FM radio

12.1 Access the Web

Select Menu >  (Web)

The N100 Convertible is equipped with a WAP browser for surfing the web. Availability of WAP services depends on your service provider. The WAP browser can access websites that use WML or XHTML. The appearance of the web pages may vary due to the limited display size.

■ Set up your account

1. Select (Web) > **Connectivity** > **Data account**.
2. Select **an account** and edit the settings: enter the home page address, your user name, password, and other account settings (obtain the details from your service provider).

■ Internet Services

1. Select (Web) > **Internet Services**.
2. You could select **Homepage**, **Bookmarks**, **Input address**, **Stored pages**, **Settings** for your internet services control.

12.2 Applications

Select Menu >  (Apps)

These applications are provided on the N100 Convertible:

- Games
- E-Book reader
- Calculato
- Java & downloadable apps
- Currency converter

12.3 Back-up Phone Data

Connect the N100 Convertible to your computer to explore the folders on your phone and back-up the data.

1. Connect the phone to your computer using the USB cable provided.
2. Select **Mass Storage** on your phone.
3. On your computer, double-click **My Computer**. You should see a new removable disk.
4. Double-click the removable disk to browse the folders on your phone. The PCSuite folder on the phone contains an installer file that you can copy to your computer and run. It includes Windows drivers for the N100 Convertible and an application that lets you synchronize your phone data with your Windows applications.

12.4 Reset the Phone

It may be necessary to reset the N100 Convertible from time to time.

1. Switch off the phone.
2. Remove the battery and reinstall it a few seconds later.
3. Switch the phone back on.

Skyworth
Mobiles Alive in You



N100 Convertible

www.skyworthwireless.com

Unit A Rm 3A01, Skyworth Bldg, Gaoxin Ave 1S, Nanshan District, Shenzhen, China. P.C:518057

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.621W/Kg** and when worn on the body, as described in this user guide, is **1.043W/Kg** (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **Z44GMGB100** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.