 




Contents



Product Introduction

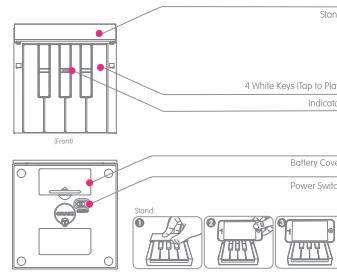

Indicator Definition

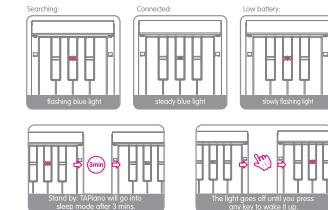

Troubleshooting

Your device fails to pair to TAPiano? Here's the solution:

- Slide the switch to power on.
- Battery is empty. Change the battery.
- Restart the App. Double-tap the home button on the device. Hold down your finger against the App icon in the menu at the bottom of the device screen. Tap the "minus" icon on the App, and press "Home". Touch the screen, and re-launch the App.
- Turn on Bluetooth on your device again.
- Restart your device.
- Let your device goes closer to TAPiano when connecting.

Limited One (1) Year Warranty Information

This product is guaranteed against defect in design, workmanship and materials under normal use for a period of ONE (1) YEAR from the date of the original user purchase ("Warranty Period"). The non-accessories, such as Music USB, Dongle and cables, are not covered. This limited hardware warranty does not extend to OZAKI hardware

Repair and replacement

The repair or replacement of the product shall not exceed the purchase price originally paid by you for the product. The original purchaser shall afford notice (defect notice) to OZAKI of any defect which appears according to OZAKI RMA Handling. Failure to make a timely defect notice will void the warranty. The original user must present the original purchase receipt or a copy of the receipt to the service authorized resaler/distributor with date of the original purchase must be presented to obtain warranty service. If a valid claim is received, OZAKI will repair or replace the product at its discretion. The cost of repair or replacement will be determined by OZAKI and will be limited to a OZAKI sale discretion, either repair or the hardware defect using new or refurbished replacement parts. Or replacement of the product. Repair or replacement hardware will be warranted for the remainder of the original warranty period. OZAKI reserves the right to inspect the hardware and determine if the hardware is the property of the original purchaser and all hardware or part thereof that is replaced shall become the property of OZAKI.

Exclusions and Limitations
The following conditions are not coverable in all countries and may be enforced by contacting OZAKI support worldwide. For more information please visit our web site [ozakiverse.com](http://www.ozakiverse.com).


FCC Statement

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Attention!

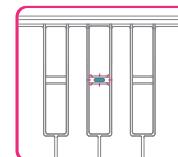

Change the battery when the blue light slowly flashes.

- Change the battery when blue light slowly flashes.
- Change the battery, si l'indicateur bleu clignote lentement.
- Cambie la batería cuando la luz azul parpadea lentamente.
- Batteria cambiare quando la luce blu lampeggi lentamente.
- Sostitui la bateria quando la luce blu lampeggi lentamente.
- Löst die accu op als het blauwe lampje trapt knippert.
- ڈیکھوں ایسا لامپ جو اسکے پس پر ایسا کھینچتا ہے۔
- Mudar a bateria quando a luz azul pisca lentamente.
- 电池在蓝色灯慢慢闪烁时更换电池。
- 变更电池时蓝色灯会慢慢闪烁。

OR302 User Manual

O1arcade TAPiano



Welcome

Let's play your favorite songs on the piano now!

TAPiano is a physical game controller that allows you to play the rhythm game just like playing the piano.

Connect to your Bluetooth device, and feel free to play the TAPiano App with this mini piano in any way!

What's more, you can unlimitedly play any song you have on your device! What could be better than this?

You Could Play TAPiano with These Devices...




Note: TAPiano is exclusively designed for TAPiano App.

PREPARATION



STEP 1 Power On the TAPiano

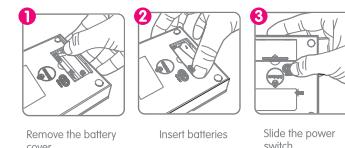

Remove the battery cover
Insert batteries
Slide the power switch

STEP 2 Launch the App



STEP 3 Pair Your Device With TAPiano



Tap "Device Control"
Searching
Successfully connected

STEP 4 Select Difficulty Level & Music



Slide to choose difficulty level
Select any song on your device (Note: DRM-protected music not available.)

STEP 5 Start to play!



Specification

Bluetooth connectivity

Battery Requirement: AAA #2 (Battery not included)

Dimensions: 95(W) x 24(H) x 95(D) mm

Weight: 91 g

Caution & Important Notes

(Please read these before use)



Do not expose the product to fire or close to high temperature



Do not expose the product to water or high humidity



Stop using if found liquid leakage, overheating or any other unusual conditions



Green power, great recycle using

Customer Service

<http://ozakiverse.com/>

