

Tablet PC

Quick Start Guide





Introduction

Thank you for your choosing the E-tel Q10 Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.


Contents

I . Precautions before Use	-----1
II . Device Description	-----2
III. Descriptions of Keys	-----3
IV. Introduction to Desktop	-----4
1. Windows 10 start image	-----4
2. Image Slide Application	-----4
3. Introduction to app interface	-----6
4. Charm Menu Column	-----9
5. Close app	-----12
V . Basic Operations	-----13
1. Sleep, restart and shut down	-----13
2. Tablet mode and windows mode	-----14

I . Precautions before Use

1. This product is suitable for use in non-tropic areas below 2,000 meters, and the mark  in the nameplate indicates the product is suitable for use in non-tropic areas.
2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot, too humid or with too much dust. Do not expose the Tablet PC to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out.
6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to claim warranty.
10. This product supports the overwhelming majority of mainstream bands of 3G DONGLE network cards. The cases for 3G Dongle may be different. It is suggested that you test it to make sure it is OK before buying it.
11. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

II . Device Description

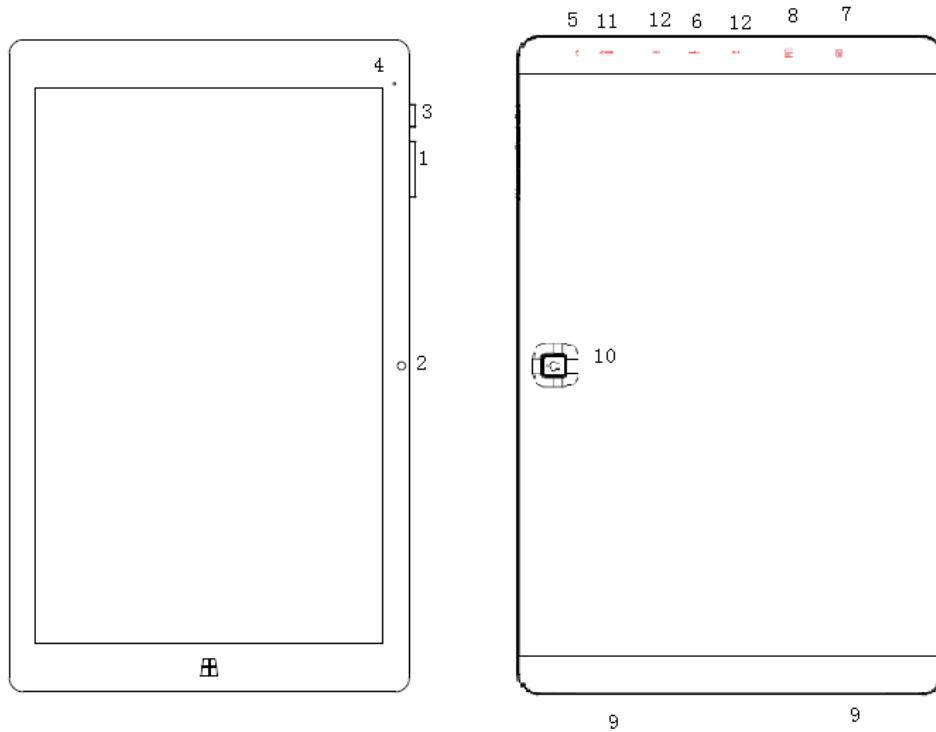


1. Sound-/sound+: Lower/raise volume
2. Front CCD camera: take photos, and record pictures
3. Power button: Press it down to start or close the touch screen panel. You can also let the computer to enter dormancy through this button or wake from the dormancy mode.
4. DC Indicator: Becomes brighter when charging.
5. Socket for earphone and microphone: This socket can transmit the audio signals of Tablet PC to loudspeaker or earphone.
6. Micro USB Interface: You can read the data through USB or charge.
7. Micro SD card slot: The built-in storage card reader slot supports MicroSD and MicroSDHC format.
8. SIM card slot: Support 4G Internet function
9. Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to linking additional device.
10. Back CCD camera: take photos, and record pictures

11. Micro HDMI: The transmission of no compressed audio signal and video signal

12. USB Interface: You can read the data through USB

III. Descriptions of Keys

Attention: Keyboard is optional, and configure the product according to the specific type of the tablet PC you have bought.

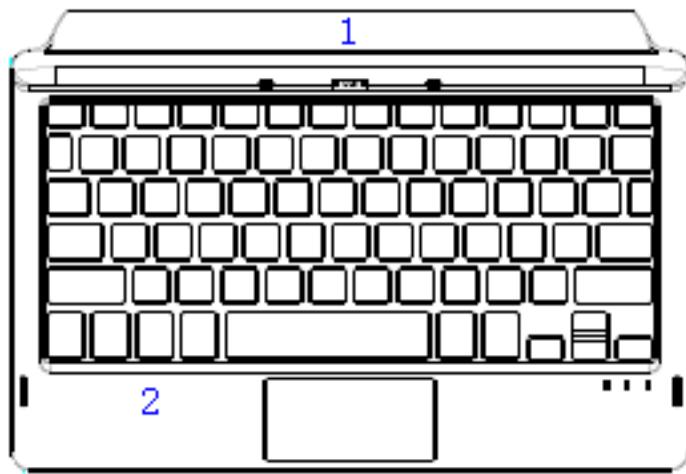

① Movable base keyboard interface: which is convenient for the alignment of the Tablet PC and the keyboard.

② Keyboard group: The keyboard group provides full size QWERTY key and best typewriting comfortability.




Keyboard appearance chart

IV. Introduction to Desktop

1. Windows 10 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.

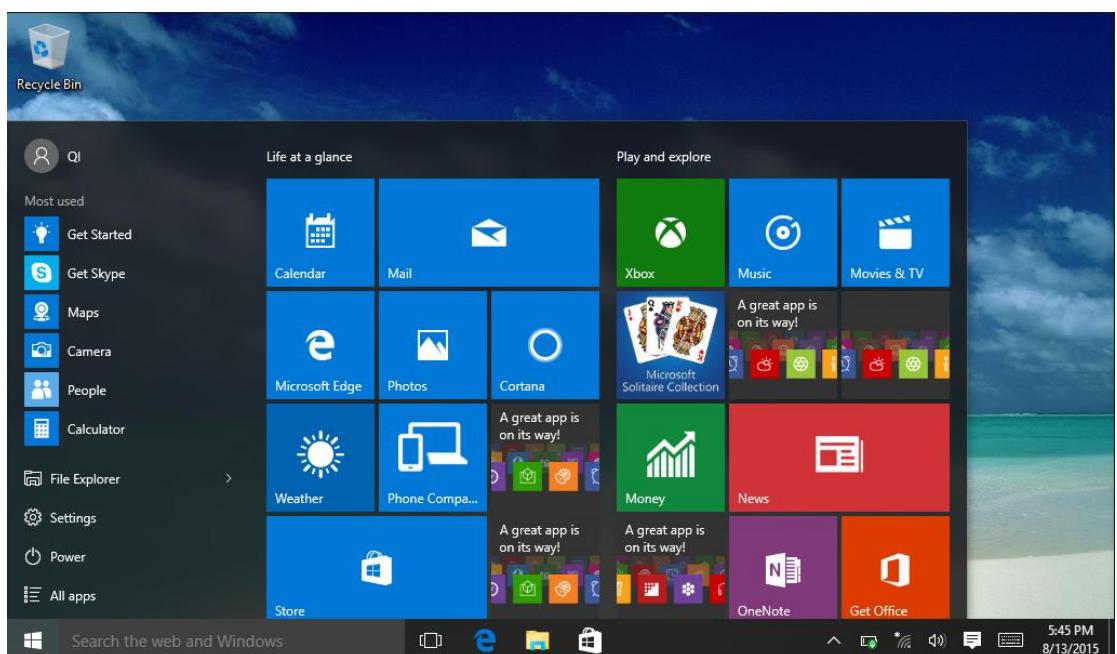

2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column.

Reduce



On the touch screen, narrow two fingers to reduce the image.

Enlarge



On the touch screen, widen two fingers to enlarge the image.

Slide downward



In start screen, slide from the top of the screen to view all application programs

Slide with finger



In start screen, slide finger right and left to move the image.

 
Slide upward




In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.



3. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.



Point  ,you can see all apps. Then you can choose your app you want.

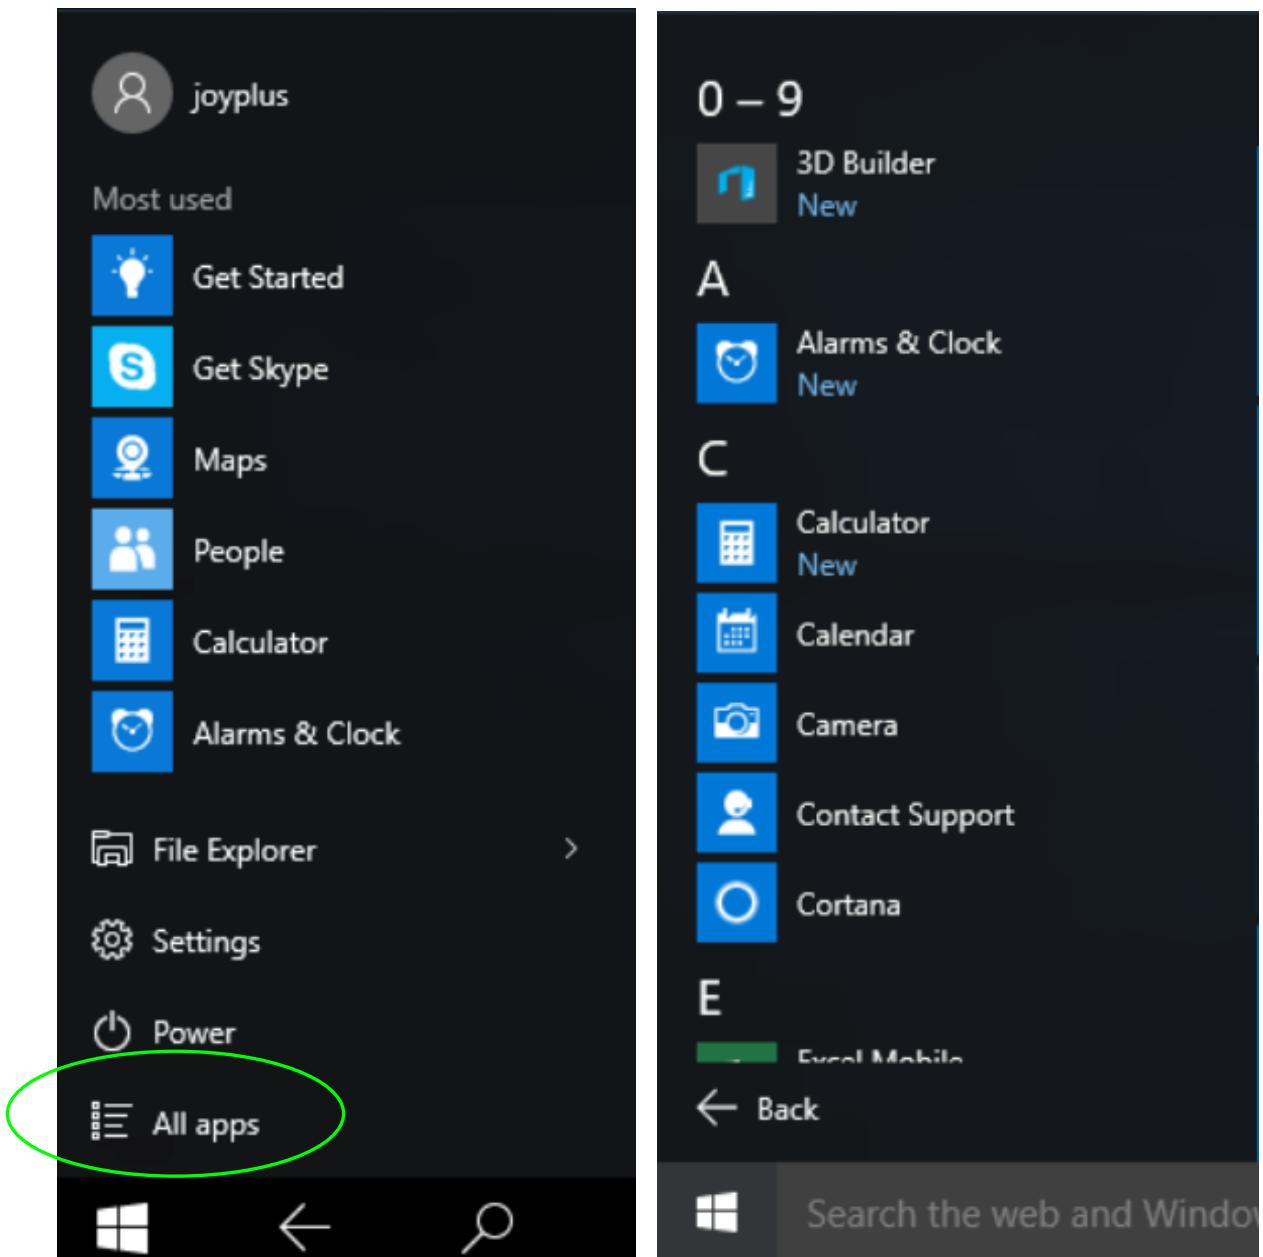


If you want to fix more application programs to the start or taskbar, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen. You can also use an electromagnetic pen to replace the previous operation

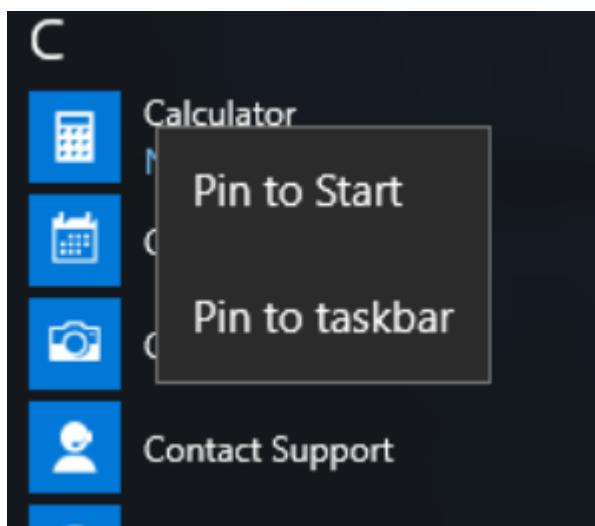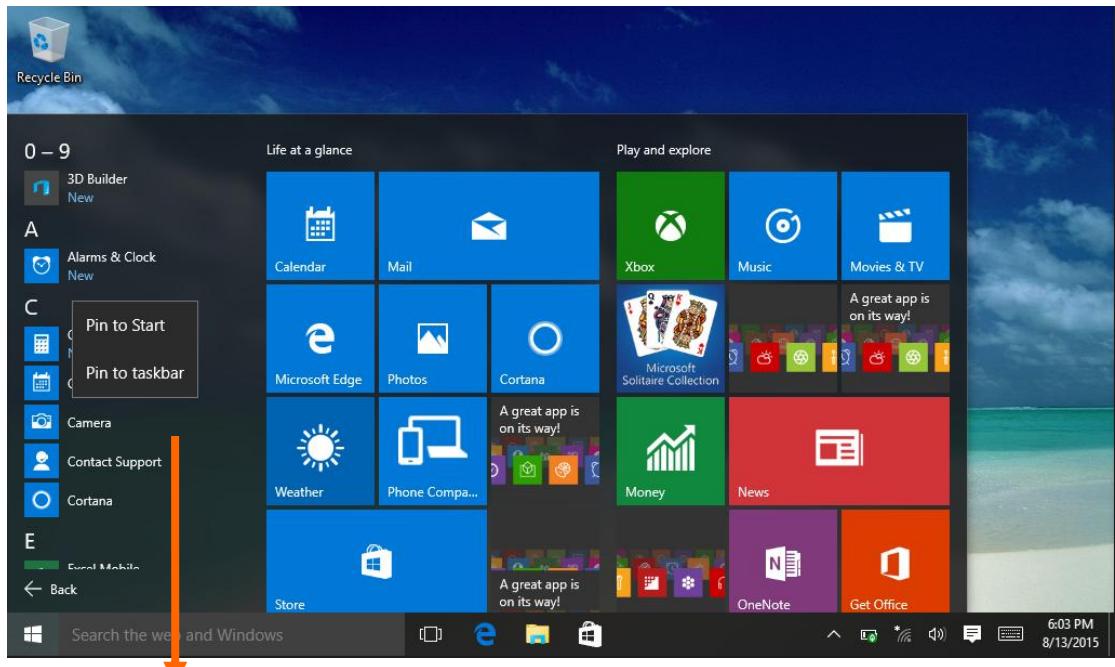

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

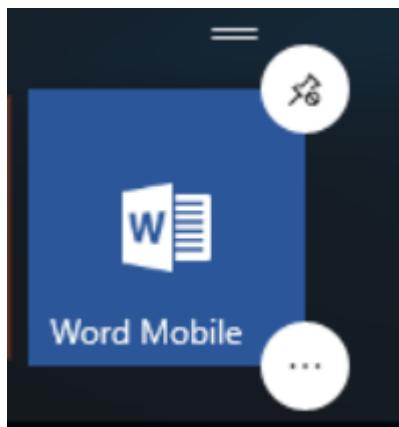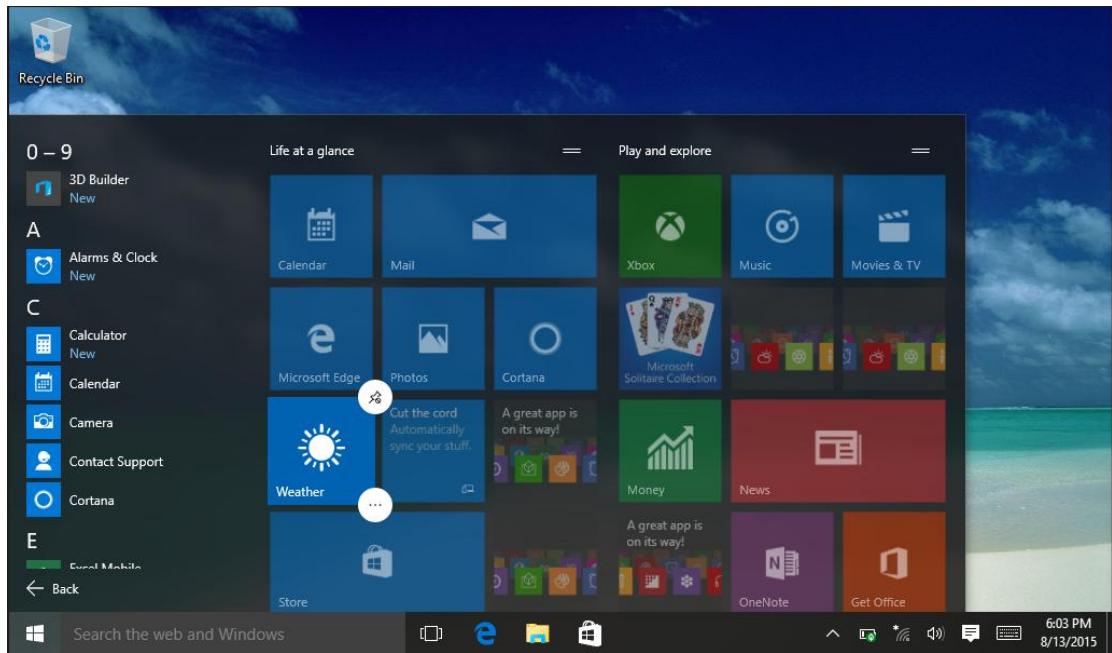


Take away from taskbar.

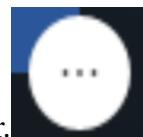


Other function to change the ICON size.

4. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column.

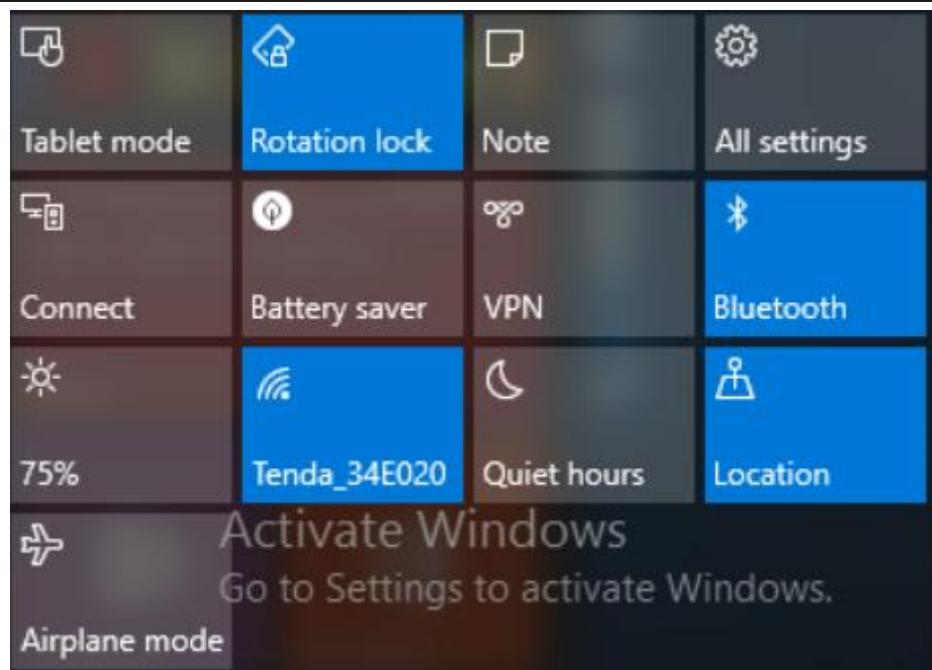

Lightly touch the ICON to turn ON/OFF the function.

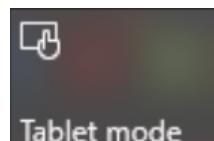

Tablet mode


Tablet mode: You can turn on tablet mode by lightly touching.



Rotation lock


Rotation lock: Lock the screen that the screen will not rotation when

you tilting the tablet.

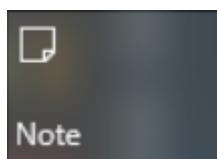

Note

Note: Turn or turn off the note.

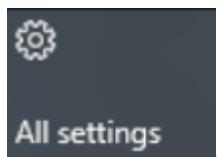


All settings

All settings: Touch the All setting ICON to set your tablet.




Connect

Connect: To connect other equipment from here.

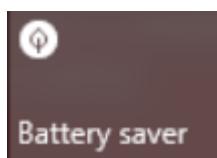

Battery saver

Battery saver: Turn on it can let your tablet working longer.

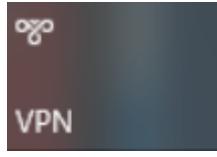

VPN

VPN: Add a VPN connection.




Bluetooth

Bluetooth: Turn on/off bluetooth.




75%

Backlight: 25% 50% 75% 100%

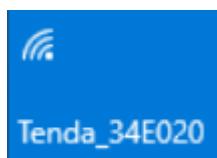

Tenda_34E020

WIFI: Turn on/off WIFI

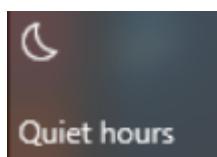


Quiet hours

Quiet hours: Not receive the notification




Location

Location: Turn on/off you location for apps.

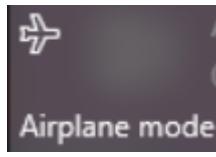

Airplane mode Airplane mode: Turn on/off airplane mode.

Search menu

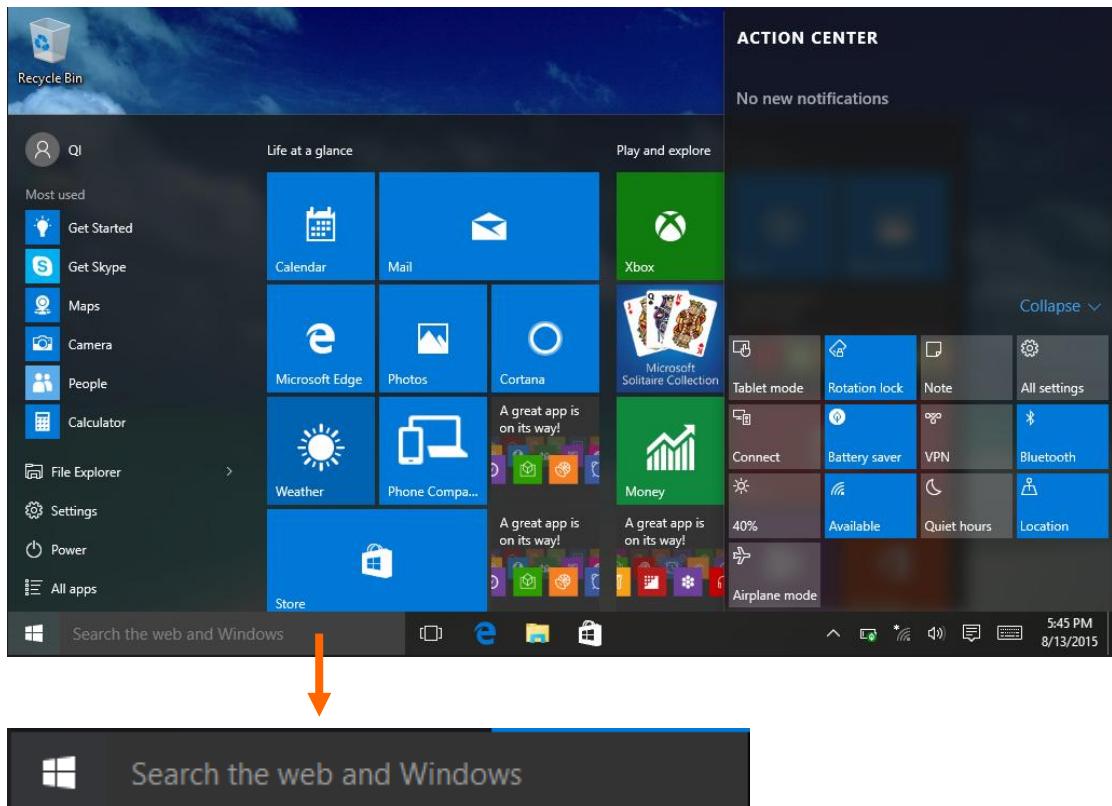


5. Close apps


(Figure 1), slide it inward from the left side of the screen to right side.



(Figure 2), press close button  to close the apps.

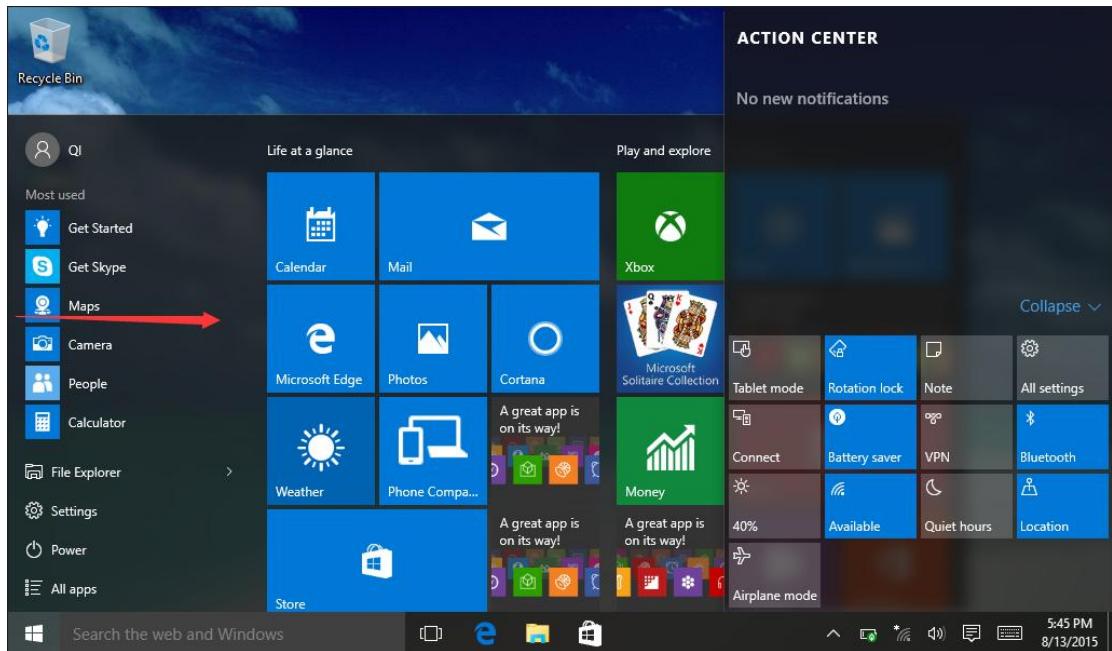


(Figure 1)

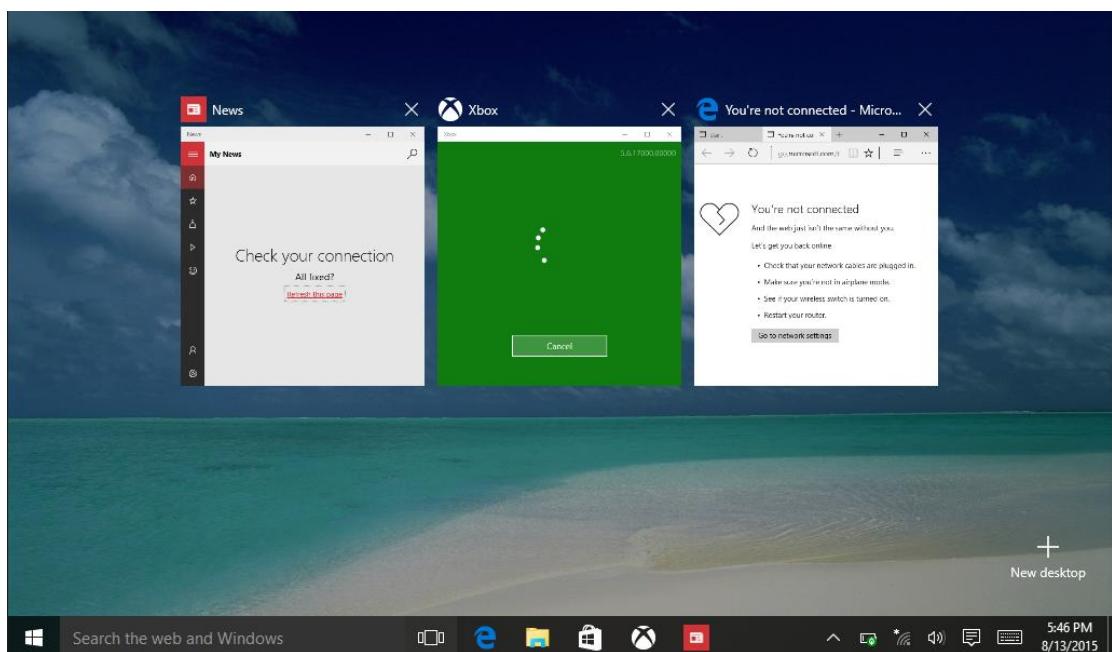

(Figure 2)

V. Basic Operations

1. Sleep, restart and shut down

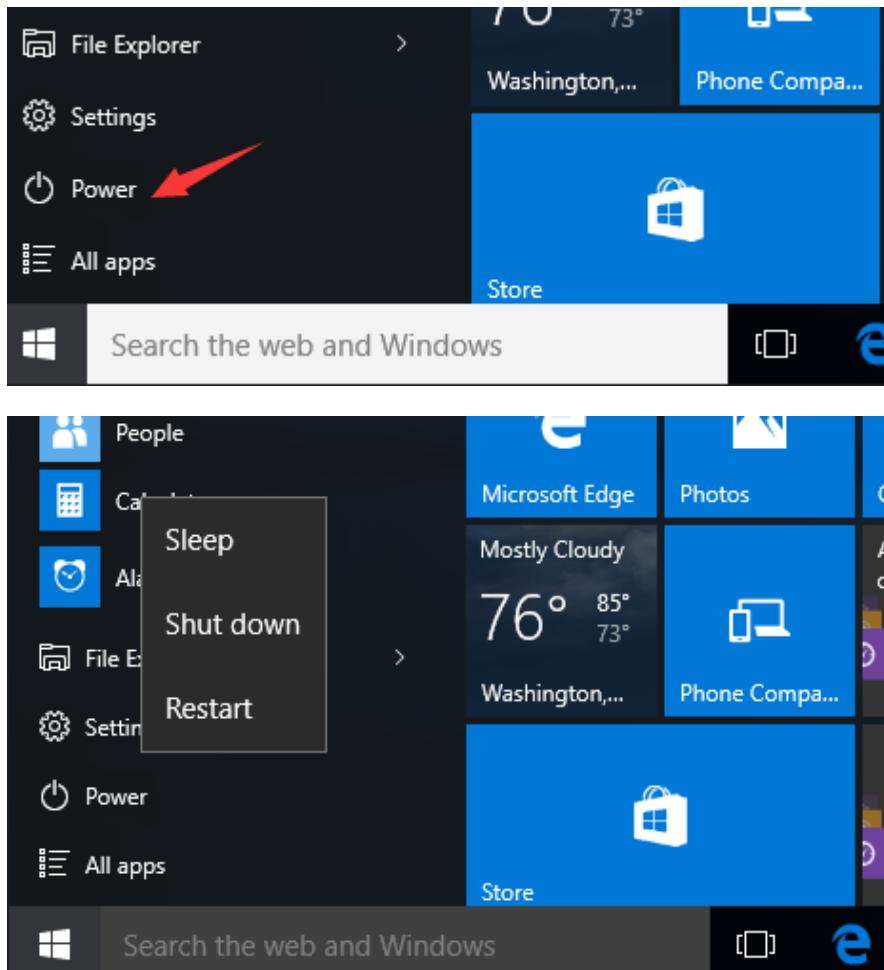

2. Tablet mode and windows mode

If you turn on the tablet mode, the desktop will disappear. Turn off tablet mode can come in windows mode, the desktop will appear.



FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: QI-10X (FCC ID: Z4UQI-10X) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification when properly worn on the body is 1.301W/kg. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0cm separation distance between the user's body and the back of the Product.