7"Touch Screen MID Entertainment and Internet Device

ZR-701 USER MANUAL

shenzhen zizpo technology Co.,Ltd assress:zhennan industrial building,baomin road, baoan district 13,shenzhen,china. Tel:0755-33072258 Fax:0755-2937818

7"Touch Screen MID

Contents

Pretace	2
Notice	3
3.1 Product functions	4
3.2 Product appearance	4
3.3 Button Introduction	5
4.1 Functional icon	5
4.2 T-F card	6
4.3 APK installer	6
4.4 Input method	8
5.1 Audio player	8
5.2 Video player	9
6 Setting	11
6.1 Audio and display setting	11
6.2 Location and security setting	13
6.3 Application setting	14
6.4 Store setting	15
6.5 Language and keyboard setting	16
6.6 Date and time setting	17
7 Technical specifications	18
8 Calibration	20
8.1 About devise and U-disk reading	20
8.2 Wireless and network setting	21
9 Solutions of common problems	23

7"Touch Screen MID

Preface

Dear Customers,

Thanks very much for purchasing our product! This device is built-in high performance Wifi receiver module, supporting external 3G USB-DONGLE wireless network card, turning on the broadband wireless networks, breaking through the restraint of network cable; it will bring you into the portable media player world and fulfill your entertainment needs. It also support picture browsing, E-book Reader, games, online chat and other functions, various settings will fully show your individualityTo operate this player easily, please read the User Manual attached with the player first, from which you can have knowledge about the production introduction and operation method. Before operating this player, please carefully read all data we provide about the player, so that you will have a better understanding about the product and operate it much better. The Company will not be responsible for any loss of personal data and damage causedby incorrect operation of Software/Hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of your data, please backup your data to your computer at any time. Meanwhile, since we can not control any dispute from users' misunderstanding or incorrect operation against the manual, the Company will not take any relevant responsibility for any accidental loss potentially occurring in the process of using this manual. The functions information of this manual is subject to the product itself; we will keep developing new functions. The information in this manual is subject tochange without any prior notice. This manual is protected by the copyright and any part is not allowed to be copied or reproduced in any way without prior written permit of the Company. The Company reserves the final explanation right of this manual, warranty as well as its related information. (Note: When compiling this manual, we are very careful and precise to provide you completely reliable information. However, there is inevitably some error and oversight, please understand and you are welcome for providing us advice. If any problem occurs during your operation of this product, please timely contact with the local seller)Thanks for your support and please pay attention to our other products

7"Touch Screen MID

Safety notices 1) Please keep the device away from strong magnetic field in order to avoid the damage to the product

2) Please do not let the player fall or rub or compact with hard objects during using, or it may cause surface scratchof the player, battery loose, date lose or damages of

3) Never let this product expose to the humid environment or rain as the water leaked into could disable it to the extent beyond reparation.

4)Never clean the device with any chemicals and detergent, or it will damage the product surface and corrode the spray paint

5) You are recommended not to use the headset with large volume continuous, please adjust the volume to the size of appropriate security and control the using time to avoid the damage to your hearing, as excessive volume will cause permanent hearing damage.

6) Please do not cut off the power abruptly during software update and download, or it may cause date loosing and system error.

7) Over-voltage, power cable strain, bending or squeezing by

heavy objects is not allowed to avoid overheating or fire disaster

8) In order to eliminate the risk of electric shock, do not touch the cable power plug with wet hands

9) Some movie, music and picture are under the protection of copyright, unauthorized usage is deemed as an infringement to the laws of copyright

10) Please don't turn on the device in where the wireless equipment is forbidden

or when the usage of the device will cause interference and danger 11) All the wireless equipment may be interfered and influenced the performance

12) Please comply with any related restrictions and rules, wireless equipment will influence the flight of the plane; please consult the airline company if you use the

device in the plane. 13) Please don't use the device in gas station, nearby the fuel and chemicals

14) Please comply with any related restrictions and rules; don't use the device in where blasting operations are in progress

15) Only qualified maintenance personnel can install or repair the device

16) Please use the original accessories and battery, don't use the incompatible products

17) The device is not waterproof, please keep it dry

18) For the sake of data safety, please back up the important information of the MID or keep a handwritten record.

19) When connecting with other device, please read the user manual for detail safety instruction, please don't connect it with incompatible product

20)If the actual settings and operation method of the product are inconsistent with the user manual for the losing of firmware, please use the software in the CD-ROM and refer to the instruction

of the manual to re-update the software — 3 —

7"Touch Screen MID

3.3 Instructions on Keys

Symbol	Name	Description
Α	RESET	Press this button shortly to reset the system when the device is halted
В	POWER	Press this button shortly to enter sleeping/wake up mode, press long to switch ON/OFF
С	MENU	Press this button shortly to enter the submenu
D	ESC	Press shortly to return, press long to the touch screen calibration
F	TF Card Slot	TF Card Slot
G	High Definition Output	High Definition Output Jack
Н	Stereo Earpieces Jack	Stereo Earpieces Jack
1	DC Socket	Connect with 5V DC charger
J	MINI USB Port	MINI_5 PIN USB Port
K	USB Host Port	Port for external USB Driver,3G Dongle, Mouse, etc
L	Display	HD Display area
M	Camera	Static or dynamic camera(Optional)

4.10peration of the function Icons. a. Definition of the Function Icons



3.1 product introduction:

M901/910 is a MID mainboard and designed by Rockchip company. The processor adopts Cortex-A8 archite main frequency can reach up to 1.2GHz. also have 512KB secong level cache. Improve RK2918 developmen process efficiency.

M901/910 use 7 inch TFT LCD display screen ,adopt advanced 512MB DDR3 internal memory technology. SSTL 15 I/O port. have great improvement compare with the usual property. Built-in high property3D image processor,support OpenGL ES 2.0 and open VG, every secongs max 80 million triangle throughput. It can provide 60M triangle generation rate and about 50M pixel full rate. It can manage various complicated 40 picture and large 3D game.what more, M901/910 full support 1080P video decode. built-in high definition camera. Wi-FI and 3G internet function.

Hardware configuration Application software configuration 5 V / 2A adapter Google map H D MI output Application market: more than 50000 softwares download High fidelity stereo output MiniUSB port:support HOST2.0/1.1 、SLAVE2.0 Gmail:net mail Support MiniS D Google browser High fidelity effect output 0 , 8 W / 8Ω Google Talk: chat tool Capacitive \resistive touch screen e-book WI-FI popular games

3.2 Product Appearance

Built-in gravity accelerate, spiral, compass sensor



— 4 **—**

7"Touch Screen MID

Iron	Function	Iron	Function
•	Back to menu	(+	Reduce the volume
•	Power status showing	(-	Louder the volume
12:45(24	Current system time		Menu for function block
<	Return		Switch the interface
AT	Google search		Menu
	Web browser	•	Funcion setting
400	Ethernet Connection	att	3G signal

4.2 T-F Card Using

T-f card sloti is built- in to read multi-media files .Insert ,Insert the T-F card into the card slot in right way ,when taking out ,just push the t-f card toward to the inside ,then the slot will release the T-F card , the T-F card will pop out automatically ,take it then

a. Please inset the T-F card into the card slot in the right side of the devise

b.Do not pull out the card when operating (reading ,copying),otherwise,it may cause date error

c. Donnot use the T-F card under high tempreture condition

d. Keep the T-F card far from the liquid and erosive materials

4.3 APK Installer

Notcie: Before installing APK files ,please select setting—application—unknown sources

The MID supports application softwares based on Android platform ,most of application softwares can be downloaded from internet ,please copy them into flash or T-F card then install them

Click APK installer

,then Apk instlling interface comes out: instll -manage-exit options



Install: click "install" to enter installing interface

Internal Memory and SD card match respectively Flash memory and T-F flash After entering ,select APK format softwares in right form and install ,click " install " ,return to home page to comeplet installation



Manage: Click "manage" then enter into appliaction softwares



Startup: To operate the software
Export: export the software to the T-F card
Un-install: uninstall the software
Search: search the software in the software shops
Cancel: cancel the operation

— 7 **—**

7"Touch Screen MID

- Drag the playback progress bar to adjust audio playback progress
- Audio player buttons description

notes	button	notes
artist	[6] ts	song
playing	0	album
exit audion player		play audio
repeat play	×	random play
volume up	◄ 0-	volume down
the last song	* → 1	the next song
play list	11	pause
	artist playing exit audion player repeat play volume up the last song	artist playing exit audion player repeat play volume up the last song

Note: Audio player can play WAV record files

Edit: Click the in playlist and popout

III interface ,then you can edit

5.2 Video

In main menu or destop ,click and enter video ply interface ,according to your saving pistion ,open the file and double-click the movie to play



4.4 Input Method

 
Click google input form then the page on the left will popout ,press to switch between numbers and Capitalizations: Press , the page on the right will popout ,then you can select input method



5.1 Audio Player

In the main menu or desktop ,click the icon 🙎 to play the audio

- When no music files in the audio player playlist, the system will automatically load the
 music files from the card to the audio player playlist after turnig on the audio player
 (the devise supported audio file format: mp3 ,wav.midi,wma,)the playlist as shown in
 the above figure
- If too many songs in the music playlist area, slide up/down the touch screen to page up/down
- Double-click the favorite in the list to play music as shown in the following picture



— 8 **—**

7"Touch Screen MID


· Introduction of icons of playing

button	notes	button	notes
127	add video bookmark	*	brightness control
144	play the last video	>>1	play the next video
	play/pause	×	video system 16:9/4:3/recover
0	exit video player	•••	menu
◆ 0+	volume up	◆ 0-	volume down

Click to delete labels ,play modes etc ,as followings:



 A .Click to play mode ,select among single-song play ,single-song repeatly play and all songs repeatly play ,or click back option to return former menu



—10—

6 Setting

In main menu or desktop ,click setting to set wireless and network ,soud and display ,loaction and security , application etc ,press the screen up/down to page up/down



6.1 Sound and display setting

Click"soud and display" to enter setting page



A Volume of media

Click "Media volume" to set volume of music and video

—11—

7"Touch Screen MID

B Animation

Show animations of all windows



C Brightness according to your needs ,drag

to adjust brightness of backlight ,enter and return



D Screen timeout



6.2 Location and security settings

Click "location and security to set

—13—

Available order

B ring bell

Set defaulted ring bel



C Select operation bell (play bell when selecting) and SD card reminder(bell when play SD card)

Display setting



A Direction

Rotating devise to change showing directions automatically

—12—

7"Touch Screen MID



Setting unlock picture

Click setting unlock picture to set,click



Draw unlocking picture ,connct at lease four dots and click next step to complete

6.3 Application software setting

Click Application Softwares to set up



Manage application software settings

Click Manage Application Softwares to manage and delete instlled softwares

---14---



Running service settings

Click Running service to see and control currenct operating softwares



• **Development setting**: advised to use factory defaults,or any change will make some function not available



6.4 SD card & device storage settings

Tap SD card & devise storage to enter following to check total space ,available spaces,format SD card ,etc

—15—

7"Touch Screen MID

Android keyboard setting



Google pinyin input method setting



6.6 Date and time setting

Tap Date and time to set ,cancel automatic option to fix date and time by hand

Date setting

 
Tap 🕂 — to select Day ,Month & Year and tap ,icon 🔤 to confirm OK



—17—

6.5 Language and keyboard settings

Tap Language keyboard to enter setting interface



Language setting

The devise support multi-languages, you can select operation interface of different languages according to your needs ,select matching language option ,tap <



Google Input method setting; Android whole screen

—16—

7"Touch Screen MID

7 Specifications

CPU	Rockchip2918	1.2GHz,DSP main
Storage capacity	2GB~32GB	Standard configuration 4GB , support max 32GB(according to customer requirements)
Internal memory	512MB	256MB x 2, DDR 3,work frequency 400MHz
Display screen	7"TFT	Hanstar HSD070IDW1-A HSD
resolution	800x480	T.
Touch screen	Resistive	Double point(901)
	capacitive	Multi-point(910)
Battery type	Rechargeable lithium polymer	١
Battery	3.7V/3200mAH	V
capacity		
Battery cruising power	4 ~ 6 hours	continue play video
Speaker	8Ω1W	10% distortion, double horn
sensor	Yes	gravity sensor, spiral, compass senso
Wi-Fi/bluetooth	802.11b/g	Two-in-one
camera	2 million pixel	Built-in chip model GT2005
Button	Push type	4 buttons HOME/MENU/BACK/RESET
Input interface	DC IN(x1)	5V/2A
	T-flash(x1)	Max 32GB
	Mini USB	Can connect move hard disk without capacity limit
Outrout	Mini HDMI(x1) (optional)	Max resolution 1080p
Output interface	Phone(x1)	3.5mm (max output power 40mW, frequency range 20Hz-20KHz, SNR 94dB)
Machine consumption	DC5V_660MA=3.3W	mainboard≤1.8W 7"LCD display screen ≤1.5W
Other external devices	USB keyboard mouse	Also support 2.4GHz wireless USB keyboard mouse

Software specification Operating system Operating system Android 2.3 OSD Support 9 kinds of language Simplified chinese/traditional chinese/English/Franch/German/Italian/Spanish /Portuguese/Russian

Input method	spell/handwriting chinese input method	1	
browser	Google browser	support Flash	
Support video format	MKV、AVI、RM/RMVB-8/9/10、FLV MPG、VOB、MPEG1/2 MOV、DAT、MP4、WMV 7/8、WMV9(VC-1)、Divx-3/4/5		
Support audio format	MP3、WAV、WMA、AAC、APE、FLAC、Vorbis(Ogg)		
Support image format	JPEG/BMP GIF/PNG TIFF		
Support file format	TXT PDF HTML	Doc Excel	

- Copposition	THE OT THE THE THE TOTAL OF THE TENOTION OF SEC.		
Support image format	JPEG/BMP GIF/PNG TIFF		
Support file format	TXT PDF HTML	Doc Excel	
Video play	Breakpoint continue play	Can continue the last video state to play	
function	subtitle	Srt,Ass,Ssa,Smi,Sub-idx	
	screenshot	Cut the play picture with one key, save as JPG/BMP image format	

		ave as JPG/BMP image format
Audio play function	Lyric synchronous display	Connect natwork ,download, the matched lyric file and synchronous display in the screen
	Music album cover display	Connect network download Music album cover and synchronous display in the screen
	Breakpoint continu	e play Can continue the last video state to play
Image play function	Preview picture	Support Squared Up thumbnail perview
Documents	Book mark edit	Support 10 bookmarks edit at the same time
play function	Documents edit	Support TXT,PDF,Doc,Excel format documents edit
	font size adjustme	ent adjust the font size of document edit
e-dictionary	English -Chinese / Chinese-English e-dic	Support word translation and online translation

----19----

Gmail™

Google map

Built-in Gmail network mailbox

Support 3D live scene

7"Touch Screen MID

e-mail

e-map

Connect to computer

Connect MID to computer with data cable, icon poput on desktop ,keep pressing and drap down till the left interfact appears ,click "USB connected" then right interface comes out ,open USB storage devise to read ,return from connecting and close the devise



HDMI

Connect with High definition devise and Set the devise to High definition State and the devise with play automatically

8.2 Wiress network settings



3G Setting:after inserting 3G dongle and recognized by the devise , click the Mobile Network to use 3G

8 Calibration (depend on machines)

When there are offset and invalid tap on the touch panel ,please press and hold the "ESC" key for 3 seconds to log into the interface of the touch panel calibration,tap the center of the "Cross" indicated by the red circle one time ,the screen will display Calibration Successful message when it is OK ,See the figures below



8.1 About Device and U-disk read

See power consumtion ,law informaion ,status of devise and version of softwares



U-disk read

Put u-disk into HOST port ,tap icon on desktop to enter resource manager ,click USB Devise to read



---20---

7"Touch Screen MID

A WIFI Setting

Click "wifi setting" then the following interface will appear then you can use WIFI and do some other operations



B Set WIFI and connect to network

Press Add wifi network and shows below pages , input SSID and save to use WIFI network



C . Ethernet setting .

Tap ethernet setting and see below information and operate



9 Trouble shooting

1.Can not turn on the device

You can onto turn on the devise when the power is below the critical level ,please chage the battery,connect to the computer via USB cable or charge via AC charger ,try to turn on again while ensuring quantity of electricity

Press the RESET button on the top of the devise and check if the restarting is normal or not

Check if the charger is connected well or not

The standby time of the MID is too short

The duration of the lithium battery varies with environment temperature changes and the service conditions, If the environment temperature is too lowo r too high, the duration of the battery will be affected, It is recommended to use this devise at normal temperature From the usage of the devise, larger screen of the devise cost more electricity, In addition, affected by the volume increase, sound field special effects and other factors such as frequent operation, the actual duration may be different from specified one to a certain extent 3, No sound via earphone

Please check if the volume setting is 0

Please check if audio file is broken ,and try to play other audio files to confirm ,If the audio is broken ,it may cause severe noise or staccato 4 Can not copy files

Please check if the devise is connected to the computer correctly
Please check if the memory space is full
Please check if the USB cable is broken

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.