

## User's Manual



Please read carefully before use

## Contents

- 1 Introduction
- 2 Safety precaution
- 3 General View
  - 3.1 keys
  - 3.2 Home page
  - 3.3 Function block interface
  - 3.4 Main icons definition
- 4 Power on /off
- 5 Charge
- 6 Functions Operation
  - 6.1 Audio player
  - 6.2 Video player
  - 6.3 Photo browser
  - 6.4 Sound recorder
  - 6.5 Browser
  - 6.6 Explorer
  - 6.7 Camera
  - 6.8 Others (game, clock, calculator, Gmail etc.)
- 7 Settings
  - 7.1 Wireless & networks
  - 7.2 Sound
  - 7.3 Display
  - 7.4 Location & security
  - 7.5 Applications
  - 7.6 Accounts & sync
  - 7.7 Privacy
  - 7.8 Storage
  - 7.9 Language & keyboard
  - 7.10 Date & time
  - 7.11 USB mode select
  - 7.12 About device
- 8 Specifications
- 9 Troubleshooting
- 10 FCC Compliance Statement

### 1. Introduction

Congratulations on the purchase of the player!

This device is built-in high performance Wi-Fi receiver module, G-sensor, also can bring you into the portable media player world and fulfilled your entertainment needs. It can support picture, video, music, E-book, games, online chat and other functions; moreover, various settings will fully show your individuality.

This manual contains important safety and operating information in order to prevent accidents, please read this manual thoroughly and keep it for future reference.


## **2. Safety precautions**

- To use this player safely, please read and follow the instructions in this manual carefully before use.
- Never use the player while driving or when operating any vehicle, as this could cause an accident. It is also against the law in many areas. Take care when using the player outdoors, especially when crossing the street.
- Do not listen to music at very high volumes using the earphones as this can permanently damage your hearing.
- Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Do not put the player in high temperature places (over 40°C), especially not in a car with the windows closed in summer.
- Keep the player away from strong magnetic fields.
- Please don't turn on the device in where the wireless equipment is forbidden or when the usage of the device will cause interference and danger.
- Press the player's buttons gently. Pressing them or the screen too hard can damage the player.
- Do not use the player in an electronics-prohibited area, such as in an airplane.
- Do not use the player in an extremely dry environment, as this can lead to static discharge, which can damage the player.
- Do not subject the product to harsh impacts.
- Do not drop the appliance. This may result in damage to the product.
- Do not attempt to dismantle or repair this unit yourself, Repairs should only be performed by qualified personnel only.

- We will not be responsible for any memory loss caused by product damage, repairs or other reasons.
- Disconnect the appliance from the power source when cleaning.
- In order to prevent program failure, never disconnect the player suddenly from a PC during downloading, uploading or formatting to prevent program failure.
- Use a slightly damp, lint-free cloth to clean this appliance. Do not dismantle the player or use alcohol, thinner or benzene to clean the surface of the player.

### 3. General View

#### 3.1 Keys

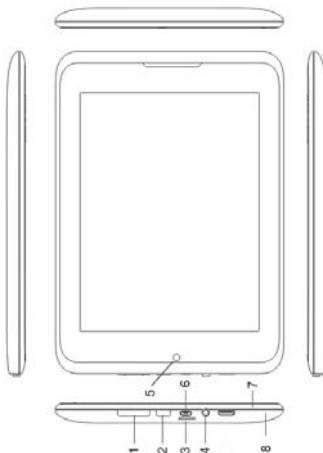

##### 1) Volume

2) **Power on/off**: press and hold to power the device on and off, press to change to sleep mode and lock screen.

3) **TF (Micro SD) card slot**: support up to a 16GB Standard SD card.

4) **Headphone Jack**

5) **Camera**

- 6) **USB jack**: connect to computer.
- 7) **Reset**
- 8) **Charging indicator**

### 3.2 Home page



There are total 4 home pages. You can press the home page number icons to switch the home page. In the interface, you can press and hold one icon which will become shivering, press and move to put the icon into new emerging rubbish bin to delete the icon.

Press and hold the space location, then will popup the below interface:



You can set wallpapers what you want. Also create folders to classify files.

### 3.3 Function block interface

In the home page, press  icon to access the function block interface which include all programs and items.

Press and slide the screen to find the item you want, also you can press and hold the icon about 2 seconds then can put it to home page.

### 3.4 Main icons definition

Icon	Instruction	Icon	Instruction
	Return to home page		Notice bar
	Power status		enter Function Block interface
	system time		Decrease volume
	Return		Increase volume
	Pop up submenus		WIFI
	rubbish bin		

## 4. Power On / Power Off

- When the device is powered off, press and hold  button to turn it on.
- When the device is powered on, press and hold the  button

then pop up below options, select and click "Power off" to turn it off.

## 5. Charges

We recommend that your first three charges take up to 12 hours each; this will extend the battery life as well as provide a longer usage time. Subsequent charges will only need about 4-6 hours.


## 6. Functions Operation

Click the related program icons to enter corresponding functions.

### 6.1 Music

#### File list interface


Click the song name to enter play interface.

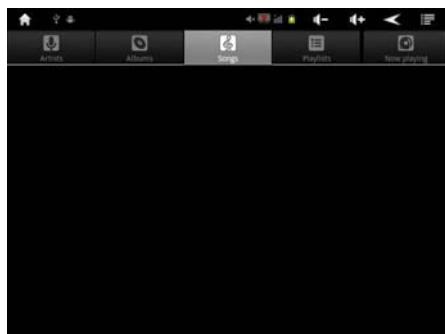

Click the below icons to operate related function:

Button	Instruction	Button	Instruction
 Songs	All music	 Playlists	Play list
 Artists	Artist	 Albums	Album
 Now playing			

## Audio play interface

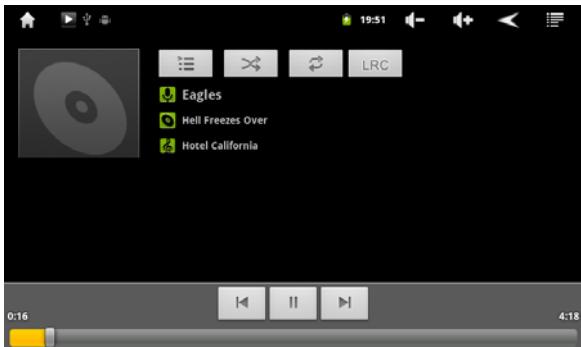

Click the icons to operate related functions.

Button	Instruction	Button	Instruction
	Progress bar		Repeat mode
	Previous		Next
	Play/pause		Increase volume
	add to the playlist		Decrease volume
	LRC		EQ


Remark: click progress bar or press and hold Previous/Next icon to keep fast rewind /fast forward.

## 6.2 Video player


## File list interface

Click the video name to enter play interface.

Press and hold the video name to pop up "delete" option.

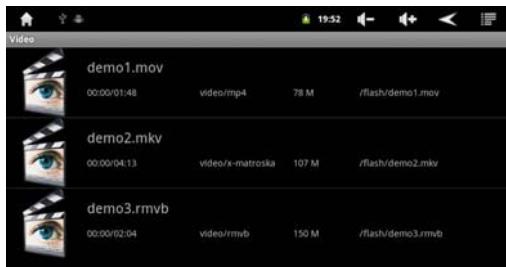

## Video play interface

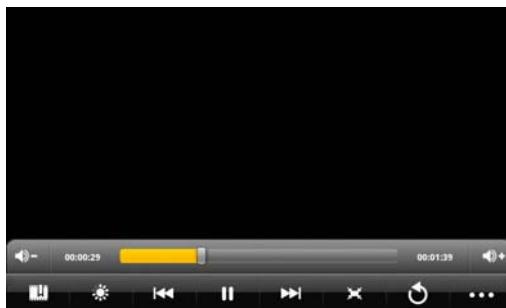

Click the screen will pop up operation icons when playing.

Click the below icons to operate related functions (Please refer to audio part about same icons).

Button	Instruction	Button	Instruction
	Add bookmark		Adjust brightness



Video format 16: 9  
/4: 3



Pop up submenus

Remark: submenus include: delete bookmark, play mode etc.

### 6.3 Photo browser


#### File list interface

Click the Gallery icon to enter browsing interface.


#### Photo browsing interface



#### Photo settings interface:

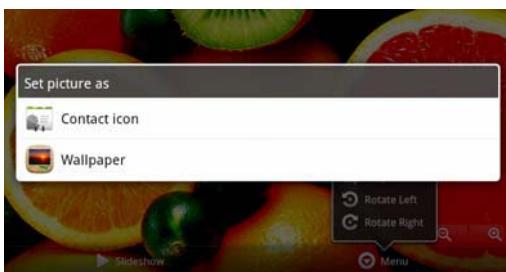

### 6.4. Sound recorder

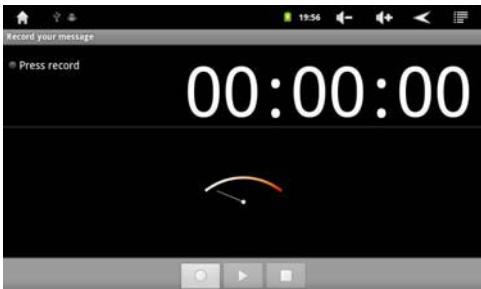

Click the below icons to operate related functions:

Button	Instruction	Button	Instruction
	Start to record		stop


Remark: after clicking "Stop" icon, you can decide to save or discard the file.

Please use audio player to play WAV recorded files.

## 6.5 Browser

Please make sure WIFI connection is normal (See "setting " part).

Click the address bar will pop up input interface. Input website and click "Go" to enter a corresponding webpage, you can view the corresponding website information.

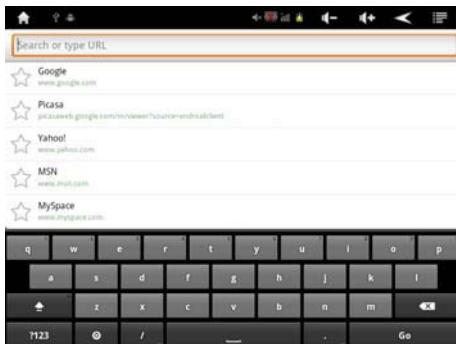


## 6.6 Explorer




Using this function, you can manage books, pictures, music and other files stored in the internal memory of the device as well as SD card.

Press and hold the file name to pop up the below interface, you can copy, delete, move, paste, rename files.

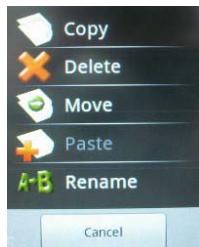

## 6.7 Camera

Click Camera icon to enter into Camera.

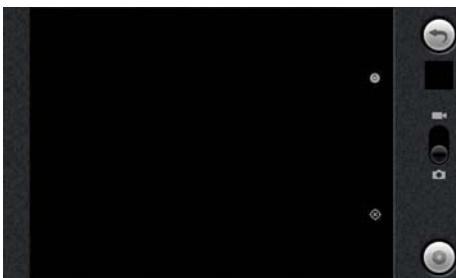

This model support front camera and you can recording the video file.

## 6.8 Others (game, clock, calculator, Gmail etc.)

The device supports many functions, related operation please refer to the hint on the screen.

You can download the programs and install to enjoy.

Remark: Please make sure WIFI connection is normal when downloading.

## 7. Settings

Interface like following picture:



### 7.1 Wireless & networks

You can choose to use Wi-Fi and make settings accordingly.

Remark: Click and make green icon  to connect automatically.

### 7.2 Sound

## Sound settings:

**Media volume:** set audio, video, Alarm volume.

**Notification ringtone:** set the default notification ringtone.

**Audible touch tones:** play tones when using dial pad.

**Audible selection:** play sound when making screen selection

## 7.3 Display


**Brightness:** adjust the brightness of the screen.

**Auto-rotate screen:** turn on/ off auto rotate

**Animation:** set animations.

**Screen timeout:** adjust the delay before the screen automatically being turned off.

## 7.4 Location & security

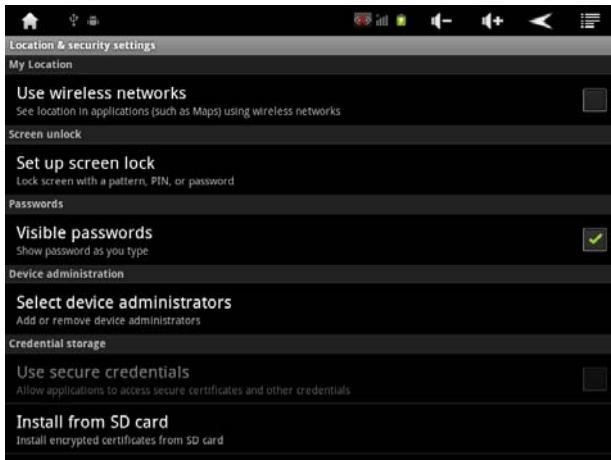

### My Location:

**Use wireless networks:** see location in applications using wireless networks.

**Visible passwords:** Show password as you type

**Select device administrators:** Add or remove device administrators

**Install from SD card:** Install encrypted certificates from SD Card.

**Set passwords:** Set or change the credential storage password.

## 7.5 Applications



**Manage applications:** manage and remove installed applications.

**Running services:** view and control currently running services.

**Storage use:** View storage used by applications

**Development:** set options for application development.

## 7.6 Accounts & sync

**Background data:** Applications can sync, send, and receive data at any time

**Auto-sync:** Applications sync data automatically.

## 7.7 Privacy

Factory data reset

## 7.8 Storage

Check total space, available space etc.

Also you can mount TF card, format TF card etc.

Remark: It's better take out the TF card after mounting TF card to

protect it.

### 7.9 Language & keyboard

The device supports multi-languages.

**User dictionary:** add & remove words from user dictionary.


### Android Keyboard

### 7.10 Date & time


You can set date, select time zone, set time, select date format, use 24-hour format.

### 7.11 USB mode select

Select USB work as host mode, then you can mount U-disk.

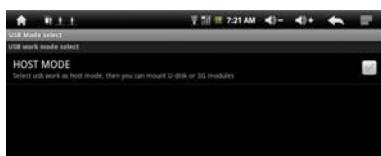

Insert the U-disk into the HOST port, then you can select Explorer to enter:

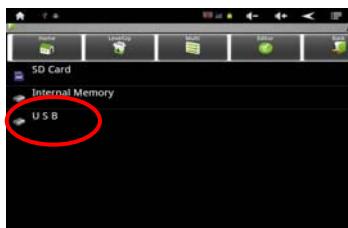

### 7.12 About device

Check battery use, legal information, model number, android version, firmware version etc.

## 8. Specifications

LCD Display	Size	8.0" TFT Capacitive touch panel
	Resolution	800*600
USB port	USB 2.0 High Speed	
Solution	RK2918	
OS	Android 2.3	
Built-in Flash	4G	
Capacity Expansion	Support Micro SD Card , capacity 128MB~16GB	
Power Supply	Built-in 6000mAH Lithium rechargeable battery DC 5V@2A	
Audio format	MP3/WMA/APE/FLAC/AAC/OGG/AC3/WAV	
Video format	Max.1280*720.MKV/AVI/RM/RMVB/FLV/WMV9/ MP4	
Picture format	Max.800. JPEG /BMP/ GIF/ PNG	
E-book format	PDF/EPUB/FB2/TXT/HTML etc.	
Recording format	WAV	
Working temperature	-5 ~ 40 °C	
Languages	Multiple languages	
Dimensions	223 x 155 x 13mm	
Accessories (Optional)	Manual, Charger, USB, Gift box etc.	

## 9. Troubleshooting

Problem	Solution
The device will turn itself off after a few seconds	Check that the battery is charged.
No volume is heard	Adjust the volume level Check if audio file is broken

Screen is hard to see in bright light.	Adjust the screen brightness in the system menu. Avoid using the reader in direct sunlight.
Data on the screen is corrupted or a program is not responding properly	Use thin object like a paper clip to perform a reset to restart the device
Can't copy file into the device	<p>Check if the device is connected to the computer correctly.</p> <p>Check if the memory space is full.</p> <p>Check if the USB cable is broken</p>

**FCC Compliance Statement:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Information to user.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

**This device has been tested and meets the FCC RF exposure guidelines.**

**The maximum SAR value reported is 0.790w/kg**

conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

NOTE: This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.