


User's Manual

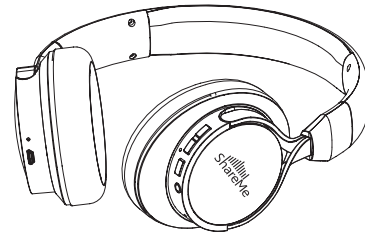

MODEL: 861

Wireless Headphone

Important safety instruction

If used in the correct method, this design and production of this product can ensure your personal safety completely. However, any inappropriate use may lead to potential risk and danger of electric shock or fire hazard. Please read all the safety instructions before installing and using the product. In particular, attention shall be given to the following information:

1. It needs to be stored or used in the ambient temperature.
2. It shall not be placed in water or wet locations.
3. It can't be disposed randomly for it may cause environmental pollution.
4. Without approval, It shall not be disassembled or repaired.
5. The built-in lithium battery can't be disposed in the fire or other places to prevent causing fire hazards.
6. It shall be cleaned with dry cloth.
7. Whenever there is damage, it needs to be repaired by professional personnel.

Charging the battery

Fully charge the battery for about 2 hours before using the battery for the first time.


1. Plug the smaller end of USB charging cable into the Micro-USB interface of the connector.
2. Next, plug the other end of USB charging cable into other power charging devices or a computer with the power on.

Package content

1. Wireless headphone
2. Micro USB charging cable
3. 3.5mm audio cable
4. User manual

EN-1

Headphone controls and connector

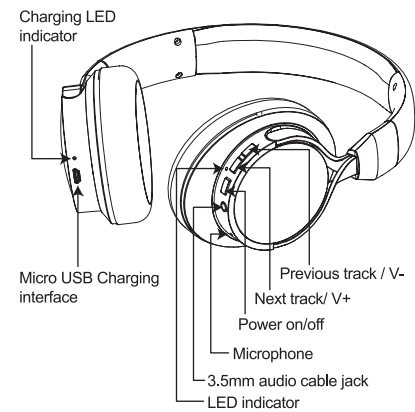

Function	Button operation
Power on	Press and hold the "Power on/off" button for 3-5 seconds and a "power on" audio sound is heard.
Power off	Press and hold the "Power on/off" button for 3-5 seconds and a "power off" audio sound is heard.
Calls operation	1. To answer an incoming call, tap the "Power on/off" button once; tap once again to hang up the call. Press and hold the button twice to reject incoming calls.
	2. During the call, press and hold the "Power on/off" button for 2 seconds to seamlessly switch the conversation between the headphone and the mobile phone.

EN-2

Calls operation	3. When an incoming call from the third party occurs during the call, tap the "Power on/off" button to hang up the call and to answer the third party's incoming call; press and hold the "Power on/off" button to put the call on hold and to answer the third party's incoming call.
	4. When Bluetooth is connected, press and hold the "Power on/off" button for 2 seconds to retrieve the last dialed number.
Volume control	Tap the "+" button to increase the volume. When reaching the maximum volume, a "beep" sound is heard. Tap the "-" button to reduce the volume.
Previous/Next track	While the music is playing, press and hold the "+" button to skip to the next song; press and hold the "-" button to go to the previous song.
Pause/Play	While the music is playing, tap the "Power on/off" button to pause the music; tap once again to continue playing the music.
Activate Siri	When Bluetooth is connected, tap the "Power on/off" button twice to activate Siri.

Pairing the device

1. Make sure there is power remaining in ShareMe 7. Press and hold the "Power on/off" button for about 8-10 seconds, there will be a prompt tone, the blue and red LEDs will flash alternately, this indicates that the headphone has entered pairing mode.
2. Once the Bluetooth system has discovered other devices, select "Mixcder ShareMe 7" from the Bluetooth device list. If connected, Voice prompt says "Pairing successfully" and "connected".

Please note: ShareMe 7 must have been previously paired with your device before you can connect. It will pair with the last paired device automatically when it is on. If paired, There will be a voice prompt of "connected". If unpaired, There will be a voice prompt of "disconnected".

EN-3

ShareMe function

Two headphones are connected to the same device to listen to the same music or audio program at the same time.

ShareMe pairing

1. Turn on two headphones to be in the pairing mode together (by pressing and holding the "Power on/off" button until the indicator flashes red and blue alternately) and these two headphones will complete the pairing process automatically (After the pairing process is completed, the indicator of one of the headphones will light up blue automatically; the other headphone continuously flashed red and blue alternately and awaits to be paired with the portable device).
2. Activate the Bluetooth of the portable device and select "AUSDOM Share Me 7" from the list for pairing. If the pairing process is successful, a "pairing successfully, second device connected" audio sound is heard. At the same time, the "left channel" audio sound is heard in the primary headphone; the "right channel" audio sound is heard in the secondary headphone.

Using ShareMe

To use the headphone again after the Share Me pairing process is completed, no matter whichever the primary headphone or the secondary headphone is turned on first, when the second headphone is turned on, it will automatically paired with the headphone that was turned on first. Both headphones can provide the function of listening to the same music or audio programs at the same time.

When the secondary headphone is turned off while both headphones are in use, the primary headphone will not be affected and can be in use continuously. If the primary headphone is turned off first and the secondary headphone is still expected to be in use, the indicator of the secondary

EN-4

headphone will return to the pairing mode and flash red and blue alternately. At this moment, manually pair the headphone with the device. This is a one-time process. Afterward, the user only needs to tap the "Power on/off" button of the secondary headphone to reconnect with the device.

ShareMe button control

Calls operation	1. To receive an incoming call, press the "Power on/off" button; press the button again to hang up. Press and hold the "Power on/off" button for 2 seconds to reject incoming calls.	Only the primary headphone has the function.
	2. During the call, press and hold the "Power on/off" button for 2 seconds to seamlessly switch the conversation between the headphone and the mobile phone.	
	3. When an incoming call from the third party occurs during the call, tap the "Power on/off" button to hang up the call and to answer the third party's incoming call; or press and hold the "Power on/off" button to put the call on hold and to answer the third party's incoming call.	
	4. When Bluetooth is connected, press and hold the "Power on/off" button for 2 seconds to retrieve the last dialed number.	
Activate Siri	When Bluetooth is connected, tap the "Power on/off" button twice to activate Siri.	
Volume control	Tap the "+" button to increase the volume. When reaching the maximum volume, a "beep" sound is heard. Tap the "-" button to reduce the volume.	
Back/Next	While the music is playing, press and hold the "+" button to skip to the next song; press and hold the "-" button to go to the previous song.	Both headphones can control simultaneously.
Pause/Play	While the music is playing, tap the "Power on/off" button to pause the music; tap once again to continue playing the music.	

EN-5

Note:

1. When one headphone is connected to the device, the effective range of the Bluetooth is 10 meters. When two headphones are connected to the device, the effective range of the Bluetooth between two headphones is 5 meters.
2. When use 3.5mm audio cable as wired headphones, It needs to choose the Bluetooth manually and avoid mutual interference.

External audio resource play

Connecting the external audio resources with this headphone by 3.5mm audio cable.

Headphone indicator

Red and blue blinks	pairing mode
Blue flashing in every 1 seconds	Power on
Blue	Bluetooth connected line-in mode
Red	Battery is recharging
LED off	Battery is fully charged
Red keep flashing	Low battery

EN-6

Technical information

Model	Mixcder Share Me 7
Bluetooth version	V 4.1
Supported protocols	A2DP、AVRCP、HSP、HFP
Frequency	16Hz ~ 24KHz
Transmission range	10m
Charging time	2hours
Standby time	About 300 hours
Weight	170g
Operating temperature	-20 ℃ to 45 ℃
Storage temperature	5 ℃ to 40 ℃

Trouble shooting

Q1. Why can't I power on the headphone?

A1.1. The headphone may have run out of the battery power. Please charge the battery using the charging cable.

Q2. Why can't I connect the headphone to my Bluetooth device?

A2.1. The Bluetooth function on your device may have been turned off. Please turn on the Bluetooth function on your device and allow it to search for compatible devices.
A2.2. The headphone may have been connected to another device.

Please disconnect (unpair) the headphone from the previous device before connecting them to a new one.

A2.3. The headphone may not have been recognized by your device.

Please turn off the headphone, turn them back on, search for the headphone on your Bluetooth enabled device, and make the connection again.

A2.4. The headphones may be too far away from your Bluetooth device. Please make sure that the headphones are close enough to your device, and there is no obstacle between

EN-7

them.

Q3. Why aren't the headphones playing sound tracks in the Bluetooth mode?

A3.1. The headphones may not have been selected as the output device.

Please adjust the settings on your Bluetooth enabled device to use the headphones to play the sound tracks.

A3.2. The volume may have been adjusted to the minimum. Please press to increase the volume.

Q4. Why is the sound quality very poor in the Bluetooth mode?

A4.1. The Bluetooth connection may not be in its optimal condition. Please make sure that the headphones are close enough to your device, and there is no obstacle between them."

Caution

We will no longer guarantee the performance or warranty if the user attempts to dismantle and modify this product in anyway. The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) The device may not cause harmful interference, and
(2) The device must accept any interference received, including interference that may cause undesired operation.

For more information, please visit our official website www.mixcder.com

Your valuable comments and suggestions on improving Mixcder products are welcomed!

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.