 
Replacing the Existing Wired Doorbell

- Test by pressing the existing doorbell button. If the existing doorbell chime does not ring your existing doorbell wiring may be defective. Consult an electrician to repair the wiring.
- Turn off the power at the circuit breaker.






Remove the old doorbell.

NOTE: When choosing battery power for your doorbell (no wires needed) and replacing an older wired model, use the included Wire Nuts to safely




- Choose a mounting location. (the recommended
- If you are mounting the doorbell on a surface made of a hard material such as brick, concrete. or stucco, use a 15/64" (6mm) drill bit to drill two

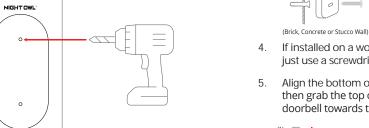


NOTE: A Power Drill, 15/64" (6mm) drill bit, mounting bracket, 15° mounting wedge (optional), and screw pack insulate the old wires. are required for mounting installation.

Doorbell Installation

 - mounting height is 48" / 1.2 m from the ground.) long screws.
- holes in the mouting template screw hole guides.




 - iust use a screwdriver to install directly.
- Align the bottom of the doorbell with mount and then grab the top of the Doorbell. Press the doorbell towards the mount until it clicks into place.




Doorbell Installation (Continued)

 Insert the provided anchors and then secure the mounting bracket to the wall using the provided




 - If installed on a wooden wall, no drilling is required.




Doorbell Installation (Continued) Doorbell Installation (Continued)

 Going Wireless? You're all set! Skip to the "Chime Setup" Align the bottom of the doorbell with mount and section (optional) to complete your doorbell installation. then grab the top of the Doorbell. Press the Wired with Existing Wiring? Great choice! To ensure a doorbell towards the mount until it clicks into place. smooth setup, review the initial steps on pages 11, 12, and



Night Owl Chime, please refer to the doorbell user manual.

 Switch the main circuit breaker back on to restore power to the doorbell Enabled" switch, otherwise the Doorbell will burn out.



AC 8 ~ 24V. 10 ~ 30VA. Please check if your power transformer meets the requirements before installation

Connecting the Night Owl Hub Connecting the Doorbell to a Chime

Personalize Your Setup: Connecting your Doorbell to the Night Owl Chime. (Optional Add-On)

- After adding the doorbell to your Night Owl app, open the app and select your doorbell from the list of devices.
- Click the gear icon on the top right and under "Feature Control" click "Doorbell"
- Click "Add a Chime" and "Continue".

For more detailed instructions on how to configure your

NOTE: If AC power is used, do not turn on the "Wired Ring"



 
For detailed instructions on how to connect your doorbell to an existing mechanical or digital chime, please refer to the doorbell user manual.

Personalize Your Setup: Connecting your Doorbell to the Night Owl Hub. (Sold Seperately)

The Night Owl Hub can be used as both a recorder and a chime. Once the doorbell has been pressed, the hub can be configured to start recording and play a chime with its built-in speaker. Follow these steps to setup your Night Owl


- Hub with your doorbell.
 - Open the Night Owl application and select the Hub.
- Click "+" at the bottom of the screen.





Connecting the Night Owl Hub (Continued)

Proceed to the "Pair Your Cameras" page, activate the doorbell to be in pairing mode, and then click "Continue" to begin the pairing process.

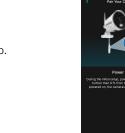

Once the Hub has paired with your doorbell, click "Continue" to finalize the pairing process.

> **NOTE**: If AC power is used, do not turn on the "Wired Ring Enabled" switch, otherwise the Doorbell will burn out

LED Status Lights

Solid White

Flashing Blue

Alternating White and Blue

LED Status Doorbell Status Not connected to Wi-Fi Slowly Flashing White network or pairing failed NIGHTOWL Slowly Flashing Blue connected to Wi-Fi mode and Wi-Fi chime mode System is connected to Wi-Fi

Blue LED Status

has been pressed

Firmware is updating

Client successfully connected

below to access your Series

ter DBH4 into the Search

Support.NightOwISP.com

 
OSG-DBH4 1-240709

NIGHT OWL

Quick Setup Guide

What's Included

Battery Powered Hybrid Doorbell
























Items Not Included



NOTE: If mounting the doorbell, you will need a screwdriver or drill (not included).

 Doorbell Camera Details



Wiring Connectors

AC 8 ~ 24V, 10 ~ 30 VA)

Battery Compartment

 


















Button





and log in.

App Store

Download the Night Owl App Initial Setup

If you are a first-time user, go ahead and download the Night Owl app. Quickly create an account the back of the device

Already have an account? Simply log in.



doorbell before installing it outside.

Install the batteries into the battery compartment of the Doorbell located on Night Owl app or to a compatible recorder.

We recommend you insert the small end of the provided USB cable into the USB-C port on the doorbell. Connect the other end of the cable to a USB power adapter and plug it into an outlet. This will charge the doorbell battery. We recommend keeping the doorbell charging while you connect it to the Wi-Fi router, and fully charge the

How to Install Your Doorbell

To begin viewing your camera, add it to the

For more detailed setup steps, scan the QR code below.



of the installation.



NOTE: With the doorbell not attached to the mount you can insert the USB Type-C cable into

(Power Adaptor not included)

Preparing the Doorbell for install

Test the Wi-Fi signal strength at the desired location

The signal strength of the Wi-Fi router can be checked by connecting to the cell phone Wi-Fi, with a minimum of 2 bars of signal (4 bars full).




NOTE: Please complete the doorbell signal test before proceeding with the installation.

Connect the Doorbell to a Wi-Fi router

With the doorbell not connected to the

mounting plate. Use the reset pin to press and hold the Reset button on the side of the doorbell for 2 seconds to power the doorbell on. When you hear this prompt, "Camera is in pairing mode" the doorbell is in pairing mode and the LED light flashes slowly.

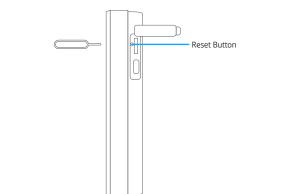

Connect the Doorbell to a Wi-Fi router

- Open Night Owl Protect app
- Tap on "Add New" or "+"





Please fully charge the doorbell before installation

Connect the Doorbell to a Wi-Fi router

. Scan the QR code at the side of the doorbell

Follow the on-screen display to add the

Doorbell step by step.

NOTE: The Router's security protocol MUST be set to WPA/WPA2 (strong security).