

# User Manual



# NOTICE



No striking from any hard object.



Keep away from high temperature, freezing, dusty or moist environment.



Stop using in thunderstorm weather.



Keep away from electric or magnetic field.



Don't stain the device by chemicals.



No disassembly to the device.



Lower sound suggested, to keep away from hurting your ears and making noise.



Do not flash firmware privately without original manufacturer's guidance. The manufacturer is not responsible for the breakdown of the device caused by user's private firmware flashing.

# 1. Main functions Overview

- Wireless network exploring via WIFI,etc.
- Google Ice Cream Sandwich Android 4.0OS.
- All-directional G-Sensor games supported.
- Immense amounts of applications supported.
- Various of audios supported.
- HD videos supported.
- Pictures browsing with zooming and slide-show.
- E-book reading with bookmark function.
- Photographing and Video recording
- Built-in voice recorder.
- Built-in multiple languages.
- USB 2.0 high-speed connection with PC.
- External Micro-SD card supported.
- Optional function: HDMI Out.

## 2. Basic Operation

### 2.1 Turning ON

Press POWER button for around 1.5 second and the device will start up and display the lock screen.

Slide the lock to unlock Home Screen.



### 2.2 Standby

When the device is working, press POWER button shortly to shut the display and it goes into standby mode. Press POWER button again to awake the device, and slide the lock to continue.

### 2.3 Turning OFF

Press POWER button for around 1.5 second and choose OK in the popup.

### 2.4 Reset

If the device is halted or crashed, and can not be turned off by POWER button, users can launch the RESET function.

### 2.5 Recharging

When the device can not be turned on normally or shut down automatically, it may need to be recharged. Please use the correct charger as the manufacturer guides.

## 2.6 Home Screen

Tab ▷ to go to Home Screen.

## 2.7 Back Button

Tab ⇲ to go to the previous page.

## 2.8 Recent Task

Tab ☐ to view recent tasks. Tap the task frame to open it, or slide to close it.



## 2.9 Menu

Tab ☰ to view options.

## 2.10 Applications

Tab ☱ to launch apps list. Slide to view all applications and widgets.

# 3. Home Screen

There are several pages for Home screen, slide to view more.



## 3.1 Add apps & widgets to Home Screen

Launch apps list, press icons and drag it to Home Screen. At Home Screen, press icons to drag leftward or rightward to move it to other pages. Drag upwards to remove it from Home Screen.

## 3.2 Wallpaper

Long press blank of Home Screen, choose different wallpapers in the popup.

## 3.3 Notification Bar

Tab the bottom right corner of your screen to view the *Notification Bar*, informing you WIFI status, battery, updates, downloads, etc.



### 3.4 Search


Tab  Google |  to search information at local or internet. Voice Search is supported.



# 4. Connecting to Networks

## 4.1 Connecting to Wi-Fi

- Tab the Settings Icon 
- Slide Wi-Fi icon   to the right (ON) to turn on Wi-Fi, the tablet will scan and offer a list of available Wi-Fi networks around. Tab the name of Wi-Fi to connect to it.
- If the Wi-Fi network doesn't have a password, the tablet will connect to it automatically. If the Wi-Fi network has a password, input it and tap *Connect*.

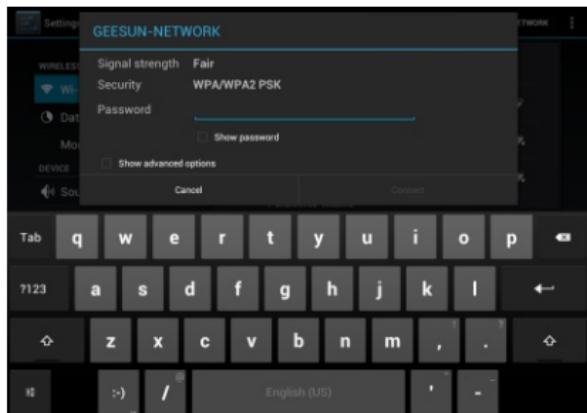

- Slide Wi-Fi icon   to the left to turn on Wi-Fi.

## 4.2 Network access via


*More – Mobile networks*

*Data ena*

## 5. USB Connection

The tablet can be connected to PC to make data exchange (Files copy & delete) via USB cable. Please do not disconnect the device from PC when data exchanging.

- Use a USB cable to connect the tablet with PC, tab the icon  at bottom right of the screen and choose *USB connected* in the popup.
- Tab *Turn on USB storage* to read storage of the tablet from PC.
- Tab *Turn off USB storage* to disconnect from PC, and remove the USB cable.

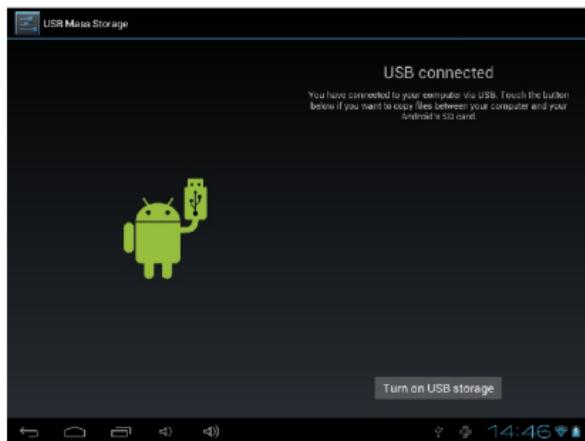


# 6. Applications

## 6.1 Install New Apps

6.1.1 To download & install apps from *Play Store*  , just follow the instructions by system.

6.1.2 To install apps by APK packages in tablet's storage, just find the APK file from *File Manager* and tap its name, choose *Install* in the popup.

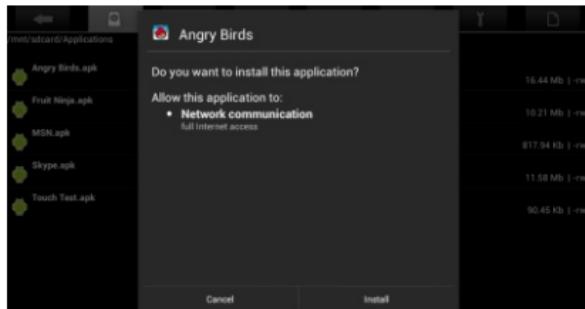

## Tips

- To install applications which are not from *Play Store*, make sure *Unknown sources* is **ON**. (*Setting* - *Security* - **DEVICE ADMINISTRATION**)
- If the application already exists in the tablet, choose **OK** to replace it by latest version of package.

## 6.2 Applications uninstall

6.2.1 Tab *Setting* - *Apps* - *All*.

6.2.2 Tab the application you want to remove.

6.2.3 Tab *Uninstall*.


## 6.3 Applications management.

6.3.1 Tab *Setting* - *Apps* - *All*.

6.3.2 Tab the application and choose *Force stop*, *Uninstall*, *Clear data* or *Move to SD card*.

# 7. Video Play

You can use the tablet's pre-installed *HD video player* to enjoy movies & videos, or install other video apps to enrich your video play.

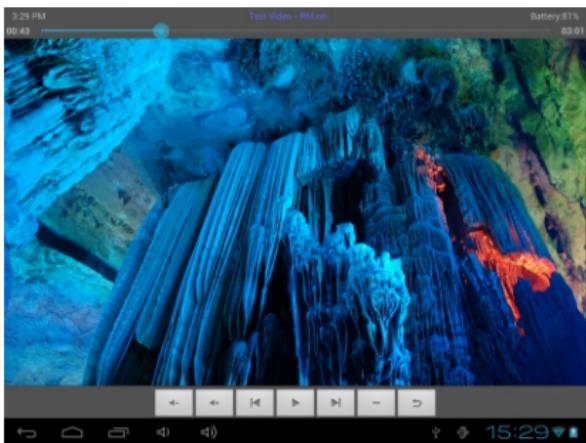


- 7.1 Tab the *player icon* to enter the video player interface, or open the video files from *File Manager* directly.
- 7.2 The tablet supports many formats of video files including RM, RMVB, MP4, AVI, 3GP, MKV, MOV, VOB, DAT, FLV and more.
- 7.3 Tab the progress bar to go fast-forward or fast-rewind.



## 8. Music Play

You can use the tablet's pre-installed *music player* to enjoy musics, or install other audio apps.

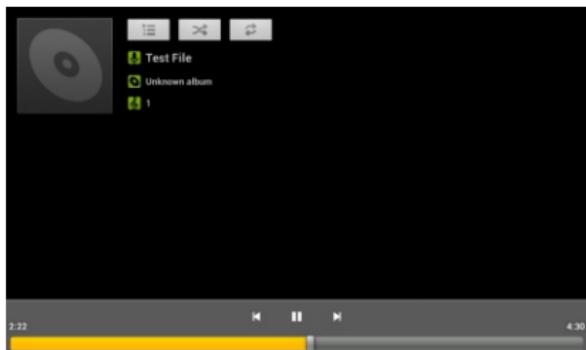

- 8.1 Tab the Music player icon  to enter the music player interface, or open the music files from *File Manager* directly.
- 8.2 The device supports the following formats of audio files: MP3, WMA, MP2, OGG, AAC, FLAC, APE, 3GP, WAV, and more.
- 8.3 Tab the progress bar to go fast-forward or fast-rewind.
- 8.4 If there is no audio in the playlist, system will automatically load the audio files from the storage of tablet.

# 9. Camera

Tab the icon  to access camera function.



## 9.1 Photos Mode


- 9.1.1 Click Blue Circle  to take pictures.
- 9.1.2 Click  to access photographing options.
- 9.1.3 Click the thumbnail picture to view saved pictures.
- 9.1.4 Click  to switch to video recording mode.

## 9.2 Video Recording Mode

- 9.2.1 Click Red Circle  to start video recording, click it again to stop and save the video.
- 9.2.2 Click  to access video recording options.
- 9.2.3 Click the thumbnail picture to view saved videos.
- 9.2.4 Click  to switch to photos mode.

# 10. System Settings

Tab Settings icon  to enter system settings, including Wireless & networks, Sound, Display, Storage, Battery, Apps, Accounts & sync, Location services, Security, Language&input, Backup&reset, Date&time, Accessibility, Developer options and About tablet.

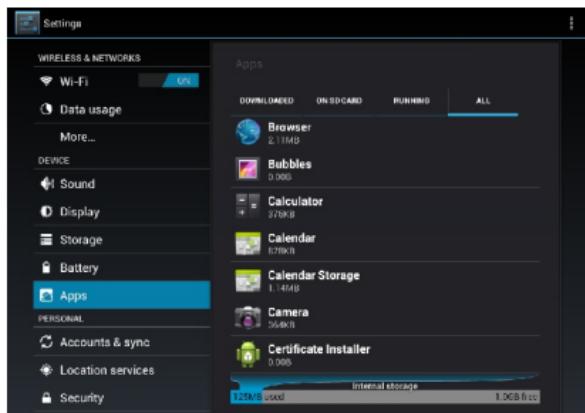

## 10.1 Wireless & Networks

See item 4. *Connecting to Networks*.

## 10.2 Sound

You can set volumes, ringtone & notification and system sounds.

## 10.3 Display

Options: Brightness, Wallpaper, Auto-rotate screen, Auto sleep time, Font size, Accelerometer coordinate system and G-Sensor Calibration.

## **10.4 Storage**

A general view of internal storage and external SD card space.

## **10.5 Battery**

A general view of battery information

## **10.6 Apps**

See item 6. *Applications*

## **10.7 Accounts & sync**

You can manage all accounts recorded in the tablet.

## **10.8 Location services**

## **10.9 Security**


Options: Screen security, Encryption, Passwords, Device administration and Credential storage.

*Tips:* If you want to install applications beyond *Play store*, please turn on *Unknown sources*.

## **10.10 Language & input**

You can change the language of system, and choose keyboard inputs by default.

*Tips:* If you have installed an input, remember to turn on it in this setting.

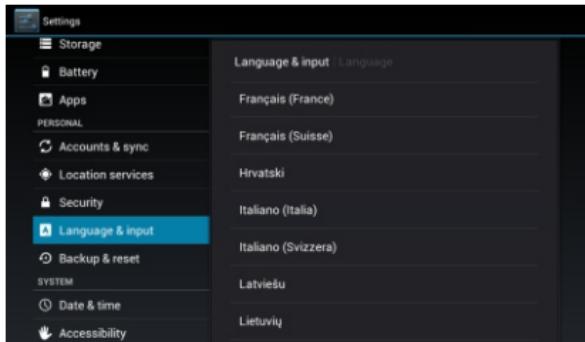

## 10.11 Backup & reset

Options: Backup & Restore, Factory data reset and Recovery Mode.

## 10.12 Date & time

Options: Time & Date settings, time zone and format settings.

## 10.13 Accessibility

Options: Large text, Auto-rotate screen, Speak passwords, Touch & hold delay and Install web scripts.

## 10.14 Developer options

Options: USB debugging, Stay awake, Allow mock locations, Desktop backup password, Strict mode enabled and Pointer location.

## 10.15 About Tablet

A view of tablet information (model, system, firmware version, etc)

## 10.16 Optional function: HDMI Out

For tablet with HDMI port, just connect it by HDMI cable directly. There is no need any settings in the tablet.

# 11. FAQ

Q: How can I change languages if I mistakenly choose an unknown language?

- Find setting icon  and access *Settings*.
- Choose icon  to enter *language&input* setting, the first option is language setting.

Q: How can I change input?

- Access *Setting* – *Language&input*, and set default input.

Q: I already installed some applications, but I can not find them now.

- Some applications may be installed in external TF card, if you fetch out the TF card from the tablet, you will not see these apps.

Q: There are many popups of system error, what can I do?

- Restart the tablet by POWER button, or by RESET. Use a thin stick to prick the RESET and restart the tablet.
- If you have restarted the tablet and there are still error popups, you can check active applications to see if there is any unknown application, remove it if any.
- There may be virus in the device, please install security apps and protect your tablet.

## 12. About Firmware

Firmware contained in the tablets provides the control program for the device, and it is offered by the original manufacturer. Flashing firmware (refer to *rebuilding firmware into the device*) is the final solution to serious system problems. For common breakdown you can just restart the device, or run *factory reset*. If system crashes appear continuously even you have run factory reset, you can flash firmware under professional guidance.

The firmware preloaded in the device is a stable version for the tablet, Please do not flash it with other versions of firmware unless absolute necessity.

We DO NOT suggest any private firmware flashing without guidance of the original manufacturer, who is not responsible for any possible breakdown of the tablet caused by user's private firmware flashing.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.