


THERMACELL® HEAT PACKS POCKET WARMER WITH BLUETOOTH® INSTRUCTIONS

PACKAGE CONTENTS

The ThermaCELL Heat Packs Pocket Warmer with *Bluetooth* package contains one Large Pocket Warmer Heat Pack equipped with an integrated rechargeable Lithium-Ion Polymer battery, one USB wall charger, one USB cord, an adjustable length lanyard (Figure 1), and this Instruction Booklet.

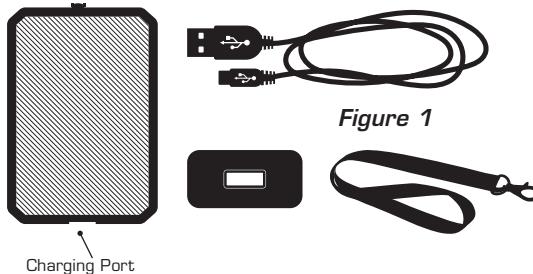

THINGS TO KNOW BEFORE USING YOUR HEAT PACKS POCKET WARMER WITH BLUETOOTH


- COMPATIBLE DEVICES:** The app is compatible with these Apple® devices running iOS 9 or newer: iPhone® 5, iPod touch® 5th Gen., or newer versions of these devices. It is also compatible with leading Android™ devices. Full list: <http://heat.thermacell.com/devices>
- To operate your ThermaCELL Heat Pack Pocket Warmer with *Bluetooth*®, you will need to use the ThermaCELL Heated Products app. You can download this from the Apple App Store or the Google Play App Store.
- You will need internet access to download the application for the *Bluetooth* feature, but you will not need an internet connection to use the feature once installed. *Bluetooth* functionality works in most locations in the United States and Canada.
- The application uses your phone's battery just as any other application you may have on your phone. Charging your phone does not charge the Heat Pack Pocket Warmer with *Bluetooth*.
- Do not use the product if it is wet.
- Do not use the product in wet clothing or shoes.
- For best results, turn the product on at the first sign of your hands or body getting cold.
- To attach the adjustable lanyard, insert the thin cord on the lanyard into the slot on the corner of the Heat Pack case and push it through the hole until it comes out the other side of the slot. You may use a blunt object, such as a paperclip, to push the thin cord through the slot. Open the thin cord loop and pull the lanyard through the loop.

CHARGING & RECHARGING HEAT PACKS POCKET WARMER WITH BLUETOOTH

The ThermaCELL Heat Packs Pocket Warmer with *Bluetooth* must be fully charged before first use. Charge the Pocket Warmer with *Bluetooth* at room temperature using

only the enclosed ThermaCELL charger. When the battery is drained during operation, your Pocket Warmer with *Bluetooth* will stop generating heat. The Pocket Warmer with *Bluetooth* does not need to be completely drained before placing it back on the charger.

- Open the Port Cover on the end of the Pocket Warmer with *Bluetooth*.
- Plug the USB cable into the Pocket Warmer with *Bluetooth* by inserting the micro USB connector (smaller end). Then, plug the USB connector (larger end) into the wall charger and plug the wall charger into an electrical outlet.
 - Alternatively, you can plug the USB connector into a powered USB port rather than the wall charger. Charging via alternate USB port may extend the time required to fully charge the Pocket Warmer with *Bluetooth*. (Figure 3)
- The LED on the Pocket Warmer with *Bluetooth* will glow red to indicate the unit is charging (Figure 2 and 3).
- When the battery is fully charged, the LED will turn green.
- Disconnect the wall charger from the outlet or remove USB connector from the alternative USB port and then disconnect the USB connector from the Pocket Warmer with *Bluetooth*. This process may be done in any order without causing damage to the Pocket Warmer with *Bluetooth*.
- Once Pocket Warmer with *Bluetooth* is fully charged, it will provide up to four (4) hours of constant heat on HIGH, up to five (5) hours of constant heat on MEDIUM, and up to six (6) hours of constant heat on LOW. The outside temperature and insulation of gloves/clothing will affect runtime.
- After charging, close the Port Cover on the end of the Pocket Warmer with *Bluetooth*.

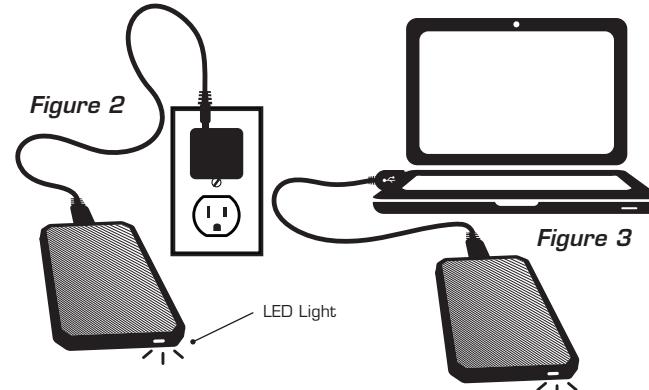


SETTING THE HEAT LEVEL MANUALLY (NOT USING BLUETOOTH)

Select a heat setting by pressing the power/settings button on the Heat Packs Pocket Warmer with *Bluetooth* (Figure 4).

- Low (106°F): Press the power button 1 time. LED flashes 1 time to indicate Low heat.
- Medium (110°F): Press the power button 2 times. LED flashes 2 times to indicate Medium heat.
- High (116°F): Press the power button 3 times. LED flashes 3 times to indicate High heat.

NOTE: The red side of the Heat Pack is the heated side.

Figure 4

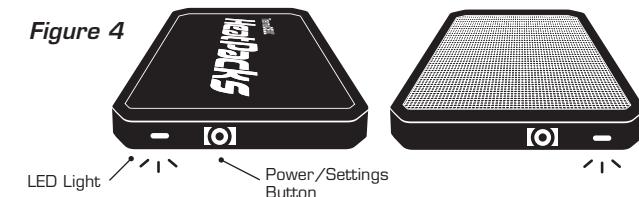

USING THE BLUETOOTH FEATURE

Before you begin:

- Download the ThermaCELL Heated Products application at the Apple App Store for your iOS device or the Google Play App Store for your Android device.
- On the cover of these instructions for your Pocket Warmer with *Bluetooth* is a sticker with a product ID number. Keep these instructions with this number in a safe place. You will need the last four digits of this number to identify your product during the *Bluetooth* pairing process. Schawbel Technologies does not keep a record of this number.
- Fully charge the Pocket Warmer with *Bluetooth*.

PAIRING YOUR PRODUCT WITH THE BLUETOOTH APPLICATION

- Open the ThermaCELL Heated Products app on your device.
- Register your device or click Skip.
- Click the + symbol in the upper right hand corner of the screen to begin pairing your Pocket Warmer with *Bluetooth* with the application.
 - When in the Add Device screen, the mobile device will scan for nearby devices for about 20 seconds. Identify your Pocket Warmer with *Bluetooth* in the list by the last four digits of your Product ID number. If your Product ID number does not appear, make sure your Pocket Warmer with *Bluetooth* is fully charged and refresh the app by using your finger to pull down on the Main screen and return to the Add Device screen. When you find your Product ID number, click on the + sign to add your device.
 - The LED will briefly flash red when you have selected the correct product.
- Enter a 4 digit code you will remember (this does not have to be your Product ID number). Keep a record of the code you choose. This code prevents another user from making changes to your product and allows you to add the Pocket Warmer to other smart devices. Schawbel Technologies has no record of this code. For safekeeping, write your 4 digit code here: _____
- Enter a name for your Pocket Warmer with *Bluetooth*.
- Click "Submit".
- Click the < arrow in the upper left corner of the screen to see your Pocket Warmer with *Bluetooth* in the application.

SETTING THE HEAT/TURNING POCKET WARMER WITH BLUETOOTH ON USING BLUETOOTH

- On the main screen click "Inactive ►" next to your product listing.
 - If a "Firmware" update appears, please select "yes". Note: A firmware update may take several minutes.

2. Select Low, Medium, or High to activate the heat settings.

a. The green LED light on the Pocket Warmer with *Bluetooth* will flash intermittently indicating the heat setting: 1 flash = Low Heat, 2 flashes = Medium Heat, 3 flashes = High Heat.

b. No Heat is a "stand by" or "sleep" setting and the Pocket Warmer with *Bluetooth* will not generate heat in this setting. When the No Heat setting is selected, the product will flash red and green briefly and the status of your product will become inactive.

TURNING THE POCKET WARMER WITH *BLUETOOTH* "OFF"

When you are not using your Pocket Warmer with *Bluetooth*, use the No Heat setting to turn the heat off. When heat is needed, select the desired heat level from the settings screen in the application to reactivate heat. After several hours of non-use, the unit will go into "Deep Sleep" mode which saves battery life over a prolonged period of time. To "Wake" the device, press the button on the product once, then operate with the application or manually.

CARE INSTRUCTIONS

- Store the Pocket Warmer with *Bluetooth* product in a clean and dry place.
- Charge Pocket Warmer with *Bluetooth* fully before long-term storage. Recharge every few months to maintain peak performance.
- Only use ThermaCELL Heat Packs' chargers to charge this product.
- Clean with a damp cloth only. Do not submerge in water or use chemicals or cleaning agents.
- Do not place ThermaCELL Heat Packs on radiators or any other hot surface.
- Removal of outer cover can and will permanently damage the product. This will cause the product warranty to be null and void.
- ThermaCELL Heat Packs are intended for dry use only.

ONE-YEAR WARRANTY

This product is guaranteed against defects under normal use for one year from the date of purchase. If your product fails to perform satisfactorily because of defects in materials or workmanship, it will be replaced or repaired free of charge. To register your product, please visit <http://heat.thermacell.com>

THERMACELL CUSTOMER SERVICE

If you have further questions regarding ThermaCELL Heat Packs Pocket Warmer with *Bluetooth*:

- Call Customer Service at 1-866-651-7579.
- Refer to <http://heat.thermacell.com/> for instructions, tips, and how-to videos.

ABOUT LITHIUM-ION POLYMER BATTERIES

- The high quality Lithium-Ion Polymer batteries in ThermaCELL Heat Packs can be fully recharged hundreds of times for many years of reliable use.
- Only use a ThermaCELL Heat Packs charger to charge your Heat Packs Pocket Warmer with *Bluetooth*.
- The batteries are embedded in the Heat Pack and cannot and should not be accessed.
- Battery Disposal: Batteries must be disposed of in accord with local laws and regulations.
- CAUTION - Risk of fire and burns. Do not open, crush, heat above 185°F, or incinerate. Follow manufacturer's instructions.
- CAUTION - Never put batteries in mouth. If swallowed, contact your physician or local poison control center.
- Battery Specifications:
Pocket Warmer with *Bluetooth* Heat Pack: 3300mAh 3.8V 12.3Wh

CAUTIONS - Be Aware of Burn Possibilities

- Properly use ThermaCELL Heat Packs according to instructions.
- Users of ThermaCELL Heat Packs need to be aware of early sensations of a burn, including when an area of the hand or body becomes too hot.
- If you feel the early warning signs of a hand or body burn, immediately discontinue use of the Heat Pack and make certain your hand or body is not at risk of being burned. See a physician immediately if you think you have a burn.
- ThermaCELL Heat Packs and the contents of this package are not meant for use by children unless under the supervision of an adult.
- Persons with reduced physical sensory capabilities should exercise caution when using ThermaCELL Heat Packs.

TROUBLESHOOTING

Trouble	Try
Pocket Warmer with <i>Bluetooth</i> is not pairing with the application.	Make sure Pocket Warmer with <i>Bluetooth</i> is completely charged by plugging the unit into the charger and verifying that the LED glows green.
Previously paired Pocket Warmer with <i>Bluetooth</i> no longer appears on the list in the application.	Follow the instructions in "Pairing Your Product with the <i>Bluetooth</i> Application".
I forgot my four digit code or want to rename my Heat Packs.	Keep entering an incorrect 4 digit code until the application asks if you want to perform a factory reset. Choose OK and follow the onscreen prompts.
I have a new or second device I want to pair with my Pocket Warmer with <i>Bluetooth</i> .	Download the application to your new device and follow the instructions in order under "Bluetooth Pairing Instructions".
Application is not responding ("frozen").	Turn the application off and back on again. If the application still does not respond, turn your device off and then on again. If the application continues to be unresponsive, please uninstall and reinstall the application.
I lost my instruction booklet and I no longer have the Product ID sticker.	To register a product when you have forgotten or lost your Product ID simply bring your product with you and move to a location where there are no other ThermaCELL <i>Bluetooth</i> enabled products in range. The application will then see only your device.
LEDs are not blinking when I change the heat setting in the application.	Verify that the unit is charged. Verify that the application is not frozen by tapping other buttons to move around in the application. <ul style="list-style-type: none">• Application Not Frozen-If the unit is charged and the application is not frozen contact Customer Service for assistance• Application Frozen-see above Remember you can change the temperature on your Pocket Warmer with <i>Bluetooth</i> manually if you are having issues with <i>Bluetooth</i> .
Pocket Warmer with <i>Bluetooth</i> is not getting hot.	Verify the unit is charged. Use the button on the unit to change the temperature to High (3 flashes). If the unit is still not heating contact Customer Service.

Customer Service: Email customerservice@schawbeltech.com or call 1-866-651-7579

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by increasing separation between the equipment and the radio or television. Changes and Modifications not expressly approved by Schawbel Technologies LLC can void your authority to operate this equipment under Federal Communications Commission's rules. This device complies with Industry Canada license-exempt RSS standard[s]. Operation is subject to the following two conditions: [1] this device may not cause interference, and [2] this device must accept any interference, including interference that may cause undesired operation of the device.

Schawbel Technologies LLC
2400 District Avenue, Suite 150
Burlington, MA 01803
<http://heat.thermacell.com>

Patents Pending
Made in Taiwan

ThermaCELL®

HeatPacks

RECHARGEABLE • LIGHTWEIGHT • ADJUSTABLE HEAT

Welcome to ThermaCELL® Technology

Dear ThermaCELL Heat Packs Pocket Warmer with *Bluetooth*® Wireless Technology Purchaser,

Thank you for your purchase of the ThermaCELL Heat Packs Pocket Warmer with *Bluetooth* which provides adjustable heat with the convenience of *Bluetooth* operation. These operating instructions provide directions on how to properly use and care for your Heat Packs Pocket Warmer with *Bluetooth*.

ThermaCELL products, including ThermaCELL Heat Packs, ThermaCELL Heated Insoles, and ThermaCELL Heated Insoles ProFLEX, enable outdoor enthusiasts to enjoy their favorite activities in comfort. We thank you again for your purchase of ThermaCELL Heated Products and are confident your cold weather activities will be more comfortable and enjoyable than ever before.

Enjoy your purchase,

The ThermaCELL Heated Products Group

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Schawbel Technologies LLC is under license. Other trademarks and trade names are those of their respective owners.

