

ARMING THE SECURITY SYSTEM

REMOTE CONTROL ARMING

1. Exit the vehicle and close all entry points.
2. Press "BUTTON I" on the remote control transmitter.

The siren will chirp two (2) times and the parking lights will flash two (2) times indicating that the system is armed.

AUTOMATIC ARMING

If the system is not armed manually, the system will arm automatically when:

1. Ignition key is turned off.
2. Any door is opened then closed.
3. One minute has elapsed after all doors are closed.
" IF " the siren only chirps one time when arming the system, check the status indicator.
- If the status indicator is on " RED/GREEN " , a door, trunk or hatch is open. The system will arm after that opening is closed.
- If the status indicator is on " SOLID RED " , the system is in the valet mode.
The system will arm after the valet mode is disengaged.

DISARMING THE SECURITY SYSTEM

Press " BUTTON II " on the remote control transmitter. The siren will emit one (1) chirp and the parking lights will flash one time to indicate the system is disarmed. If the siren sounds four (4) short chirps, the alarm has sounded while you were away. The system will rearm in one minute unless the ignition is turned on or the system is placed in the valet mode.

REMOTE CONTROL PANIC ALARM

When activated, panic alarm will sound the siren continuously and flash the parking lights for 30 seconds. To activate the panic alarm, " Press BUTTON I and II at the same time or press BUTTON IV " on the remote control transmitter. The panic alarm can be shut off by pressing BUTTTON II on the remote control transmitter, then press BUTTON I to arm the system again.

VALET MODE

Valet mode prevents the security system from being armed. Only the lock

ARMING THE SECURITY SYSTEM

and unlock feature will function. Valet mode is useful when valet parking, fuelling or servicing your vehicle.

To activate the valet mode:

1. Turn the ignition to the " ON " position.
2. Toggle the valet switch " ON ".
3. The status indicator will display a " SOLID RED " confirming that the system is in the valet mode.
4. Turn the ignition " OFF ".

To re-enter the normal operating mode:

1. Turn the ignition to the " ON " position.
2. Toggle the valet switch " OFF ".
3. The status indicator will be " OFF ".
4. Turn the ignition "OFF ".

Note: Valet switch is located under dash, left panel beside the hood release.

DISARMING THE SYSTEM WITHOUT THE REMOTE CONTROL TRANSMITTER

1. If transmitter is lost or not functioning.
2. Open the driver's door (alarm will begin sounding as soon as the door is opened).
3. Turn the ignition key to the " ON " position.
4. Toggle the valet switch to the " ON " position.
5. The security system is now disarmed.

VISUAL ALARM STATUS INDICATOR

The visual alarm status indicator is a high intensity red blinking light. The status indicator, mounted in a location visible from the outside of the vehicle, displays the security system's status while creating a powerful theft deterrent. The chart on this page shows the different status indications and their meanings.