



## User Manual

The 2.4G wireless mouse is composed by main mouse, nano receiver and detachable battery. (as picture)

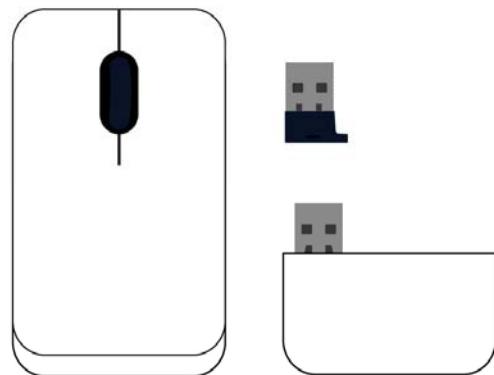

1. The users can remove the top cover that the first step is lift 1 part, then lift 2 lift 3 lift 4, and then you can remove it.(as picture)

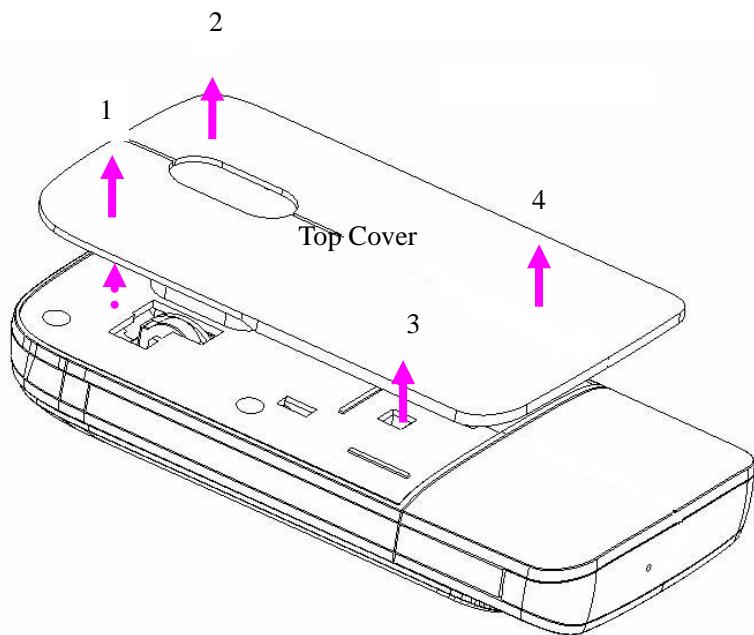

**2.**When the detachable battery charged by PC,the charging time is about 2 hours.Using standard charging method (0.5C),the charging time is about 3 hours.

**3.**The meaning of Red and Green Light indication.

Status of LED indicator (in detachable lithium battery)

- a. Plug into the mouse with power, no indicator
- b. When power is low: Red light blinking (move mouse), light off when out of power.
- c. When charging from computer : Red light keeps on.
- d. When charging completed from computer : Green light keeps on.
- e. If battery unplug and does not access any device : light off

**4.** The users want to plug in the nano receiver to make the connection,you can follow these steps.

Step 1: Remove the nano receiver from the mouse

Step2: The nano receiver into your computer USB port. Shows: 'New Hardware found DIGITZ EZmouse'.

Step 3: Mouse on the back of the switch from OFF to ON.

Step 4: Mouse connection is completed and it can work.

**5.** Product warranty for one year.

**6.** Type of connection (technology):2.4 Ghz wireless.

**7.** the back-up battery for emergency can work about 22 hours continuously.  
—290mah (in charger)

## **8. FAQ**

A. The user can change the mouse button assignments for left-handed.

- 1、Open control panel,and double click Mouse Icon .
- 2、Select Buttons configuration box in the Mouse Buttons Tab .

B. If you installed your mouse as indicated in the manual, but the pointer still is not moving. Make sure you have switch on the switch and fully charged your mouse.

C. When plugged the USB nano adapter into your computer,no drivers seemed to load. You can un-plug and re-plug your nano adaptor again, it should be Ok because it is plug and play.

D. The warranty of Digitz EZmouse is Five years.

E. If your wireless mouse was working fine, now it is not responding correctly. You can un-plug and re-plug your nano adaptor again, make sure you have switched on the switch and fully charged your mouse. Then you can see the red color of LED on back side after switch on.

F. The internal and external batteries can work 30 hours in total after fully charge.

G. The optical mouse moves too fast or seems to double click on its own.

1、Open control panel, and double click Mouse Icon .

2、Adjust Double-Click speed in the Mouse Buttons Tab . Then click Apply.

H. Windows recognizes the USB Human Interface. The mouse has been "freezing" and not responding for 15-20 seconds. It is normal when you first time to plug into the nano. Be sure that your external battery is charged full until the green light lit up. Then replace it back again in the Digitz EZmouse.

**9. Addressing for the warranty issue and the standard warranty regulations  
(fill in by customer)**

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.