

Fuss®

7" & 10" MEDIA TABLET



For both Single-touch model & Multi-touch model

OPERATION MANUAL

Please read this manual carefully before operation

Table of Contents

Caution

Caution-----	1
Package Content-----	1

Hardware Overview

Hardware Overview-----	2
------------------------	---

Getting Started

Charging the Battery-----	3
Turn On/Off-----	3

Operation Interface

Using the Touchscreen-----	4
Basics-----	5
Opening & Switching Applications-----	6
Status Bar Overview-----	6

Settings

Opening Settings-----	7
Wireless & networks-----	7
Sound & display-----	8
Location & security-----	8
Applications-----	8
Privacy-----	8
SD Card & sevice storage-----	8
Language & keyboard-----	9
Date & time-----	9
Touch panel calibration-----	9
USB Mode select-----	9
Update Media Library-----	9
Factory data reset-----	9
About device -----	9

Software Installment And Management

APK Installer -----	10
ES File Explorer-----	10
Android Market-----	10

Specification-----

11

CAUTION

CAUTION



Moisture



High temperature



Hard object damage



Open without
authorization



Poor ventilation




Dust and smoke

PACKAGE CONTENT



Media Tablet

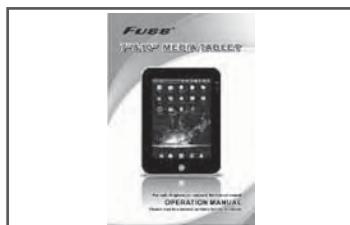

Operation Manual



Adapter



Mini USB Cable

HARDWARE OVERVIEW


HARDWARE OVERVIEW

7" / 10"


(Right View)




(Front View)

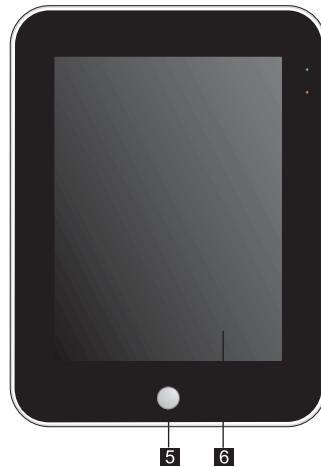

(Rear View)

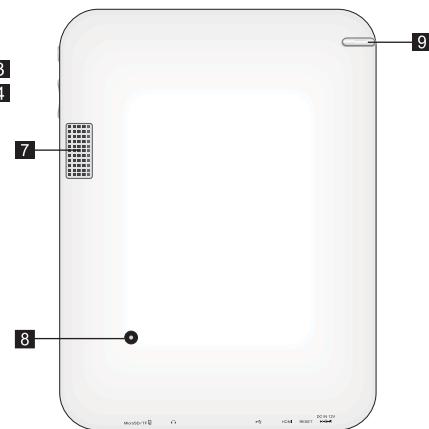

(Bottom View)

 

1. Power button

2. Volume control

3. LED power indicator

4. LED charging indicator

5. Home button

6. Touch screen

7. Speaker

8. Camera(optional)

9. Stylist

10. Microphone

11. Micro SD slot

12. Earphone jack

13. Mini USB port

14. Mini HDMI output jack

15. Reset


16. Power jack

GETTING STARTED

CHARGING THE BATTERY

1. Plug one end of the adaptor into a power outlet, the other end into the device. The LED charging indicator turns red, indicating that the device is currently being charged.
2. During charging, the battery icon animation will appear on the screen. When the device is fully charged, the battery animation icon will stop and turn green.

Note: If the device is completely out of power, please connect it to a power outlet. And the screen will prompt "the power is too low, charging now." You must charge the device for few minutes before the device can be operated.

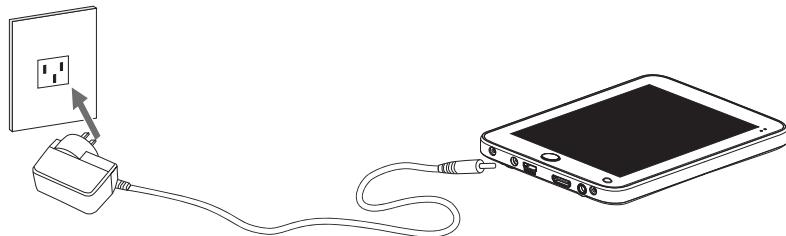

Maximizing Battery Life

1. The device uses internal Lithium-ion polymer battery, and must be charged with the supplied adaptor.
2. It is recommended to fully charge your battery for 8 hours first two times. After that, the device can be fully charged within 4 hours.
3. It is recommended to fully charge the device at least once a month to avoid permanent damage to the battery.

TURN ON/OFF

To turn on the device, hold the power() button for three seconds.

To shutdown the device, hold the power() button for three seconds and select "OFF" then "OK" on screen.

Note:

1. The device will be turned off automatically when it is low on battery.
2. If the device is not properly shutdown, the device will attempt to scan and repair memory storage after restarted. This may cause the device take longer time to boot up.
3. By pressing power()button it will put the device into power saving standby mode. To turn it back on, simply press the power() button again.

OPERATION INTERFACE

USING THE TOUCHSCREEN

The main way to control Android features is by using finger to manipulate icons, buttons, menu items, the on-screen keyboard, other items on the touchscreen, and to zoom in or out photos, webpages, e-mail, and maps. You can also change the screen's orientation.

Touch:

To act on items on the screen, such as application and setting icons, to type letters and symbols using the on-screen keyboard, or to press on-screen buttons, you simply touch them with your finger.



Touch & hold:

Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you touch an empty area on the Home screen until the menu opens.

Drag:

Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You drag items on the Home screen to reposition them.

Swipe or slide:

To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it. (So you don't drag an item instead). For example, you slide the screen up or down to scroll a list, and in some Calendar views you swipe quickly across the screen to change the range of time visible.

Double-tap:

Tap quickly twice on a webpage, map, or other screen to zoom. For example, you double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen.

Touch (+ / -) at the lower right corner can do zooming action also.



Pinch fingers together or apart

(only workable on multi-touch model):

When viewing photos, webpages, e-mail , or maps, you can zoom in and zoom out by pinch your fingers together or apart.

Rotate the screen:

The orientation of the screen rotates with the device as you turn it from upright to its side and back again.

OPERATION INTERFACE

BASICS

1. Extended Home Screens:

There are five extended home screens available to place your shortcuts, widgets and more. To switch between each screen, swipe left or right across screen using finger or click the page Icon.

2. Manage Home/Extended Screen Icon

2.1) To add an Item to the Home Screen:

- 2.1.1) Open the Home screen where you want to add the Item.
- 2.1.2) Press Menu () Or just touch & hold an empty location on the Home screen. If there are no empty spots on the Home screen, Add is dimmed; you must delete or move an Item before you can add another Item, or switch to another Home screen.
- 2.1.3) In the menu that opens, touch the type of Item to add.

2.2) To move around an item on the Home screen

- 2.2.1) Touch & hold the Item you want to move.
- 2.2.2) Drag the item to a new location on the screen. Pause at the edge of the screen to drag the item onto another Home screen panel.
- 2.2.3) When the item is where you want, lift your finger.

2.3) To remove an Item from the Home screen.


- 2.3.1) Touch & hold the Item you want to remove.
- 2.3.2) Drag the Item to the Trash Can icon.
- 2.3.3) When the icon turns red, lift your finger.

2.4) To change the Home screen wallpaper

- 2.4.1) Touch & hold an empty area of the Home screen and in the menu that opens, touch Wallpapers.
- 2.4.2) Touch Live wallpapers, Pictures, or Wallpapers.
- 2.4.3) Locate the wallpaper you like to use then touch Save or Set wallpaper.

2.5) To rename a folder

- 2.5.1) Touch the folder to open it.
- 2.5.2) Touch & hold the folder window's title bar.
- 2.5.3) Enter a new name in the dialog that appears.
- 2.5.4) Touch OK.

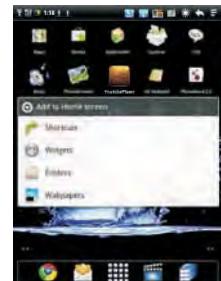

OPERATION INTERFACE

OPENING & SWITCHING APPLICATIONS

1. To open and close the Launcher ()

- On the Home screen, touch the Launcher Icon to open it. (If you have more applications than it can fit on the Launcher in one view, you can slide the Launcher up or down to view more.)
- Touch Home button to close the Launcher.




2. To open an application

- Touch an application's Icon on the Launcher.
- OR
- Touch an application's Icon on the Home screen.

3. To switch to a recently used application

- 3.1) Press & hold the Home button. (A small window opens, with icons of applications that you've used recently.)
- 3.2) Touch an Icon to open its application. (Or press Back to return to the current application)

STATUS BAR OVERVIEW

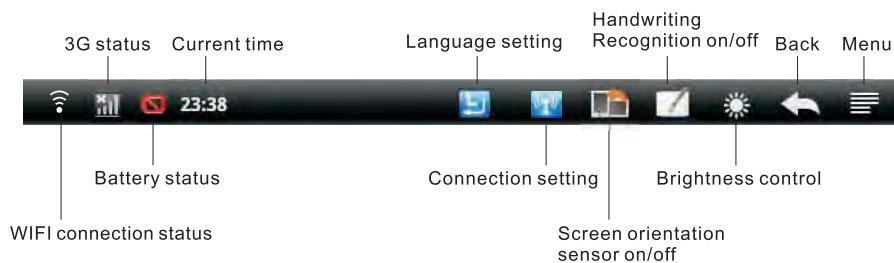

1. Touch the Language setting () icon to re-set the language.
2. Touch the Connection setting () Icon to display wireless & network settings.
3. Touch the Screen orientation sensor () Icon to enable or disable the screen orientation sensor.
4. Touch the Handwriting Recognition () Icon to enable or disable the handwriting recognition function.
5. Repeatedly touch the Brightness control () Icon to select the brightness level.
6. Touch the Back () Icon to return to previous screen.
7. Touch the Menu () Icon to display menu settings.

SETTINGS

OPENING SETTINGS

The Settings application contains most of the tools for customizing and configuring your device.

To open Settings:

- Press Home, press Menu, and touch Settings.
- OR
- Touch the Setting Icon on the Home screen or in the Launcher.



WIRELESS & NETWORKS

Manage Wi-Fi settings () and connecting to wireless network.

1) Wi-Fi

- Check to turn on Wi-Fi () so you can connect to Wi-Fi networks.

2) Wi-Fi settings

- 2.1) To connect to a Wi-Fi network(), click on the Wi-Fi settings and wait for the device to search available network.
- 2.2) When the desired Wi-Fi network appeared, simply touch the Wi-Fi network you like to connect to establish connection.
- 2.3) If the Wi-Fi is a secured network, you will be required to enter the password before you can establish the Wi-Fi connection.



SETTINGS

- Network operators:

Opens a screen that searches for and displays mobile networks that are compatible with the device. Consult your carrier to understand the billing implications of selecting another carrier.

SOUND & DISPLAY

Sound Settings

- 1. Media volume:** Set volume for music and videos.
- 2. Notification ringtone:** Set your default notification ringtone.
- 3. Audible selection:** Play sound when making screen selection.
- 4. SD card notification:** Play sound for SD card notifications.



Display Setting

- 1. Orientation:** Switch orientation automatically when rotating device.
- 2. Animation:** All window animation are shown.
- 3. Brightness:** Adjust the brightness of the screen.
- 4. Screen timeout:** Adjust the delay before the screen automatically turns off.


LOCATION & SECURITY

- 1. Use wireless networks:** Location determined by Wi-Fi and/or mobile networks.
- 3. Visible password:** Show password as you type.




APPLICATIONS

- 1. Unknown sources:** Allow install of non-Market applications.
- 2. Manage applications:** Manage and remove installed applications.
- 3. Running services:** View and control currently running services.
- 4. Development:** Set options for application development.

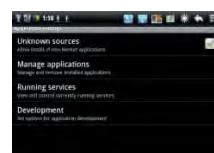

PRIVACY


- 1. Use My Location:** Use my location for Google search results and other Google services.
- 2. Back up My settings:** backup my setting or delete all backup on Google server.

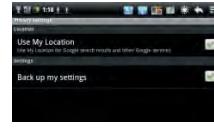

SD CARD & DEVICE STORAGE

Display available storage space on internal device memory and SD card memory.


Note: To remove SD card safely from device when the device is powered on, select Unmount SD card to safely remove the SD card to avoid any damage.

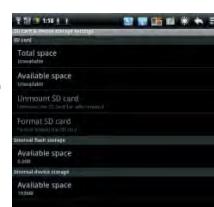

SETTINGS

LANGUAGE & KEYBOARD

1. **Select locale:** Select language and region.
2. **Android full-screen:** Android full-screen settings.
3. **Android keyboard:** Android keyboard settings.
4. **Pinyin IME:** Pinyin IME settings.
5. **User Dictionary:** Add & remove words from user dictionary.

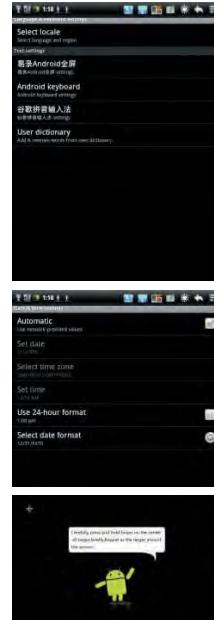

DATE & TIME

1. **Set date:** Setup current date.
2. **Select time zone:** Setup current time zone.
3. **Set Time:** Setup current time.
4. **Use 24-hour format:** Check to use 24-hour time format.
5. **Select date format:** Setup date format.

TOUCH PANEL CALIBRATION

To calibrate the touch screen, use your finger to touch the (+) as it appear on each region of the screen.

USB MODE SELECT

Select USB mode: OTG/HOST/SLAVE

Host Mode: Select USB work as host mode, then you can mount U-disk or 3G Modules.




UPDATE MEDIA LIBRARY

When inserting or removing SD memory card or USB, please choose "update media library" to update data;

When copying file to the memory or delete files stored in the memory, please choose "update media library" to update data.

FACTORY DATA RESET

1. This will erase alldata from your device including:
 1. Your Google account
 2. System and application data and settings
 3. Downloaded applications
2. It will not erase:
 1. Current system software and bundled applications
 2. SD card files, such as music or photos

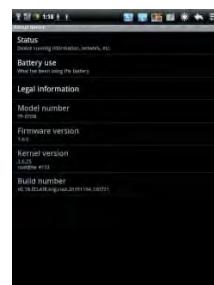

ABOUT DEVICE

About device includes information about your device.

SOFTWARE INSTALLATION & MANAGEMENT

APK INSTALLER

The device uses third party application to access most of the applications via network.

Click (), APK installer options will pop up on the screen.

1. **Install:** click Install to enter APK installer interface, and select the application in APK format that you wish to install. After installation is done, the device will return to Home screen.
2. **Manag:** Click “Manag” to begin managing application.
Launch : Run the selected application.
Export to SD: Export the selected application to SD card.
Uninstall: Uninstall the selected application.
Search at market: Search the selected application at the Market.
Cancel: Cancel to return to previous screen.



How to install input method:

1. Connecting to the network
2. Enter Market
3. Flick Search button to search all needed input methods
4. Select the desired input method
5. Flick [Install/Confirm] to download and install the input method.
6. After installment is done, please enter SETTING from home screen, and then open LANGUAGE AND KEYBOARD to select the installed input method.

Note: The installed input methods can display in the list only being selected.

ES FILE EXPLORER

Select () to enter Explorer, you can browse through files stored in the device.

Touch following icons to perform different operations.

-  **Home:** Access the explorer to display the path of SD Card, Internal Memory and USB.
-  **Level Up:** Return to previous folder that's one level higher or exit the application.
-  **Multi:** Select more files or folders.
-  **Editor:**
 1. **Copy:** Copy file or folder.
 2. **Delete:** Delete file or folder.
 3. **Cut:** Cut selected file or folder to other location.
 4. **Paste:** Paste the cut file or folder to specific location.
 5. **Rename:** Rename file or folder.
-  **Back:** Return to previous screen.
-  **Next:** Access the next screen.



ANDROID MARKET

Android Market provides direct access to applications and games to download and install on the device.

SPECIFICATION

Item	Model	7 "	10 "
Base Features	Processor Speed	600-800MHz	
	System Memory	DDR2 256MB	
	Flash Drive Capacity	See package	
	Expansion Slot	Micro SD Card	
Display	Screen Type	TFT LCD	
	Screen Size	7-Inch (diagonal)	10-Inch (diagonal)
	Aspect Ratio	4:3	
	Native Screen Resolution	800 x 600 pixels	1024 x 768 pixels
	Auto Orientation	Yes	
Audio	Integrated Microphone	Yes	
	Speakers	Yes	
	Headphone Jack	Yes	
Power	Battery Life	≈30H(stand by)	≈52H(stand by)
	Battery	7.4 V, 1500mAH	7.4 V, 2600mAH
	Adaptor	12V, 1.25A	
Inputs & Outputs	Rear side 2 Mega pixel CMOS camera(optional)	See package	
	Keyboard	Virtual (Touchscreen)	
	Handwriting Recognition	English / Chinese	
	Pointing Device	Single-touch or Multi-touch (depending on what kind of model you have purchased)	
	USB 2.0		
	Mini HDMI	Yes	
	Integrated Wi-Fi	Yes	
Connection	Bluetooth	2.1+EDR (optional With USB)	
	3G	(optional With USB)	
	Video	See package	
Built In Decoders	Audio	MKV(H.264 HP), AVI, RM/RMVB, FLV, MPEG-1, MPEG-2	
	Images	MP3, WMA, APE, FLAC, AAC, OGG, AC3, WAV	
	Operating System	JPEG, BMP, GIF, PNG	
	Pre-loaded Application	Android 2.1	
Software		Please refer to the actual product	

07DB-08-V3.0

SPECIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.