 
 


## Basic Knowledge

 
### Assembly

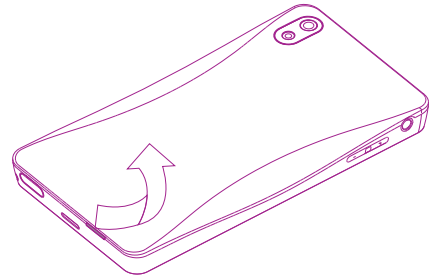

Insert the tip of your finger firmly into the opening on the bottom side of the phone, between the phone and the rear cover. Then lift up the cover slowly but firmly.

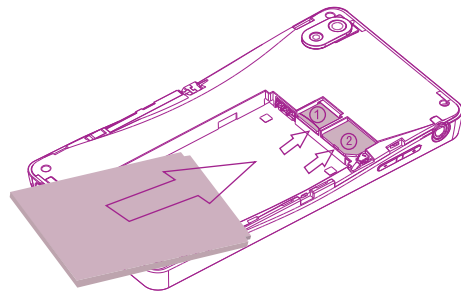


Remove the rear cover, then insert the SIM card and the memory card separately in slots 1 and 2 and place the battery according to the electrode orientation.

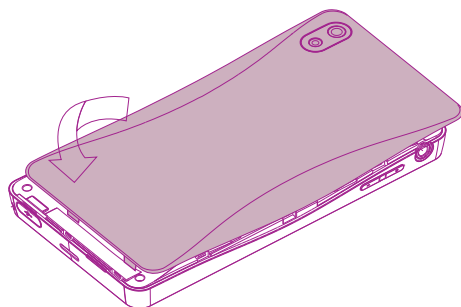


Insert the rear cover after the battery was placed.

### Smart Phone Overview

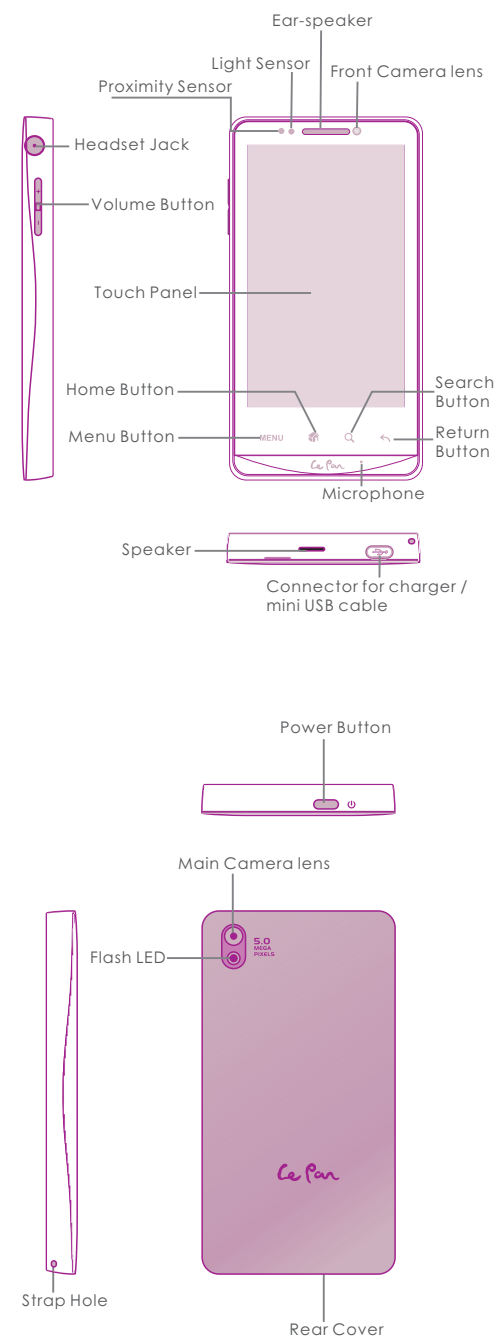 

### Turning On the Phone

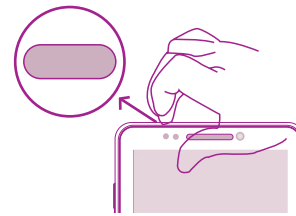 

#### To turn on the phone

- Press and hold the power button on the top of the phone until the phone vibrates.

It may take a while for the phone to start up.

#### To unlock the screen

- If the screen goes dark, press the power button briefly to activate it.
- To unlock the screen, drag the lock icon to the right across the screen.

#### To Turn off the phone

- Press and hold the power button until the options menu opens.
- In the options menu, tap Power off.
- Then tap OK.

It may take a while for the phone to shut down.

### Using These Buttons

**MENU** : Open a list of options available in the current screen or application.

**Home** : Go to the Home screen; Press and hold it to open a window showing your recently used applications.

**Q** : Open Google search.

**Back** : Go back to the previous screen.

 
### Using the Touch Screen

#### Zooming

- To zoom the screen, you can tap the buttons - / + when they are available.


You may have to drag the screen ( in any direction ) to make the zoom icons appear.

- To zoom the screen, you can also place two fingers on the screen at once and pinch them together ( to zoom out ) or spread them apart ( to zoom in ).

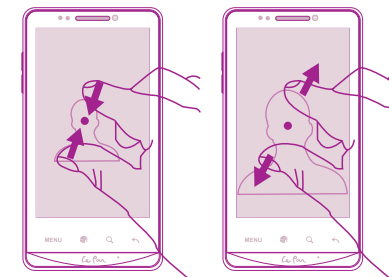

#### Scrolling

 To scroll, move your finger up or down on the screen. You may also need to scroll to the sides on some web pages.

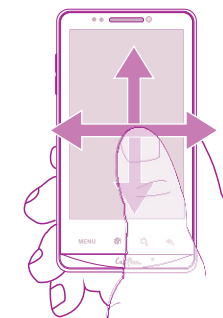


To scroll more quickly, flick your finger in the direction you want to go on the screen. You can wait for the scrolling movement to stop by itself, or you can stop it immediately by tapping the screen.

70mm

封面

## Getting Started
 
### Home screen

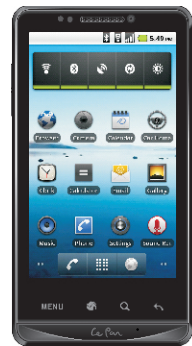



#### To go to the Home screen

- Press .

#### To browse the Home screens

 
- Flick right or left.

#### To delete an item from your Home screen

- 1 Press  to open your Home screen.
- 2 Touch and hold an item until it magnifies and the phone vibrates then drag it to .

#### Status and notifications

The status bar at the top of your screen shows what's going on in your phone.

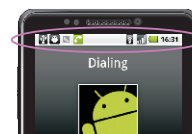

#### To open the Notification panel

 
- Drag the status bar downwards.



#### To close the Notification panel

- Drag the tab at the bottom of the Notification panel upward or press .

## Calling

- 1 From the Home screen, tap .




- 2 Dial the number on the phone pad.
- 3 Tap  to call. To delete a number, tap .

#### To end a call

- Tap .


## Messaging

 
- 1 From the Home screen, tap , then find and tap **Messaging**.



- 2 Tap **New message** at the top of the screen.



- 3 Tap the recipient's number in the above box or select recipient by tapping the icon .

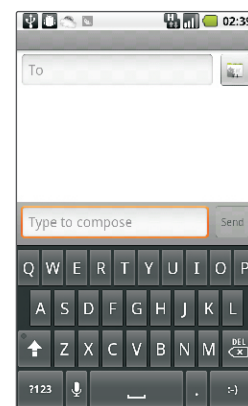

- 4 Tap in the bottom box to compose the message.


- 5 To send the message, tap **Send**.


**Note:** If you exit a message before sending, it gets saved as a draft. The conversation gets tagged with the word **Draft**.

## Connecting to Network
 
### To connect to Wi-Fi Network

- 1 Tap **Launcher icon**  → **Settings** → **Wireless & Networks** → tap **Wi-Fi** to open. The device scans for available wireless networks.
- 2 Tap **Wi-Fi settings**. The names and security settings of discovered Wi-Fi networks will be displayed in the Wi-Fi networks list.
- 3 Slide and touch the name of the network that you would like to connect to.
- 4 Enter a password if required, then tap **Connect** to connect to the Wi-Fi network.


**Note:** When your device is connected to a wireless network, the Wi-Fi icon  appears in the status bar to indicate the signal strength.

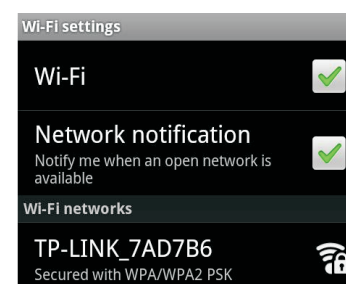

### To connect to Mobile network

- 1 Tap **Launcher icon**  → **Settings** → **Wireless & Networks** → tap **Mobile network**.
- 2 Select **Data enabled**, you can use Mobile network now.

 **Note:** To use mobile network, you should insert a SIM card first.

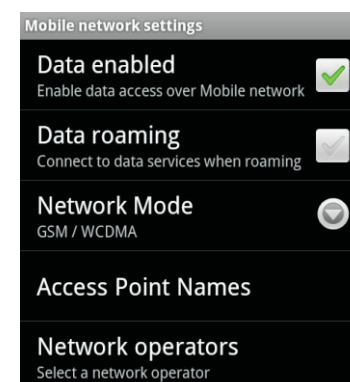

Le Pan

Le Pan Smart Phone

MP436

Quick Start Guide

All rights reserved.

For detailed instruction about how to operate the phone, please refer to the Extended User's Guide which save on the Micro SD card, you can find it in **File Manager**.  
Hotline: 1-855-537-2672  
More support at: [www.lepantab.com](http://www.lepantab.com)

110mm

封底

80G双铜，四色双面印刷 折叠后尺寸：70X110mm

## **FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types MP436 (FCC ID: ZDRMP436) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.466W/kg and when properly worn on the body is 1.18W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.