

Tablet PC TC970 Quick Start Guide



1. Earphone Jack

2. 30 pin connector

3. Microphone

4. Micro SD card Slot

5. Volume Up/Down Button

6. Screen rotation lock

7. Power On/Off Button

8. Reset

9. Camera

10. Ambient light sensor

11. Return

12. Browser

13. Home

14. Menu

15. Speaker

16. Hand-Ring Lock

Turn On Your Device


Press and hold the power button for 3 seconds, the machine starts with a shake.

Turn Off Your Device

Press and hold the power button for 1 second, touch "power off" to turn off.

Connect To a Network

Turn on Wi-Fi and connect to a network.

- 1.Touch Launcher button  → Settings → Wireless & Networks → Wi-Fi to select the Wi-Fi check box. The device scans for available wireless networks.
- 2.Touch Wi-Fi settings. The names and security settings of discovered Wi-Fi networks will be displayed in the Wi-Fi networks list.
- 3.Flick Wi-Fi networks list and touch the name of the network that you would like to connect to.
- 4.Enter a password, then touch Connect to connect to the Wi-Fi network.


Note: When your device is connected to a wireless network, the Wi-Fi icon appears in the status bar to indicate the signal strength.

Connect To a Computer

Copying music, photo, and video files to the Micro SD card in your device.

- 1.Connect 30pin cable to your device and your computer.
- 2.Drag "Notification Bar" from the front page. Select "USB connected" to turn on USB storage. This will allow you to view the contents of the Micro SD card from your computer.
- 3.Select the music, photo, and video files from your computer, then copy them to the folders on the removable disk.
- 4.Once the copy is complete, disconnect the 30pin cable.

Restore to Factory Defaults

Touch Launcher button  → Settings → Privacy → Factory data reset to restore to factory defaults.

(Restore the device deletes all data, make sure to back up important data before you perform.)

Please see more instructions on www.lepantab.com

For warranty service number : 1-855-5372672 (1-855-LePanPC).

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types TC970 (FCC ID: ZDRTC970) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at when properly worn on the body is 0.365W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.