

GA20 User Menu

GA20 User Menu	1
Safety Alerts and Cautions:.....	1
1. Controls	1
2. Function Keys.....	2
Home Key	2
Menu Key.....	2
Backspace Key	2
On/Off Key (Power Key)	2
3. Get around	3
4. Touch & Type	4
5. Change the wallpaper	4
6. Change other Sound setting	5
7. Arrange & Work with Apps.....	5
8. Add widgets	6

Safety Alerts and Cautions:

To keep the Tablet works normally and protects your Tablet please.

1. Don't use your Tablet in high temperature, low temperature and moisture or dusty environment.
2. Don't touch the screen with extremely pressure and hard or rough objects.
3. Be careful and void damage the components, when carry or moving.
4. Avoid dropping of the product when using.
5. Please access the internet in the network covering area to avoid a poor networking.
6. Don't interrupt Tablet, when a formatting operated, or the hard-disk will be malfunction.
7. Keep away from static when using and storing the product.
8. Do not use the product for a long time to avoid eyestrain.
9. Try to avoid using the product under direct sunshine to prevent the display effect from being influenced and the eyes from injury.
10. Use a soft fabric to wipe gently the shell surface and LCD screen, when a cleaning needed, do not use solution or chemicals to wipe your Tablet.
11. Don't load or unload the battery freely.

1. Controls



1. Power Key
2. Reset
3. Mini USB Jack
4. HDMI Jack
5. Micro SD card Slot
6. Home Key
7. Backspace Key
8. Menu Key
9. DC-in Jack
10. Earphone Jack

2. Function Keys

Home Key

1. In the option program, menu or webpage, press home key to return to the main interface.
2. Press & hold the home key and it will show your recently opened applications.

Menu Key

1. Press the Menu key to open the sub-menu for this page.
2. Press the menu key again to close the sub-menu.
3. Press & hold the menu key in an application to open/close the virtual keyboard.

Backspace Key

Press the BACKSPACE key to return to the previous operation or previous screen.

On/Off Key (Power Key)

Turn ON Tablet

Press and hold Power ON/OFF key to turn on the tablet.

Turn OFF Tablet

1. Press ON/OFF key to lock the screen and enter sleep mode.
2. Press and hold ON/OFF key: The mode selection window pops up. You can then choose standby mode, or power off.

3. Get around



At the left bottom of the screen, you'll find three Navigation buttons. They're always available. No matter what you're doing with your phone, you can always get back to the main Home screen or return to previous screens:

- ↶ Back: Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you cannot go back any further in your history.
- ⌂ Home: Opens Home. If you're viewing a left or right Home screen, opens the central Home screen.
- 최근 앱 Recent apps: To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.

After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.

At the left top of the screen, you will see a icon "Google", you can tap it for searching on Google quickly.

Status icons: On the right bottom of the screen, you will see Status icons, it

will tell you which apps have sent you notifications; for example, that a message has arrived, or your tablet have connected with PC.

To see your notifications, swipe your finger up from the right bottom of the screen.

System icons: on the right corner of the screen display the current wireless and network connection strength, battery level, time, and more.

4. Touch & Type

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touchscreen. You can also change the screen's orientation.
To select or activate something, touch it.
To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field. Other common gestures include:

Touch & hold: Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs.

Drag: Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen.

Swipe or slide: Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.

Double-tap: Tap quickly twice on a webpage, map, or other screen to zoom. For example, double tap a webpage in Browser to zoom in, and double-tap again to zoom out.

Pinch: In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen: On most screens, the orientation of the screen rotates with your device as you turn it. You can change this Display setting.

5. Change the wallpaper

Wallpapers are images from Gallery (pictures you shot with Camera, synced from Picasa, and so on), still images included with the system, and live images (such as an animation or a map that centers on your location). They take the place of the default background for your Home screens.

1 Touch & hold anywhere on a Home screen that's not occupied. A list of options appears.

2 Touch a wallpaper source:

Gallery. Choose from pictures that you've taken with Camera or downloaded to your device.

Live Wallpapers. Choose from a scrolling list of animated wallpapers.

Wallpapers. Choose from thumbnails of default images, or touch a thumbnail for a larger version.

You can download additional wallpapers from Android Market.

3 To set a wallpaper, touch Set wallpaper at the top of the screen (for Gallery images).

6. Change other Sound setting

To change other sounds and vibrations, go to Settings > Device > Sound and touch the one you want:

Volume sets the master volume separately for music, ringtones & notifications, and alarms. You can still use the physical volume control on the phone to raise or lower volume of whatever sound is currently playing.

Vibrate controls vibration feedback across the entire phone.

Silent mode turns off all sounds.

Default notification announces the arrival of notifications unless you specify a different sound in an individual app.

System settings control feedback sounds and vibrations for standard actions performed with your Tablet.

7. Arrange & Work with Apps

To see all your apps, touch the All Apps icon on any Home screen.

The main All Apps screen opens. This is where you can see all your apps, including those downloaded from Android Market. You can move app icons to any of your Home screens.

From All Apps, you can

Move between screens: Swipe left or right.

Launch an app: Touch its icon.

Place an app icon on a Home screen: Touch & hold the app icon, slide your finger, and lift your finger to drop the icon in place.

Place an app icon in the Favorites tray: Touch, hold, & slide to move one of the Favorites icons out of the tray. Then use the same technique to move another one into the same position.

Explore your widgets: Touch the Widgets tab at the top of any All Apps screen.

Get more apps. Touch the Market icon.

To remove an app icon from the Home screen, touch and hold it, slide your finger toward the top of the screen, and drop the app over the Remove icon .

8. Add widgets

Widgets are like windows into your apps. They're available from an All Apps tab for you to move onto your

Home screens.

To see your widgets:

1 Touch the All Apps icon on your Home screen.

2 Touch **Widgets** at the top of the screen.

From the main Widgets screen, you can

Move between screens: Swipe left or right.

Drag a widget to a Home screen: Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.

You may be asked to make further choices before the widget activates. If there isn't room where you dropped it, the widget won't get added to the Home screen.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without RF striction.

Industry Canada Requirement:

This Class B apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM and [®] marks are not used to identify registered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Leader International Inc.. Any unauthorized distribution of this manual is expressly forbidden.

Leader International Inc may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at:

www.leaderinternationalinc.com

Or write to us at:

Leader International Inc
225 S. Lake Avenue, Suite 300
Pasadena, CA 91101
USA
Copyright © 2011