

INQ T2-218U

User Guide

Contents

1	Your phone	1
	Phone overview	1
2	Installation and Charging	2
	Install the SIM card	2
	Install the microSD card	2
	Install the battery	3
	Charge the battery	3
3	Getting Started	5
	Turn phone on/off	5
	Set up screen lock	5
	Home screen	5
	Monitor your phone's status	6
	Open and switch applications	9
	PIN and PUK	10
4	Calls	11
	Make a call	11
	In-call options	12
	Answer & reject a call	12
	Manage multiple calls	13
	Work with the call log	14
	Dial by voice	15
5	Text Entry	16
	Use the onscreen keyboard	16
	Edit text	17

Enter text by speaking.....	18
6 Messaging	19
Create and send a text message	19
Create and send a multimedia message.....	19
Change messaging settings	20
7 Email	21
Open email and the accounts screen	21
Read and respond to a message.....	21
Compose and send email	22
Add and edit email accounts	22
8 Browser.....	23
Open browser.....	23
Connect	24
Download files.....	24
Change browser settings	25
9 Contacts	26
Open your contacts	26
Create a contact	27
Search for a contact	27
Import, export and share contacts.....	27
Call, text or email contacts	28
Synchronize contacts.....	28
10 Settings	29
Wireless & networks	29
Call settings	29
Sound settings	30

Display settings	30
Location & security settings	30
Application settings	30
Account & sync settings	31
Privacy settings	31
SD card & phone storage settings.....	31
Language & keyboard settings	31
Voice input & output settings	31
Accessibility settings	31
Date & time settings.....	32
About phone	32
11 Music	33
Open and play music.....	33
Use a song as a ringtone	35
12 Camera & camcorder.....	36
Start camera & camcorder.....	36
Camera	36
Camcorder.....	37
13 Gallery	39
Open Gallery and view your albums	39
Work with albums	40
Work with pictures	40
Work with videos	41
14 Tools	42
Calculator	42
Calendar	42


Clock	43
15 Applications	45
FM Radio	45
Google search	45
Latitude	46
Maps.....	47
Navigation	48
News and Weather	48
Places	48
SIM Toolkit	48

Warning

1 Your phone

Phone overview

The following figure shows the appearance of your phone and it is for your reference only.

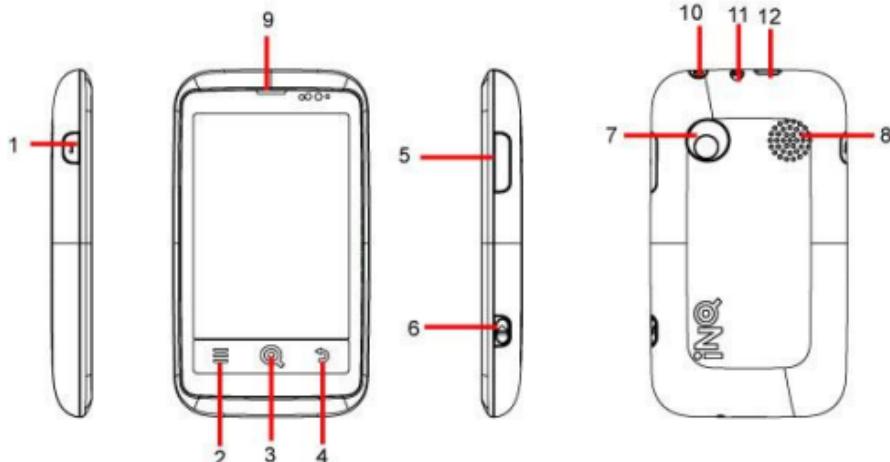

1.	i key	7.	Camera
2.	Menu key	8.	Speaker
3.	Home key	9.	Earpiece
4.	Back key	10.	Power key
5.	Volume key	11.	Headset connector
6.	Camera key	12.	Micro USB connector

Tip: i key-press it first then press power key to come into recovery mode.

2 Installation and Charging

Install the SIM card


1. First unlock the cover shown as the graphic.
2. Install the SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.
3. Finally, lock the cover.



Install the microSD card

1. Push up to unlock the back cover of the slot and then open it.
2. Place the microSD card in the slot.
3. Close the back cover of the slot and then push down to lock it.

Shown as the graphics :

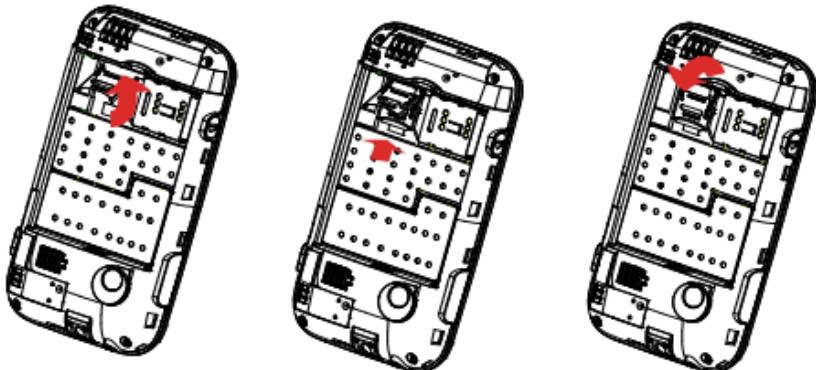


Note : If no microSD card is included in the packing box, a microSD card might be provided as a giveaway or you need to purchase a microSD card separately.

Install the battery


1. Remove the back cover.
2. Insert the battery.

Do as follows:

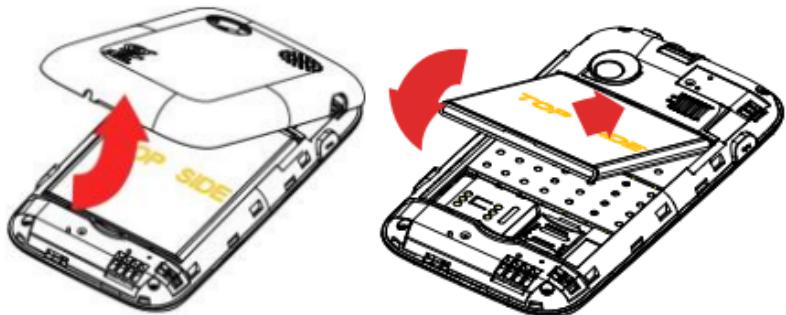

Charge the battery

1. Connect the charger to the charger jack on the phone.

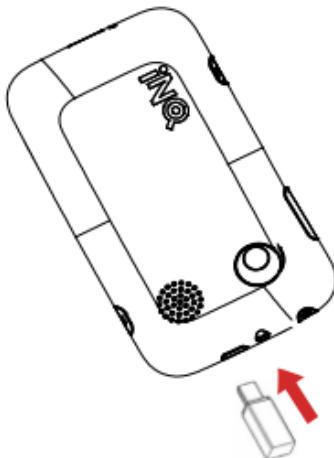

2. Connect the charger to a power socket. The charging starts, with the charging icon  displayed in an animated state.

Note : If the battery power is exhausted when you charge the battery, the charging icon might appear on the screen a few minutes later when charger is connected to the power socket.

3. When the charging icon becomes static, indicating that the battery is full, disconnect the charger from the power socket.
4. Disconnect the charger from the phone.

3 Getting Started

Turn phone on/off


To turn on your phone, press and hold the **Power key** (on top of the phone). To turn off your phone, press and hold the **Power key**, then touch **Power off** on the screen.

Set up screen lock

Select  > **Settings** > **Location & security** > **Set up screen lock**. You can choose **Pattern**, **PIN**, or **Password** to set up screen lock.

Home screen

If you don't use the phone for a while, press the **power key** to wake up the phone, then drag the lock icon to the right.

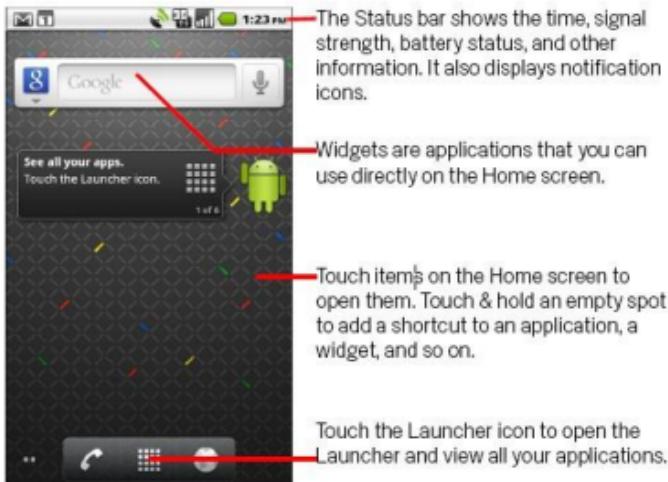


To view other parts of the Home screen

Slide your finger left or right across the Home screen, or touch & hold the small dots on the lower left or right of the screen to view thumbnails of the Home screen and its extensions, which you can touch to open.

To add to Home screen

You can add widget, shortcut and so on to the home screen. Press **Menu key** and touch **Add**, or you can touch and hold the home screen until the options appear, and then select the one you use frequently.

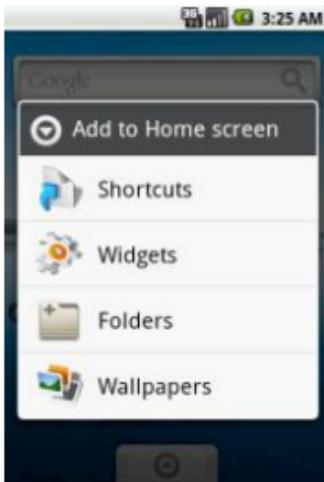

To move or delete from Home screen

touch and hold the application until you feel a vibration, then drag it to another place, another panel, or to the trash can  on bottom of the screen.

Monitor your phone's status

At the top of the screen, icons on the left notify you about new messages or events (flick the bar down

for details). Icons on the right tell you about phone status.



Tip: To see today's date, touch and hold the status Indicators. To open the notification panel, drag the Status bar down from the top of the screen.

Status icons

	Connected to GPRS mobile network		Roaming
	GPRS in use		No signal
	Connected to EDGE mobile network		No SIM card installed
	EDGE in use		Vibrate mode
	Connected to 3G mobile network		Ringer is silenced
	3G in use		Phone microphone is mute
	Mobile network signal strength		Battery is very low
	Connected to a Wi-Fi network		Battery is low
	Bluetooth is on		Battery is partially drained

	Connected to a Bluetooth device		Battery is full
	Airplane mode		Battery is charging
	Alarm is set		GPS is on
	Speakerphone is on		Receiving location data from GPS

Notification icons

	New Gmail message		3 more notifications not displayed
	New text or multimedia message; New voicemail		Call in progress
	Problem with text or multimedia message delivery		Call in progress using a Bluetooth headset
	New Google Talk message		Missed call
	Upcoming event		Call on hold
	Data is syncing		Call forwarding is on
	Problem with sign-in or sync		Song is playing
	SD card is full		Downloading data

	An open Wi-Fi network is available		Download finished
	Phone is connected via USB cable		Connected to VPN
	Phone is sharing its data connection via USB (USB tethering)		Disconnected from VPN
	Phone is sharing its data connection as a Wi-Fi hotspot (Wi-Fi tethering)		Application update available
	Phone is tethered in multiple ways		System update available

Open and switch applications

To open and close the launcher

The Launcher  , which you open from the Home screen, holds icons for all of the applications on your phone, including any applications that you downloaded and installed from Android Market or other sources.

- On Home screen, touch  to open the launcher.

You can slide the Launcher up or down to bring more icons into view. You can add an application icon to the Home screen by touching & holding it on the Launcher until it vibrates and then dragging it to a location on the Home screen.

- Touch the Home icon  on the Launcher or the Home key to close the Launcher.

To open an application

Touch an application's icon on the Launcher, or Touch an application's icon on the Home screen.

To switch to a recently used application

Press & hold the Home key, a small window opens, with icons of applications that you've used recently.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) is used to unlock the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.


If you enter wrong PINs thrice consecutively, the phone prompts you to enter the PUK.

If you enter wrong PUKs ten times consecutively, the SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.


Make a call

1. Touch the Phone icon  on the Home screen or tap the **launcher**  > **Phone**  to access the dial pad.
2. Enter the phone number.

If you enter a wrong number, touch  to erase digits one by one. To erase the entire number, touch & hold .
3. To make an international call, tap the **0 key** till **+** appear on the screen. Then enter the country or region code, area code, and phone number in sequence.
4. Tap  to dial the number.

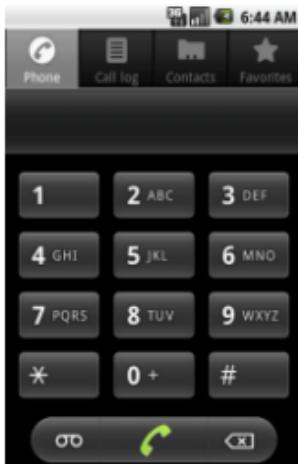

In-call options

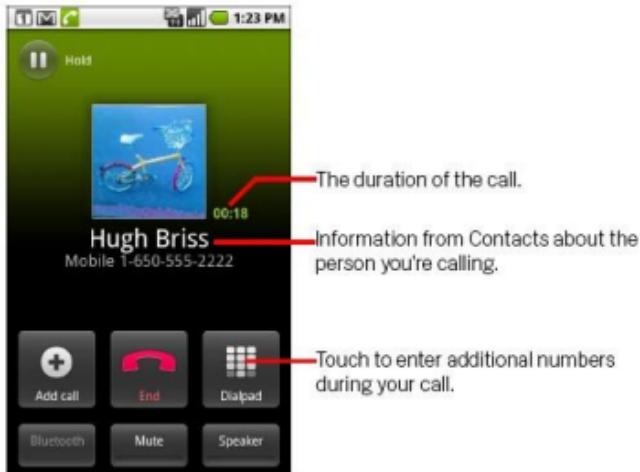

During a call:

To mute a call, touch **Mute**.

To use the speakerphone, touch **Speaker**.

To end a call, touch .

Tip: You can touch **Home** or **Back** to leave the active call display. To reopen it, touch **Home** > **Phone** > **Return to call in progress**.

Answer & reject a call

When there is an incoming call, you can drag the green phone icon to the right to answer the call or drag the red phone icon to the left to reject the call.

Tip: To silence the ringer before answering the call, press the **Volume key**.



Answer the call



Reject the call

Manage multiple calls

To switch between current calls

If you accept a new call when you're already on a call:

To answer the other call, touch the **Swap icon**

To merge the calls into a conference call, touch **Merge calls**.


To set up a conference call

1. Place a call to the first participant.
2. When you're connected, touch **Add call**.
3. Place the next call, using the Phone tab, the Call log, or your contacts.
4. When you're connected, touch **Merge calls**.

Note: Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

Work with the call log

The Call log is a list of all the calls you've placed, received, or missed. Touch  >  > **Call log** to open the call log.

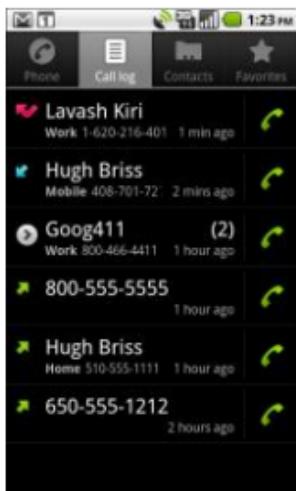

To clear the call log, press **Menu key** and touch **Clear call log**.

Touch the green phone icon  at the right of the entry to dial.

Touch a number (such as an outgoing call number) to open a screen, you can **call again**, **send text message** and **add to contacts**.

You can also touch and hold an entry for more options.

Dial by voice

You can use the Voice Dialer application  to place a phone call by speaking the name of a contact or a phone number.

To open the voice dialer

Touch the Voice Dialer icon  in the Launcher or on the Home screen. The Voice Dialer opens, listening for your spoken instructions, and displaying some hints for how to use it.



To call

Say "**Call**" followed by the name of the contact, or say "**Dial**" followed by a number.

Note: You can also control your phone by voice in other ways, such as the application in the launcher - **Voice search** and voice search  in **Google search**.

5 Text Entry

Use the onscreen keyboard



To enter text

Tap the text entry area, then type numbers, letters and symbols on screen keyboard to input.

Use the Delete key  to erase characters to the left of the cursor. To erase the entire text, touch & hold .

 Touch  once to capitalize the next letter you type. Touch & hold for all caps.


To enter numbers, symbols, and other characters

- Press the Symbols key  to switch to the numbers and symbols keyboard. Press the Alt key on the symbols keyboard to view additional symbols.

- Touch & hold a vowel or the C, N, or S key to open a small window where you can touch an accented vowel or other alternate letter.
- Touch & hold the Period key (.) to open a small window with a set of common symbols.
- Touch & hold a number or symbol key to open a window of additional symbols.
- Slide your finger smoothly up from the main keyboard to open an extension keyboard, with numbers and symbols.

To change the keyboard orientation

Turn the phone sideways or upright.

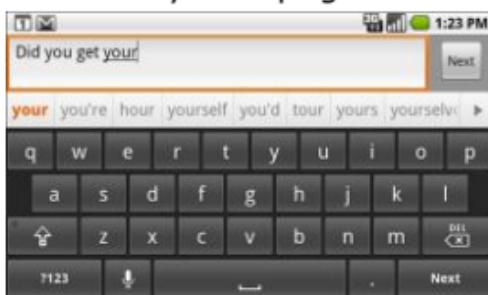

Edit text

To select text

You select text that you want to cut or copy. Selected text is highlighted in orange.

1. Touch to move the cursor to the beginning or end of the text to select.
2. Touch & hold the text field till a menu opens with options.
3. Touch **Select text**.

4. Touch to move the cursor to the end or beginning of the text to select. Selected text is highlighted in orange.

To cut or copy text

1. Select the text to cut or copy.
2. Touch & hold the selected text.
3. Touch **Cut** or **Copy** in the menu that opens

To paste text

1. Copy the text to paste.
2. Move the cursor in text field to the location where you want to paste the text.
3. Touch & hold the text field.
4. Touch **Paste** in the menu that opens.

Enter text by speaking

To turn on voice input

Press **Home**, press **Menu**, then touch **Settings** > **Language & Keyboard** > **Android keyboard** > **Voice input**.

Touch **on main keyboard** or **on symbols keyboard** to display the microphone key .

To enter text by speaking

1. Touch a text field.
2. Touch  on main keyboard or symbols keyboard.
3. When prompted to “**Speak now**”, speak what you want to enter.

Note: Text that you enter by speaking is underlined. You can delete it, or you can continue entering text to keep it.

6 Messaging

Create and send a text message

1. In standby mode, select  > **Messaging**  > **New message**.
2. Enter the contents.
3. Enter the phone number of the receiver.
4. Tap **Send**.

Create and send a multimedia message

1. In standby mode, select  > **Messaging**  > **New message**.
2. Tap **Menu key**, choose **Add subject**, it is changed to multimedia message.




3. Tap **Menu key**, choose **Attach**, you could enclose pictures, videos, audios, recorder audios and slideshow.
4. Input the phone number of the receiver.
5. Tap **Send**.

Change messaging settings

To change messaging settings, open the Messaging window, press **Menu key**, and touch **Settings**.

You can choose to change **Storage settings**, **Text message (SMS) settings**, **Multimedia message (MMS) settings** and **Notification settings**.

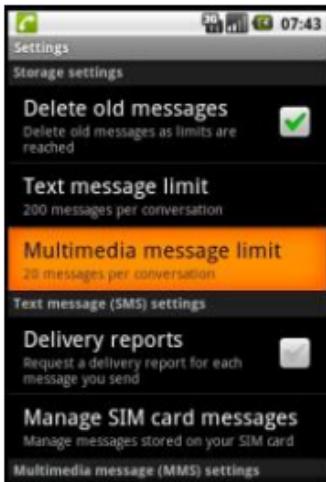

Open email and the accounts screen


1. Touch the **Email icon**  on the Home screen or in the Launcher to open email.

Note: The first time you open Email, a setup wizard opens to help you add an email account.

2. From a folder screen, press **Menu key** and touch **Accounts** to open the accounts screen.

Read and respond to a message

1. Open the Combined Inbox, an account's Inbox, or another folder of messages.
2. Touch the message to read.
3. While reading a message, touch **Reply** or **Reply all**, or press **Menu key** and touch **Reply**, **Reply all** or **Forward** to respond to a message.

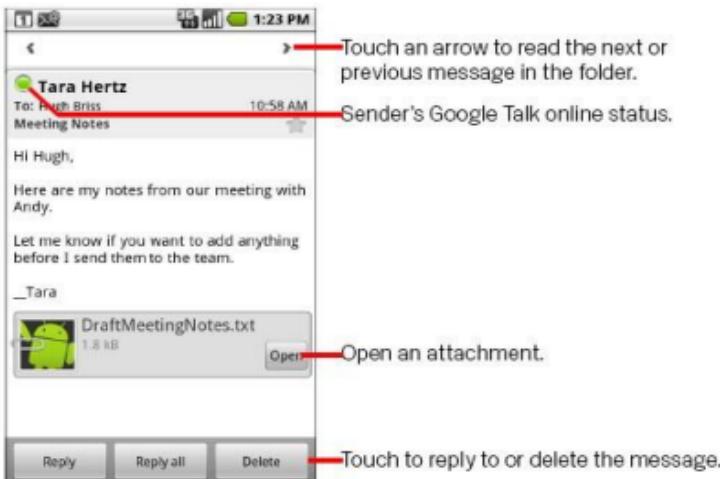

Compose and send email

1. In the folder or message list, press **Menu key** and touch **Compose**.
2. Address the message.
3. Press **Menu key** and touch **Add CC/BCC** to address a copy or blind copy of the message.
4. Enter a subject for the message.
5. Enter the text of the message.
6. Press **Menu key** and touch **Add attachment** to send an attachment with the message.
7. Touch **Send**.

Tip: Touch **Discard** to abandon a message, including any saved drafts.

Add and edit email accounts

To add an email account

1. Open the Accounts screen.
2. Press **Menu key** and touch **Add account**.
3. In the Setup Email screen, enter your email address and password.
4. Enter a name for the account and touch **Done**.

To edit an email account

Touch & hold the account whose settings you want to change. In the menu that opens, touch **Account settings**.

You can also open the settings for an account while you're viewing its inbox, by pressing **Menu key** and touching **Account settings**.

Open browser

1. Touch the **Browser icon**  on the Home screen or the **Browser application icon**  in the Launcher or on Home screen.
2. Touch the URL box at the top of the Browser screen.
3. Enter the address (URL) of the webpage to go to a webpage.

Touch Menu to see browser options:

Options.	Actions
New window	Opens a new window.
Exit	Exits the current page and returns to idle.
Bookmarks	Shows a list of your bookmarks. Touch Add on screen to add the current page to your list.
Windows	Your open windows are displayed.
Refresh	Reloads the current page.
More	Shows browser options, like Forward , Add bookmark , Find on page , Select text , Page info , Share page , Downloads , and Settings .

Connect

Your phone uses the mobile phone network (over the air) to automatically connect to the Web.

Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, touch **Menu key > Settings > Wireless & networks**. Touch **Wi-Fi** to turn it on, then touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect.

Download files

To allow downloading apps from web or email

By default, your phone is configured to prevent you from installing applications that you download from the web or receive with an email message.

1. On the Home screen, press **Menu key** and touch **Settings > Applications**.
2. Check **Unknown sources**.
3. Touch **OK** in the dialog, to confirm you want to allow installation of non-Market applications.

To manage your downloads

To view files or applications you have downloaded, press **Browser > Menu key > More > Downloads**.

To cancel a download, in the **Downloads** list, touch & hold an item in the list and in the menu that opens, touch **Cancel download**.

To clear your download history, touch **Browser > Menu key > More > Downloads > Clear list**.


Change browser settings

To open the Browser settings screen, press **Menu key** and touch **More > Settings**.


You can choose to change **Page content settings**, **Privacy settings**, **Security settings** and **Advanced settings**.

Open your contacts

1. Touch the **Contacts icon**  on the Home screen or in the Launcher.

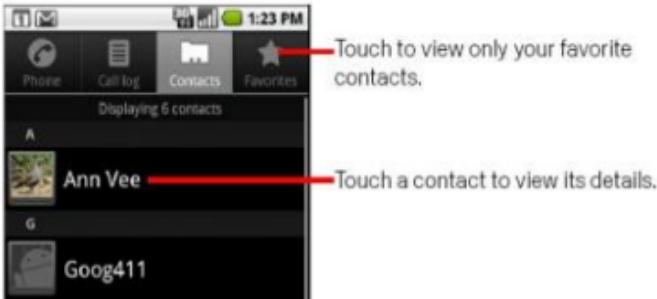

2. Touch the contact whose details you want to view.

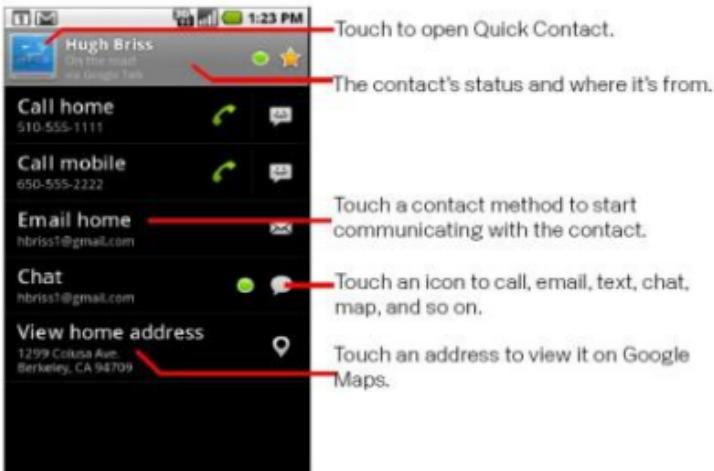

Create a contact

1. In the standby mode, select  > **Contacts** > **Menu key** > **New contact**.
2. Enter the related information.



3. Tap **Done**.

4. The information will be saved automatically.

Search for a contact

In the standby mode, select  > **Contacts** > **Menu key** > **Search**.

On the Search contacts screen, enter the contact name or the first letter of the name.

Import, export and share contacts


Select  > **Contacts** > **Menu key** > **Import/Export**, you can choose **Import from SIM card**, **Import from**

SD card, Export to SD card or Share visible contacts.

Note: You can share a contact with someone by emailing it to them in vCard (.vcf) format.

Call, text or email contacts

For **Call, Send message, Email, View contact, Delete contact** or other options, touch and hold the contact.

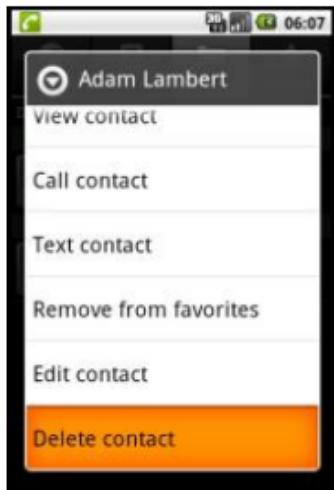

Synchronize contacts

When you change one of your **Contacts**, your phone automatically updates your other social networking accounts. Also, your phone updates your **Contacts** and social networking account whenever you change a friend in your social networking accounts.

10 Settings

In the standby mode, select  > **Settings**  , or press **Menu key** > **Settings**.

Wireless & networks

Through Wireless & Network settings you can configure and manage connections to networks and devices by using **Wi-Fi**, **Bluetooth**, and **Mobile networks**. You can also use Wireless & Network settings to configure connections between your phone and **Virtual private networks (VPNs)**, to connect your computer to the Internet using your phone, and to turn off all radios with **Airplane mode**.



Call settings

Use Call settings to configure phone call settings, such as **Call forwarding**, **Call waiting**, **Voice call auto answer** and other special features offered by your carrier. You can also use Call settings to configure the phone so that it can place outgoing calls only to a fixed set of phone numbers.



Sound settings

Use the Sound settings to configure how and at what volume the phone rings, vibrates, or the Trackball light pulses when the phone rings, you receive a notification, an alarm sounds, or when you play music or other media with audio, as well as some related settings.

Display settings

Via Display settings you could configure brightness and other screen settings.

Location & security settings

Use the Location & security settings to set your preferences for using and sharing your location when your search for information and use location-aware applications, such as Maps. You can also configure settings that help secure your phone and its data.

Application settings

You could use the Application settings to view details about the applications installed on your phone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and email.

Account & sync settings

Use the Accounts & Sync settings to add, remove and manage your Google and other supported accounts. You also use these settings to control how and whether applications send, receive, and sync data on their own schedules, and whether applications can synchronize user data automatically.

Privacy settings

You can use the Privacy settings to manage your personal information.

SD card & phone storage settings

Use the SD Card & Phone Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.

Language & keyboard settings

Language & Keyboard settings can help to select the language for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

Voice input & output settings

Use this settings to configure the voice input feature, and the text -to-speech synthesizer, for applications that can take advantage of it, such as TalkBack.

Accessibility settings

See, hear, speak, feel, and use. Accessibility features are there for everyone, helping make things easier.

Use this setting to configure any accessibility plug-ins you have installed on your phone, such as KickBack, SoundBack and TalkBack.

Date & time settings

Use this setting to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the mobile network.

About phone

Here includes information about your phone, such as system updates, status, battery use, etc.


11 Music

You use Music to organize and listen to music and other audio files that you transfer to your SD card from your computer.

Your phone can play many types of files: AAC, AMR, MP3, WAV, AAC+, and MIDI.

Open and play music


1. Touch the Music icon  in the Launcher or on the Home screen. Your music is stored by artists, albums, songs, and playlists in the music library.

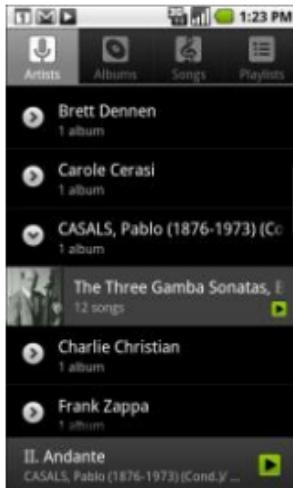

2. Touch a song in your library to listen to it. You can control the playback as follows:

- Touch  to pause playback.
- Touch  to resume playback.
- Touch  to skip to the next track.

- Touch  to skip to the previous track.
- Touch  to open the current playlist.
- Touch  to play the current playlist in shuffle mode.
- Touch  to toggle repeat mode: Repeat is off, Repeating all songs, or Repeating current song.

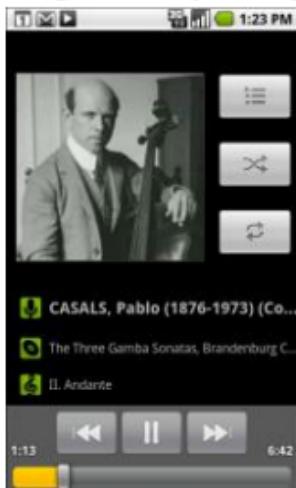

You can also press the phone's **Volume Up/Down key** to control playback volume.

3. While viewing a list of tracks in an album, tap **Menu key**, you can select Play all, Party shuffle and Shuffle all.

Play all: The tracks in the current playlist play in order until you reach the end of the playlist (unless you choose a repeat option).

Party shuffle: Music creates a current playlist of some tracks selected randomly from your SD card and starts playing them.

Shuffle all: All the tracks in the library play in random order.

Use a song as a ringtone

Touch & hold a song in a library list. In the menu that opens, touch **Use as phone ringtone**.

You can also use a song as a ringtone from menu of the playing screen


12 Camera & camcorder

Start camera & camcorder

Camera is a combination camera and camcorder that you use to shoot and share pictures and videos.

Pictures and videos are stored on the phone's SD card, so you must install one to use Camera.

To start camera, touch  > **Camera** , or press the **Camera key** on right side of your phone.

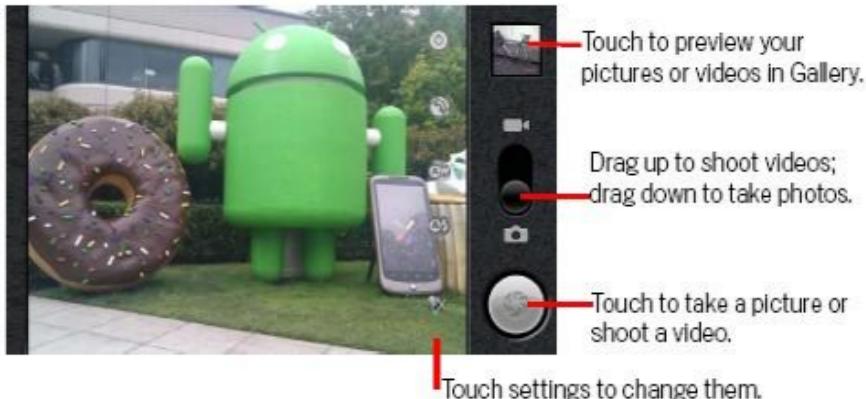

Camera

To take a picture

1. If necessary, drag the control to the Camera position.
2. Adjust your camera settings.
3. Frame your subject on screen.
4. Touch the Shutter icon  on screen.

To change camera settings

Many Camera settings are displayed on screen.

On camera screen, touch the icon for the **settings** you want to change. Touch the **setting category** you want to control and then touch a setting.

settings	Setting category
 Settings	Sharpness / Contrast / Saturation / Anti Banding / Color effect / Picture size / Picture quality / Restore to defaults
Store location	 Location not stored with photo  Location stored with photo
White balance	 Automatic /  Incandescent /  Daylight /  Fluorescent /  Cloudy
1xZoom	Touch to zoom from 1x to 4x.

Camcorder

To shoot a video

1. If necessary, drag the control to the Video position.
2. Adjust your camcorder settings.
3. Point the lens to frame the scene where you want to start.
4. Touch the Start Video icon  .
5. Touch the Stop Video icon  to stop shooting.

6. Touch the thumbnail to view, share, and work with your videos in Gallery.

To change Camcorder settings


As in Camera mode, Camcorder settings are displayed on screen.

settings	Setting category
 Settings	Color effect / Restore to defaults / Video quality / Video Encoder / Audio Encoder / Video duration
White balance	 Automatic /  Incandescent /  Daylight /  Fluorescent /  Cloudy
Video quality	High (30m) / Low (30m) / MMS (Low, 30s) / YouTube (High, 10m) / custom

13 Gallery

Open Gallery and view your albums

1. Touch the Gallery icon  in the Launcher or on the Home screen;
Or open Gallery from Camera by touching the thumbnail image at the top right;
Or open Gallery from Camera by pressing **Menu key** and touching **Gallery**.

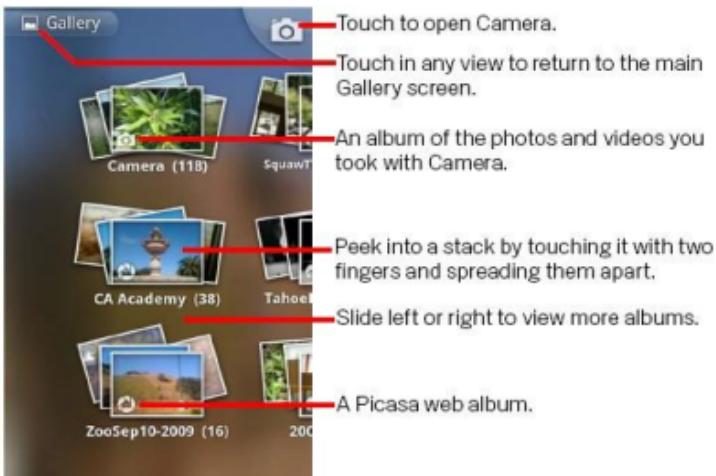

2. Touch an album to open it and view its contents.
3. Peek into an album stack by touching it with two fingers and spreading them apart.
4. Touch a picture or video in an album to view it.
5. Return to the main Gallery screen at any time by touching its icon at the top left of the screen.

Work with albums

Albums are groups of images and videos in folders on your SD card or in Picasa web albums.

You can work with albums as follows :


- Open an album and view its contents
- Change how the contents of an album are displayed
- Work with batches of pictures or videos
- Share an album
- Get details about an album
- Delete an album

Work with pictures

Use Gallery to view pictures that you've taken with Camera, downloaded, copied onto your SD card, or that are stored in Picasa web albums. You can also edit the pictures on your SD card and share them with friends.

You can work with pictures as follows :

- View and browse pictures
- Watch a slideshow of your pictures
- Rotate a picture
- Use a picture as a contact icon or as Home screen wallpaper
- Get details about a picture
- View the location of a picture in Google Maps
- Share a picture
- Crop a picture

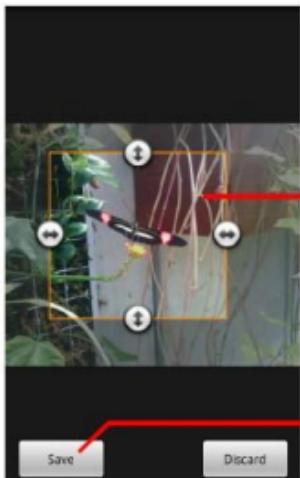

- Delete a picture

Work with videos

Use Gallery to play videos that you've taken with Camera and to share them.

You can work with videos as follows :

- Play videos



- Share a video
- Delete a video

Calculator


Your calculator has two views: basic and advanced. To change your views, touch **Menu key > Advanced panel** or **Basic panel**. To clear history, touch **Menu key > Clear history**.

Calendar

You can view and edit the event.

To change your calendar view

On the Calendar screen, press **Menu key** and touch **Agenda**, **Day**, **Week**, or **Month**.

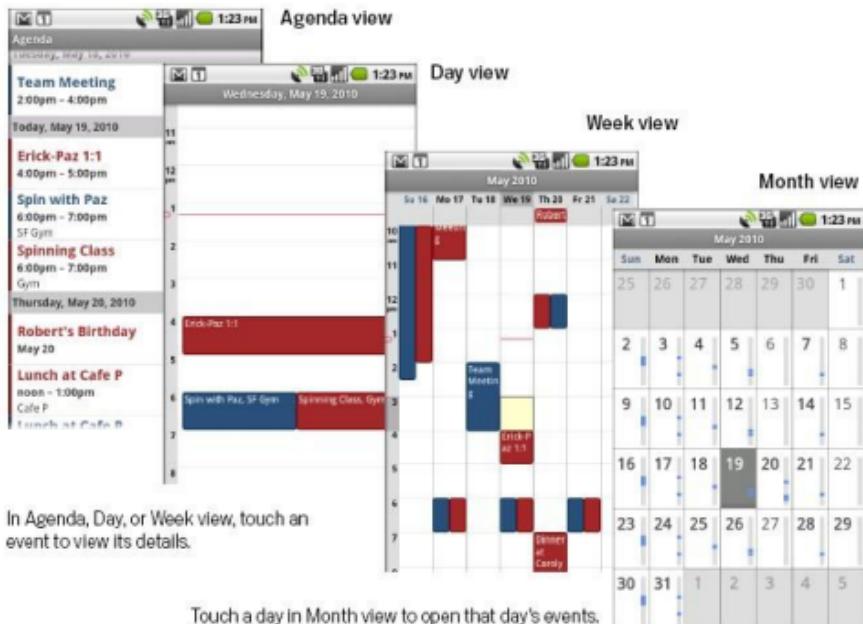

Each view displays the events in your calendar for the period of time that you specify.

To manage calendar events

- To add calendar events, touch **Menu key > New event** from any calendar view, enter event details and touch **Save**.
- To edit an event, touch and hold it, then touch **Edit event**. When you're done, touch **Done**.
- To delete an event, touch and hold it, then touch **Delete event**.
- To go to today, touch **Menu key > Today**.

Clock


To open the clock application

Touch the **Clock icon**  on the Home screen or in the Launcher. Clock opens with the date and time displayed on your Home screen wallpaper, along with your local weather and other useful information.



To set alarms

Touch the Alarm icon  at the bottom of the Clock screen to set an alarm.

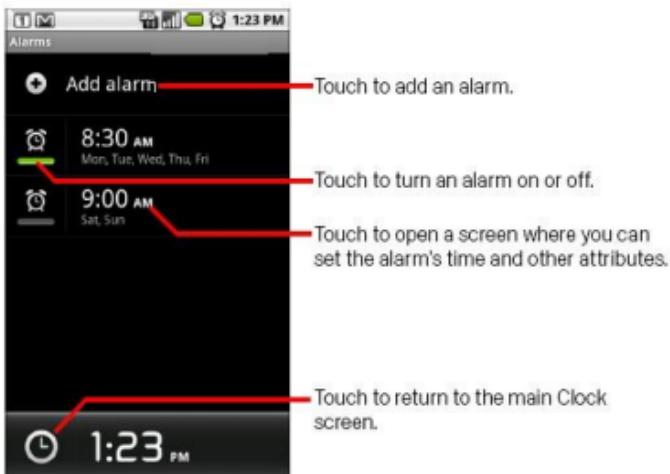

To change clock alarm settings

Touch the Alarm icon  at the bottom of the Clock screen. In the Alarms screen that opens, touch **Menu key > Settings**. You can choose to set **Alarm in silent mode**, **Alarm volume**, **Snooze duration**, and **Volume and Camera**.

15 Applications

FM Radio


You are asked to plug in a headset to use FM Radio.

Google search

To search your phone and the web

On the home screen, press **Menu key > Search**.

The Google search box opens.

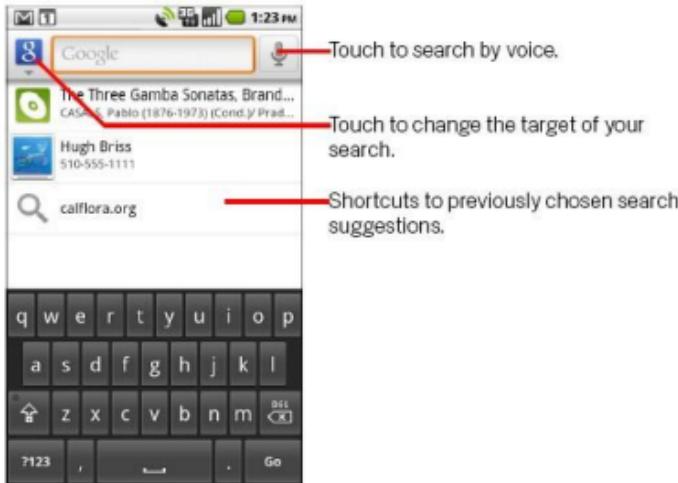

To target where you want to search

Touch the icon at the left of the Google search box.



Touch Web to search only the web. Or touch an application to target your search to just that application's information.

To change what you can target

From the Home screen, press **Menu key** and touch **Search settings > Searchable items**. Check or uncheck the applications whose information you want to be able to search.

Latitude

Google Latitude lets you stay close with your friends from your phone.

To add the Latitude widget

On your Android home screen, add the widget to see nearby friends at a glance.

To add & Remove friends

On Latitude screen, touch **Menu > Add friends**, then touch **Select from contacts** or **Add via email address** to add friends.

On Latitude screen, touch a friend in your list, then touch **Remove this friend**.

To share where you are

You can touch your thumbnail avatar, and select **Send location to others** on the page that opens to share where you are.

When you receive a request to share location details you can choose to **Accept and share back**, **Accept but hide my location**, or **Don't accept**.

To hide your location

To hide your location from a friend, touch **Menu > Latitude** to show your friend's list. Touch your contact name, then touch **Menu > Privacy > Hide your location**.

Maps

Touch the Maps icon  in the Launcher or on the Home screen to open maps.

To set your location sources

Touch **Menu key > Settings > Location & security > Use GPS satellites** (highly accurate, but uses battery power) and/or **Use wireless networks** (less accurate, but conserves battery power).

To find location

To find any location, press **Menu key** and touch **Search** to search for locations and places.

To get directions

1. While viewing a map, press **Menu key** and touch **Directions**.
2. Enter **My location** and **End point**.
3. Select a mode of transport (car, public transit, or walking).
4. Touch **Go**.

5. When you're finished, to clear the map, press **Menu key** and touch **Clear map**.

You can also use Maps to star places, find places, join latitude and change map layers to view traffic, satellite or terrain layers.

Navigation

It can help you to find out the best way to your destination and it'll instruct you to turn right or turn left during your way to the destination.

News and Weather

News & Weather offers weather forecasts and news stories about common topics. You can also customize the news topics that are displayed.

Places

It is used to search for a spot , such as Restaurants, Coffee, Bars, Hotels, Attractions, ATMs or Gas stations, and to locate it on the map.

SIM Toolkit

The function depends on the SIM card.

FCC Regulations:

- This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

► RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is **1.01** W/kg and when worn on the body, as described in this user guide, is **1.27** W/kg (Body-worn measurements differ

among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: **YU00020241907**.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of **1.0 cm** from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of **1.0 cm** from your body when the phone is switched on.