

**GIO**

**USER MANUAL**

# Welcome

PLEASE READ THIS INFORMATION BEFORE USING THE PHONE TO MAKE A BETTER USE OF YOUR PHONE. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE DUE TO YOUR MISUNDERSTANDING OF THIS INFORMATION AND MISACTTING.

We are endeavoring to improve our products and services and we reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user's manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone and keys and contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-dependent features. Please contact your service provider for confirmation.

## Phone Introduction

**Note:** All the illustrations, simulated screen and related images used in this manual are for reference only. Please refer to your handset for actuality.

**Note:** All the illustrations, simulated screen and related images used in this manual are for reference only. Please refer to your handset for actuality.

# Contents

 
1. Safety Information .....	5
2. Use and Care .....	7
3. Essential .....	7
3.1 SIM Installation.....	7
3.2 Battery Use & Installation.....	8
3.3 Memory Card .....	9
3.4 Power On & Off .....	9
3.5 Make a Call .....	9
3.6 Answer/Reject a call.....	10
3.7 Operations during a Call .....	10
3.8 Insert International Access Code.....	11
3.9 Dial Extension No. / Voicemail No. ....	11
3.10 Emergency Calls .....	11
4. Basic .....	11
4.1 Display .....	11
4.2 Keypad Lock.....	14
4.3 Password .....	14
5. Functions .....	15
6. Phonebook.....	17
6.1 Quick Search.....	17
6.2 Search Entry .....	17
6.3 Add New Entry.....	17
6.4 Copy All .....	18
6.5 Delete .....	18
6.6 Caller Groups .....	18
6.7 Extra Number .....	18
6.8 Settings .....	18
7. Call Center .....	20
7.1 Call History .....	20
7.2 General Call Setting .....	21
8. Messages .....	22
8.1 SMS.....	23
8.2 MMS .....	25
8.3 Ims.....	27
8.4 Voice mail Server .....	28
8.5 Broadcast Message.....	28
9. Multimedia .....	29
9.1 Image Viewer .....	29
9.2 Video .....	29
9.3 Video player .....	29
9.4 Audio Player .....	30
9.5 Sound Recorder .....	30
9.6 FM radio.....	31
10. File manager.....	33
11. Settings.....	34
11.1 Dual SIM Settings .....	34
11.2 Phone setup.....	34
11.3 Network setup.....	35
11.4 Security Setup.....	35
11.5 Restore Factory Settings.....	35
12. Organizer.....	35
12.1 Calendar .....	36

---

12.2 To do.....	36
12.3 Alarm.....	36
13. Camera .....	37
14. Services.....	38
15. Extra.....	39
15.1 Calculator .....	39
15.2 Unit converter.....	39
15.3 Currency converter.....	39
15.4 Stopwatch .....	39
15.5 Bluetooth.....	39
16. User profiles .....	41
17. Fun & Games .....	42
18. Input Method.....	43
18.1 English Input Method.....	43
18.2 Numeric Input Method.....	43
18.3 Special Functional Key .....	43
Malfunctions & Measures .....	45
Specific Absorption Rate Data .....	错误！未定义书签。
Battery Use & Maintenance .....	47
Product Maintenance.....	49

## 1. Safety Information

---

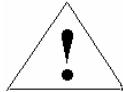

Read this information before using your mobile device otherwise may result in personal injury or your device not complying with local laws.

### **Battery:**

If a conductive material such touches the exposed terminal, short circuit may occur resulting in property damage, bodily injury or burn. To avoid risk of leaking electricity, take care when handling a charged battery particularly when placing it inside your pocket, purse or other container with metal objects.

### **Keep Your Mobile Device from Water:**

Keep your mobile device dry.

### **Use While Driving**

Always obey the laws and regulations on the use of mobile devices in the area where you drive. Give full attention to driving and the road; use hand-free operation or earpiece if a call is needed.

### **Aircraft**

Mobile device may cause harmful interference so turn off your mobile device before boarding an airplane.

### **Blasting Areas**

Always obey the related limits and regulations and do not use your mobile device in blasting areas. Turn off your mobile device in areas posted “turn off electronic devices”.

### **Potentially Explosive Atmospheres**

Turn off your mobile device in the gas station and areas near fuel and chemical containers. Turn off your mobile device in areas posted “turn off electronic devices”.

### **Medical Devices**

Turn off your mobile device whenever instructed to do so by posted signs near some medical equipment. Mobile device may interfere with pacemakers, hearing aids and some other medical transplanting equipment. Do not put your mobile device near pacemakers nor carry in the breast pocket.

### **Accessories and Battery**

Use the accessories, batteries and chargers approved by manufacturer. Use of batteries not approved by manufacturer may cause injury.

### **Emergency Calls**

Turn on your phone and keep it in service areas, dial emergency phone numbers and then press send key to make a call.

### **When Losing Your Phone**

To avoid any economy damage, please inform the Tele-communication Company or agencies to lock your SIM card when you lost your phone.

When you inform the telecom company or agencies to lock your SIM card they need to know the IMEI No. of your phone, which you can find printed on the label on the back of your phone when taking off the battery. Please backup this number for future need

For safety consideration, you can make preventative measures such as set PIN Code for your SIM card to prevent other persons using your SIM card without your permission.

### **Keep Away from Children**

Keep the phone, battery and charger away from children to avoid any personal injury.

## 2. Use and Care

---

**To take good care for this mobile device, please keep it away from:**



### **Any Kind of Fluid**

Keep the device away from water, rain, humidity, sweat or other moisture.



### **Extreme Heat or Cold**

Avoid the temperature below -10°C/14°F or above 45°C/113°F.



### **Microwave**

Don't try to dry your phone in a microwave oven.



### **Dust and Dirt**

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



### **Cleaning Solutions**

Use only a dry soft cloth to clean your phone. Don't use alcohol or cleaning solutions.



### **Ground**

Don't drop your phone.

## 3. Essential

---

### 3.1 SIM Installation

Keep your SIM cards away from the children.

Please consult your SIM card franchiser about the services and usage. SIM franchiser can be the service provider, network provider or other franchisers.

Please turn off your mobile device and disconnect it with charger before removing the battery.

**Note:** turn off your mobile device and disconnect it with charger or any other device before removing battery door. Place the door on the phone before store and use your mobile phone.

1. Remove the battery door:

Press and jog the battery door let it glide to the top of the phone, then get the battery door off.

2. Insert the SIM card into the card slot:

Now you can see two card slots side by side, please insert the SIM cards with the right direction bases the chart.

## **3.2 Battery Use & Installation**

### **Battery Tips**

Battery life depends on the network, signal strength, temperature, and accessories you use.

Always use Original batteries and chargers. The warranty does not cover damage caused by non-original batteries, charger and/or accessories.

New batteries or batteries stored for a long time may take more time to charge

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).

Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Never dispose of batteries in a fire because they may explode.

### **Battery Installation**

1. Slide the battery door up and then remove the door.

2. Aim the metal terminals of the battery at those in the battery compartment and then push into the battery groove.

### **Battery Charging:**

New batteries are not fully charged. Open the protective cover on your phone's accessory connector port, then insert the battery charger plug into the accessory connector port on the side of your phone as shown,

and plug the other end into an electrical outlet. Your phone might require several hours to charge fully. When your phone is power off, it might take a few seconds to show charging display and it shows charge complete when finished. When your phone is power on, the battery icon flickers when it starting charging and become still with full bars in battery icon when finished.

### 3.3 Memory Card

You can use removable memory card with your phone to store information.

**Caution:** Don't bend or scratch your memory card. Keep it away from static electricity, water, and dirt.

Insert the memory card into the tray as shown below:

### 3.4 Power On & Off

**Caution:** On power up, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If your phone shows Input PUK code that express your SIM card is locked, please contact your web service provider.

**ON:** To turn on your phone, press and hold the power on/off key for two seconds. If prompted, enter your four-to-eight-digit SIM card PIN code and/or four-digit unlock code.

If you don't insert a SIM card, your phone shows **Insert SIM**. None of the functions related to SIM card can be used and you can make an emergency call only.

**OFF:** To turn off your phone, press and hold the power on/off key for two seconds.

### 3.5 Make a Call

1. Under the mode of standby, input the telephone number directly for making a call.
2. Dial the number according to the list stored in SIM card.

**Dual SIM Status:** If you prefer dial via SIM Card 1, please select the dial key of **SIM Card 1** for dialing; If prefer SIM Card 2, please select the dial key of **SIM Card 2** for dialing.

**Single SIM status:** After pressing the dial key, the phone will automatically select the SIM card you set in preference.

3. After calling, select **Options—End Call** or power on/off key for ending the call.

### 3.6 Answer/Reject a call

When there is an incoming call, the phone rings and vibrates showing the number or the corresponding name.

The phone provides three modes as followings:

**Set-key Answering:** Press Dial Key for answering a call. If you don't want to answer, press the power on/off key or right soft key.

**Any-key Answering:** Answering a call by pressing any key except for power on/off key, right soft key, # Key and so on. # Key can be used for having the ring tone mute when a call comes.

**Earphone/Bluetooth mode:** when plugging the earphone (including bluetooth earphone), you can answer a call by pressing the key on the earphone. If you are not convenient to press the key, please turn on the auto-answer mode (only in earphone mode) and make sure your earphone is plugged. Then your phone auto answers the call 5 seconds after ringing or vibrating.

### 3.7 Operations during a Call

Press **Option** to perform following operation during a call:

**Hold Single:** Hold this call

**End Single:** Hang up and end current call

**New Call\*:** Enter a new dialing display to make a new call

**Phonebook:** Enter the phone book

**Messages:** Enter messages

**Sound Recorder:** Recording the calling contents

**Mute:** Set mute on or off. When setting mute on, your voice can not be heard through the line.

**Swap\*:** Switch between the current call and the holding call.

**Conference\* :** You can add additional parties to a call.

**Note:** the menus marked with \* must be supported by your SIM card. Please contact your service provider for details. Only when two or more calls are on can **Swap** and **Conference** show.

### **3.8 Insert International Access Code**

When you are dialing an international call, keep press \* key till the international call prefix “+” shows and then enter the number in the following order:

+ Country code→ complete number→ dial key

### **3.9 Dial Extension No. / Voicemail No.**

You need to enter P (pause) or W (wait) when dialing an extension number, press \* key to switch between ‘P’ and ‘W’. You can enter numbers according to the following order:

District code→ exchange phone number→ P or W→ extension number→ dial key

### **3.10 Emergency Calls**

You can make emergency calls as long as your current location is network-covered which you can know by checking the signal strength bar showing on the top left corner of the screen.

**Note:** Emergency numbers varies by country. The emergency number(s) in your phone may not work in all locations, and sometimes an emergency call cannot be made due to network, environmental, or interference influences.

---

## **4. Basic**

---

### **4.1 Display**

The standby interface includes the contents of icon, text and functional key.

#### **Icon Zone**

	<p><b>Signal Strength</b></p> <p>The vertical bars show the network connection strength.</p> <p>SIM 1 signal, SIM 2 is unused;</p> <p>SIM 1 is unused, SIM 2 has signal;</p> <p>SIM 1 and 2 have signals.</p>
	<p><b>New messages</b></p> <p>This icon shows when you receive a new message.</p> <p>Card 1 has an unread message;</p> <p>Card 2 has an unread message.</p> <p><b>The inbox is full.</b></p> <p>This icon flickers when the inbox is full and you need to delete messages to receive new messages.</p>
	<p><b>New Media Messages</b></p> <p>This icon shows when you receive a new media message.</p> <p>Card 1 has an unread media message;</p> <p>Card 2 has an unread media message.</p>
	<p><b>Chat Room</b></p> <p>This icon shows when chat room is active.</p> <p>Chat room 1 is in use;</p> <p>Chat room 2 is in use.</p>
	<p><b>Earphone</b></p> <p>This icon shows when you plug the earphone in. Voice will be heard from the earphone.</p>
	<p><b>Alert Type</b></p> <p><b>Your current alert type:</b></p> <p>Ring</p> <p>Vibration only</p> <p>Vibrate and ring</p> <p>Vibrate then ring</p> <p>This icon shows when you divert all calls unconditionally.</p>
	<p><b>Missed calls</b></p> <p>This icon shows when you are viewing the missed call.</p> <p>Card 1 has a missed call;</p> <p>Card 2 has a missed call.</p>
	<p><b>Call Divert</b></p>

	This icon shows when you divert all calls unconditionally. Card 1/ Card 2 has set up call divert.
	<b>Keypad Lock</b> The different icon shows the current state of your keypad. Keypad locked -- currently the keypad is in a locked state, the keystroke is of no use.
	<b>Turn Alarm Clock on</b> This icon shows when you turn alarm on.
 	GPRS This icon prompts you the status of GPRS status SIM Card 1 has been connected to GPRS; SIM Card 2 has been connected to GPRS.
 	<b>Roaming</b> This icon shows when your phone is in roaming state. Card 1 is roaming; Card 2 is roaming.
	<b>Bluetooth</b> This icon shows when the Bluetooth is active.
	<b>Stopwatch</b> This icon shows when stopwatch is being used.
	<b>Battery Capacity</b> This icon's color shows the status of battery capacity.

## Text Area

In the area, you can see the following contents:

Operator Name	Showing the status of 2 SIM cards respectively, mainly the network operator's name and SIM card's current state etc.  Exceptionally, please carry the correct operation according to the hints. For example, show that the "emergency call", said you can only make an emergency call.
---------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Song Name	Show the name of the music playing.
Owner Number	Show the SIM number in your phone records.
Time and Date	Show the time and date of your phone.

**Tips:** You can choose whether to show the date and owner number through the menu of settings by your need.

### Functional Key Areas

This area shows you the corresponding operation of the left and right functional key. For example, the standby interface shows: **Menu**, means press **confirmation key** to enter the main menu to choose the interface; **Name**, means that press **right functional key** to check the contact list.

**Tips:** When you enter the main menu, please check the names corresponding to left and right keys for carrying corresponding operations.

### 4.2 Keypad Lock

Keyboard and screen can be locked automatically if being unused for a long time. The information of keypad lock is shown in functional area. Thus you can unlock the keypad according to the prompt.

### 4.3 Password

The password of your phone is originally set to be **0000**. You can change it whenever you like. Your SIM card password or barred dial password can be also changed. Please contact your service provider for the details.

**Note:** Please contact your service provider for details.

## 5. Functions

---

This phone offers you a series of functions.

### 1 Phonebook

- 1-1 Quick Search
- 1-2 Search entry
- 1-3 Add New Entry
- 1-4 Copy All
- 1-5 Delete
- 1-6 Caller Groups
- 1-7 Extra Numbers
- 1-8 Settings

### 2 Message

- 2-1 SMS
  - 2-1-1 Inbox
  - 2-1-2 Outbox
  - 2-1-3 Write Message
  - 2-1-4 Template
  - 2-1-5 Message Settings
- 2-2 MMS
  - 2-2-1 Create Message
  - 2-2-2 Inbox
  - 2-2-3 Outbox
  - 2-2-4 Draft
  - 2-2-5 Template
  - 2-2-6 Message Settings
- 2-3 IMs
- 2-4 Voice mail Server
- 2-5 Broadcast Messages

### 3 Call Center

- 3-1 Call history
  - 3-1-1 SIM1 call history
  - 3-1-2 SIM2 call history
- 3-2 General calls etting
  - 3-2-1 SIM1 call settings
  - 3-2-2 SIM2 call settings
  - 3-2-3 Black list
  - 3-2-4 Speed dials
  - 3-2-5 IP number
  - 3-2-6 More

### 4 Settings

- 4-1 Dual SIM settings
- 4-2 Phone setup
- 4-3 Network setup
- 4-4 Security setup
- 4-5 Restore Factory Settings

5 Organizer

- 5-1 Calendar
- 5-2 To do
- 5-3 Alarm
- 5-4 World clock

6 File manager

7 Multimedia

- 7-1 Image Viewer
- 7-2 Video
- 7-3 Video Player
- 7-4 Audio player
- 7-5 Sound Recorder
- 7-6 FM Radio

8 Camera

9 Extra

- 9-1 Calculator
- 9-2 Unit converter
- 9-3 Currency converter
- 9-4 Stopwatch
- 9-5 Bluetooth

10 User Profiles

11 Fun & Games

12

- 12-1 STK
- 12-2 WAP
  - 12-2-1 Home
  - 12-2-2 Bookmarks
  - 12-2-3 History
  - 12-2-4 Enter Address
  - 12-2-5 Service Inbox
  - 12-2-6 Settings
- 12-3 Data Account

**Note:** “STK” contents are subject to different service providers. When two SIM cards are used at the same time, two STK menus may be shown according to the type of the SIM Card.

## 6. Phonebook

---

Select **Phonebook** from main menu to open phone book.

The phone book consists of phone storage and SIM card storage and you can use both of them.

**Phone Storage:** With a name, default number, family number, company name, email address, company number, fax number and group/individual ring in each item.

**SIM Card Storage:** The capacity depends on your SIM card type and there is only a name and one default number in each item. For details, please contact your service provider.

### 6.1 Quick Search

You can browse all records in the phonebook, i.e., dial current number, IP dial, send SMS & MMS, check, edit, delete, copy, move and send business card.

### 6.2 Search Entry

Choose the **Search Entry** in the **Phonebook**, input the name want to search, then through the **Option-Search** menu to lookup the item qualifying in the phonebook.

You can press **option** to make following operations:

<b>Dial</b>	Use SIM 1/SIM2 to call the item
<b>SIM1 IP Dial</b>	Use SIM1 to call the current contact person with IP dial
<b>SIM2 IP Dial</b>	Use SIM2 to call the current contact person with IP dial
<b>Send SMS</b>	Send SMS to the current contact person
<b>Send MMS</b>	Send multimedia message to the item.
<b>View</b>	View all the information of the relevant record
<b>Edit</b>	Edit the information of the relevant record
<b>Delete</b>	Delete the record
<b>Copy</b>	Copy the names stored in the phone storage/SIM card storage to the SIM card storage/phone storage (copy between the two storages)
<b>Move</b>	Move the names stored in the phone storage/SIM card storage to the SIM card storage/phone storage (Move between the two storages)

### 6.3 Add New Entry

You can add new names in your phonebook by this function and save to the phone storage or SIM 1 and

SIM 2 storage.

Only names and call numbers can be added when you add new contact to SIM card storage.

If you choose phone storage, beside names, numbers, family numbers, company numbers, fax numbers, company names, email address, you can add corresponding picture and set group/individual incoming call ring as well.

## 6.4 Copy All

You can copy all the names stored in SIM 1/SIM 2 to phone or copy all the names in phone storage to SIM 1/SIM 2, copy between the two SIM cards as well.

**Note:** Only names and default numbers can be saved when you copy the names from phone storage to the SIM card.

## 6.5 Delete

You can do the following operations in this menu:

From SIM 1	Delete all the names stored in SIM 1
From SIM 2	Delete all the names stored in SIM 2
From Phone	Delete all the names stored in the phone storage
One By One	Delete the selected names one by one

## 6.6 Caller Groups

There are 5 caller groups in your phone and you can set the group name, group incoming call ring and group members as you like.

## 6.7 Extra Number

Service Dialing Number and so on can be set respectively for SIM 1 and SIM 2 in this menu.

**Note:** this feature must be supported by your SIM card. For details please contact your service provider.

## 6.8 Settings

You can make following operations on the phonebook:

Memory Status	Check the capacity of the phonebook, including the memory of two SIM cards and phone.
---------------	---------------------------------------------------------------------------------------

Preferred Storage	Select SIM card memory or phone memory as the default storage location when adding a new name.
Fields	Select the information of contact person that the vCard shows

**Note:** you can also choose another storage location when you add a new name.

## 7. Call Center

---

Enter the main menu **Call Center**, You can perform following operations to the two SIM cards in this menu.

### 7.1 Call History

You can view the log, related information and make corresponding operations.

After entering the menu, select the log information of **SIM Card 1/ SIM Card 2**, then details will be listed.

Your phone keeps lists of incoming and outgoing calls, even for misconnected calls. Calls are listed in the order from new to old.

**Note:** The phone keeps the only latest call of the same number.

**Note:** The phone keeps the only latest call of the same number.

1. Find the corresponding list of **Dialed Calls, Received Calls, Missed Calls**
2. Press **Confirmation** key to view the detail information: date, time and times, etc.
3. press **Option** key to perform following operation:

<b>Delete:</b>	Delete this record
<b>Save to Phonebook:</b>	Save the number of this record to phone book
<b>Dial:</b>	Dial the number of this record
<b>Edit:</b>	Enter the number edit screen, you can modify, save or dial the number
<b>Send SMS</b>	Send messages to the item.
<b>Send MMS</b>	Create new MMS to this record for number.

#### Delete Call Log

You can delete the all the records of the missed calls, dialed calls and answered calls, you can also choose **Delete All** to delete all the three records.

#### Call Timer

You can check the call time record of the phone up to now through this menu.

<b>Last Call</b>	Show the last call time
<b>Dialed Calls</b>	Show the dialed calls time
<b>Received Calls</b>	Show the answered calls time

**Reset All Time** Reset the last call time, total inbound time and outbound time

### Call cost

You can check the call charge of the phone up to now through the menu.

**Last Call cost** Check the last time call cost.

**Total cost** Check all the calls' cost.

**Reset cost** Input the PIN2 code, and then can cleanup all the cost.

**Max cost** Show the limitation of the currently cost, "0" means no limit.

**Price per unit** Press **setting** to setup the unit time rates.

**Note:** The call charge function must be supported by the network service provider. Reset the cost, setup the maximun cost and rates need to input the PIN2 code, please connect with your network provider for the password.

### SMS Counter

You can check the number of the sent and received SMS currently. Press **Reset** to clear the selected records.

### GPRS Counter

You can check the transmission flow when use GPRS, include the data flow of **last sent**, **last received**, **all sent** and **all received**. You can also reset the records through the **Reset Counter** menu.

## 7.2 General Call Setting

You can perform following operations through this menu. Some should be separated from SIM card and other calls.

You should select call settings for **SIM Card 1** or **SIM Card 2** to enter the corresponding menu.

<b>Send Caller ID</b>	Input owner number or setup
<b>Call Waiting</b>	Setups the call waiting function.
<b>Call Divert</b>	Setups the call divert function.
<b>Call Barring</b>	Setups the call barring function.
<b>Line Switching</b>	Switch to your current line.

### Blacklist

When this function is active, the incoming calls in the blacklist will be shielded automatically.

**Mode** Switch on/off this function

**Blacklist Number** Enter the number in the black list

### **Speed dials**

Set the number corresponding to the numeric keys from 2 to 9, when switch on this function, long press the numeric keys to give calls in standby screen.

**Enable Speed Dial** Switch on/off this function

**Set Number** Set the number corresponding to the numeric keys from 2 to 9, numbers must be in the phonebook.

### **IP number**

This phone enables you to set IP numbers and dial.

### **More**

There are more menus including call time display, call time prompt and automatic time switch.

**Call Time Display** Turn on/off the display function for call

**Call Time reminder** Prompt user for the call time. This function can be turned off and be set as once reminder or circular reminder.

**Auto quick end** After activating this function, calls will be hung up after set time.

---

## **8. Messages**

---

You can receive and send messages, and MMS including Multimedia Information, include photos, pictures, music and text. And can also use broadcast messages and voice mail box. All the service is web

service and need web supporter. Please contact the provider before using.

Messages make it possible for you to exchange messages with other wireless phone users. Enter main menu from the standby interface and then select **Messages** to perform operation.

## 8.1 SMS

You can enter the **SMS** menu through the **Messages**.

### Writing Messages

You can write a new text message send to others, and also can insert template in the message. When finished, you can select SIM 1 or SIM 2 to perform following operations:

**Option** after editing a text message:

<b>Send only</b>	Send the message
<b>Save and Send</b>	Save the message while sending
<b>Save</b>	Save the message
<b>Send to Many</b>	Send the message to many parties
<b>Send by Group</b>	Send the message to all the contact persons of the selected group

### Inbox

After entering the inbox menu, you need to select SIM card—**Inbox of SIM 1/SIM 2**, then you can perform following operations:

The Inbox is for storing received messages. Depending on the selected mode, the phone vibrates or rings when you get a new message with screen showing the new message icon and prompt lights flickering. After you go back to standby interface, icon  show on the top of the status bar till you read the new message.

While reading a message, you can perform the following operations:

<b>Reply:</b>	Reply a message to the sender
<b>Delete:</b>	Delete this message
<b>Edit:</b>	Edit this message
<b>Forward:</b>	Send this message to somebody else
<b>Copy to Phone*:</b>	Copy the message from SIM card to the phone memory
<b>Copy to SIM*:</b>	Copy the message from phone memory to SIM card memory
<b>Move to Phone*:</b>	Move the message from SIM card to the phone memory
<b>Move to SIM*:</b>	Move the message from phone memory to SIM card memory
<b>Delete All:</b>	Delete all the messages in the inbox
<b>Copy All:</b>	Copy all the messages from SIM card or phone memory to phone memory or SIM Card

---

<b>Move All:</b>	Move all the messages from SIM card or phone memory to phone memory or SIM Card
<b>Use Number:</b>	Extract the number from this message and perform operation on it
<b>Use URL:</b>	Extract the link from this message and operation on it

**Note:** the menus marked with\* may not appear depending on the storage location in use.

Icon  keeps flickering when you inbox is full in standby interface. Please delete some messages for receiving new messages.

## Outbox

After entering the outbox menu, you need to select SIM card—**Outbox of SIM 1/SIM 2**, then you can perform following operations.

Enter outbox to view the sent messages that you saved and you can perform following operation:

<b>Send</b>	Send current message to one contact person
<b>Edit:</b>	Edit this message
<b>Delete:</b>	Delete this message
<b>Copy to Phone*:</b>	Copy the message from SIM card to the phone memory
<b>Copy to SIM*:</b>	Copy the message from phone memory to SIM card memory
<b>Move to Phone*:</b>	Move the message from SIM card to the phone memory
<b>Move to SIM*:</b>	Move the message from phone memory to SIM card memory
<b>Delete all:</b>	Delete all the messages in outbox
<b>Copy All:</b>	Copy all the messages from SIM card or phone memory to phone memory or SIM Card
<b>Move All:</b>	Move all the messages from SIM card or phone memory to phone memory or SIM Card
<b>Use Number:</b>	Extract the number from this message and perform operation on it
<b>Use URL:</b>	Extract the link from this message and operation on it

## Template

The phone provides you 10 groups of templates, including text message and multimedia message, etc. you can use the template by your need.

## Message Settings

After entering this menu, you need to select SIM card—**Message Setting for SIM 1/SIM 2**, then you can perform following operations.

You can setup the message from the menu, as following:

**Profile Setting:** Offer you four profiles and you can edit their names, set SC Address and Valid Period etc.

**Common Setting:** Set delivery report on or off

**Memory Status:** Check the capacity of messages storage

**Preferred Storage:** Set the default message storage location, including phone storage and SIM card.

**Note:** you need support from the service provider to receiver delivery reports.

## 8.2 MMS

### Create message

Option after editing the MMS:

Done	Confirmed the editing completed.
Input Method	Input method used when editing the text message.

When editing multimedia message, you can see the following options: recipient, copied, send secretly, topic, content etc.

Input the corresponding address in the recipient, copied or send secretly items, then press the

**Done** to operate the following operation:

Send only	Send the currently-edited multimedia message and select the SIM card.
Save and Send	Save the multimedia message currently edit and send.
Save to Draft	Save the multimedia message currently edit to the draft box.
Send Options	Setup contents for the editing multimedia message.
Exit	Withdraw the editing interface and do not save the message.

As for the recipient, copied or send secretly, you can press the **option** key or **Edit** Key after editing to operate the following operations:

Add Number	Add the number of the multimedia message recipient.
Add E-mail	Add the E-mail of the multimedia message recipient.
Edit	Edit the recipient selected.
Delete	Delete the number from the recipient list.
Delete All	Delete all the numbers in the recipient list.

As for the content of the multimedia message, press the **option** when to operate the following operations:

Done	Confirm to complete the editor of the content.
Input Method	Select the currently-used input method, also can press # key to change in editing interface.

Add Image	Add the selected photo files at the current editing cursor.
Add Music	Add the selected music files at the current editing cursor.
Add Attachment	Add the selected Attachment at current editing cursor.

**Note:** If your MMS can not send successfully, please reset the corresponding setting of the MMS. Exact operation is: Setting→MMS Setting→Servers Setting, please just change the online pattern to WAP.

## Inbox

The Inbox is for storing received MMS. Depending on the selected mode, the phone vibrates or rings when you get a new MMS with screen showing the new message icon and prompt lights flickering. After going back to the standby interface, you will have icon  showing on the top of the status bar till you read the new MMS.

As for MMS in the inbox, you can operate the following operations:

<b>View</b>	View the MMS
<b>Reply</b>	Reply the sender
<b>Reply by SMS</b>	Edit SMS to reply the sender
<b>Reply ALL</b>	Edit MMS to reply the sender or all
<b>Forward</b>	Edit the corresponding information including the recipient, address of current MMS then send to the others
<b>Delete</b>	Delete the MMS
<b>Delete All</b>	Delete all the MMS in the inbox
<b>Properties</b>	Check the details of the template.
<b>Use Details</b>	Extract the number or hyperlink from the message, and you can dial, save the number; you can connect or add bookmarks for the hyperlink.

## Outbox

Enter outbox to view the MMS that you saved and you can perform following operation:

<b>View</b>	View the MMS
<b>Forward</b>	Edit the corresponding information including recipient, address of the MMS then send to others
<b>Edit</b>	Modify the current MMS
<b>Delete</b>	Delete the MMS
<b>Delete All</b>	Delete all the MMS in the outbox
<b>Properties</b>	Examine the details of template.
<b>Use Details</b>	Extract the number or hyperlink from the message. You can dial and save the

number. You can also connect the hyperlink or add it as bookmark.

## Draft

Storage the messages you save when you edit.

You can perform following operation to the MMS stored:

View	View the MMS
Send	Send the MMS again.
Edit	Enter the MMS edit interface.
Delete	Delete the MMS.
Delete All	Delete all the MMS in the draft box.
Properties	Check the details of the template.
Use Details	Extract the number or hyperlink from the message. You can dial and save the number. You can also connect the hyperlink or add it as bookmark.

## Template

The phone provides you different templates, including text message and multimedia message etc. you can use the template by your need.

Press the template you need, you can process as following:

View	View the MMS
Use	Use the template and write a new MMS meanwhile.
Properties	Check the details of the template.

## Message Settings

You can setup your MMS through the menu by your need as following:

Compose	Include edit mode, Automatic Signature, etc.
Send	Include expiry date, send report, read report, priority, etc.
Retrieve	Include main network, roaming network, send feedback of reading, allow to sending reports etc.
Filter	Include Anonymous sender, advertisement information etc.
Server Profile	Start or edit the service, when you fail to send the MMS, please change online-pattern of the server to WAP. You must first select the SIM card.
Memory Status	View the storage of the MMS.

**Note:** If you fail to send MMS, please change the online pattern to WAP in the server setting.

## 8.3 Ims

You can make instant information exchange under this menu. There are no more than two instant

information rooms can be established.

First setup the chat room; you can setup my nickname and the other side number. After setting then chooses chat and finally choose the SIM card you want to use, you can communicate with others by instant message. Through the communication, you can choose continue or end the chat.

## 8.4 Voice mail Server

After entering the voice messages menu, please select the **voicemail message of SIM Card 1/ SIM Card 2** and perform the following operations.

The voice message is similar to a telephone recording service. When you have a missed call, you can transfer it to the voicemail box. You may ask your caller leaving "soundtrack original" voice message. When you have new voice message, your phone will receive message note promptly. This phone offers you two profiles for voicemail.

**Note:** This function must be supported by network. Please contact your network provider for more information about the function.

## 8.5 Broadcast Message

After entering the Broadcast message menu, you need to select **Broadcast messages of SIM Card 1/ SIM Card 2** and perform the following operations.

Cell Broadcast is messages sent from network operator to GSM phone users, such as weather forecast, traffic situation, stock updates etc. Every kind of cell broadcast has a fixed model number. The phone can automatically store when you receive a cell broadcast from a new channel. The new cell broadcast message covers the old one if they are from the same channel.

**Receive Mode:** Select the status of the broadcast message (on or off)

**Read Message:** Read the broadcast messages

**Languages:** Set the language of the broadcast messages

**Channel Setting:** Set the broadcast messages channel

**Note:** This function must be supported by network. Please contact your network provider for more information about the function.

## 9. Multimedia

---

Your phone offers multimedia applications and you can use **Media** from main menu to open it.

### 9.1 Image Viewer

You can view the photos in this menu. All the photos related will be shown once you perform this function.

<b>View</b>	View the image files supported by the phone. If the file is not supported by the phone, then you will be prompted format error.
<b>Use</b>	Send the file to wallpaper or user profile.
<b>Send</b>	Send the file via MMS format
<b>Rename</b>	Rename the file name.
<b>Delete</b>	Delete this picture file.
<b>Delete All files</b>	Delete all the files in the current folder.
<b>Sort</b>	Arrange the files by name, type, time, size or none. None means random select.
<b>Storage</b>	Set the path of viewing photos: Memory card or phone.

### 9.2 Video

Enter the video menu, the view-finder will appear on the screen. You can record movie by this mobile.

#### Video Settings

Press left soft key to open **Option** menu:

<b>Storage</b>	Set the movie save path: memory card or phone.
<b>Restore Default</b>	Use the default settings.

#### Record the Video

In the video view finder state, press OK key to take a video; press OK again, auto store video file.

**Note:** The video will be put into the memory folder -- **Videos**.

### 9.3 Video player

There is a built-in camera of the phone for you to take video anywhere anytime. You can also store the

video file into the phone or memory( please make sure for having inserted the memory card)

### Settings of Video player

#### Option

Storage Path	Store videos after shooting
Restore Default	Restore all parameter as default settings

### Taking Video

Please press the **Confirmation** key for starting taking video. Press the key again, then video player stops and saves the file recorded automatically.

**Note:** Files recorded are stored in press the file-case named **video**.

### 9.4 Audio Player

You can use Audio Player for playing music & songs.

Please adjust the corresponding function by four direction keys: Left and right key are for adjusting the voice volume of MP3.

You can select **Play List— Option** and make the following operations for the player.

Add Songs	Select your preferred songs
Play Mode	Set up audio playing mode

**Note:** Please refer to the instructions in **Options— Operation Instruction**

### 9.5 Sound Recorder

Open **Voice Recorder** to view the sound files in **AMR** or **WAV** format. If there is no file, your phone prompts **Empty**.

Press **Option** and perform following operations on the sound file:

**Record:** During recording, you can press **Pause** option to pause and press again to continue. Press **Stop** option to stop recording and go to the interface of saving. Press **Yes** to save the sound file. Press **No** to go back.

**Note:** The sound files are stored in the **Audio** file.

#### Play

Play the selected sound file.

## Append

For files in AMR format, you can add a new sound recording onto the original one and then save them.

### Rename

Change the name of the current sound file.

### Delete

Delete the current sound file.

### Delete All Files

Delete all the sound files.

### Settings

Set the file format and storage location.

### Send

Send the current sound file to user profile, MMS or Bluetooth.

## 9.6 FM radio

Choose the FM Radio menu, and then turn the broadcasting FM Radio on.

### Listen to the FM Radio

Start the FM Radio function, the interface will show the location No., name (if saved) and frequency of the FM Radio channel.

**Tips:** To the channels saved, while listening, you can choose the location of the FM Radio channel needed by press the corresponding number.

### Search Channels

Under the FM Radio interface, press **left key / right key** to swift the channels, or press the left soft key and enter the Option menu, choose Manual search, input the frequency you need, the FM Radio will search the channel.

Choose Auto search from the option, the FM Radio will search the channels now can received automatically. If the icon is gray, means the keystroke uses as a fine-tuning.

Tips: Auto search needs some time please be patient.

## Basic Usage

The phone offers you with the FM Radio background play function, to turn off the FM Radio, please press **Confirmation key** and under the FM Radio interface after it turn gray, then quit.

Press **Star key /Pound key** to increase or lower volume respectively.

**Tips:** When listen to the FM Radio, you can make or answer a call normally. While talking, the volume of the broadcast will into mute automatically.

## 10. File manager

Choose **File manager** from the main menu to open it and you can find the storage devices and the capacity of total space and free space. On different objects, there are different operations.

Storage devices: press **Option** to perform following operations:

<b>Open</b>	List all the folders and files
<b>Create Folder</b>	Create a new folder and edit its name
<b>Format</b>	Format the storage devices, the operation will delete all the data stored in the storage devices

Folders: press **Option** to perform following operations:

<b>Open</b>	Show the file tree in this folder and list all files
<b>Create Folder</b>	Create a new folder and edit its name
<b>Rename</b>	Change the folder's name
<b>Delete</b>	Delete the folder
<b>Sort</b>	Arrange the folders or files by <b>name, type, time, size or random</b>

Files: press **Option** to perform following operations:

<b>View</b>	View the image files stored in certain formats; If the phone is nonsupport, it will tip that <b>format error</b>
<b>Play</b>	play multimedia file in this menu
<b>Send</b>	Send the file to Bluetooth or MMS
<b>Detail</b>	Show the updating time and its size
<b>Rename</b>	Edit the file's name
<b>Copy</b>	Copy this file to any other folder in the same storage device
<b>Move</b>	Move this file to any other folder in the same storage device
<b>Delete</b>	Delete this file
<b>Delete All Files</b>	Delete all the files in current folder
<b>Multi-operation</b>	Select several files in current folder at the same time to perform related operations

**Note:** The options may differ depending on the object types.

## 11. Settings

---

You can set your favorite wallpaper, ring or some other function via Main Menu→ Settings.

### 11.1 SIM Settings

This menu offer several usages of dual SIM cards for you to choose the mode you want.

Dual SIM open	Both dual SIM are standby
Only SIM 1 open	Only use SIM 1 standby
Only SIM 2 open	Only use SIM 2 standby
Flight Mode	The whole function related to calls are all closed at the status of flight mode.

### 11.2 Phone setup

Enter **Settings** from main menu, select **Phone Setup** and then you can set the following items:

Time and Date	Set your current time zone, time, date and their display format.
Schedule Power	You can set up to 4 time points to automatically turn the phone on and off.
On/Off	
Language	Set the display language.
Default Input Method (Writing Language)	Select the preferred input method as you like.
Display Characteristics	You can find submenus such as wallpaper, screen saver, power on display, and power off display, back light timer, show date and time, show owner number, show operator name in display characteristic.
Greeting Text	When power on, the screen will show a few words. Switch on/off this function.
Shortcut Key	You can set list of shortcut key according to your need. Press left soft key for entering the list directly in standby interface.
Auto Update of Date & Time	Switch on/off this function for auto update of date and time. After activation, the mobile will compare the phone time and network time when network for SIM is connected. If time and network are not synchronous, user will be prompted for time update.

**Backlight Time** Set the light time you need for the screen.

**Note:** Your choice of time zone does not influence the time and date. The setting of schedule Power On/Off will not be activated if you set the same time for them.

### 11.3 Network setup

Enter **Settings** from main menu, select **Network Setup**, you need to choose the SIM card network setup for SIM 1/SIM 2 and then you can perform following operations:

**Network Selection** New search, Select Network, Selection Mode

**Preferred Network** Set the preferred network during searching.

### 11.4 Security Setup

Enter **Settings** from main menu, select **Security Setup** and then you can perform following operation:

**SIM 1 security** You can set SIM lock (PIN code), fixed dial, barred

**Setup** dial and change password for SIM 1.

**SIM 2 security** You can set SIM lock (PIN code), fixed dial, barred

**Setup** dial and change password for SIM 2.

**Phone Lock** Set a password for phone lock and the default password is **0000**.

**Auto Keypad Lock** Set auto keypad locked on or off and the interval time for keypad lock.

**Change Password** Change the phone lock password.

**Note:** As for the Password, please contact your service provider for details. Fixed Dial and Barred Dial must be supported by your SIM card. Please contact your service provider for detail.

### 11.5 Restore Factory Settings

Enter **Settings** from main menu, select **Restore Factory Settings** and restore initialized settings for wallpaper, screen saver, ring, etc.

## 12. Organizer

---

Your phone provides you more management tool. Enter from main menu **Organizer**.

## 12.1 Calendar

The screen shows current date framed by special color box when entering Calendar. Press the 4-way navigation key up, down, left or right to move to different date. Press Confirmation key or left soft key to enter the corresponding menu and you can find View Tasks. Choose Tasks—add new task—jump to date—weekly check—lunar calendar (this menu can be used only in Chinese language environment)

## 12.2 To do

You can schedule and organize events such as appointments and meetings by **To-do List** in your phone as it always reminds you of the preset tasks on time if your phone is power on. Enter **To do** from Organizer and you can check all tasks. While the task list is empty, press left soft key to “Add” new tasks or open calendar display, enter **Option** and select **Jump To Date** to add new tasks. While viewing a task, you can also enter Option by pressing left soft key to perform following operation:

### **View**

View the content of selected task

### **Add**

Select Add to create a new task. You can edit its date, time, note, alarm mode and reminding mode etc.

### **Edit**

Edit the content of selected task

### **Delete**

Delete current To-do contents

### **Delete All**

Delete all the tasks

**Note:** there is fixed room for storing tasks and when no “Add” shows in “Option”, please delete some indifferent tasks to save room for important ones.

## 12.3 Alarm

Your phone has an alarm clock with 5 separate alarms that you can set to alert you at the time(s) you specify. To set an alarm clock, select one alarm and press left soft key to edit its on/off, time, period, ring and reminding mode.

## 13. Camera

---

Your phone has a high-Mega pixel camera for taking photos whenever and wherever you like. After taking photos, store them in the phone memory or memory card (if being inserted).

### Camera Settings

Press **Option** in viewfinder display and make detailed settings:

Camera Settings	Set the status of shutter sound, avoid flicker.
Image Settings	Adjust the photo's size
Scene Mode	Select night or auto mode
Storage	Set the storage location
Restore Default	Use the default settings

### Take a Photo

At camera viewfinder status, please take the scene which is shown in the frame finder, press the **Confirmation key** for taking a photo.

After photo being taken, please select **save** to store the photo, then back to the viewfinder state. Click **Delete** for giving up the saving and then back to the viewfinder state.

**Note:** All the photos are stored in the photos file.

## 14. Network

---

Your phone can be connected to the Internet or run web-based applications by using web browser. If you need, please consult your service provider for how to link the network. Enter from the main menu **Web**.

**Note:** Your phone is applicable to the GPRS (General Packet FM Radio Service) network. Type of the network link depends on your network service provider. This function must be supported by network. Please contact your network provider for more information.

### Home

Selecting the main menu, you can log on the homepage set up to browse. If you do not set up, you can use the website pre-set by the manufacturer.

### Bookmarks

Enter the bookmark menu, the menu list shows all the bookmark exist, Select the **option** button, you can do the following operations to the bookmark selected:

Go to	Link the website appointed by the bookmark.
Edit	Edit the name and address of the current bookmark.
Send	Transmit the address of the bookmark by message or MMS.
Delete	Delete the bookmark.
Delete All	Delete all the information of bookmarks.
Add Bookmark	Add new name and address of the bookmark.

### History

The menu lists the website records your recent visit to facilitate your visit to the site.

### Enter Address

Enter the menu, after inputting the URL address of the WAP service that you want to visit, select the **option** button and select complete. The phone automatically logs on the website you input.

### Service Inbox

You can check the web service message in this mailbox, and can also process delete etc.

### Settings

You can select **Settings** menu, then set up the content relates to the WAP service as following:

<b>Select SIM</b>	Select SIM card for connecting to the internet. The selection includes: 1. Always ask; 2. Always use SIM card 1 for connecting; 3. Always use SIM card 2 for connecting.
<b>Edit Profile</b>	Select and start the network configuration file you need, can set up homepage, account and login password, etc.
<b>Browser options</b>	Waiting time of viewing the website and figures shown.
<b>Service Message Settings</b>	Turn on/off the reception of the service news.
<b>Clear Cache</b>	Use to clear the records in the cache.
<b>Clear Cookies</b>	Use to clear personal writing data.

## 15. Extra

---

This phone has more organizers, such as calculator.

### 15.1 Calculator

Enter **calculator** menu, you can process simply digital computing. Now the phone becomes your calculator.

### 15.2 Unit converter

The phone provides you the weight and length unit converter function. Entering the parameters, you can convert kilogram into pound or ounce; convert kilometer into mile, meter or yard.

### 15.3 Currency converter

Insert the current rate of exchange, the local currency can be converted into foreign currency.

### 15.4 Stopwatch

Choose **stopwatch**, there are **Typical Stopwatch** and **nWay Stopwatch** for different occasions and following are ways to use them.

**Typical Stopwatch**—there are two ways for your timing, that is **Split Timing** and **Lap Timing**. Enter

View record to check previous timing records.

**nWay Stopwatch**—press start you can time 4 courses by pressing the 4-way navigation key up, down, left and right.

**Note:** when you are using Way stopwatch, you can press the **Stop** or **Resume** but only the selected course.

## 15.5 Bluetooth

The phone provides Bluetooth function, select **Bluetooth** to enter, you can operate as follow:

### Active Bluetooth Device

Select to turn on/off the Bluetooth Device, you must turn on the Bluetooth Device of the phone before using it.

### Inquiry Audio Device

Select the menu after turning on the Bluetooth, the phone will inquiry the Bluetooth Device within the scope automatically. Please sure that the Bluetooth Device that need to be inquired is power on before inquiring.

### My Device

The menu will list all the Bluetooth Device that you inquired and you can select the device you need to perform the operations: **online**, **offline**, **device name**, **delete**, **delete all**, **search new device** etc.; also can examine the service list of the device selected.

### Setting

You can change the Bluetooth Device name, authentication, audio path, FTP setting of the Bluetooth Device; also can turn on/off the inquiry item of the Bluetooth in this menu.

### About

You can examine the Bluetooth Device name, address, supported service etc. in the menu.

## 16. User profiles

---

### User profiles

Enter **Settings-- User profiles** from main menu and there are several profiles that you can edit the following contents as you like: **General, Meeting, Outdoor, Indoor, Headset and Bluetooth**. Once you connect your phone with an earphone or a bluetooth device, the **Headset** and **Bluetooth** are automatically activated and meanwhile the other profile is deactivated.

You can choose any profile as you like and customize the selected one:

- Tone Setup:** Set the incoming call tone, incoming message tone and keypad tone
- Volume:** Set the volume of ring tone and key tone
- Alert Type:** Set ring, vibration only, vibration then ring or ring then vibration
- Ring Type:** Set Single, Repeat or Ascending
- Extra Tone:** Set warning ring and error ring on or off
- Answer Mode:** Set pressing any key to answer except power on/off key, right soft key and # pound key. Set auto answer on or off (only in Headset Mode).

## 17. Fun & Games

---

### Games

Enter from menu **Fun & Games** → **Games**, the phone provides you many interesting games, which will make your life wonderful.

To the rules of the built-in games, you can refer to the notes of the games.

And you can setup the sound and the shock through the game settings.

**Note:** you can set easy, normal or hard level in **Game Level** about some games through **Game Settings**.

## 18. Input Method

---

The phone supports many input methods such as capital letter and small letter, numeric, and so on.

- Write or edit a message
- Input or edit a name in phone book
- Search for a name
- .....

### 18.1 English Input Method

English input method includes capital letter and small letter. The keys corresponding to the uppercase and lowercase input are separated by semicolon. If no semicolon separation, then means the two input methods correspondingly are in the same characters.

Please follow the instruction below when using English input method:

Keep tapping one key till your desired character shows.

Press star key \* to find symbols.

Press pound key # to switch input method.

Press right soft key to clear the wrong character or go back to the previous menu.

### 18.2 Numeric Input Method

Please follow this instruction when using Numeric input method.

Press numeric key 0-9 to input your desired character.

Press star key \* to find symbols.

Press pound key # to switch input method.

Press right soft key to clear the wrong character or go back to the previous menu.

### 18.3 Special Functional Key

#### FN Key:

Please follow this instruction when using FN key under English input method.

Input the letter which is marked on top of the shift key in English input environment.

If you have **FN** shown on the right top of the screen, which means you have single-use for FN key in the next pressing;

If you have  shown, then means you have multiple-use of FN key.

**Ctrl Key:** This key is for shifting input language method.

**? Key:** This key is for shifting to punctuation area.

**Space Key:** Press this key for a while for starting the function of flashlight in IDLE interface.

**Shift Key:** Press this key for shifting English Input Method.

## Malfunctions & Measures

---

Here list some malfunctions that may occur and measures. If the measures can't solve the problem please contact authorized after service center. Thank you!

### Can't turn the phone on

check battery installation, please install battery correctly  
check if battery level is low, change a battery or charge the battery  
Check if enter incorrect PIN code 3times in a row. If yes, the phone is locked, then you should enter PUK code( please contact your network provider for PUK code)

### SIM Card Void

When the phone shows "SIM Card Void", you can try the following:

Powers the phone off then restart to sure if can solve.  
If your SIM card is a prepaid card, to sure whether the card is insufficient.  
Please turn to your network provider, and to sure whether to be refused registration network by other reasons.

### Weak signal or no signal

You may be in a location where the reception is bad, such as tunnel or cellar, please relocate and try again.  
You can try turning around slightly or get near the window if you are in the room.

### Bad talking quality

weak signal, you can try solutions above  
low battery, change a new battery or charge the battery  
use up volume key to adjust microphone volume

### Can't make a call

check if you enter the correct number and press send key  
check if you set call barring, if yes cancel it

### Can't receive calls

check if your phone is turned on  
check if screens shows no signal, if yes, try solutions above  
check if you set call barring, if yes, cancel it

**Screen is dark**

check if battery is low, change a battery or charge the battery  
adjust the brightness in settings  
your phone may be affected with damp, keep it dry

**When click on the screen and deviate**

Need to adjust, please adjust in time.

**Tips:** if all suggests and solutions can't solve your problem, please contact authorized after service center. Please do not disassembly or repair your phone without professional guide. Thank you!

## Battery Use & Maintenance

---

The machine is provided by the reusable rechargeable battery.

The new battery only can be charged two or three times full charge and discharge cycle to achieve optimum performance.

Battery can be recharged many times for repeated use, but it will eventually be exhausted. When the talk and standby time is significantly shorter than usual, then need to replace a new battery.

Use the battery the handset manufacturers approved only, and use the authorized charger for the battery charge only.

Cut off the power supply when do not use the charger.

Do not connect a battery to a charger more than one week, the long time charge will affect battery life.

The battery storage for too long would affect the results. And the battery will automatically discharge as long time unused.

Do not use a damaged battery or charger.

Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F).

Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Do not let the batteries short-circuit. When metal objects (such as: coins, etc.) directly connected to the battery anode and the cathode (with the metal side), will occur short-circuit accident. In the pocket or handbag carry a spare battery should be particularly careful. Short-circuit will damage the battery.

Please deal with the waste batteries according to the relevant provisions.

Never dispose of batteries in a fire because they may explode.

### **FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR, The SAR limit set by the FCC is 1.6 W/Kg.

## Product Maintenance

---

Your phone is a product with outstanding design and superior quality, please take good care using it. You are strongly suggested to take the following advice which should help you stick to the warranty in order to extend the usage period of the product.

Keep your phone and its parts away from children.

Keep your phone dry. Keep it away from rain, damp or any kind of fluid.

Don't touch your phone with wet hands when charging or there may be bodily injury or damage to the phone.

Keep your phone away from extreme heat which can shorten your phone's life, damage the battery, twist or melt some plastic parts.

Keep your phone away from extreme cold because when the temperature grows up, water vapor accumulated from inside the phone may damage the electronic circuit.

Keep your phone away from dust and dirt.

Keep your phone away from ignited cigarettes, fire or heat source.

Don't disassemble your phone by yourself.

Don't drop, beat or shake your phone. Any rude treatment can damage the inner electronic circuit board.

Don't daub your phone because paint would jam-up the earpiece, microphone or any other removable part and disable your phone.

Clean the pc camera or screen with neat, soft and dry cloth. Don't use alcohol or other cleaning solutions.

If your phone, battery, charger or parts can't work, please take them to the authorized service center for help.