


Operation Description

Induction cooker applies the heating principle of the magnetic field inducing the whorl electric current. It utilizes the magnetic field produced by the high frequency current passing the loop when the magnetic force line passes the bottom of the iron pan. It will produce numberless whorl electric current current that will heat up the pan rapidly and then heat up the food in the pan.


It controls by the microcomputer , no fire, no smoke, energy saving, safety and convenient, without hidden danger of traditional cooker. It makes cooking become extremely time.

Control Panel Overview

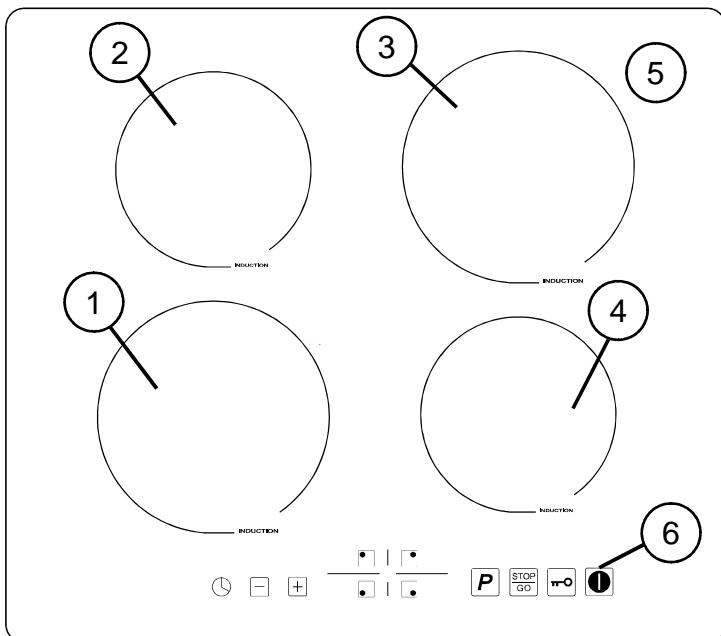

1. Front left cooking zone
2. Back left cooking zone
3. Back right cooking zone
4. Front right cooking zone
5. Ceramic glass
6. Touch control panel

Diagram make look different from actual product.

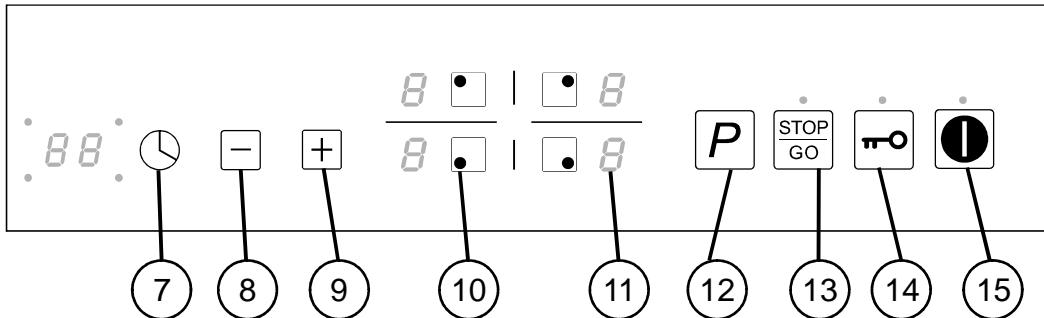

7. Timer Control Keys
8. Lower power or time key
9. Raise power or time key
10. Cooking heating Zone on key
11. Power or residual heat display
12. Power boost key
13. Pause / resume heating zone
14. Child safety lock
15. Power button

Specifications & How to Use

Power	7400 Wats
Voltage	240V / 60Hz
Power Range	100W -2700W
Level Selecton	Select setngs 1 through 9
Max Time	Set tmer from 1 to 99 minutes
Material	Glass Ceramic Top / Metal Body
Unit Measurements	23-7/32" width x 20-15/32" length x 2-5/32" height
Installation Type	Drop-in
Installs Over Built-in Oven	Yes
Installaton Dimensions(WxD)	21-31/32" x 18-29/32"

Heatng Power of Each Cooking Zone:

Level Rated power	1	2	3	4	5	6	7	8	9	P
Left front	100(1000W ON1S, OFF9S)	200(1000W ON2S, OFF8S)	300(1000W ON3S, OFF7S)	600(1000W ON6S, OFF4S)	1000W	1300W	1500W	1900W	2200W	2700W
Left rear	100(1000W ON1S, OFF9S)	200(1000W ON2S, OFF8S)	300(1000W ON3S, OFF7S)	600(1000W ON6S, OFF4S)	800(1000W ON8S OFF2S)	1000W	1200W	1400W	1600W	2000W
Right front	100(1000W ON1S, OFF9S)	200(1000W ON2S, OFF8S)	300(1000W ON3S, OFF7S)	600(1000W ON6S, OFF4S)	800(1000W ON8S OFF2S)	1000W	1100W	1200W	1400W	1800W
Right rear	100(1000W ON1S, OFF9S)	200(1000W ON2S, OFF8S)	300(1000W ON3S, OFF7S)	600(1000W ON6S, OFF4S)	1000W	1300W	1500W	1900W	2200W	2700W

Total Power:7400W


We divide the left 2 burners and the Right 2 burners into 2 different groups and among each group with rated power of 3700W. Left front and Left rear burner stove for a group of the Total power of 3700W. Right front and Right rear burner stove for a group of the total rated power of 3700W.

How to Use



Readiness Mode

While on standby mode, press the main “” key, the induction hob will make a “beep” sound once indicating that it is ready to use. If only the indicator light above the “” key is lit up, the unit will automatically return to standby mode if the Cooking heating zone ON key or Lock key are not chosen within 30 seconds.

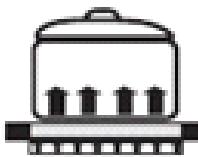

Suitable for induction cooktop

— 1

+ 9

P Power Boost

Switching on the hob and cooking zones

Place a compatible pot or pan on the cooking zone you wish to use.

With the hob being ON as mentioned above, press the desired cooking zone ON key. The display will blink and show a “0”.

Press either the “+” key, “-” key, “P” key, to select a cooking level. The cooking zone will automatically turn on standby mode if a key is not pressed within 30 seconds.

Press the minus key (-) to lower the cooking level.

Press the Plus key (+) to raise the cooking level.

Pressing the “P” key will show on the display as a “P”, boosting the heating power to the highest level.

While in cooking



press “” key, all cooking zone stop cooking and “” light blink.

While in stop cooking

press “” key, all cooking zone being used, and “” light blink.

light turn off, cooking zone will turn on standby mode if don’t press “” within 10 minutes.

How to Use

Lock



Activating the Child Safety Lock during cooktop use:

Child Lock prevents activation of any sensor key, except for the “” key and the “Lock” key.

 
A. Manual: Press the Lock key to activate the function. The unit will make a “beep” sound and the indicator light will turn on above the Lock key. The controls are now locked.

B. Automatic: The induction cooktop will automatically enter into Lock mode if any key is not pressed within 5 minutes. The unit will make a “beep” sound and the indicator light will turn on above the “Lock” key when the automatic Lock mode is activated.

Switch off the lock

While in Lock mode, press the Lock key to deactivate the function. The indicator light will turn off.

Turn off



While on turn on mode:

 
- a. Press the desired cooking zone on key until the digital display reads “1”, press “-”key again ,the desired element will shut off.The Unit is now on standby mode.
- b. Press the desired cooking zone on key ,the digital display will blink,press “-”key about 3s, the desired element will shut off.The Unit is now on standby mode.
- c. Turn off the entire unit by pressing the “”key,which will also make a “beep”sound once, and the indicator light will turn off.The Unit is now on standby mode.

Note: Please do not pull the power plug until the cooling fan has stopped.

How to Use

Timer

Setting the Timer to Automatic switch-off:



With the desired heating zone Powered ON, press the "Timer" key. The timer display will blink and show a "00", Press the "+" or "-" to increase or decrease to the desired time until the desired time appears in the display (Choose up to 99 minutes). Once the Timer is set, if keys haven't been pressed after 5 seconds, it will begin to countdown, the timer display will remain lit, the indicator for that particular burner will flash. When the time reaches "0", a "beeping" sound will go off indicating that the time is up, and selected heating zone shut off automatically.

If you want to set another burner to switch-off automatically, press "Timer" key to until the desired timer indicator blink, repeat the same steps.

If you want to check the remaining time for another zone, press the "Timer" until the indicator for the desired burner blinks.

If more than one switch-off time is programmed, the shortest time remaining will show in the display, the indicator for that particular burner will flash.

Cancelling the timer:

Press the "Timer" until the indicator for the desired burner blinks, then press the "+" or "-" to set the timer to 0. The Timer display will blink for 5 seconds and then turn off, indicating that the timer of selected heating zone has been cancelled.



Hot surface indicator light

After using any of the cooking zones, the cooktop will remain very hot. Even after turning off the entire unit, the surface of the cooktop will remain hot for some time. The display for the cooking zones will display an "H" to warn the user that the surface is hot to the touch. Wait until the "H" is no longer displayed to clean the unit. You may turn the unit back on even if the "H" is displayed.