


Operation Description


Induction cooker applies the heating principle of the magnetic field inducing the whorl electric current. It utilizes the magnetic field produced by the high frequency current passing the loop when the magnetic force line passes the bottom of the iron pan. It will produce numberless whorl electric current current that will heat up the pan rapidly and then heat up the food in the pan.

It controls by the microcomputer ,no fire,no smoke,energy saving,safety and convenient,without hidden danger of traditional cooker. It makes cooking become extremely time.



II. Control Panel Overview

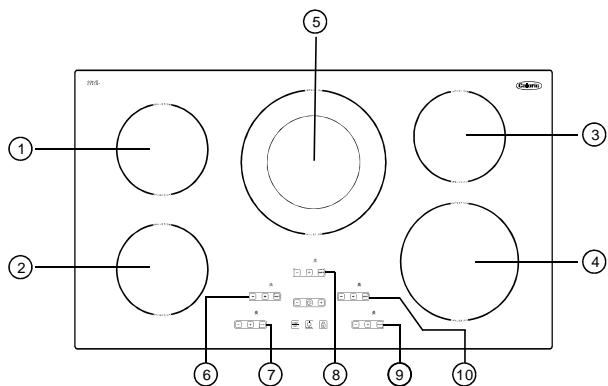


1. Left rear cooking element
2. Left front cooking element
3. Right rear cooking element
4. Right front cooking element
5. Center rear cooking element (Model CICT366 only)
6. Left rear cooking element control area
7. Left front cooking element control area
8. Center cooking element control area (Model CICT366 only)
9. Right front cooking element control area
10. Right rear cooking element control area

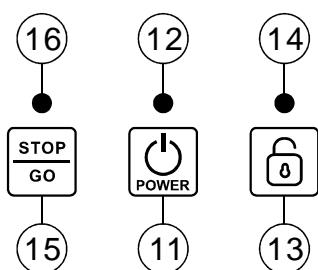

11. Main Power On/Off
12. Main Power indicator light
13. Controls Lock
14. Control Lock indicator light
15. Stop/Go
16. Stop/Go indicator light

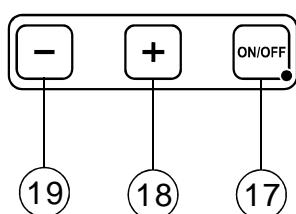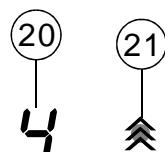

17. Cooking element symbol and Power On/Off
18. Increase power
19. Decrease power
20. Heat level and Residual heat display
21. Power Boost symbol and indicator light

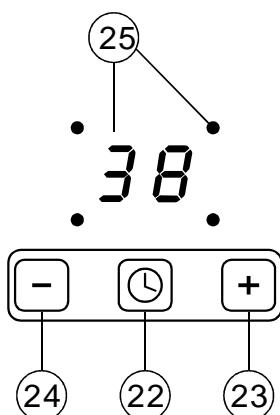

22. Minute timer
23. Minute timer setting Up
24. Minute timer setting Down
25. Minute timer display window and cooking element symbol

III. Specifications & How to Use

Model	C96E-AABB01		
Product dimension(wxhxh) inch	36"x21"x2 3/16"		
Cut-out dimension(wxd) inch	Min.:34 7/16"x19 13/16" Max.:35"x20"		
Voltage (volts)	240		
Frequency (Hz)	60		
Total power (Watts)	9600		
Elements-	5		
Front Left	1800W/2400W		
Rear Left	1800W/2400W		
Front Right	2200W/3200W		
Rear Right	1800W/2600W		
Center	2400W/3700W		

Heat setting displays

DISPLAY	DESCRIPTION
-	No power level for the element
L	The keep warm function
I-9	The power level
P	The power boost
H	A cooking element is still hot to touch (residual heat)
E	Electronics fault error message of specific cooking element
EO-E9	Error code
O	STOP/GO

Total Power:9600W

We divide the left and middle 3 burners and the Right 2 burners into 2 different groups and among each group with rated power of 4800W. Left front and Left rear and middle burner stove for a group of the Total power of 4800W. Right front and Right rear burner stove for a group of the total rated power of 4800W.

III. How to Use

Readiness Mode



While on standby mode, press the main "POWER" key, the induction hob will make a "beep" sound once indicating that it is ready to use. If only the indicator light above the "POWER" key is lit up, the unit will automatically return to standby mode if the Cooking zone ON/OFF key or Lock key are not chosen within 30 seconds.



Suitable for induction cooktop

- 1
- + 9
- ⌘ P

Switching on the hob and cooking zones

Place a compatible pot or pan on the cooking zone you wish to use.

With the hob being ON as mentioned above, press the desired cooking zone ON/OFF key. The display will blink and show a "-".

Press either the "+" key, "-" key, "⌘" key, to select a cooking level. The cooking zone will automatically turn on standby mode if a key is not pressed within 30 seconds.

Press the minus key (-) to lower the cooking level.

Press the Plus key (+) to raise the cooking level.

Pressing the "⌘" key will show on the display as a "⌘", boosting the heating power to the highest level.

While in the Power level 1, touch "-" key to enter into Keep Warm mode, Power digital will switch from 1 to L.

While in cooking



press "STOP GO" key, all cooking zone stop cooking and "STOP GO" light blink.

While in stop cooking

press "STOP GO" key, all cooking zone being used, and "STOP GO" light blink.

light turn off, cooking zone will turn on standby mode if don't press "STOP GO" within 10 minutes.

III. How to Use

Lock



Activating the Child Safety Lock during cooktop use:
Child Lock prevents activation of any sensor key, except for the “” key and the “Lock” key.

A. Manual: Press the Lock key to activate the function. The unit will make a “beep” sound and the indicator light will turn on above the Lock key. The controls are now locked.

Switch off the lock

While in Lock mode, press the Lock key to deactivate the function. The indicator light will turn off.

Turn off



 
- a. Press the ON/OFF key of the cooking zone being used. It will make a “beep” sound once, and it will turn off.
- b. Turn off the entire unit by pressing the “” key, which will also make a “beep” sound once, and the indicator light will turn off. The Unit is now on standby mode.

Note: Please do not pull the power plug until the cooling fan has stopped.

III. How to Use

Timer

Setting the Timer to Automatic switch-off:



With the desired heating zone Powered ON, press the “Timer” key. The timer display will blink and show a “00”, Press the “+” or “-” to increase or decrease to the desired time until the desired time appears in the display (Choose up to 99 minutes). Once the Timer is set, if keys haven't been pressed after 5 seconds, it will begin to countdown, the timer display will remain lit, the indicator for that particular burner will flash. When the time reaches “00”, a “beeping” sound will go off indicating that the time is up, and selected heating zone shut off automatically.

If you want to set another burner to switch-off automatically, press “Timer” key to until the desired timer indicator blink, repeat the same steps.

If you want to check the remaining time for another zone, press the “Timer” until the indicator for the desired burner blinks.

If more than one switch-off time is programmed, the shortest time remaining will show in the display, the indicator for that particular burner will flash.

Cancelling the timer:

Press the “Timer” until the indicator for the desired burner blinks, then press the “+” or “-” to set the timer to 0. The Timer display will blink for 5 seconds and then turn off, indicating that the timer of selected heating zone has been cancelled.



Hot surface indicator light

After using any of the cooking zones, the cooktop will remain very hot. Even after turning off the entire unit, the surface of the cooktop will remain hot for some time. The display for the cooking zones will display an “H” to warn the user that the surface is hot to the touch. Wait until the “H” is no longer displayed to clean the unit. You may turn the unit back on even if the “H” is displayed.