



Instruction Manual Remote Controller for 2 in 1 LED Light Strands

Included:

- One Remote Controller for 2 in 1 LED Light Strands – One (23A 12V) battery included

Product Instruction:



1. Front panel.
2. Indication lamp.
3. Feature key board.
4. Back panel.
5. Feature instructions.
6. Battery compartment cover.

Installation Instructions:

1. Unpack remote controller.
2. Open the battery compartment cover at back side. Insert one "23A 12V" battery (included). Follow diagram in battery box for proper orientation. (Do not mix old and new batteries; do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries).
3. Close battery compartment cover.
4. Set controller button 1 to feature #1 on/off/Re-set to reset the light products for choosing or resetting a program below:
(1) On/off/Re-set
(2) Color #1 and Color #2 alternative – this will change the lights from clear to multi every 1.5 seconds (approximately)



- (3) Color #1 Steady On – this will keep the lights in clear option on constant on
- (4) Color #2 Steady On – this will keep the lights in multi option on constant on
- (5) Color #1 with Timer – this will keep the lights in clear option for 6 hours and then switch off for 18 hours. It will come back every day at the same time as originally set and stay on for 6 hours each time.
 - * For example: If you want the light strand to come on every day at 5pm you need to turn the power switch to timer at 5pm. It will then come on every day at 5pm and stay lit until 11pm
- (6) Color #2 with Timer – this will keep the lights in multi option for 6 hours and then switch off for 18 hours. It will come back every day at the same time as originally set and stay on for 6 hours each time.
 - * For example: If you want the light strand to come on every day at 5pm you need to turn the power switch to timer at 5pm. It will then come on every day at 5pm and stay lit until 11pm
- (7) Color #1 with Photo Sensor – this will keep the lights in clear option on when the surrounding area is dark.
- (8) Color #2 with Photo Sensor – this will keep the lights in multi option on when the surrounding area is dark.

Care Instructions:

1. If the indication lamp starts to go dim, replace battery of the same type (23A 12V).
2. After season, remove battery, and store in cool dry location

Battery Disposal:

1. Do not dispose batteries in fire
2. Improper handling/disposal of batteries may cause batteries to explode or leak. *Please dispose of batteries responsibly by throwing away batteries in a proper trash receptacle*

This remote controller can be used to control all our 2 in 1 LED Light Strands with built-in receiver.

Indoor Use Only



Modifications

Any changes or modifications made to this device that are not expressly approved by 3H Décor-Lite could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.