

UE WhiteLabel™

User Guide & Important Information
BSK10 Series



Located in Southern California, WhiteLabel designs high performance products more efficiently, resulting in high quality products that are reasonably priced. We don't offer fancy packaging, phony marketing stunts, or expensive celebrity endorsements - what we do offer is much more bang for your buck.

PURPOSE

The purpose of this guide is to help you get started using your new BSK10 Series Bluetooth Speaker.

This booklet also provides you with information about the added features and important information regarding this product.

CONTENTS

| | <i>Page</i> |
|------------------------------------------------|-------------|
| What's Inside | 3 |
| Button Controls..... | 4 |
| Quick Start..... | 5 |
| Getting Started..... | 6 |
| How to Connect..... | 7 |
| LED Indicators | 8 |
| Basic Operation..... | 9 |
| Pairing With Bluetooth Devices..... | 13 |
| Making Voice Calls..... | 15 |
| Helpful Tips..... | 16 |
| Low Battery Alert and Charging Instructions... | 17 |
| Battery Tips..... | 18 |

WHAT'S INSIDE



WhiteLabel BSK10
Bluetooth
Speaker



USB to Micro-USB
Data Line



Waterproof
Carrying Bag



3.5 to 3.5mm
Audio Cable



Wall Charging
Adapter

Printed materials included but not shown.

BUTTON CONTROLS

Volume Up 

Volume Down 

Multi-Function 



QUICK START

1. Power ON Power on by sliding the Power switch “” to ON position.
2. To pair, press and hold the “” For 6 seconds the LED flash BLUE/RED enable Your Device Bluetooth and Scan and Connect the “BSK10”.
3. Enjoy your music or answer a Phonecall by BSK10.

GETTING STARTED

POWERING UP

After you are finished charging your device, power on by find the ON/OFF switch “” and slide the switch in to the ON position.

TWO WAYS TO CONNECT

1



2



Or

Connect your WhiteLabel Speaker to your mobile device via Bluetooth Wireless.

Or connect directly to your device via a 3.5mm Audio Cable. (included)

HOW TO CONNECT

Using your 3.5mm cable:

Insert one 3.5mm end in to the speaker and the other 3.5mm end in to the device you want to use with your speaker.

Using Bluetooth is easy:

1. Go to your settings and enable Bluetooth.
2. Next, search for devices.
3. Then, press and hold the Multi-function for 6 seconds.
4. Select “BSK10” and enjoy.



Note: Before you get started, charge your WhiteLabel Bluetooth Speaker. Always be sure to use the USB adapter that is included with your speaker.

LED INDICATORS

| | |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BLUE | <ul style="list-style-type: none">• Blue Flashing means it's On and Ready to be paired.• Once paired the Blue light will flash every 5 seconds. |
| RED | <ul style="list-style-type: none">• Red Flashing light means the battery is low.• Red Solid light means that the battery is charging. |
| BLUE & RED | <ul style="list-style-type: none">• Both Red and Blue Flashing lights means that the Speaker is searching for a device to pair with. |

BASIC OPERATION

- **Turn ON:** From the OFF position, locate the ON/ OFF switch “”, slide the switch to the ON position. The blue LED flashes with an indication tone.
- **Turn OFF:** From the ON position, locate the ON/ OFF switch “”, slide the switch to the OFF position. The red LED flashes with an indication tone
- **Pairing:** Turn ON the device, hold and press the Multifunction button “” for 6 seconds, or until the red and blue LEDs flash alternately, indicating that the Bluetooth speaker is in paring mode and searching for a device. Once a device is found, you can manage your connection through your Bluetooth enabled device to complete the pairing process.

BASIC OPERATION

- **Answer Call:** While paired, press and immediately release the Multifunction button “” to answer an incoming call.
- **End Call:** To end a call simply press and immediately release the Multifunction button “”, a tone will sound to indicate the function has been completed.
- **Reject Call:** Press and hold the Multifunction button “” for three (3) seconds to reject call, a tone will sound to indicate the function has been completed.

BASIC OPERATION

- **Adjust Volume:** A short press and release of the VOL “” button to turn up the volume; a tone will sound when maximum volume is reached. Similarly, a short press and release of the VOL “” button to turn down the volume; a tone will sound when minimum volume is reached.
- **Redial:** In standby mode, press and release the Multifunction button “” twice.
- **Voice Dial:** In the standby mode, press and hold the Multifunction button “” for 3 seconds. (This function requires that your phone supports this functionality).

BASIC OPERATION

- **Transfer Call from Speaker to Phone:** During a call , press and hold the Multifunction button “” for 3 seconds until you hear a tone, the same operation can transfer the sound from your phone to a Bluetooth speaker.
- **Microphone Mute:** Press and hold the VOL “” button can switch to open and close the mute function, a tone will sound to indicate the function has been completed successfully.
- **Pause / Play:** Short press and release the Multifunction button “” to play, or pause music.
- **Previous and Next:** While the music is playing, press and hold the Vol “”to move forward, otherwise, press and hold Vol “”to move back.

PAIRING WITH BLUETOOTH DEVICES

Pairing is the process of connecting two devices via Bluetooth.

For example, when use mobile phone with Bluetooth speaker it is necessary to operate the mobile phone Bluetooth to search bluetooth devices , select and then connect wirelessly by PIN

The speaker pairing steps are as follows:

1. Ensure that both the speaker, and the device you wish to connect to, is powered ON.
2. On the device you wish to connect, access the device's Bluetooth Settings and enable Bluetooth connections.
3. Search for, discover, add, or find new devices.

PAIRING WITH BLUETOOTH DEVICES

4. Next, press and hold the Multifunction button “” for 6 seconds or until the LED lights are flashing red and blue alternately.
5. Your device will discover the speaker as BSK10, select/ confirm this device.
(NOTE: Each Bluetooth device is different, please check the User Guide for your specific device.)
6. If prompted for a PIN or Password, enter: 0000, and confirm.
(NOTE: Upon successful connection, the blue LED on your speaker will flash and sound an alert. After this process the blue LED light will flash once every 5 seconds. If the pairing has failed, LEDs are will continue to be flashing red and blue alternately, you'll need to complete steps 1 through 6 again, in an attempt to re-pair your device.)

MAKING VOICE CALLS

If supported by your phone, turn the Voice Recognition feature on, and use your speaker as a speakerphone.

1. Press the Multifunction button “” 3 seconds, you will hear a tone to indicate the voice function activated
2. Say the name of the person you wish to call.

(NOTE: Speaker's voice call function is determined by the cell phone.)

HELPFUL TIPS

1. Pairing mode will last up to five (5) minutes to ensure the device is found.
2. Pairing mode will automatically commence, only if:
 - a. The Bluetooth speaker is powered on and preset with another device, it will automatically search and connect to the pre-set device.
 - b. When the speaker disconnects from a mobile phone due to exceeding the effective range (typically 10 meters, or 33 feet), the Bluetooth speaker will attempt to reconnect to if the speaker reenters the effective range within 10 minutes of exit.

LOW BATTERY ALERT AND CHARGING INSTRUCTIONS

When your device is operating on a low battery, the red LED will flash and an alert will sound once every 30 seconds, this indicator often last for 5 to 10 minutes before the device shuts down and powers off on its own.

Charge your Bluetooth Speaker via the Micro USB and adapter, included in the package. While the speaker is charging the red LED will turn on until the device is finished charging, a full charge may take between 2-3 hours.

BATTERY TIPS

The Bluetooth speaker is powered by a rechargeable battery, for maximum battery performance always use the charger that is included with your Bluetooth speaker and promptly disconnect the Bluetooth Speaker when charging is complete or the battery is full. Avoid extreme weather conditions, as it may hinder the battery's capacity, the ideal temperature for this Bluetooth speaker is 59 ° F to 78 ° F, any extreme weather can impair the performance of the device, and may cause it not to operate.

BATTERY TIPS

A fully charged battery left unused may result in complete discharge over an extended period of time. For the safety of the environment never dispose of any battery in the trash, for your safety do not damage the battery or dispose of batteries in a fire as it may cause an explosion. Although the battery can be charged and discharged multiple times, the battery will eventually wear over time, following the advice herein can help improve and extend your battery's life.

FCC STATEMENT This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference; and
2. This device must accept any interference received, including interference that may cause

FCC CAUTION

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC ID: ZG8BSK10.

To locate the FCC

numbers, please look on the WhiteLabel® Speaker.

For best performance of this product, please only use with the power supply adapter provided,

WhiteLabel Speaker Model# BSK10.

WhiteLabel Charger Adapter Model# C110.

CONTACT US

www.whitelabelusa.com

support@whitelabelusa.com

(888) 4-WHITELABEL

WhiteLabel Products Company

2961 Richter Ave, Suite 115
Irvine, CA 92606

© 2012 WhiteLabel Products Company. WhiteLabel and the logo are trademarks of WhiteLabel Products Company. Other marks are the property of their respective owners.

