

Table of Contents

1. Introducing your Device.....	2
1.1 Key functions	2
1.2 Battery	3
1.3 Charge via the charger.....	3
1.4 SD card.....	3
2. Home screen and Application list.....	6
2.1 Notification and connection icons.....	6
2.2 Read notifications.....	6
2.3 Language.....	7
2.4 Manage Applications	8
2.5 Music	8
2. 6 Wi-Fi	10
3. Browser.....	11
4. Gmail.....	12
5. Google Maps.....	14
6. Google Market™.....	16
7. YouTube.....	17

1. Introducing your Device



1.1 Key functions

Power key Press and hold few seconds to power on/off the device

Short press to put the device into sleep mode. press any key to awaken.

Home key Press to return to the Home screen from anywhere.

Press and hold few seconds to rotate the application window

Menu key Press to open a list of actions available on the current screen.

Press and hold to see the menu shortcuts for that screen.

The shortcuts will blink in place as you hold down the **Menu key**.

Back key Press to go back to the previous screen or to dismiss

a dialog box or menu.

Reset key Press to reset the device

1.2 Battery

You can charge your device via charger or USB cable.

1.3 Charge via the charger

To charge, connect the small end of the charger cable to the micro-USB port on the bottom side of your device. Plug the other end of the charge into a wall outlet.

Charge via a USB cable

To charge, connect the small end of the USB cable to the micro-USB port on the bottom side of your device. Plug the other end of the USB cable to the USB port of your computer.

1.4 SD card

Your device comes with a removable microSD memory card where you can store multimedia files, such as video clips, music tracks, sound files, images, and GPS-map files.

To install the memory card:

1. Open the memory card cover.
2. Insert the memory card
3. To remove the memory card, press the card in and release.

Copy files to the memory card

You can transfer files such as music and pictures between your device and your computer.

To view files on your device, just launch the appropriate application and navigate to the file within that application.


1. Connect your device to your computer using the USB cable.
2. On the home screen, press the **Menu** key.
3. Touch **Notifications**, touch **USB connected**.
4. Touch **Mount**.
5. On your computer, go to the **Removable Disk** folder.
6. Locate the files on the computer that you want to copy to your device.
7. Copy and paste files to the desired location in the **Removable Disk** folder.

Delete files on the memory card

1. Locate the file that you want to delete.
2. Touch and hold the file name.
3. Touch **Delete**.

View available memory space

1. On the home screen, press the **Menu** key .
2. Touch **settings**, Touch **SD card** to view available memory space for your memory card and device.

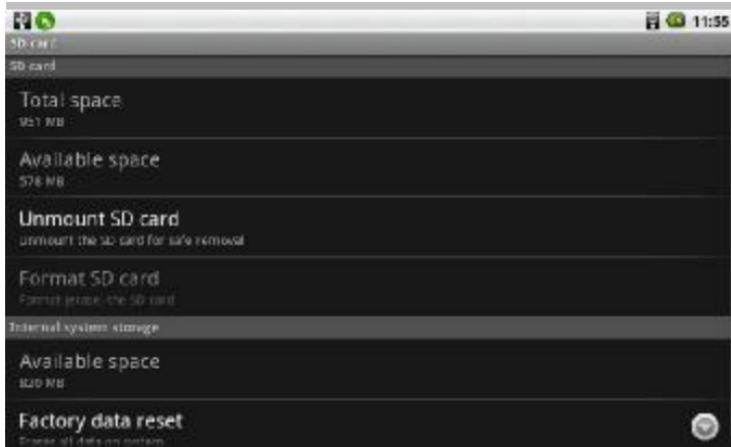

2. Home screen and Application list

The Home screen is your starting point for using all the applications on your device. You can customize your Home screen to display applications, shortcuts, and widgets.

To open the application list, tap on the Home screen.



2.1 Notification and connection icons

Along the top of your screen is the status bar. On the left side, icons will appear, notify you of new messages, upcoming calendar events, alarms, and more. On the right side of the status bar, you will see the connection status icons.

2.2 Read notifications

When you see a notification in the status bar, tap the bar and slide your finger down the screen to open the list of notifications.

To open the notification, tap the item.

To clear notifications, tap **Clear notifications** at the top of the notification window.

To close the notification window, slide your finger up the screen.

	New e-mail message		Downloading
	GPS is on and is working		Content downloaded
	Upcoming event		Alarm is set
	Song is playing		Data is syncing
	SD card is full		Wi-Fi service connected
	Battery change indicators		Battery is charging
	No SD card		Wireless services are off
	USB connected		Silent mode
	warning		

2.3 Language

You can setting language for device. To setting

1. On the home screen, press the **Menu** key.
2. Touch **settings**, touch **Locale & text**.

3. Touch **Select locale**.
4. Touch the language that you want to setting.

2.4 Manage Applications

Allow install of non-Market applications

1. On the home screen, press the **Menu** key.
2. Touch **settings**.
3. Touch **Applications**.
4. Touch **Unknown sources**.

Uninstall Application

1. On the home screen, press the **Menu** key.
2. Touch **settings**.
3. Touch **Applications**.
4. Touch **Manage applications**.
5. Touch the application that you want to Uninstall.
6. Touch **Uninstall**.
7. Touch **OK**, Touch **OK**.

2.5 Music

Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Artists category, you will see a list of artists in A-Z order, the list opens to display that artist's albums. Select an album, and the album's song list displays.

Your device will play the following music file formats: Mp3, AMR, OGG, WAV, MIDI.



Access and play music

1. On the home screen touch the **Application** button.
2. Touch **Music**. Touch **Songs**. You can also touch **Artists**, **Albums**, or **Playlists**.
3. Touch the song to play.

Add songs to new play list

1. On the home screen, touch the **Application** button.
2. Touch **Music**. Touch **Songs**.
3. Touch and hold the song that you want to add to the play list.
4. Touch **Add to playlist**.
5. Touch **New**.
6. Type the name for the play list.
7. Touch **Save**.

Delete play lists

1. On the home screen, touch the **Application** button.
2. Touch **Music**, touch **Playlist**.
3. Touch and hold the play list you want to delete.
4. Touch **Delete**

2. 6 Wi-Fi

Your device can connect to Wi-Fi networks. To connect

1. On the home screen, press the **Menu** key.
2. Touch **settings**, touch **wireless controls**.
3. Touch **Wi-Fi** to turn it on. Touch **Wi-Fi settings**. Your device scans for available Wi-Fi networks.
4. Touch the Wi-Fi network that you want to connect to.
5. Touch **Connect**. Some network may need you input the password.



On the Wi-Fi settings screen, press the **Menu** key, touch **Advanced**, you will get more settings for Wi-Fi.

3. Browser

Go to your home page

The Browser always opens to the last Web page you were viewing.

The first time you enter the Browser after powering on, your home page will display.

1. On the Home screen, Touch the Application button.
2. Touch **Browser**.

Change your home page

1. On the Home screen, touch the **Application** button.
2. Touch **Browser**.
3. Press the **Menu** key.
4. Touch **more**, touch **settings**, touch **Set home page**.
5. Type the site address and touch **OK**.

Visit Web pages

1. On the Home screen, touch the **Application** button.
2. Touch **Browser**.
3. Press the **Menu** key.
4. Touch **Go**
5. Type the Web address, touch **Go**.

4. Gmail

With Gmail, all your messages on the same subject are threaded together into conversations. To read the messages in a conversation, open the conversation and scroll through the individual messages. The most recent message appears at the bottom.

All the Gmail that you fetch to your device is delivered to your Inbox, and the Inbox is your default Gmail view. The total number of unread messages displays in the title bar and individual unread messages display in bold. If you have labeled a message, its label appears in a colored rectangle to the left of the date.



Read new messages

1. On the home screen, touch **Gmail** to display your inbox.
2. Touch a message to read.

Write new messages

1. On the Home screen, touch **Gmail** to display your Inbox.
2. Press the **Menu** key.

3. Touch **Compose**.
4. Type a name or e-mail address in the **To** field. Matching contacts will appear. Select the contact or continue typing.
5. Type the subject and message.
6. To attach pictures, press the **Menu** key and touch the picture to attach.
7. Touch **Send**.

5. Google Maps

Find a location

1. On the Home screen, touch the **Application** button.
2. Touch **Google Maps**.
3. Press the **Menu** key.
4. Touch **Search**.
5. Type an address. Touch **Search**.
6. Touch **Show map** to see the result on a map.


Get direction

1. On the Home screen, touch the **Application list** button.
2. Touch **Google Maps**.
3. Press the **Menu** key.
4. Touch **Directions**.
5. At the **From** field, type your starting address, at to **To** field, type your destination address.
6. Touch **Route**.

Change map mode

Google Maps gives you both map and satellite of the area you are viewing. To view satellite, traffic, or street view.

1. On the Home screen, touch the **Application** button.
2. Touch **Google Maps**.
3. Press the **Menu** key.
4. Touch **Map mode**.
5. Touch **satellite**, **Traffic**, or **Street View**.

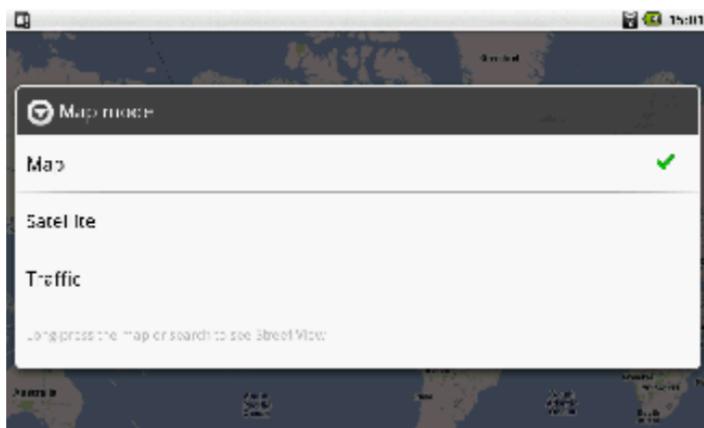

6. Google Market™

Google Market™ provides you with direct access to software developers throughout the world. It is the place to go find fun games and cool applications.

Browse contents

When you first enter Google Market, you will see featured items, a list of item categories, a link to search, and a link to My downloads.

Scroll through the featured items or select a category to browse its contents, then select a subcategory. Within each subcategory you can select to view items sorted By popularity or By date. Note that all items in a subcategory are listed in each tab, those in the By popularity tab are sorted most popular to least popular, and those in the By date tab are sorted newest to oldest.

To access:

1. On the Home screen, touch the **Application** button.
2. Touch **Market**.

7. YouTube

YouTube is a free online video streaming service that allows anyone to view and share videos that have been uploaded by the YouTube members. You do not need a YouTube account to browse and view videos.

Watch YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Touch the category and the video in that category.

Search for YouTube videos

1. On the Home screen, touch the **Application** button.
2. Touch **YouTube**. The main YouTube screen appears showing popular video categories.
3. Press the **Menu** key.
4. Touch **Search**. Type your search.
5. Touch **Search**.

FCC ID: ZGM-M4-LCD

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been SAR-evaluated for use in hand. SAR measurements are based on a 0cm spacing from the body and that compliance is achieved at that distance.

SAR Value: 0.722W/Kg.

Appendix I: Specification

Spec.	
P/N	Android MID
LCD	800*480 WVGA; 5.0 inch TFT touch panel
CPU	SAMSUNG 6410, 667MHz
OS	Android 1.5
DDR	128MB DDR
NAND	1GB SLC
T-Flash	Supported T-Flash card up to 8GB
GPS module	SiRFIII GPS module
Battery	Li-on rechargeable battery 2000mAH
Power adapter	Input: 100~240V AC Output: DC 5V, 0.7A
USB	USB2.0 FULL SPEED
Indication Light	LED (Red in charging / Green in charged)
Temp.	Operation Temp.: 0~40 °C Storage Temp.: -10~60 °C
Dimension	132.2 x 87.6 x 14.8 mm
Weight	About 220 g

Appendix II: Accessories List

No.	Item	Q'ty
1	Product device	1
2	Car kit	1
3	Car holder	1
4	Charger	1
5	Car charger	1
6	USB cable	1
7	Earphone	1
8	User manual	1
9	Guarantee card	1