


5.6 Media Centre

Move to "Media Centre" icon, You can play all your prefer media here.




5.7 Gallery

Move to "Gallery". Press OK to enter into the picture list
Here you can enjoy the pictures

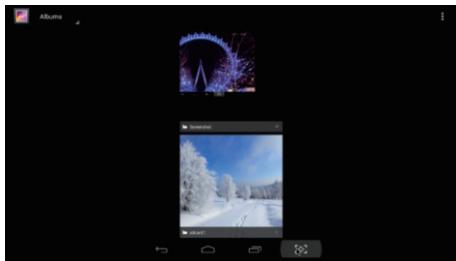


5.8 Samba

Move to "Samba". Press OK to enter in.
The system will search the share files automatically.

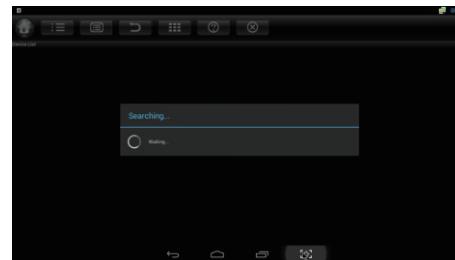


5.9 File Browser

Move to "Filebrowser". Press OK to enter into the device list.
When inserting with USB device or SD/SDHC/MMC cards, the sign "Device is mounting" will be shown on the screen.
Here you can cut, copy, paste and move the files and folder between the local disk and external storage card.

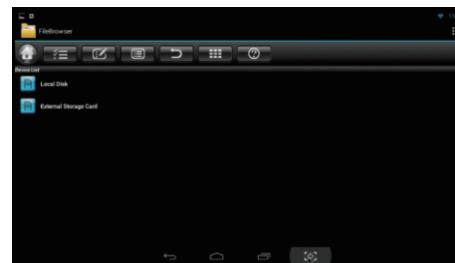


5.10 Download

Move to "Downloads". Press OK to enter in. You can check the status here when downloading apks from the internet.

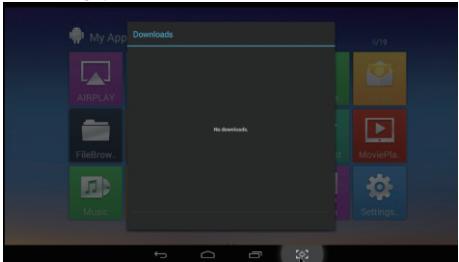

5.11 Music

Move to "Music". Press OK to enter into the music list. This is for local media player. Here you can enjoy beautiful music.

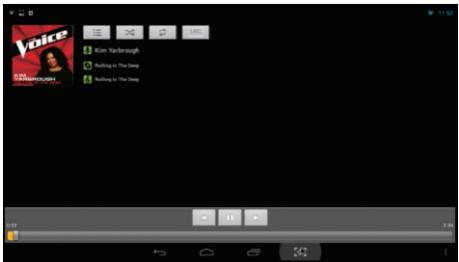

5.12 App Installer

Move to "AppInstaller". Press OK to enter in.

You can install software by this appinstaller function. Please first download your desired software by apk formats from the computer to the USB. You will choose your desired device in order to scan the apks.

Press OK to install your desired software.

After the installation finished, the software icon will be shown on the applications menu.




5.13 Multi-interaction

Airplay

Move to "Airplay" icon or "Miracast" icon. Press OK to enter in.

Airplay: Download airplay application according to the model of the mobile phone. Enter into Airplay, connect with the same WiFi hotspot. Play video, picture, or music on your phone. Click the "airplay" icon on the phone to share files.

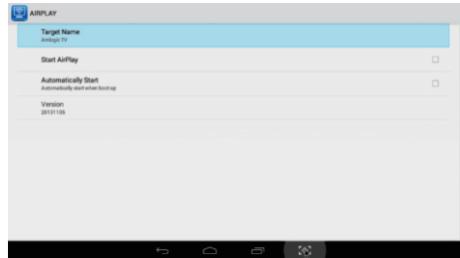

Miracast

Miracast:Please make sure the android TV box and mobile phone under the same WIFI environment .Press "Miracast" on android TV box,it will find peers automatically, and click "setting" on your mobile phone,enter into "WLAN",Click "Menu" to choose "WLAN Display" on your phone. Choose to share files.




5.14 OTA update

Move "OTA update" icon. Press OK to enter.

Click "online update" If there is an update in server,you can choose to download it.

After upgrade finished, system will restart automatically.

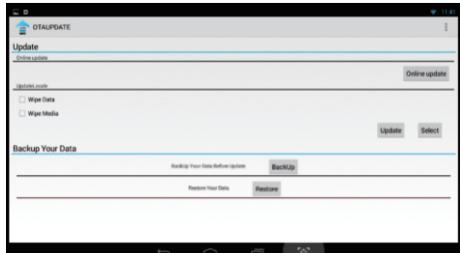


Chapter 6 Settings

6.1 Network

Wi-Fi

"√""Wi-Fi", System will start scanning available Wi-Fi networks around you automatically.

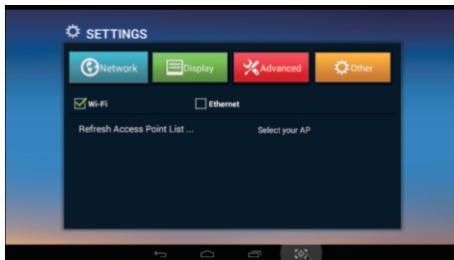

Press OK to choose your Wi-Fi network and enter with your password.


After authenticating IP address, when connected is shown, Wi-Fi is available now.

Notice:Sometimes Wi-Fi is not stable.If Wi-Fi connecting is failed, please try again.



Ethernet:

"~"Ethernet"System will start scanning Ethernet automatically.

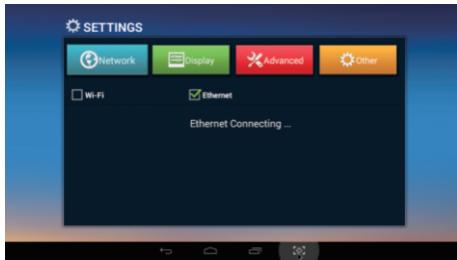

When the IP address appears, the Ethernet connected.



6.2 Display

Move to "Display".

Here you can set wallpaper, HDMI audio output mode, turn on/off hide status bar, display position, choose the time of start screen saver.



6.3 Advanced

Move to "Advanced" to Choose advanced settings. Here you can set Miracast, Remote control, CEC control, Location, orientation, home screen and digital audio output.



6.4 Other

Move to "Other" to see more TV Box information. You can do system update and more setting here.



Hardware Specifications

Hardware Specifications	
Chipset	Amlogic S812 Quad core Cortex A9@4.2GHz
GPU	Octo-core Mali-450MP GPU
FLASH	32GB NAND FLASH
SDRAM	2GB DDR3
Power Supply Specifications	
Power Supply	DC 5V/2A
Power Indicator (LED)	Power ON :blue; Standby :Red
Main Features	
OS	Android 4.4 KitKat
3D	3D-HD 1080Px2
Support Decoder format	HD MPEG1/2/4,H.264/H.265, HD AVC/VC-1,RM/RMVB,Xvid/DivX3/4/5/6,RealVideo8/9/10
Support Media format	Avi/Rm/Rmvb/Ts/Vob/Mkv/Mov/ISO/wmv/asf/flv/dat/mpg/mppeg
Support Music format	MP3/WMA/AAC/WAV/OGG/AC3/DDP/TrueHD/DTS/DTS-HD/FLAC/APE
OSD type of languages	English/French/German/Spanish/Italian/ etc multilateral languages
Wireless	Built in WiFi

Simple Trouble Shooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

No power

- Check all connections to the Monitor
- Press either the power button or the Standby button on the Remote control.

No picture or sound

- Ensure that the Monitor is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

Poor picture quality

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings:brightness,colour,sharpness,contrast,hue.
- Make sure that the Monitor is not located close to electrical appliances that may emit radio frequency interference.

No colour

- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the channel is tuned properly.

Monitor does not respond to remote control

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This Monitor is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

Note : Monitor panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as fixed point of red, blue or white. Please note this does not affect the performance of the product.