



Read this Quick Start Guide before using the product, and save it for future references.

SAFETY WARNING

PLACEMENT

Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.

Do not expose the unit to direct sunlight and other sources of heat.

Do not keep liquids near or on the unit.

Never spill liquid of any kind into the unit.

Do not put heavy objects on top of the unit

POWER SUPPLY

Make sure to use a 5V/1.5A output AC adapter (included).

Please unplug power supply when there is nobody at home.

Please keep power cord from physical or mechanical damage.

Please use included power cord; don't modify or change it.

TEMPERATURE & HUMIDITY

Do not place the unit near or over a radiator or heater.

If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours until moisture removed.

Do not expose machine in the rain, damp places or place near water.

Ensure the environment is dry and cool.

VENTILATION

- Keep the ventilation openings clear.

Support

If you are having problems with your product, please contact customer support before contacting your retailer.

Digital Gadgets

866-843-6460

dgsupport@digitalgadgets.com

Digital Gadgets Limited Warranty Statement

Digital Gadgets warrants this product against defects in workmanship and material for a period of 12 months from the original date of purchase. If the product fails during normal and proper use within the warranty period, Digital Gadgets will repair or replace any products or parts determined to be defective in workmanship or material at its option. All components repaired or replaced by Digital Gadgets' service site will be under warranty for the remaining period of warranty.

This Limited Warranty covers only the accessory components packaged with this product. This Limited Warranty does not include failure caused by improper installation, operation, cleaning or maintenance, accident, damage caused by extreme temperature, humidity or extreme electrical stress, misuse, abuse unauthorized modifications to the product, software faults, normal wear and tear or any other event, act, default or omission outside of Digital Gadgets' control or if the serial number has been defaced, altered or removed and the casing has been opened.

To obtain warranty service, please contact Digital Gadgets for specific instructions at the telephone number below. Dated, documented proof of the original purchase is required.

Digital Gadgets Customer Service Representatives are available by calling 866-843-6460 or by emailing dgsupport@digitalgadgets.com.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Made in China

www.digitalgadgets.com 866-843-6460

Digital Gadgets • 21 Englehard Dr, Monroe, NJ 08831

YOUR PACKAGE INCLUDES:



Power Adaptor



HDMI cable



USB Cable (5 Ft)

GETTING TO KNOW YOUR TV STICK


1. Micro SD Card Slot
2. Standard USB Port
3. HDMI
4. Micro USB Slot (DC/OTG)



BASIC OPERATION

Power on/power off

1. Connect the HDMI part of the device to the HDMI port of your HDTV.
2. Plug the cable into your device; Plug the Micro USB end of the cable into the Micro USB port of your device and the USB end into the wall adaptor. The standard USB port can be used for the Air mouse and other input devices.

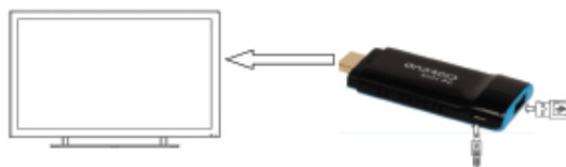

3. Plug the wall adaptor into an available wall outlet.
4. After getting into the Home page, you can operate the device with your air mouse.

Using the Air Mouse

1. Requires 2 AAA batteries (not included). Insert 2 AAA batteries into the Air mouse.
2. Wave your Mouse at the TV in the direction you want the clicker to go in.